2008 HONDA

Civic - Except Hybrid

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
A/C Compressor Clutch Relay	In under-hood fuse/relay box. See **Fig. 2**.
A/C Condenser Fan Relay	In underhood fuse/relay box. See **Fig. 2**.
Blower Motor Relay	In under-hood fuse/relay box. See **Fig. 2**.
Console Accessory Power Socket Relay	Near under-dash junction box. See **Fig. 64**.
Driver's Seat Heater Relay (High)	Under driver's seat. See **Fig. 182**.
Driver's Seat Heater Relay (Low)	Under driver's seat. See **Fig. 183**.
ETCS Control Relay	In under-hood fuse/relay box. See **Fig. 2**.
Fan Control Relay	In under-hood fuse/relay box. See **Fig. 2**.
Front Accessory Power Socket Relay	Near under-dash junction box. See **Fig. 64**.
Front Passenger's Seat Heater Relay (High)	Under front passenger's seat. See **Fig. 183**.
Front Passenger's Seat Heater Relay (Low)	Under front passenger's seat. See **Fig. 183**.
Fuel Shut-Off Solenoid Valve Relay	Under left side of dash. See **Fig. 158**.
Ignition Coil Relay	In under-hood fuse/relay box. See **Fig. 2**.
Injector Control Module Relay	Under left side of dash. See **Fig. 158**.
PGM-FI Main Relay 1	In under-hood fuse/relay box. See **Fig. 2**.

PGM-FI Main Relay 2	In under-dash fuse/relay box. See **Fig. 1**.
PGM-FI Sub-Relay	In under-hood fuse/relay box. See **Fig. 2**.
Power Mirror Defogger Relay	In under-hood fuse/relay box. See **Fig. 2**.
Power Window Relay	In under-dash fuse/relay box. See **Fig. 1**.
Radiator Fan Relay	In under-hood fuse/relay box. See **Fig. 2**.
Rear Window Defogger Relay	In under-hood fuse/relay box. See **Fig. 2**.
Starter Control Relay	Under left side of dash. See **Fig. 158**.
Starter Cut Relay	In under-dash fuse/relay box. See **Fig. 1**.

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	**Location**
Under-Dash Fuse/Relay Box	Under left end of dash. See **Fig. 56**.
Under-Dash Junction Box	Under left side of dash. See **Fig. 63**.
Under-Hood Fuse/Relay Box	Left side of engine compartment. See **Fig. 41**.

CONTROL UNITS

CONTROL UNITS LOCATION

Component	**Location**
ABS Modulator-Control Unit	Right side of engine compartment. See **Fig. 3**.
ECM/PCM	Left side of engine compartment. See **Fig. 42**.
EPS Control Unit	Behind right kick panel. See **Fig. 82**.

Gauge Control Module (Speedo)	Left side of dash. See **Fig. 146**.
Gauge Control Module (Tach)	Left side of dash. See **Fig. 147**.
Immobilizer-Keyless Control Unit	On steering column. See **Fig. 54**.
Injector Control Module	Behind right kick panel. See **Fig. 159**.
Moonroof Control Unit	Center rear of roof. See **Fig. 112**.
ODS Unit	In front passenger' seat back. See **Fig. 89**.
SRS Unit	Under middle of dash. See **Fig. 74**.
TPMS Control Unit	Under left side of dash. See **Fig. 175**.
VSA Modulator Control Unit	Right side of engine compartment. See **Fig. 3**.
XM Receiver (2 Door)	Right side of trunk. See **Fig. 122**.
XM Receiver (4 Door)	Right side of trunk. See **Fig. 167**.

MOTORS

MOTORS LOCATION

Component	**Location**
A/C Condenser Fan Motor Connector	Top of A/C condenser fan motor. See **Fig. 14**.
Air Mix Control Motor	On left side of HVAC assembly. See **Fig. 66**.
Blower Motor	Under right side of dash. See **Fig. 81**.
Driver's Power Window Motor	In driver's door. See **Fig. 102**.
Front Passenger's Power Window Motor	In front passenger's door. See **Fig. 102**.
Fuel Tank Unit	In top of fuel tank. See **Fig. 119**.
Left Power Mirror Connector (4-Door)	Front of driver's door. See **Fig. 106**.
Left Power Mirror (2-Door)	Front of driver's door. See **Fig. 105**.
Left Rear Power Window Motor	In left rear door. See **Fig. 107**.
Mode Control Motor	Behind glove box, on HVAC assembly. See **Fig. 77**.
	Front of engine compartment. See **Fig.**

Radiator Fan Motor Connector	**15**.
Recirculation Control Motor	Behind glove box, on HVAC assembly. See **Fig. 78**.
Right Power Mirror	Front of front passenger's door. See **Fig. 105**.
Right Rear Power Window Motor	In right rear door. See **Fig. 107**.
Starter	Lower right rear of engine. See **Fig. 152**.
Windshield Washer Motor	Behind right side of front bumper. See **Fig. 127**.
Windshield Wiper Motor	Under right side of cowl cover. See **Fig. 49**.

SENDING UNITS & SENSORS

SENDING UNITS & SENSORS LOCATION

Component	**Location**
A/C Pressure Sensor	Right side of engine compartment. See **Fig. 3**.
A/F Sensor Connector (Except Si)	Top left rear of engine. See **Fig. 24**.
A/F Sensor Connector (Si)	Rear of engine compartment. See **Fig. 143**.
APP Sensor	Under left side of dash. See **Fig. 66**.
CKP Sensor (Except Si)	Top left rear of engine. See **Fig. 23**.
CKP Sensor (Si)	Lower front of engine. See **Fig. 131**.
CMP Sensor	Rear of engine. See **Fig. 30**.
CMP Sensor A	Right rear of engine. See **Fig. 32**.
CMP Sensor B	Right rear of engine. See **Fig. 32**.
Driver's Seat Position Sensor	Under driver's seat. See **Fig. 83**.
ECT Sensor 1 (Except Si)	Rear of engine. See **Fig. 27**.
ECT Sensor 1 (Si)	Right rear of engine. See **Fig. 33**.
ECT Sensor 2	Lower left side of radiator. See **Fig. 135**.

EGR Valve & EGR Valve Position Sensor	Top left rear of engine. See **Fig. 25**.
EOP Sensor	Top right front of engine. See **Fig. 10**.
EPS Torque Sensor	Under left side of engine compartment. See **Fig. 168**.
Evaporator Temperature Sensor Connector	Under right side of dash. See **Fig. 80**.
Front Impact Sensor (Left/Right)	Behind respective side of front bumper. See **Fig. 130**.
Front Passenger's Weight Sensor (Front Inner Side)	Under left side of front passenger's seat. See **Fig. 90**.
Front Passenger's Weight Sensor (Front Outer Side)	Under right side of front passenger's seat. See **Fig. 91**.
Front Passenger's Weight Sensor (Rear Inner Side)	Under left side of front passenger's seat. See **Fig. 90**.
Front Passenger's Weight Sensor (Rear Outer Side)	Under right side of front passenger's seat. See **Fig. 91**.
FTP Sensor (Except GX)	Under left side of floor. See **Fig. 145**.
FTP Sensor (GX)	Behind rear seat (GX). See **Fig. 161**.
FTT Sensor	Behind rear seat (GX). See **Fig. 161**.
Fuel Pressure Sensor	Right rear of engine. See **Fig. 157**.
Fuel Temperature Sensor	Rear of engine. See **Fig. 154**.
Inner Side Front Passenger's Weight Sensor Connector (2-Door)	Under front passenger's seat. See **Fig. 88**.
Input Shaft (Mainshaft) Speed Sensor	On transmission housing. See **Fig. 35**.
Knock Sensor (Except Si)	Lower right rear of engine. See **Fig. 141**.
Knock Sensor (Si)	Left front side of engine. See **Fig. 22**.
Left Rear Wheel Speed Sensor Connector	Under left rear of vehicle (Right similar). See **Fig. 169**.
MAF/IAT Sensor (Except Si)	Left rear of engine compartment. See **Fig. 46**.
	Left side of engine compartment. See

MAF/IAT Sensor (Si)	**Fig. 47**.
MAP Sensor (Except Si)	Rear of engine. See **Fig. 30**.
MAP Sensor (Si)	Left rear side of engine. See **Fig. 21**.
Motor Angle Sensor Connector	Under rear of engine. See **Fig. 133**.
Outer Side Front Passenger's Weight Sensor Connector (2-Door)	Under front passenger's seat. See **Fig. 88**.
Output Shaft (Countershaft) Speed Sensor (A/T)	On transmission housing. See **Fig. 36**.
Output Shaft (Countershaft) Speed Sensor (M/T)	On transmission housing. See **Fig. 140**.
Output Shaft (Countershaft) Speed Sensor (Si)	Under transmission housing (Si). See **Fig. 129**.
Outside Air Temperature Sensor	Behind left side of front bumper. See **Fig. 178**.
Rear Safing Sensor	Middle of floor. See **Fig. 96**.
Secondary HO2S Connector (Except Si)	Top left rear of engine. See **Fig. 24**.
Secondary HO2S Connector (Si)	Under center console. See **Fig. 93**.
Side Impact Sensor (Left/Right 1st) (2-Door)	At respective outer side of floor. See **Fig. 95**.
Side Impact Sensor (Left/Right 1st) (4-Door)	Base of respective "B" pillar. See **Fig. 99**.
Side Impact Sensor (Left/Right 2nd) (2-Door)	In respective "B" pillar. See **Fig. 98**.
Side Impact Sensor (Left/Right 2nd) (4-Door)	In respective "C" pillar. See **Fig. 116**.
Steering Angle Sensor	In steering column cover (Si). See **Fig. 165**.
TP Sensor/Throttle Actuator (Except Si)	On throttle body. See **Fig. 164**.
TP Sensor/Throttle Actuator (Si)	On throttle body. See **Fig. 174**.
Wheel Speed Sensor Connector (Left Front)	On left frame rail. See **Fig. 137**.

Wheel Speed Sensor Connector (Right Front)	On frame rail. See **Fig. 137**.
Wheel Speed Sensor Connector (Right Rear)	Under right rear of floor. See **Fig. 144**.
Wheel Speed Sensor (Left Rear)	Under left rear of floor. See **Fig. 144**.
Yaw Rate-Lateral Acceleration Sensor (Si)	Under middle of dash. See **Fig. 170**.

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	**Location**
A/C Compressor Connector (Except Si)	Left front of engine. See **Fig. 8**.
A/C Compressor Connector (Si)	Lower left front of engine. See **Fig. 134**.
A/T Clutch Pressure Control Solenoid Valve A	On transmission housing. See **Fig. 37**.
A/T Clutch Pressure Control Solenoid Valve B	On transmission housing. See **Fig. 37**.
A/T Clutch Pressure Control Solenoid Valve C	On transmission housing. See **Fig. 37**.
EGR Valve & EGR Valve Position Sensor	Top left rear of engine. See **Fig. 25**.
EVAP Canister Purge Valve	Right rear of engine. See **Fig. 31**.
EVAP Canister Vent Shut Valve	Under left side of floor. See **Fig. 145**.
Fuel Pressure Regulator Shut-Off Solenoid Valve	Right rear of engine. See **Fig. 155**.
Fuel Tank Internal Solenoid Valve (GX)	Left side of trunk (GX). See **Fig. 162**.
IMT Actuator	Right front of engine. See **Fig. 9**.
Injectors No. 1, 2, 3 & 4 (Except Si)	Top of engine, at respective cylinders. See **Fig. 19**.
	Top left side of engine, at respective

Injectors No. 1, 2, 3 & 4 (Si)	cylinders. See **Fig. 20**.
Reverse Lockout Solenoid	Top of transmission housing. See **Fig. 40**.
Rocker Arm Oil Control Solenoid (Except Si)	Top front of engine. See **Fig. 172**.
Rocker Arm Oil Control Solenoid (Si)	Top front of engine. See **Fig. 13**.
Shift Lock Solenoid Connector	Under center console. See **Fig. 92**.
Starter Solenoid (Except Si)	Lower right rear of engine. See **Fig. 152**.
Starter Solenoid (Si)	On starter motor. See **Fig. 173**.
Trunk Lid Opener Solenoid/Latch Switch	Middle of trunk lid. See **Fig. 124**.
VTC Oil Control Solenoid Valve	Front of engine. See **Fig. 12**.

SWITCHES

SWITCHES LOCATION

Component	**Location**
A/T Gear Position Indicator Panel Light/Park Pin Switch Connector (A/T)	Under center console. See **Fig. 92**.
Back-Up Light Switch (Except Si)	On transaxle housing. See **Fig. 38**.
Back-Up Light Switch (Si)	On transmission housing. See **Fig. 39**.
Brake Fluid Level Switch	On brake master cylinder reservoir. See **Fig. 44**.
Brake Pedal Position Switch	Under left side of dash. See **Fig. 61**.
Clutch Interlock Switch	Under left side of dash. See **Fig. 59**.
Clutch Pedal Position Switch	Under left side of dash. See **Fig. 59**.
Door Lock Actuator/Knob Switch (Driver's/Front Passenger's)	Rear of respective front door. See **Fig. 103**.
Door Lock Actuator/Knob Switch (Left/Right Rear)	Rear of respective rear door. See **Fig. 108**.
Driver's Door Switch	In left "B" pillar. See **Fig. 100**.

Driver's Seat Belt Switch Connector	Under driver's seat. See **Fig. 85**.
Front Passenger's Door Switch	In right "B" pillar. See **Fig. 100**.
Front Passenger's Seat Belt Switch Connector	Under front passenger's seat. See **Fig. 87**.
Fuel Fill Door Switch Connector	Left rear shelf (GX). See **Fig. 163**.
Fuel Pressure Regulator Switch	Right rear of engine. See **Fig. 156**.
Left Rear Door Switch	In left "C" pillar. See **Fig. 101**.
Oil Pressure Switch (Except Si)	Top left rear of engine. See **Fig. 23**.
Oil Pressure Switch (Si)	Near oil filter. See **Fig. 132**.
Parking Brake Switch	At base of parking brake lever. See **Fig. 92**.
PSP Switch	Right side of engine compartment. See **Fig. 6**.
Right Rear Door Switch	In right "C" pillar. See **Fig. 101**.
Rocker Arm Oil Pressure Switch	Top front of engine. See **Fig. 13**.
Security Hood Switch Connector	Front center of engine compartment. See **Fig. 16**.
Transmission Range Switch	On transmission housing. See **Fig. 137**.
Trunk Key Cylinder Switch (2-Door)	Right side of trunk lid, on key cylinder assembly. See **Fig. 126**.
Trunk Key Cylinder Switch (4-Door)	Right side of trunk lid. See **Fig. 151**.
Trunk Latch Switch Connector	Middle of trunk lid. See **Fig. 123**.
Trunk Lid Opener Solenoid/Latch Switch	Middle of trunk lid. See **Fig. 124**.
2nd Clutch Transmission Fluid Pressure Switch	On transmission housing. See **Fig. 35**.
3rd Clutch Transmission Fluid Pressure Switch	On transmission housing. See **Fig. 139**.

MISCELLANEOUS

MISCELLANEOUS LOCATION

Component	Location

Alternator (Except Si)	Left front of engine. See **Fig. 8**.
Alternator (Si)	Lower left front of engine. See **Fig. 11**.
AM/FM Antenna Amplifier	Right "C" pillar. See **Fig. 118**.
AM Signal Window Antenna (2-Door)	Top right side of rear window. See **Fig. 117**.
AM Signal Window Antenna (4-Door)	In right "C" pillar. See **Fig. 118**.
Antenna Lead Connector	Under front of center console. See **Fig. 76**.
Blower Power Transistor	Under right side of dash, near blower motor. See **Fig. 80**.
Cable Reel Connector A	On steering column. See **Fig. 53**.
Cable Reel Connector B	On steering column. See **Fig. 52**.
Cable Reel Connector C	In steering wheel. See **Fig. 51**.
DLC	Under left side of dash. See **Fig. 67**.
Driver's Airbag First & Second Inflators Connector	In steering wheel. See **Fig. 50**.
Driver's Seat Belt Buckle Tensioner Connector	Under driver's seat. See **Fig. 85**.
Driver's Seat Belt Tensioner Connector (4-Door)	Base of left "B" pillar. See **Fig. 99**.
Driver's Seat Belt Tensioner (2-Door)	At left "B" pillar. See **Fig. 98**.
Driver's Side Airbag Inflator Connector	Under driver's seat. See **Fig. 84**.
EPS Gearbox Connectors A & B	Under rear of engine. See **Fig. 133**.
FM Signal Window Antenna (2-Door)	Top right side of rear window. See **Fig. 117**.
FM Signal Window Antenna (4-Door)	In right "C" pillar. See **Fig. 118**.
Front Passenger's Airbag First & Second Inflators Connector	Behind right side of dash. See **Fig. 71**.
Front Passenger's Seat Belt Buckle Tensioner Connector	Under front passenger's seat. See **Fig. 87**.
Front Passenger's Seat Belt Tensioner Connector (4-Door)	Base of right "B" pillar. See **Fig. 99**.

Front Passenger's Seat Belt Tensioner (2-Door)	At right "B" pillar. See **Fig. 98**.
Front Passenger's Side Airbag Inflator Connector	Under front passenger's seat. See **Fig. 86**.
Fuel Pressure Regulator Leak Check Connector	Front of engine compartment. See **Fig. 153**.
GPS Antenna	Under middle of dash. See **Fig. 70**.
Horn	Behind left side of front bumper. See **Fig. 178**.
Ignition Coils No. 1, 2, 3 & 4 (Except Si)	Top of engine. See **Fig. 18**.
Ignition Coils No. 1, 2, 3 & 4 (Si)	Top of engine. See **Fig. 171**.
Junction Connector C101	Near brake master cylinder. See **Fig. 45**.
Junction Connector C105	Top rear of engine. See **Fig. 26**.
Junction Connector C206	Right side of engine compartment. See **Fig. 5**.
Junction Connector C207	Right rear of engine compartment. See **Fig. 7**.
Junction Connector C753	Front of driver's door. See **Fig. 177**.
Left Side Curtain Airbag Inflator Connector (2-Door)	In left "C" pillar. See **Fig. 113**.
Left Side Curtain Airbag Inflator Connector (4-Door)	In left "C" pillar. See **Fig. 114**.
MES Connector	On under-dash fuse/relay box. See **Fig. 148**.
Microphone (Navigation)	In roof console. See **Fig. 109**.
Noise Reduction Condenser Connector	In left "C" pillar. See **Fig. 116**.
Right Side Curtain Airbag Inflator Connector (2-Door)	In right "C" pillar. See **Fig. 113**.
Right Side Curtain Airbag Inflator Connector (4-Door)	In right "C" pillar. See **Fig. 114**.
Stereo Amplifier (2-Door)	Under middle of dash. See **Fig. 176**.

Stereo Amplifier (4-Door)	Under driver's seat. See **Fig. 94**.
Thermal Joint S1 (Except Si)	Rear of engine. See **Fig. 29**.
Thermal Joint S1 (Si)	Rear of engine. See **Fig. 34**.
Thermal Joint S2	Rear of engine. See **Fig. 29**.
Thermal Joint S3 (Except Si)	Rear of engine. See **Fig. 29**.
Thermal Joint S3 (Si)	Rear of engine. See **Fig. 34**.
Thermal Joint S4	Rear of engine. See **Fig. 29**.
Thermal Joint S11	Rear of engine. See **Fig. 34**.
XM Antenna Lead Connector (2-Door)	Left rear of roof. See **Fig. 111**.
XM Antenna Lead Connector (4-Door)	Left rear of roof. See **Fig. 166**.

CONNECTORS

CONNECTORS LOCATION

Component	Location
C102 (Except Si) (Black, 1 Pin)	Near brake master cylinder. See **Fig. 45**.
C102 (Si) (Black, 1 Pin)	Left front of engine compartment. See **Fig. 48**.
C103 (Black, 1 Pin)	On lower rear of engine. See **Fig. 142**.
C106 (Black, 10 Pin)	Left side of engine. See **Fig. 17**.
C107 (Black, 10 Pin)	On transmission housing. See **Fig. 36**.
C109 (Black/Gray, 8 Pin)	Underside of transmission housing. See **Fig. 138**.
C201 (Blue, 14 Pin)	Behind left kick panel. See **Fig. 69**.
C202 (Blue, 20 Pin)	Behind left kick panel. See **Fig. 179**.
C203 (Yellow, 4 Pin)	Under under-dash fuse/relay box. See **Fig. 57**.
C204 (White, 14 Pin)	Behind left kick panel. See **Fig. 58**.
C205 (Brown, 2 Pin)	Under left side of dash. See **Fig. 65**.
C208 (2 Door, 4 Door) (White, 3 Pin)	Behind left kick panel. See **Fig. 58**.
C209 (White, 4 Pin)	Under right side of engine compartment. See **Fig. 133**.

C210 (Optional) (Brown, 1 Pin)	Under left end of dash. See **Fig. 61**.
C211 (Optional) (Brown, 1 Pin)	Behind right side of front bumper. See **Fig. 128**.
C501 (2-Door) (White, 23 Pin)	Behind left kick panel. See **Fig. 179**.
C501 (4-Door) (White, 23 Pin)	Behind left kick panel. See **Fig. 69**.
C502 (2 Door) (White, 4 Pin)	Behind left kick panel. See **Fig. 179**.
C502 (4-Door) (White, 20 Pin)	Behind left kick panel. See **Fig. 69**.
C504 (White, 3 Pin)	Behind left kick panel. See **Fig. 180**.
C505 (White, 20 Pin)	Under middle of dash. See **Fig. 71**.
C506 (White, 23 Pin)	Under front of center console. See **Fig. 76**.
C509 (Optional) (White, 6 Pin)	Under middle of dash. See **Fig. 72**.
C601 (2-Door) (White, 13 Pin)	Under front of center console. See **Fig. 73**.
C601 (4-Door) (White, 12 Pin)	Under front of center console. See **Fig. 73**.
C602 (White, 2 Pin)	Under driver's seat. See **Fig. 84**.
C603 (White, 12 Pin)	Under front of center console. See **Fig. 73**.
C604 (White, 8 Pin)	Under driver's seat. See **Fig. 84**.
C606 (Brown, 12 Pin)	Under center console. See **Fig. 181**.
C701 (2-Door) (White, 14 Pin)	In left "C" pillar. See **Fig. 113**.
C701 (4-Door) (White, 14 Pin)	In left "C" pillar. See **Fig. 115**.
C702 (Light Blue, 6 Pin)	Left "C" pillar. See **Fig. 115**.
C703 (Green, 2 Pin)	Middle of trunk lid. See **Fig. 125**.
C751 (Blue, 23 Pin)	Under left end of dash. See **Fig. 55**.
C752 (White, 18 Pin)	Under left end of dash. See **Fig. 55**.
C754 (White, 18 Pin)	In driver's door. See **Fig. 104**.
C761 (Blue, 23 Pin)	Under right end of dash. See **Fig. 55**.
C762 (White, 18 Pin)	Under right end of dash. See **Fig. 55**.
C763 (White, 18 Pin)	In front passenger's door. See **Fig. 104**.
C771 (White, 18 Pin)	At left "B" pillar. See **Fig. 100**.

C781 (White, 18 Pin)	At right "B" pillar. See **Fig. 100**.
C782 (2-Door) (White, 8 Pin)	Under front passenger's seat. See **Fig. 86**.
C782 (4-Door) (White, 4 Pin)	Under front passenger's seat. See **Fig. 86**.
C783 (White, 8 Pin)	Under front passenger's seat. See **Fig. 86**.
C801 (DX, DX-G, LX & GX) (Blue, 6 Pin)	Under under-dash fuse/relay box. See **Fig. 57**.
C801 (EX, EX-L & Si) (Blue, 20 Pin)	Under under-dash fuse/relay box. See **Fig. 57**.
C852 (Brown, 1 Pin)	In left "C" pillar. See **Fig. 113**.
C861 (Light Blue, 6 Pin)	Left side of rear seat back. See **Fig. 160**.

GROUNDS

GROUNDS LOCATION

Component	**Location**
G1	Left side of engine compartment. See **Fig. 43**.
G2	At top right front of engine. See **Fig. 4**.
G3	Left side of engine compartment. See **Fig. 43**.
G101 (Except Si)	Right rear of engine. See **Fig. 28**.
G101 (Si)	Left rear of engine. See **Fig. 21**.
G201	Behind right side of front bumper. See **Fig. 128**.
G202	Behind right side of front bumper. See **Fig. 128**.
G301	Lower left side of engine compartment. See **Fig. 136**.
G401	Behind left kick panel. See **Fig. 68**.

G402	Behind glove box. See **Fig. 79**.
G403 (2 Door)	Behind right kick panel. See **Fig. 82**.
G403 (4-Door)	Behind glove box. See **Fig. 79**.
G501	Under gauge assembly. See **Fig. 60**.
G502	Behind glove box. See **Fig. 78**.
G503	Under left side of dash. See **Fig. 62**.
G504	Near under-dash junction box. See **Fig. 64**.
G505	Behind glove box. See **Fig. 77**.
G506	Under middle of dash. See **Fig. 75**.
G601	Front left side of floor. See **Fig. 94**.
G602	Front right side of floor. See **Fig. 97**.
G603	In left "C" pillar. See **Fig. 115**.
G701 (2-Door)	Left side of trunk. See **Fig. 120**.
G701 (4-Door)	Left rear of trunk. See **Fig. 121**.
G801	Left side of roof. See **Fig. 149**.
G801	Right "C" pillar. See **Fig. 150**.
G851	Base of right "C" pillar. See **Fig. 110**.

COMPONENT LOCATION GRAPHICS

NOTE: Figures may show multiple component locations. Refer to appropriate table for proper figure references.

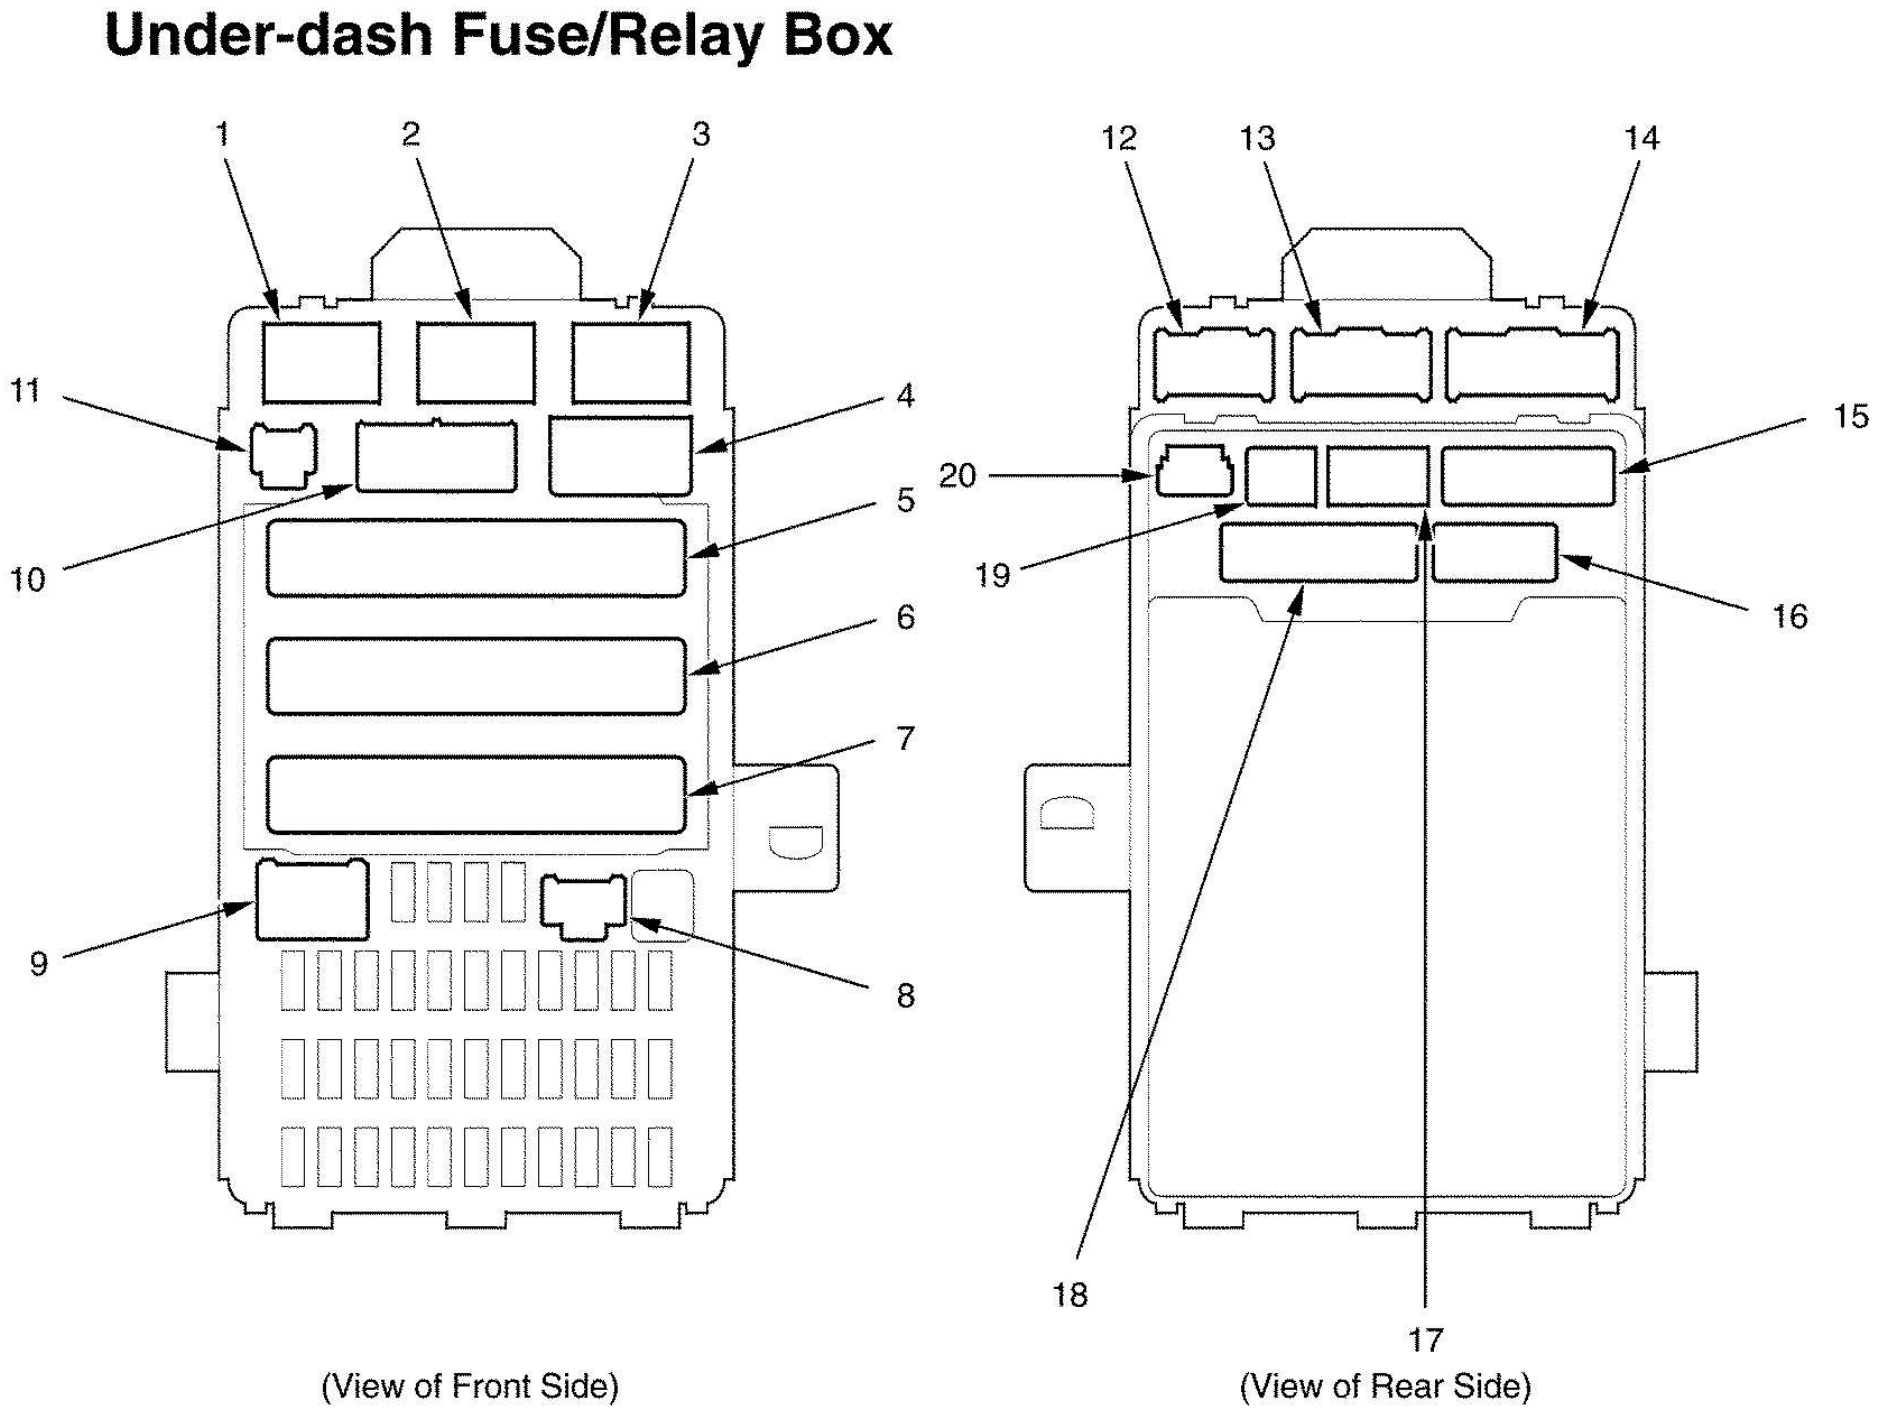
Under-dash Fuse/Relay Box
1
2
3
11
4
10
5
6
7
9
8
12
13
14
15
20
19
16
18
17
(View of Front Side)
(View of Rear Side)

Ref	Socket	Cavities	Connects to
1	Power Window Relay	4	
2	PGM-FI Main Relay 2	4	
3	Starter Cut Relay	4	
4	D	2	Dashboard wire harness
5	E	42	Floor Wire Harness
6	F	34	Engine Compartment Wire Harness
7	G	21	Engine Compartment Wire Harness
8	H (MICU Service Check Connector)	3	
9	A (Optional Connector)	6	
10	C	4	Dashboard wire harness
11	B (MES Connector)		Dashboard wire harness
12	K	8	Dashboard wire harness
13	M	10	Dashboard wire harness
14	N	14	Dashboard wire harness
15	R	20	Dashboard wire harness
16	S (MICU)	20	Dashboard wire harness
17	Q	16	Dashboard wire harness
18	T (MICU)	34	Dashboard wire harness
19	P	10	Dashboard wire harness
20	J	4	Dashboard wire harness

G00434335

Fig. 1: Under-Dash Fuse/Relay Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

Under-hood Fuse/Relay Box

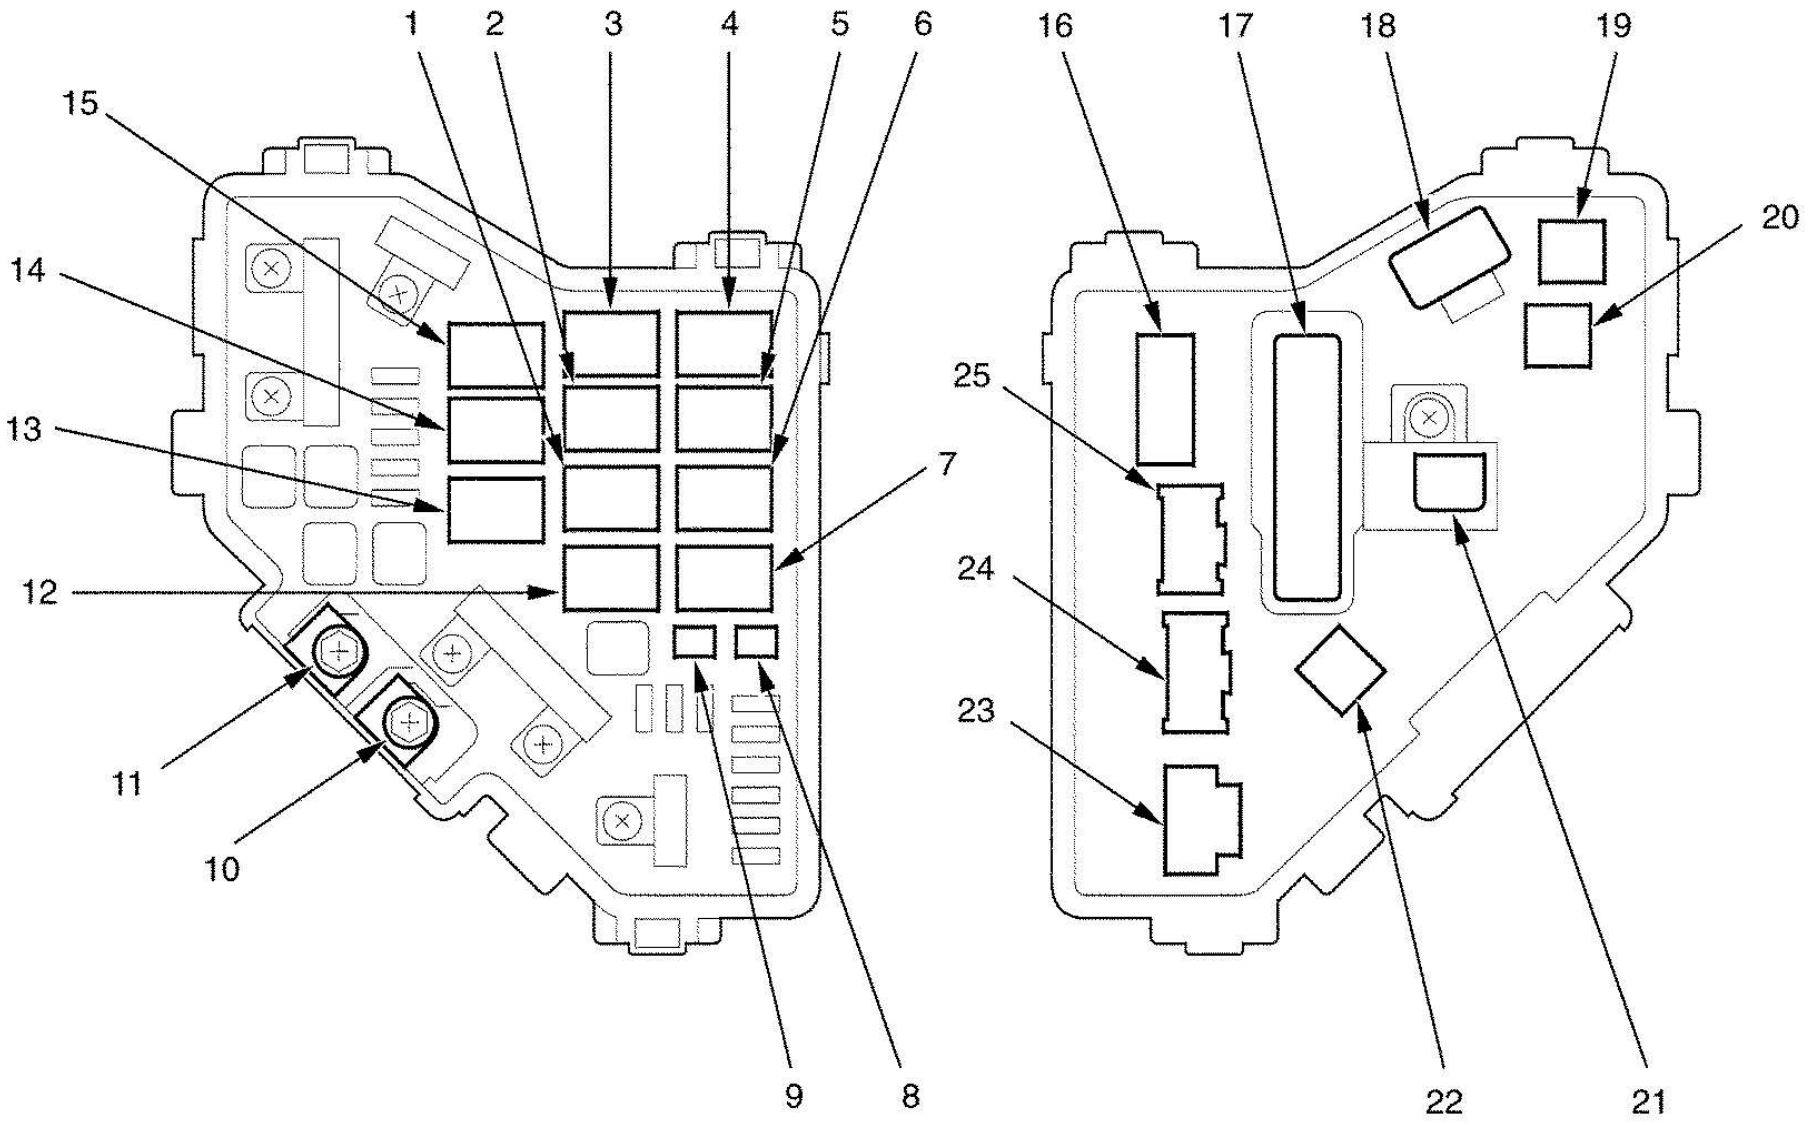

(View of Front Side) (View of Rear Side)

Ref	Socket	Cavities	Connects to
1	Rear Window Defogger Relay	4	
2	Blower Motor Relay	4	
3	A/C Condenser Fan Relay	4	
4	Fan Control Relay	5	
5	Power Mirror Defogger Relay (Canada: LX, EX, Si)	5	
6	PGM-FI Sub-relay	4	
7	Ignition Coil Relay	4	
8	Radiator Fan Diode	2	(Plugs directly into the fuse/relay box)
9	A/C Condenser Fan Diode	2	
10	T3		Engine Wire Harness (DX, DX-G, LX, EX)
10	T3		Starter Sub-harness (Si)
11	T101		Engine Wire Harness (DX, DX-G, LX, EX)
11	T101		Starter Sub-harness (Si)
12	A/C Compressor Clutch Relay	4	
13	PGM-FI Main Relay 1	4	
14	ETCS Control Relay	4	
15	Radiator Fan Relay	4	
16	J	4	Engine Compartment Wire Harness
17	F	20	Engine Compartment Wire Harness
18	K	2	Engine Compartment Wire Harness
19	G	1	Engine Compartment Wire Harness
20	H	1	Engine Compartment Wire Harness
21	A (ELD Unit) (USA; Canada: Si)	3	Engine Compartment Wire Harness
22	B (Si)	1	Engine Compartment Wire Harness
23	C	2	Engine Compartment Wire Harness
24	E	10	Engine Compartment Wire Harness
25	D	8	Engine Compartment Wire Harness

G00434336

Fig. 2: Under-Hood Fuse/Relay Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

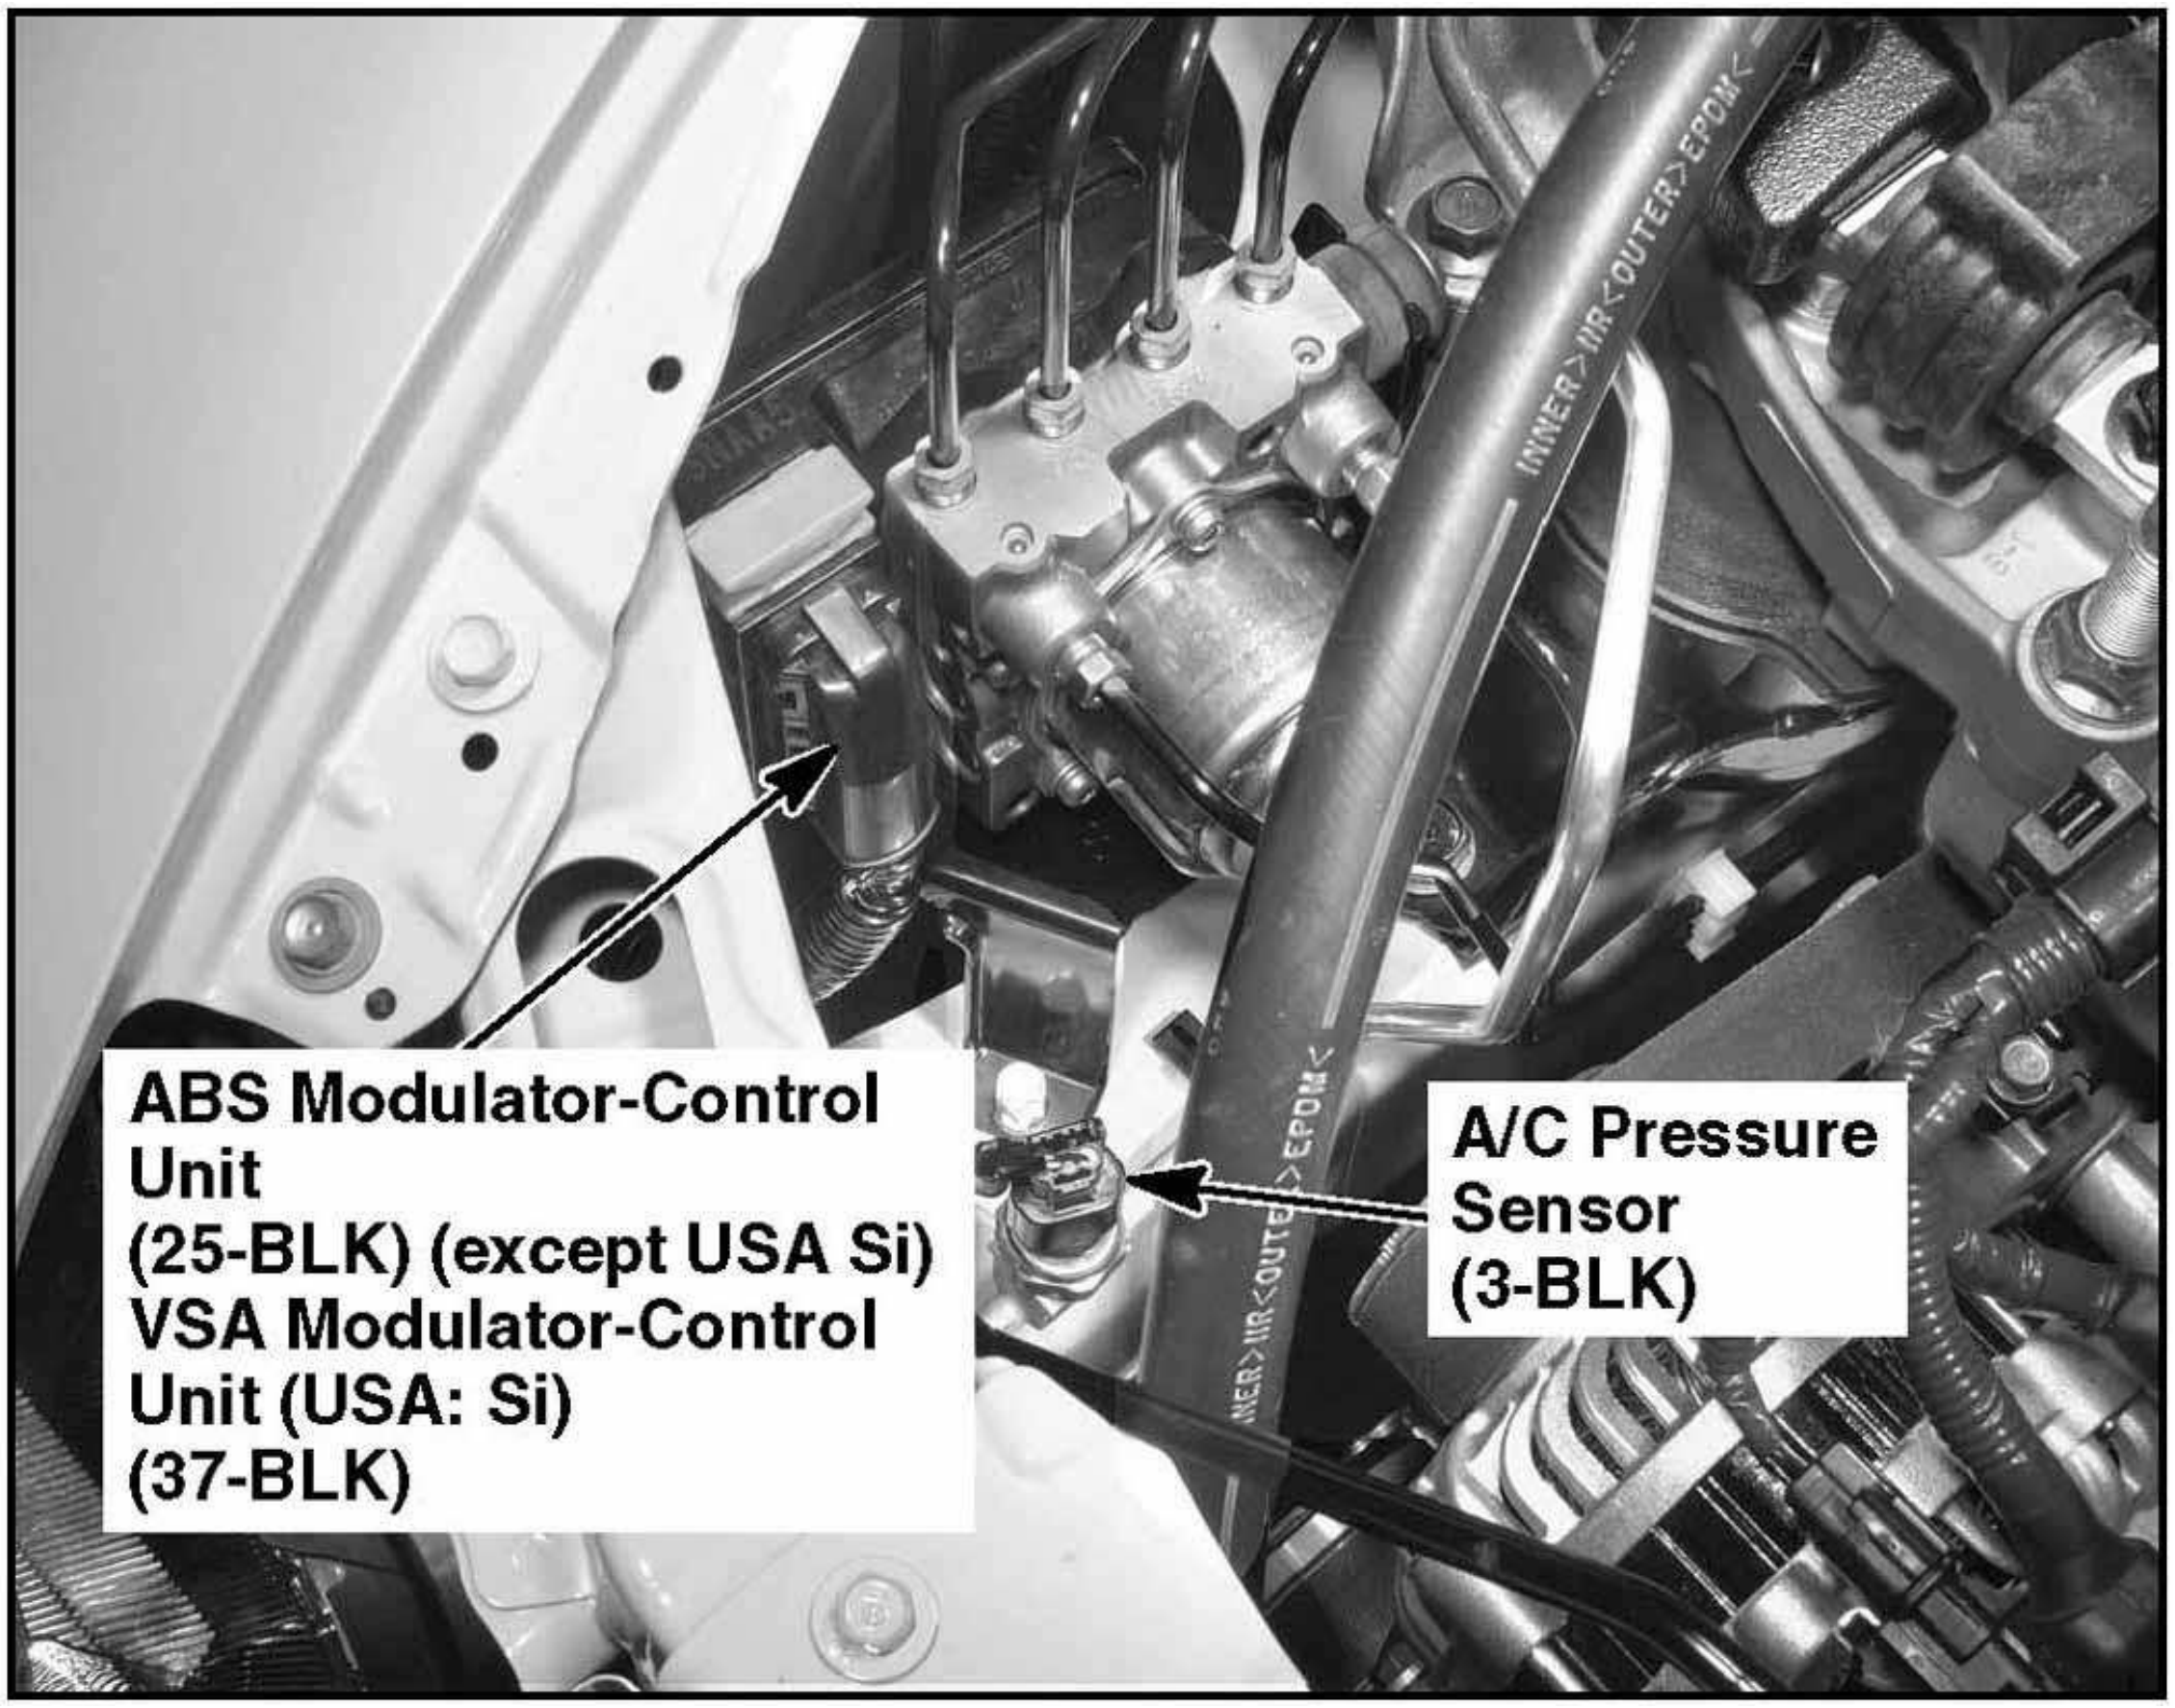
ABS Modulator-Control Unit
(25-BLK) (except USA Si)
VSA Modulator-Control Unit (USA: Si)
(37-BLK)
A/C Pressure Sensor
(3-BLK)

Fig. 3: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

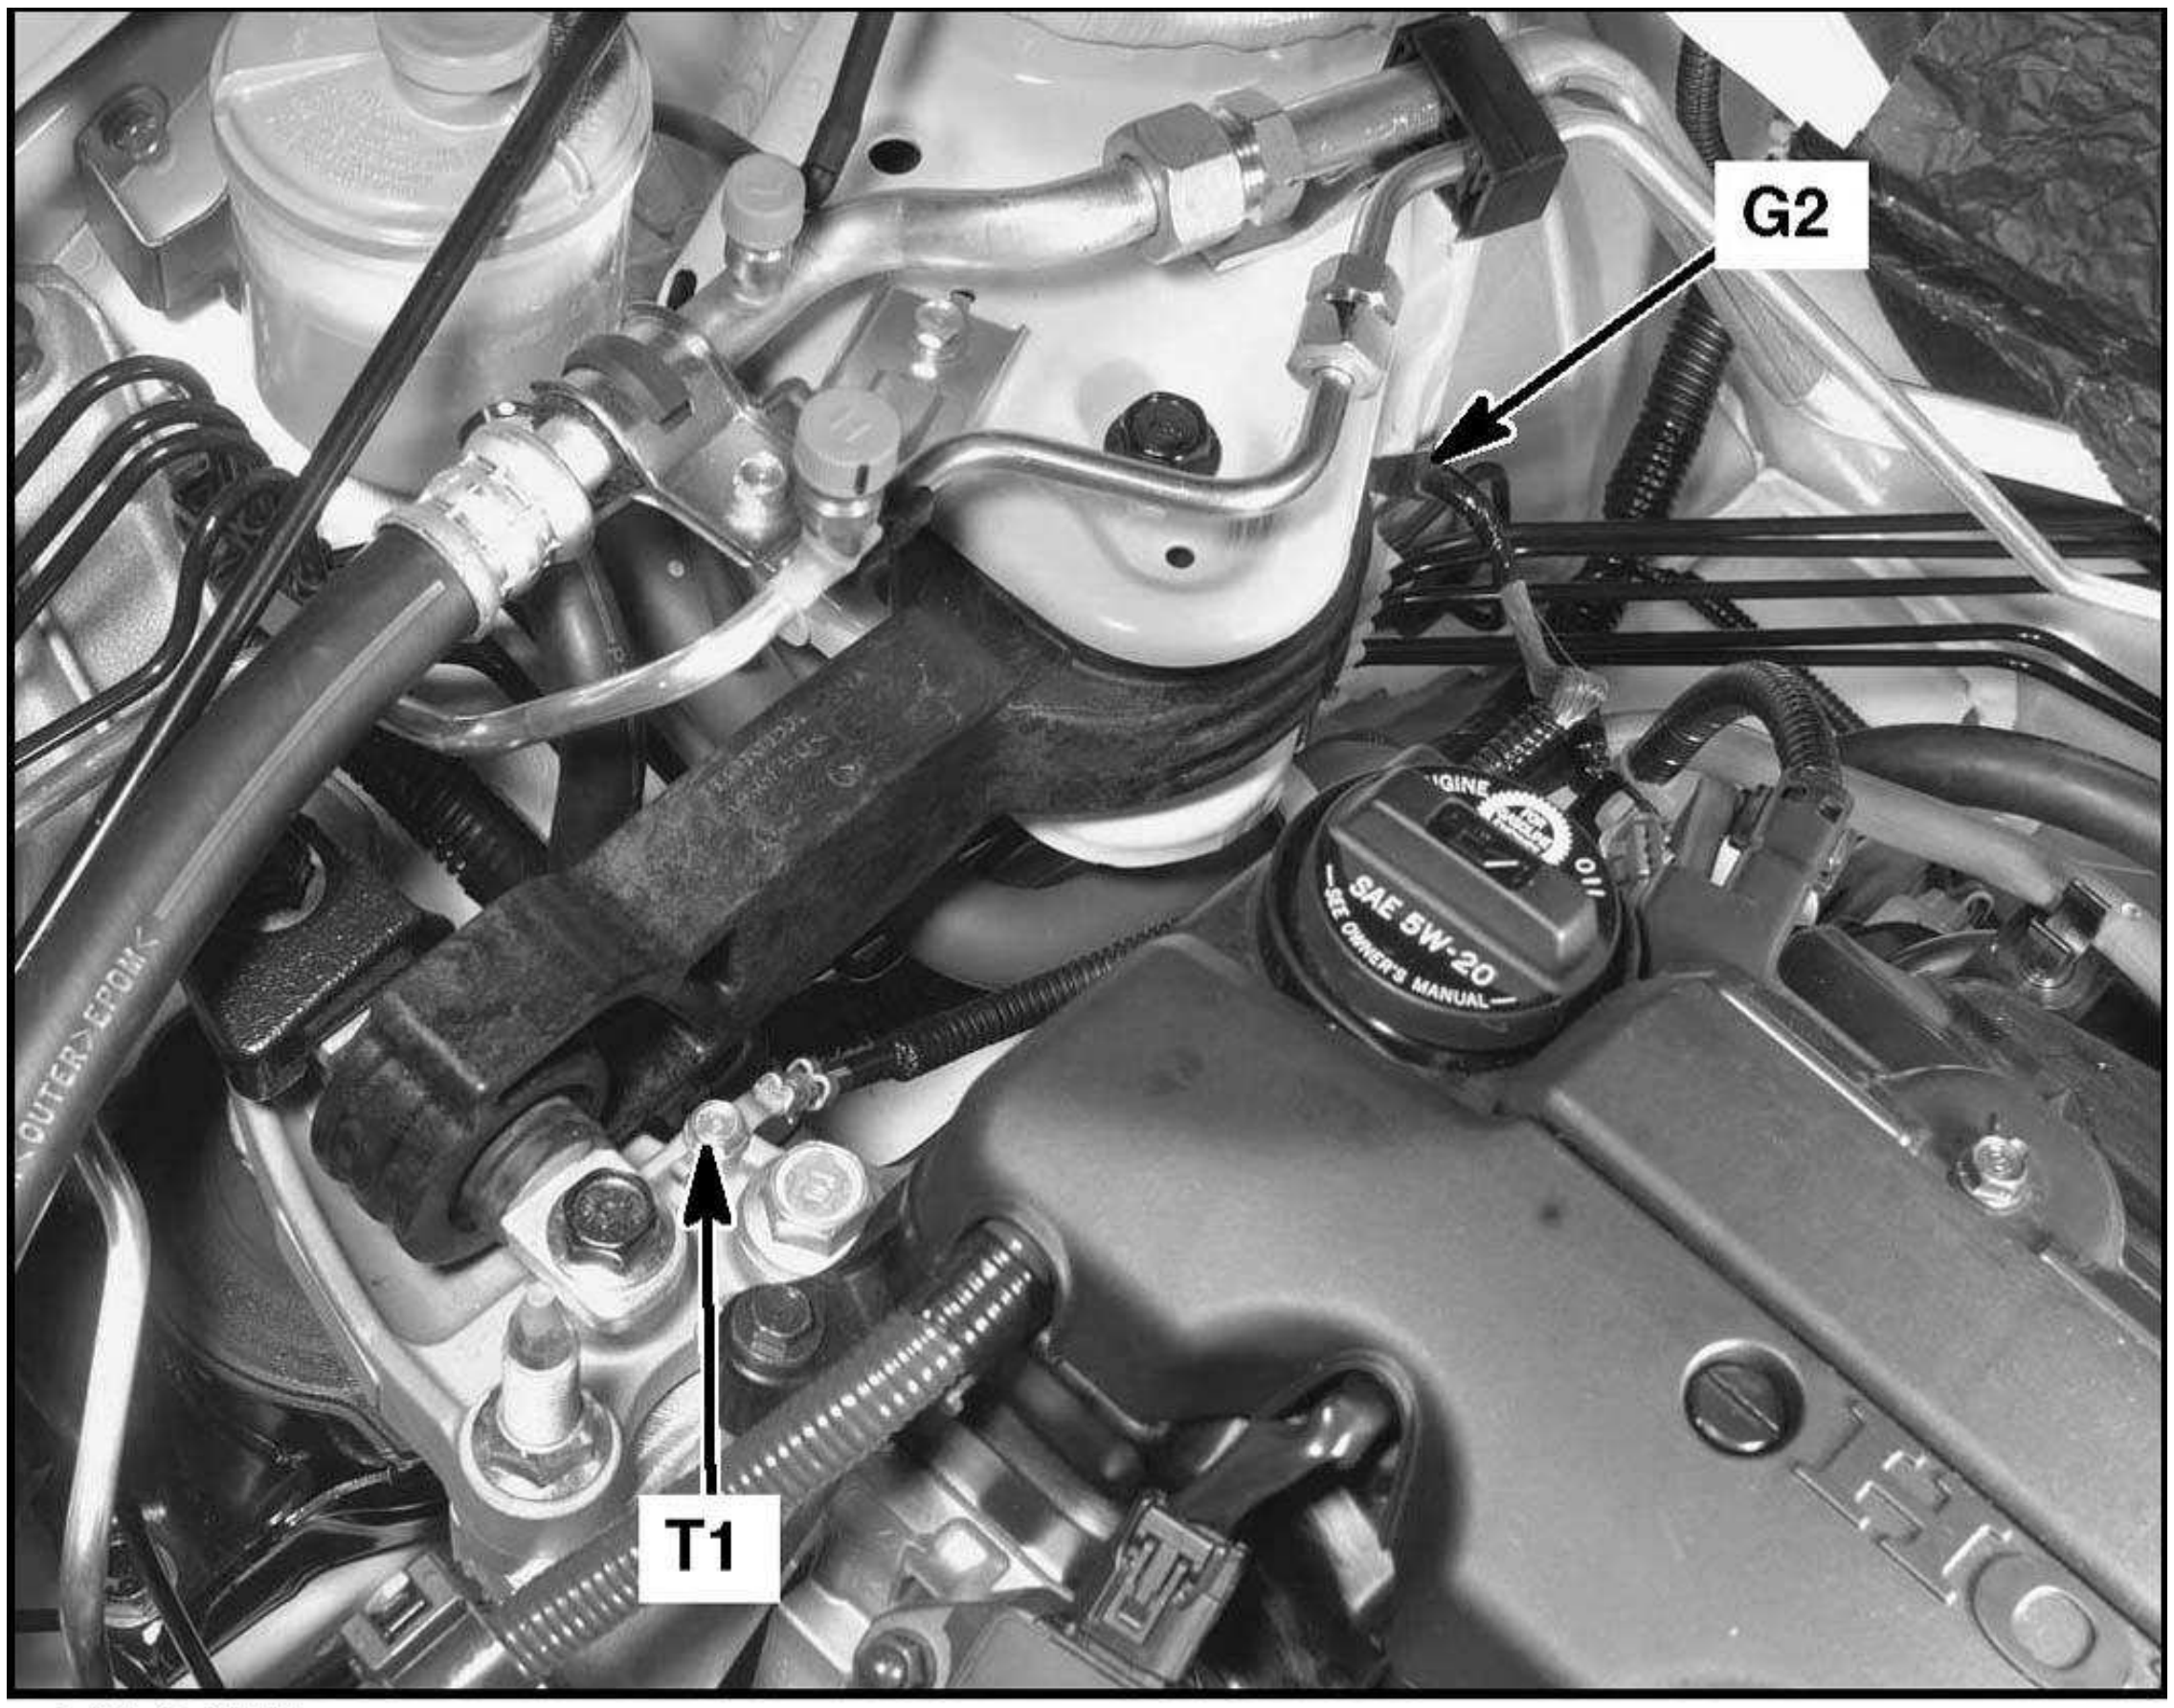
G2
T1
SAE 5W-20
SEE OWNER'S MANUAL
ENGINE OIL
OUTER>EPDM<

G00434338

Fig. 4: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

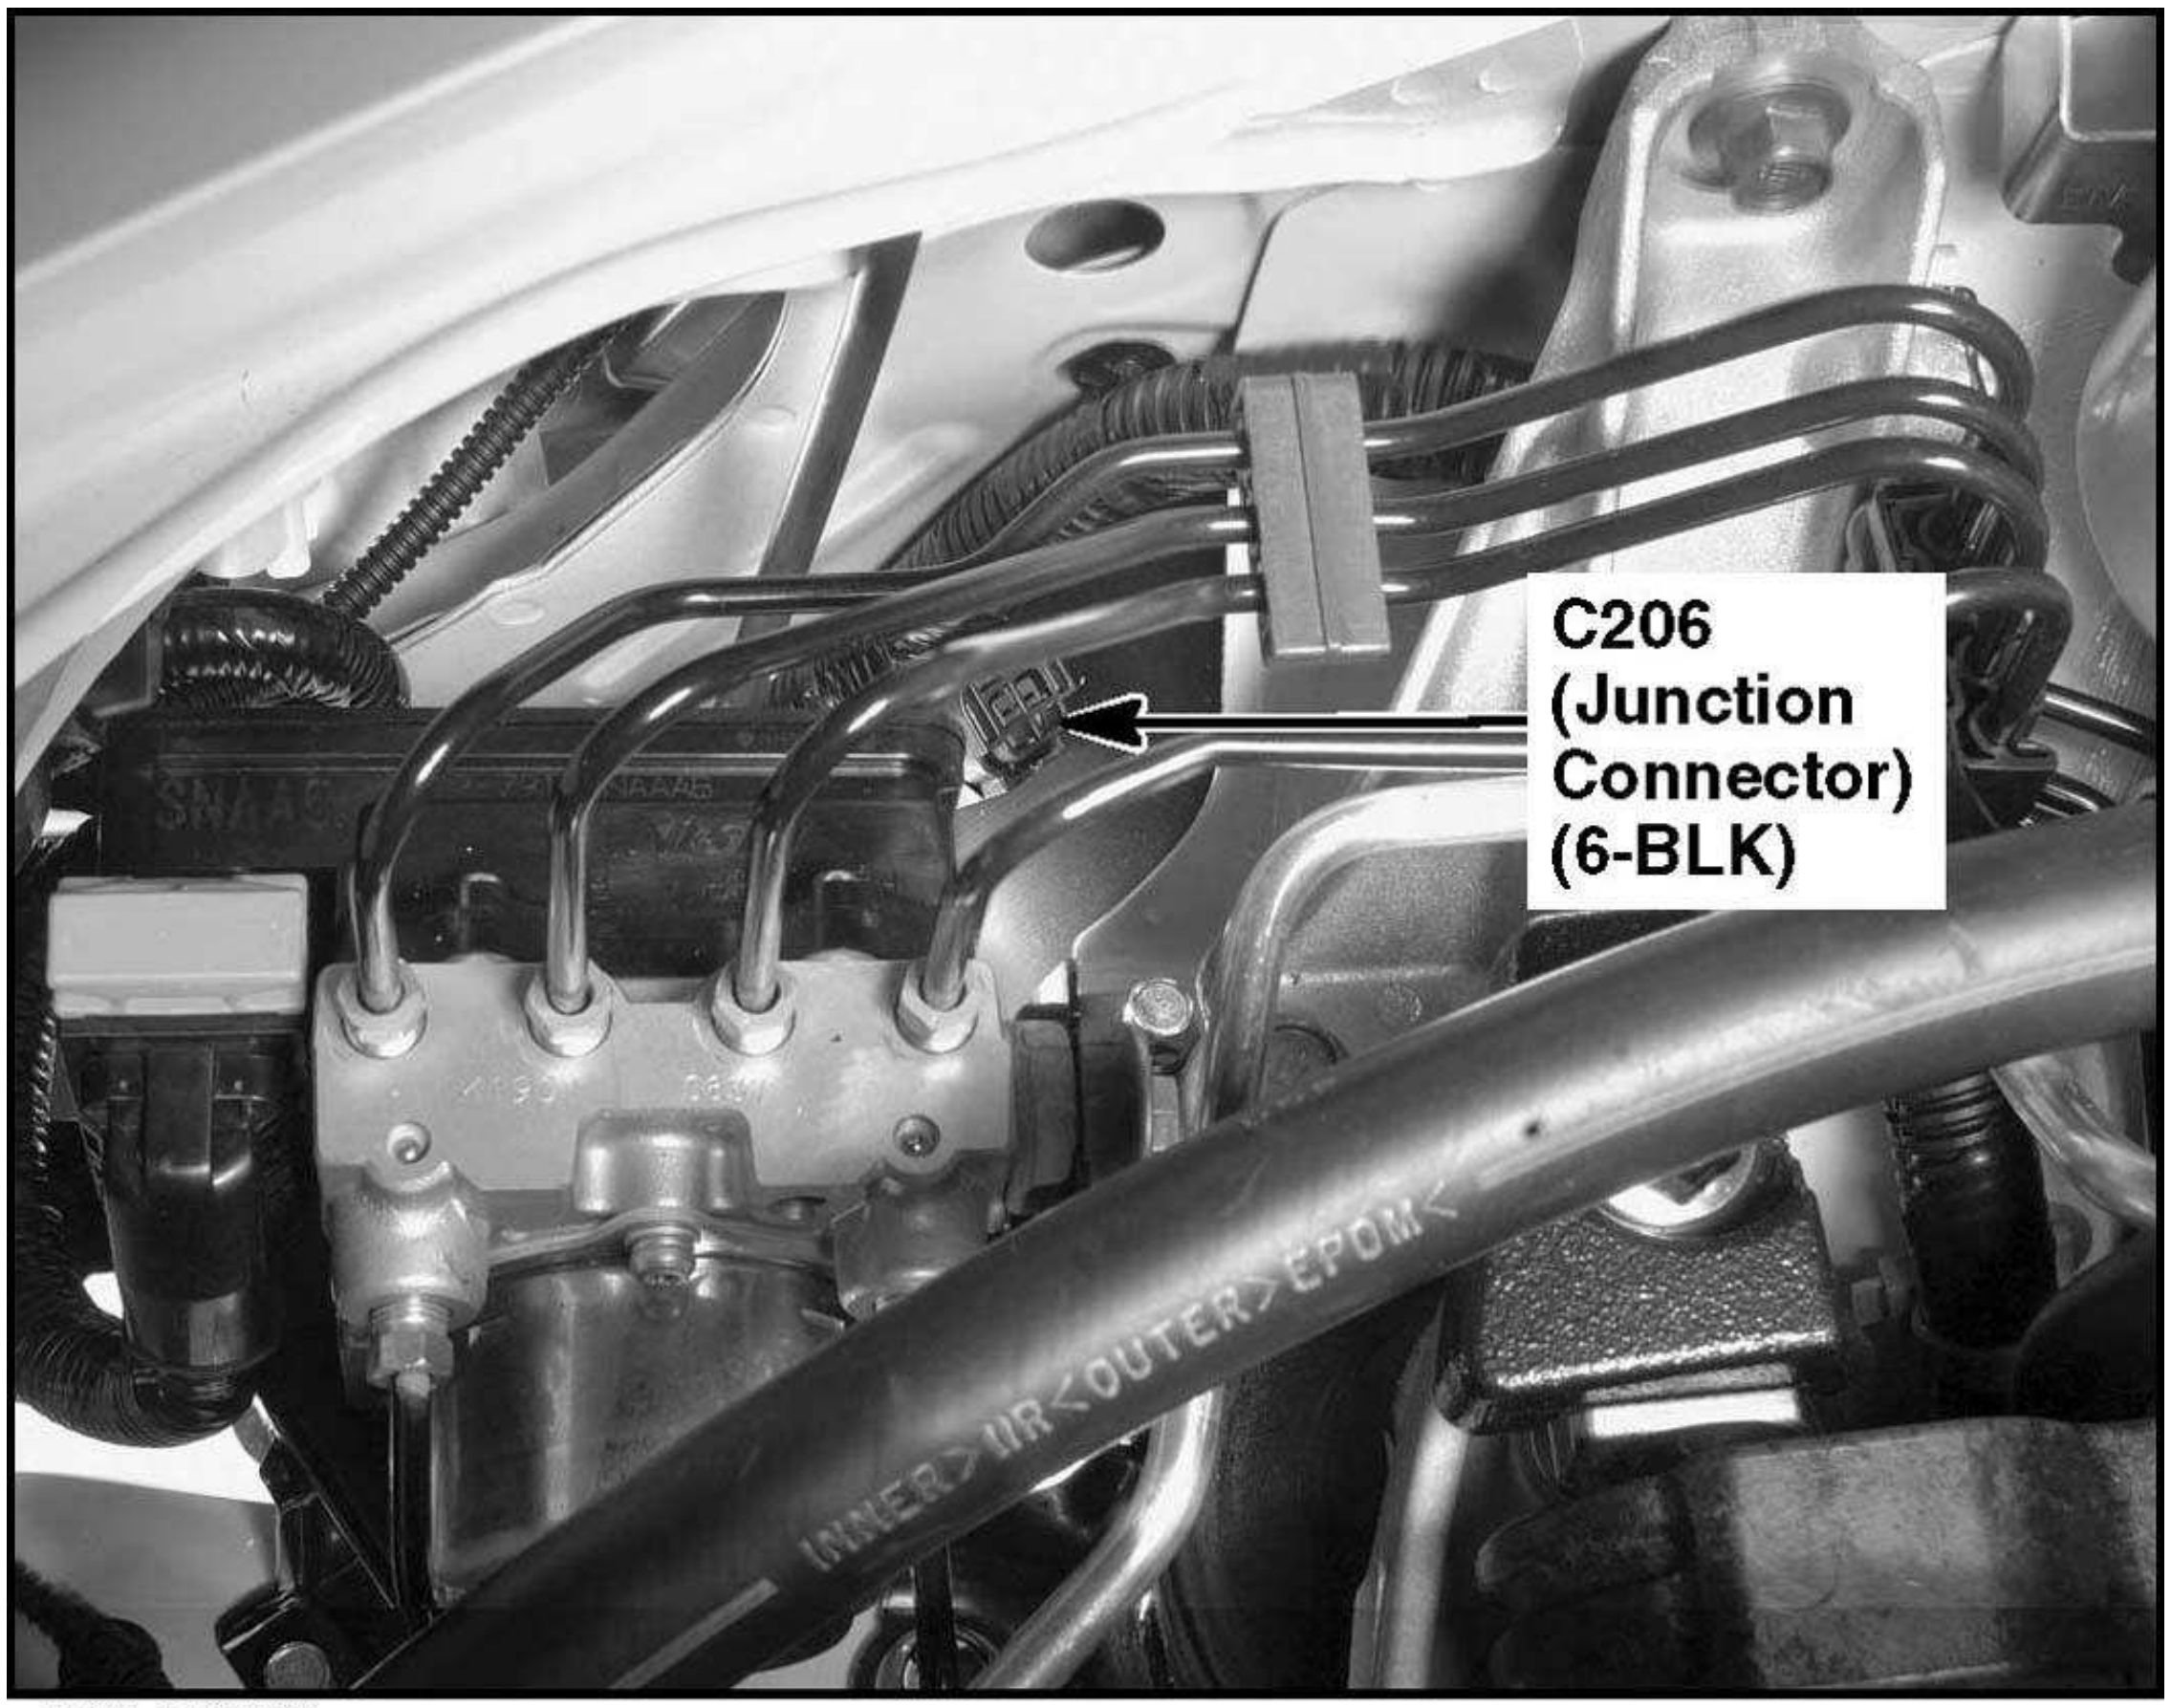
C206
(Junction
Connector)
(6-BLK)
G00434339

Fig. 5: Right Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

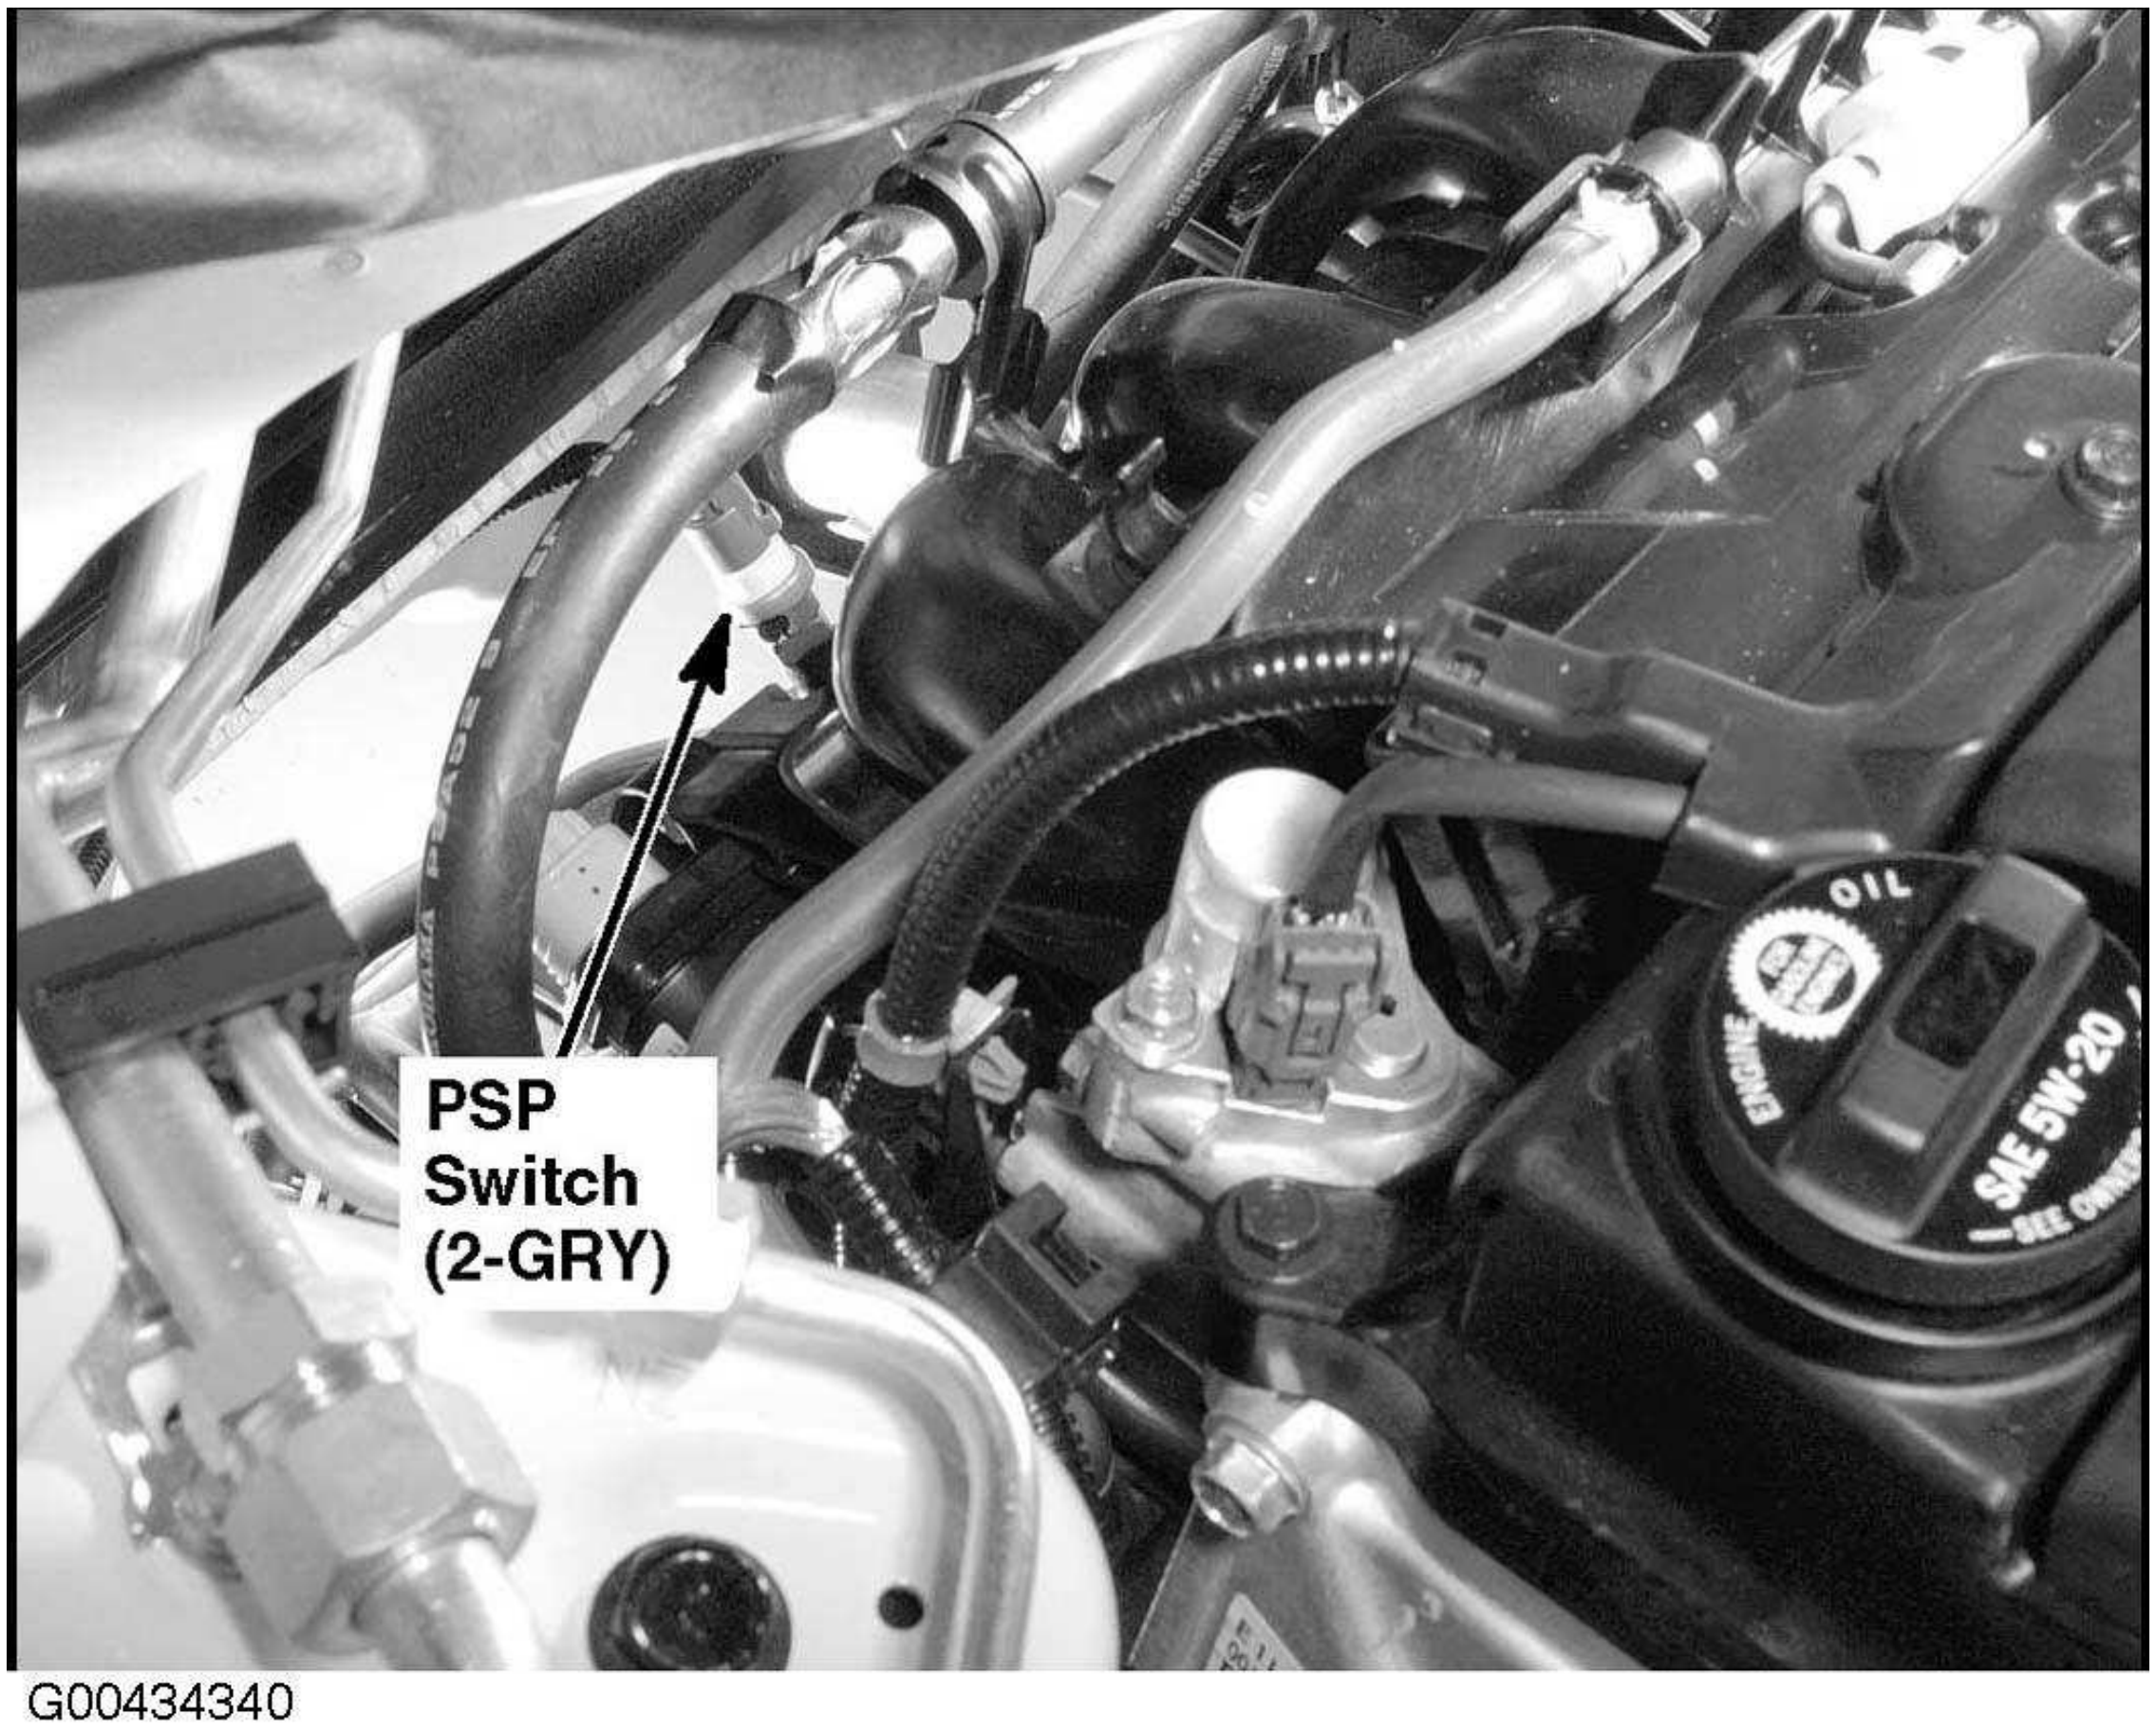
PSP Switch (2-GRY)
OIL
ENGINE
SAE 5W-20
G00434340

Fig. 6: Right Side Of Engine Compartment (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

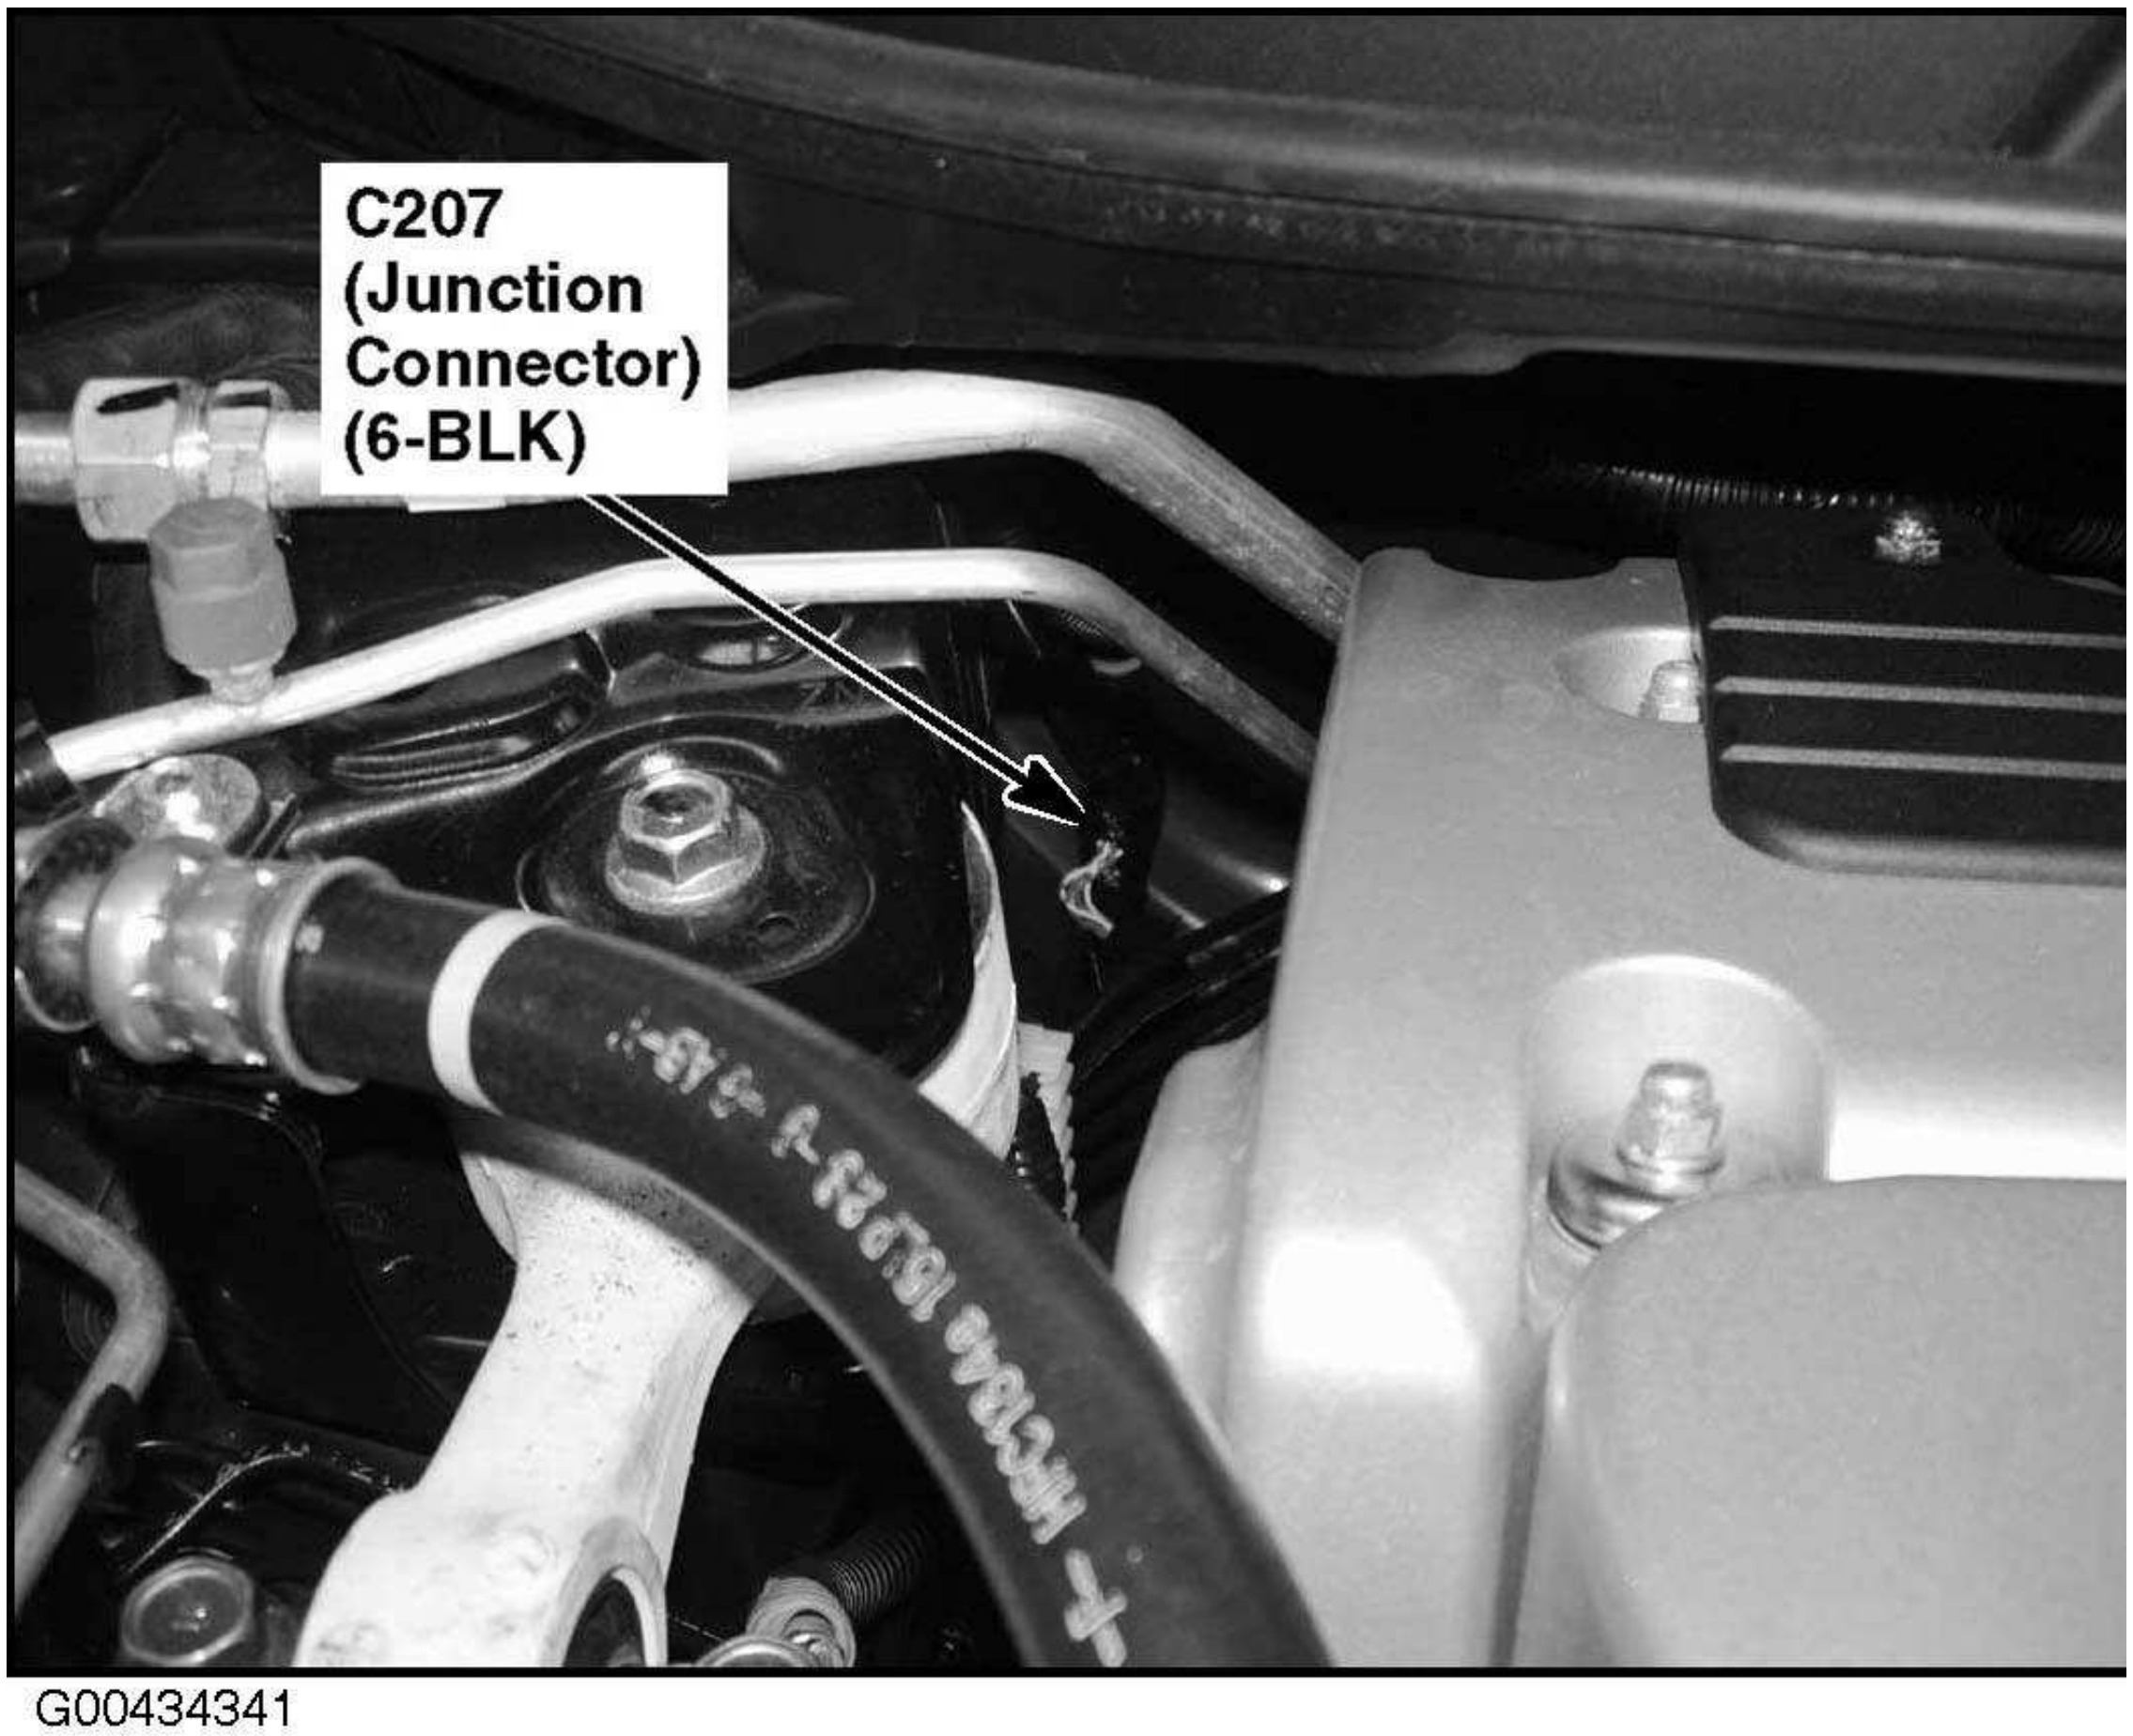
C207
(Junction
Connector)
(6-BLK)
G00434341

Fig. 7: Right Side Of Engine Compartment (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

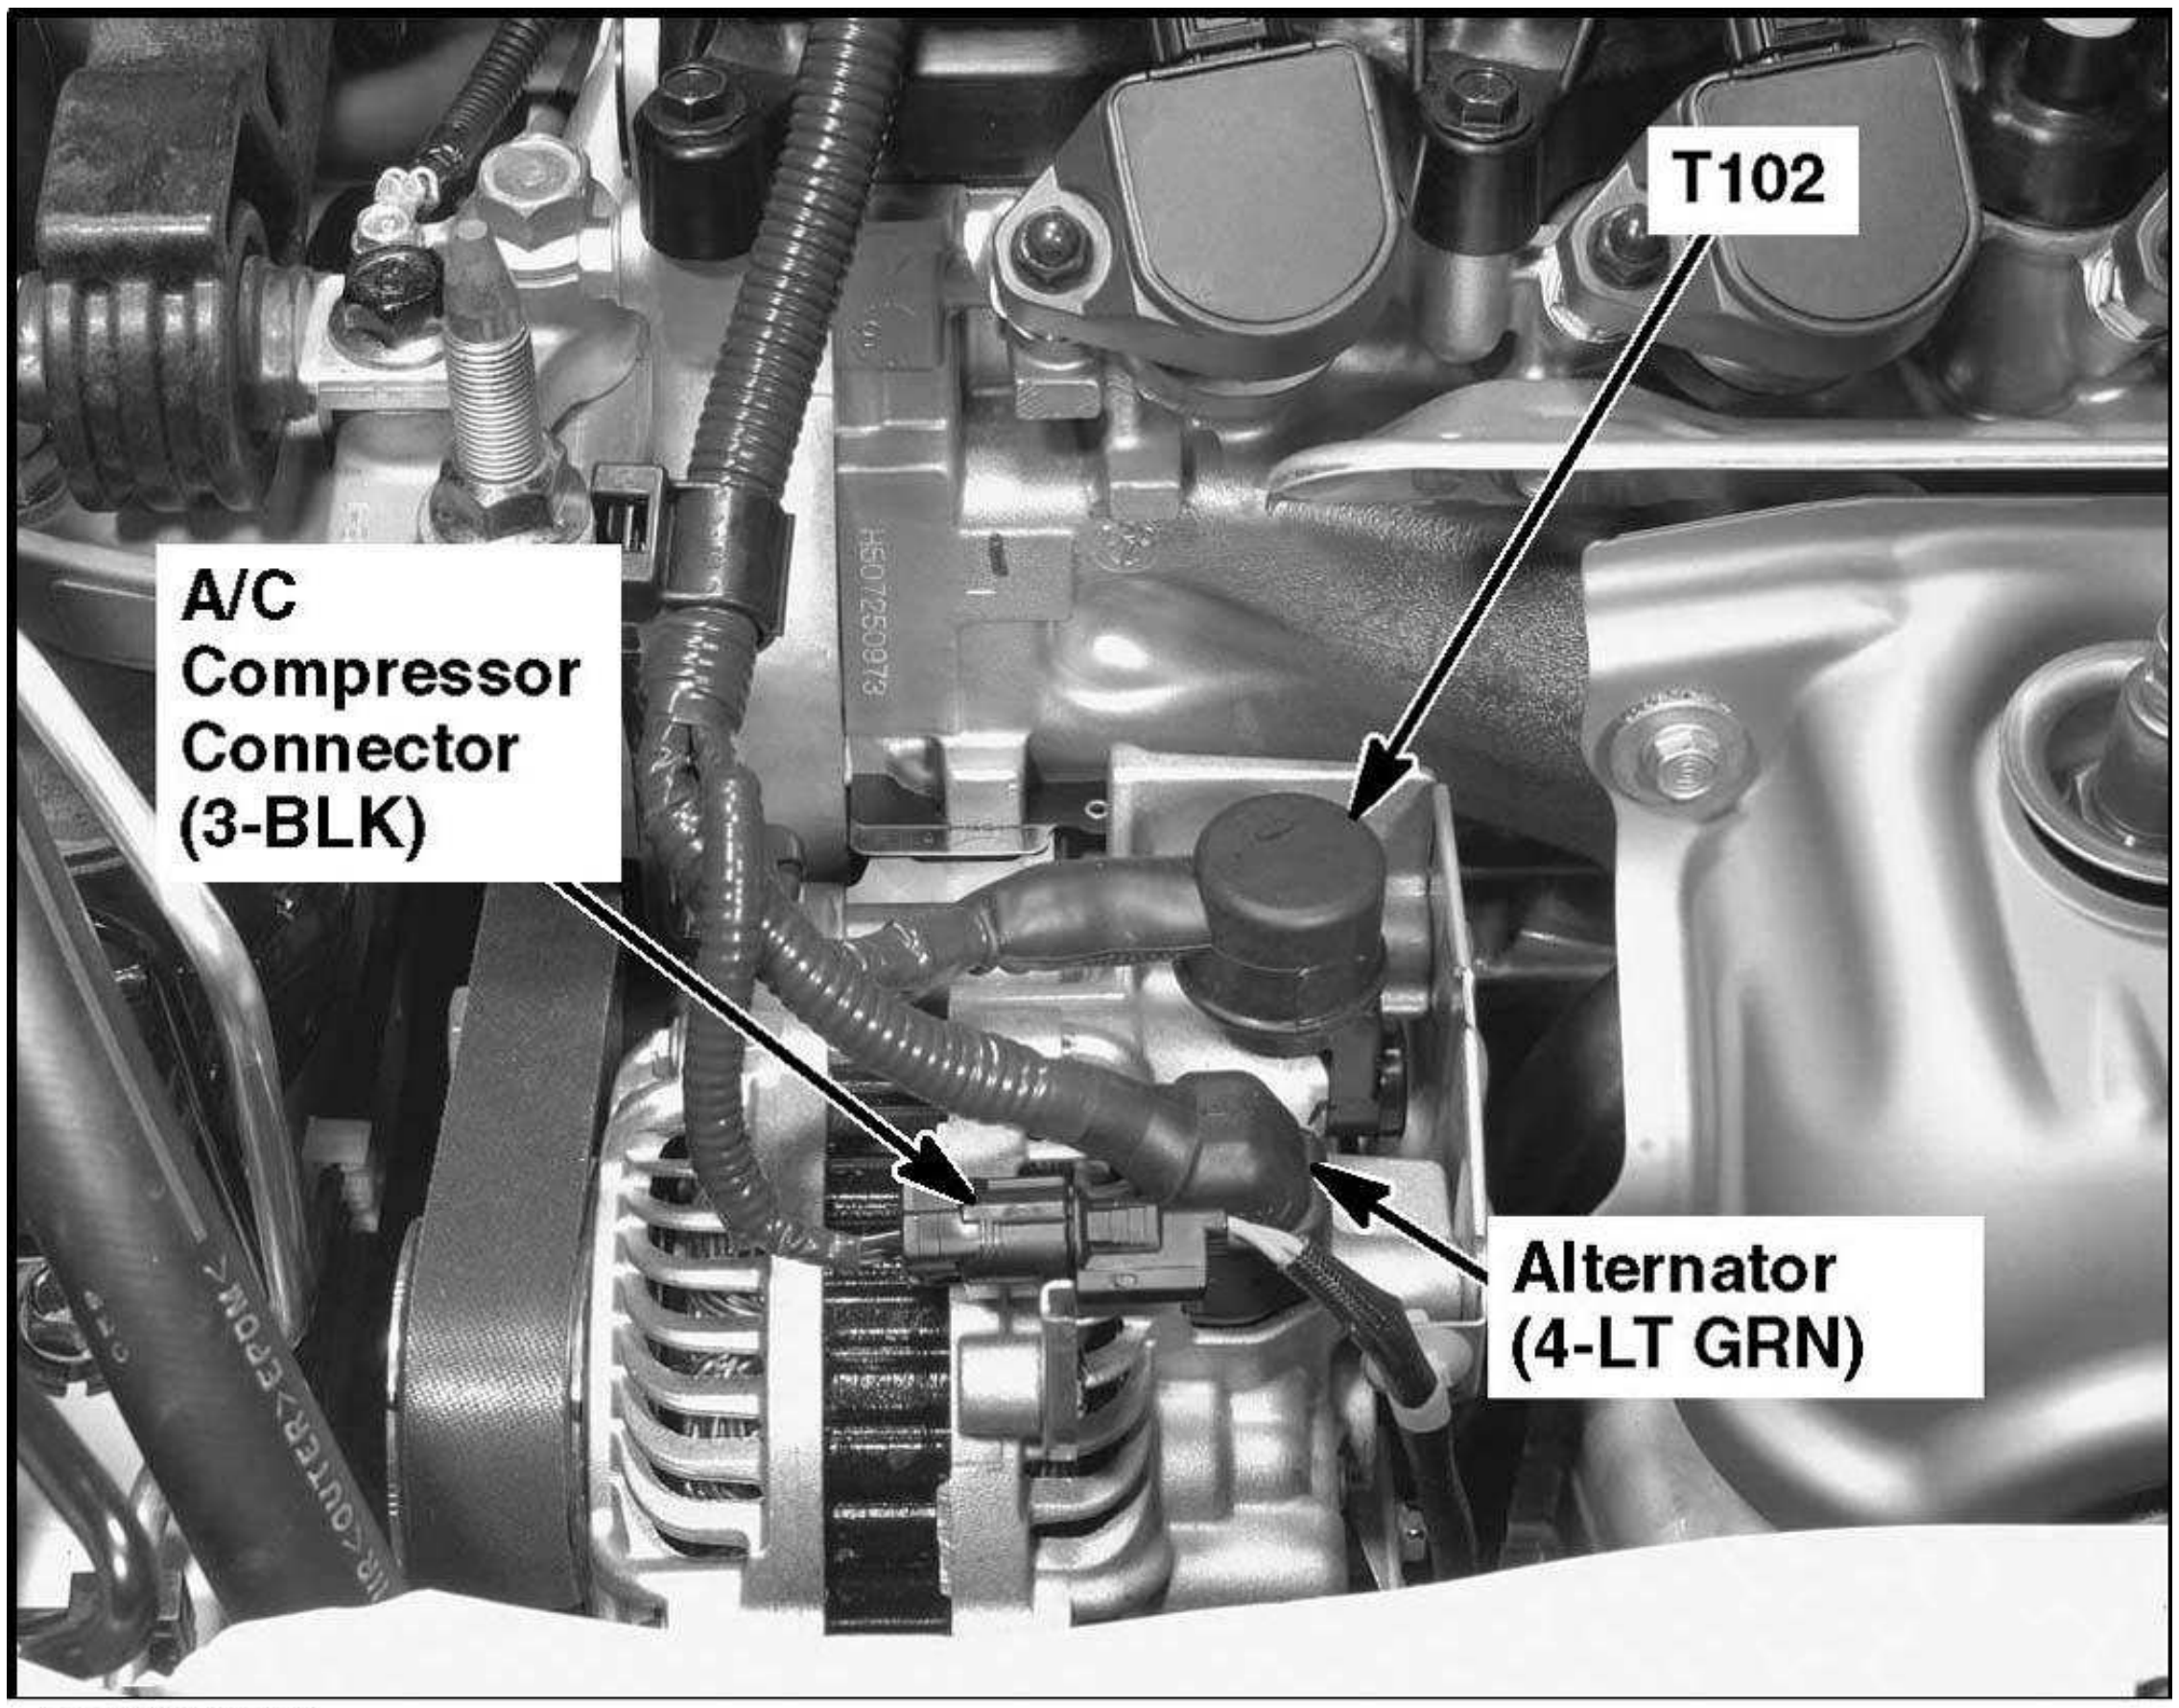
T102
A/C Compressor Connector (3-BLK)
Alternator (4-LT GRN)

G00434342

Fig. 8: Left Front Of Engine (Except Si)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

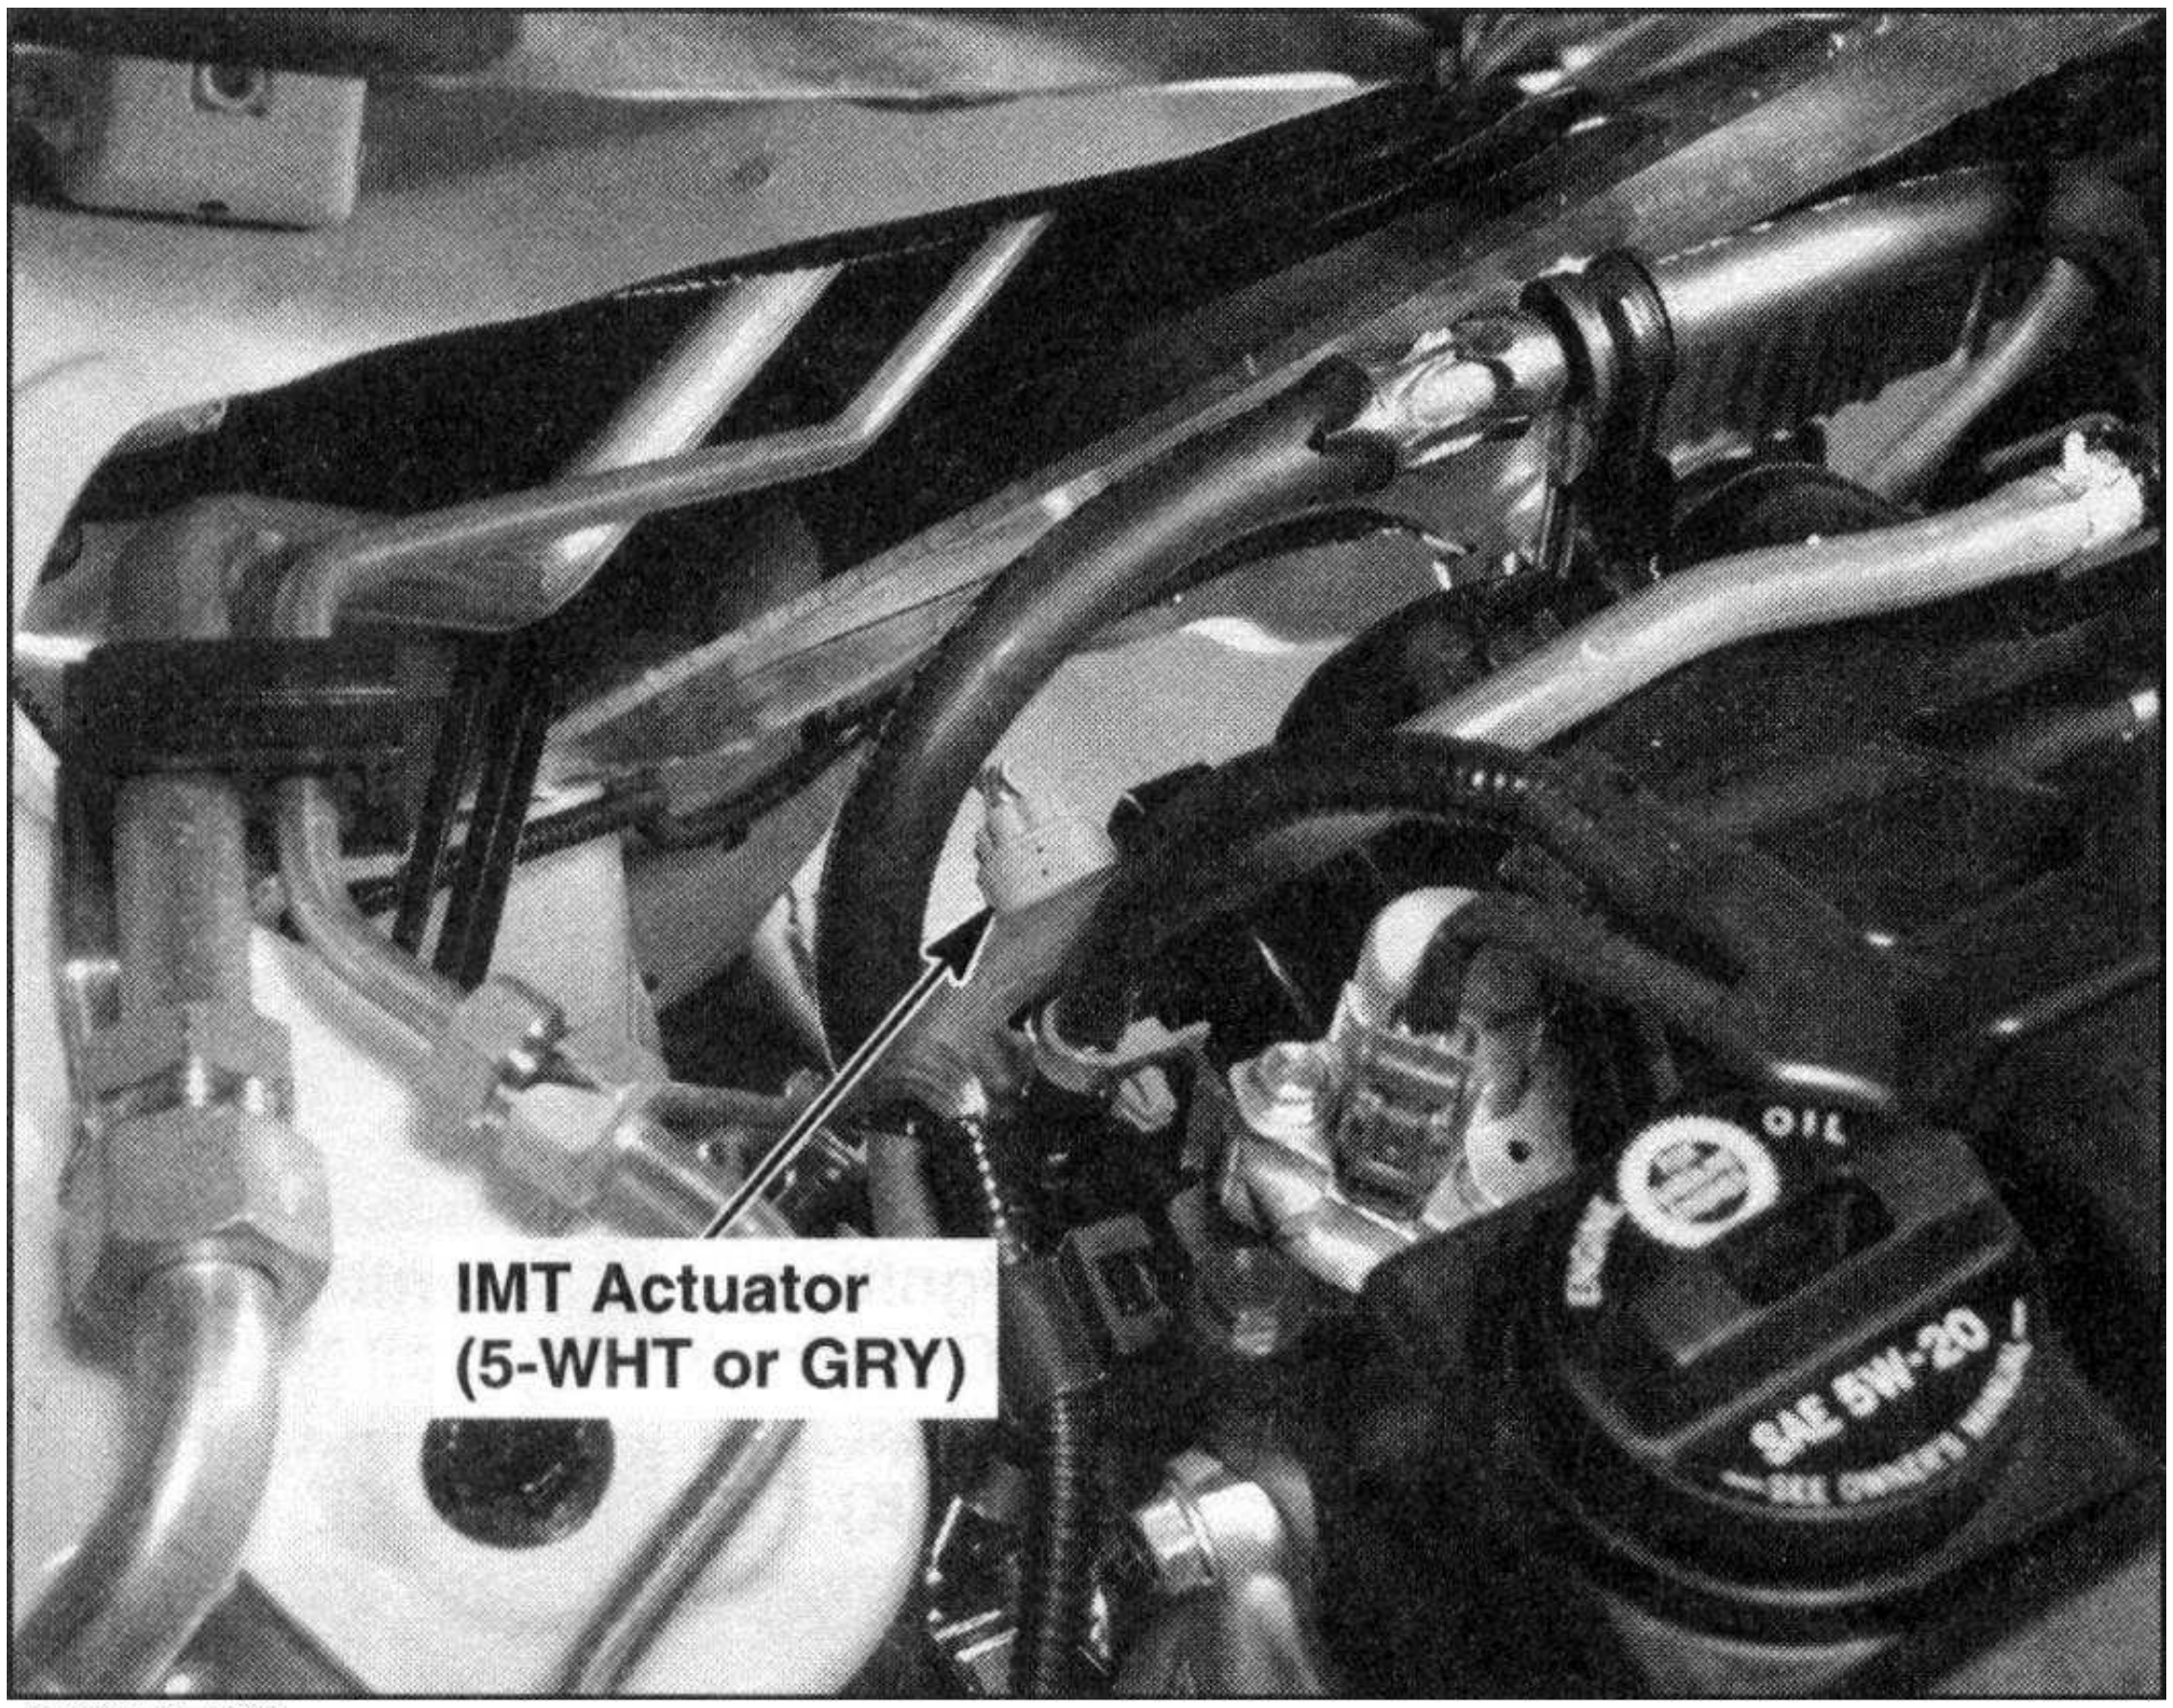
IMT Actuator
(5-WHT or GRY)
OIL
SAE 5W-20
G00447691

Fig. 9: Right Front Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

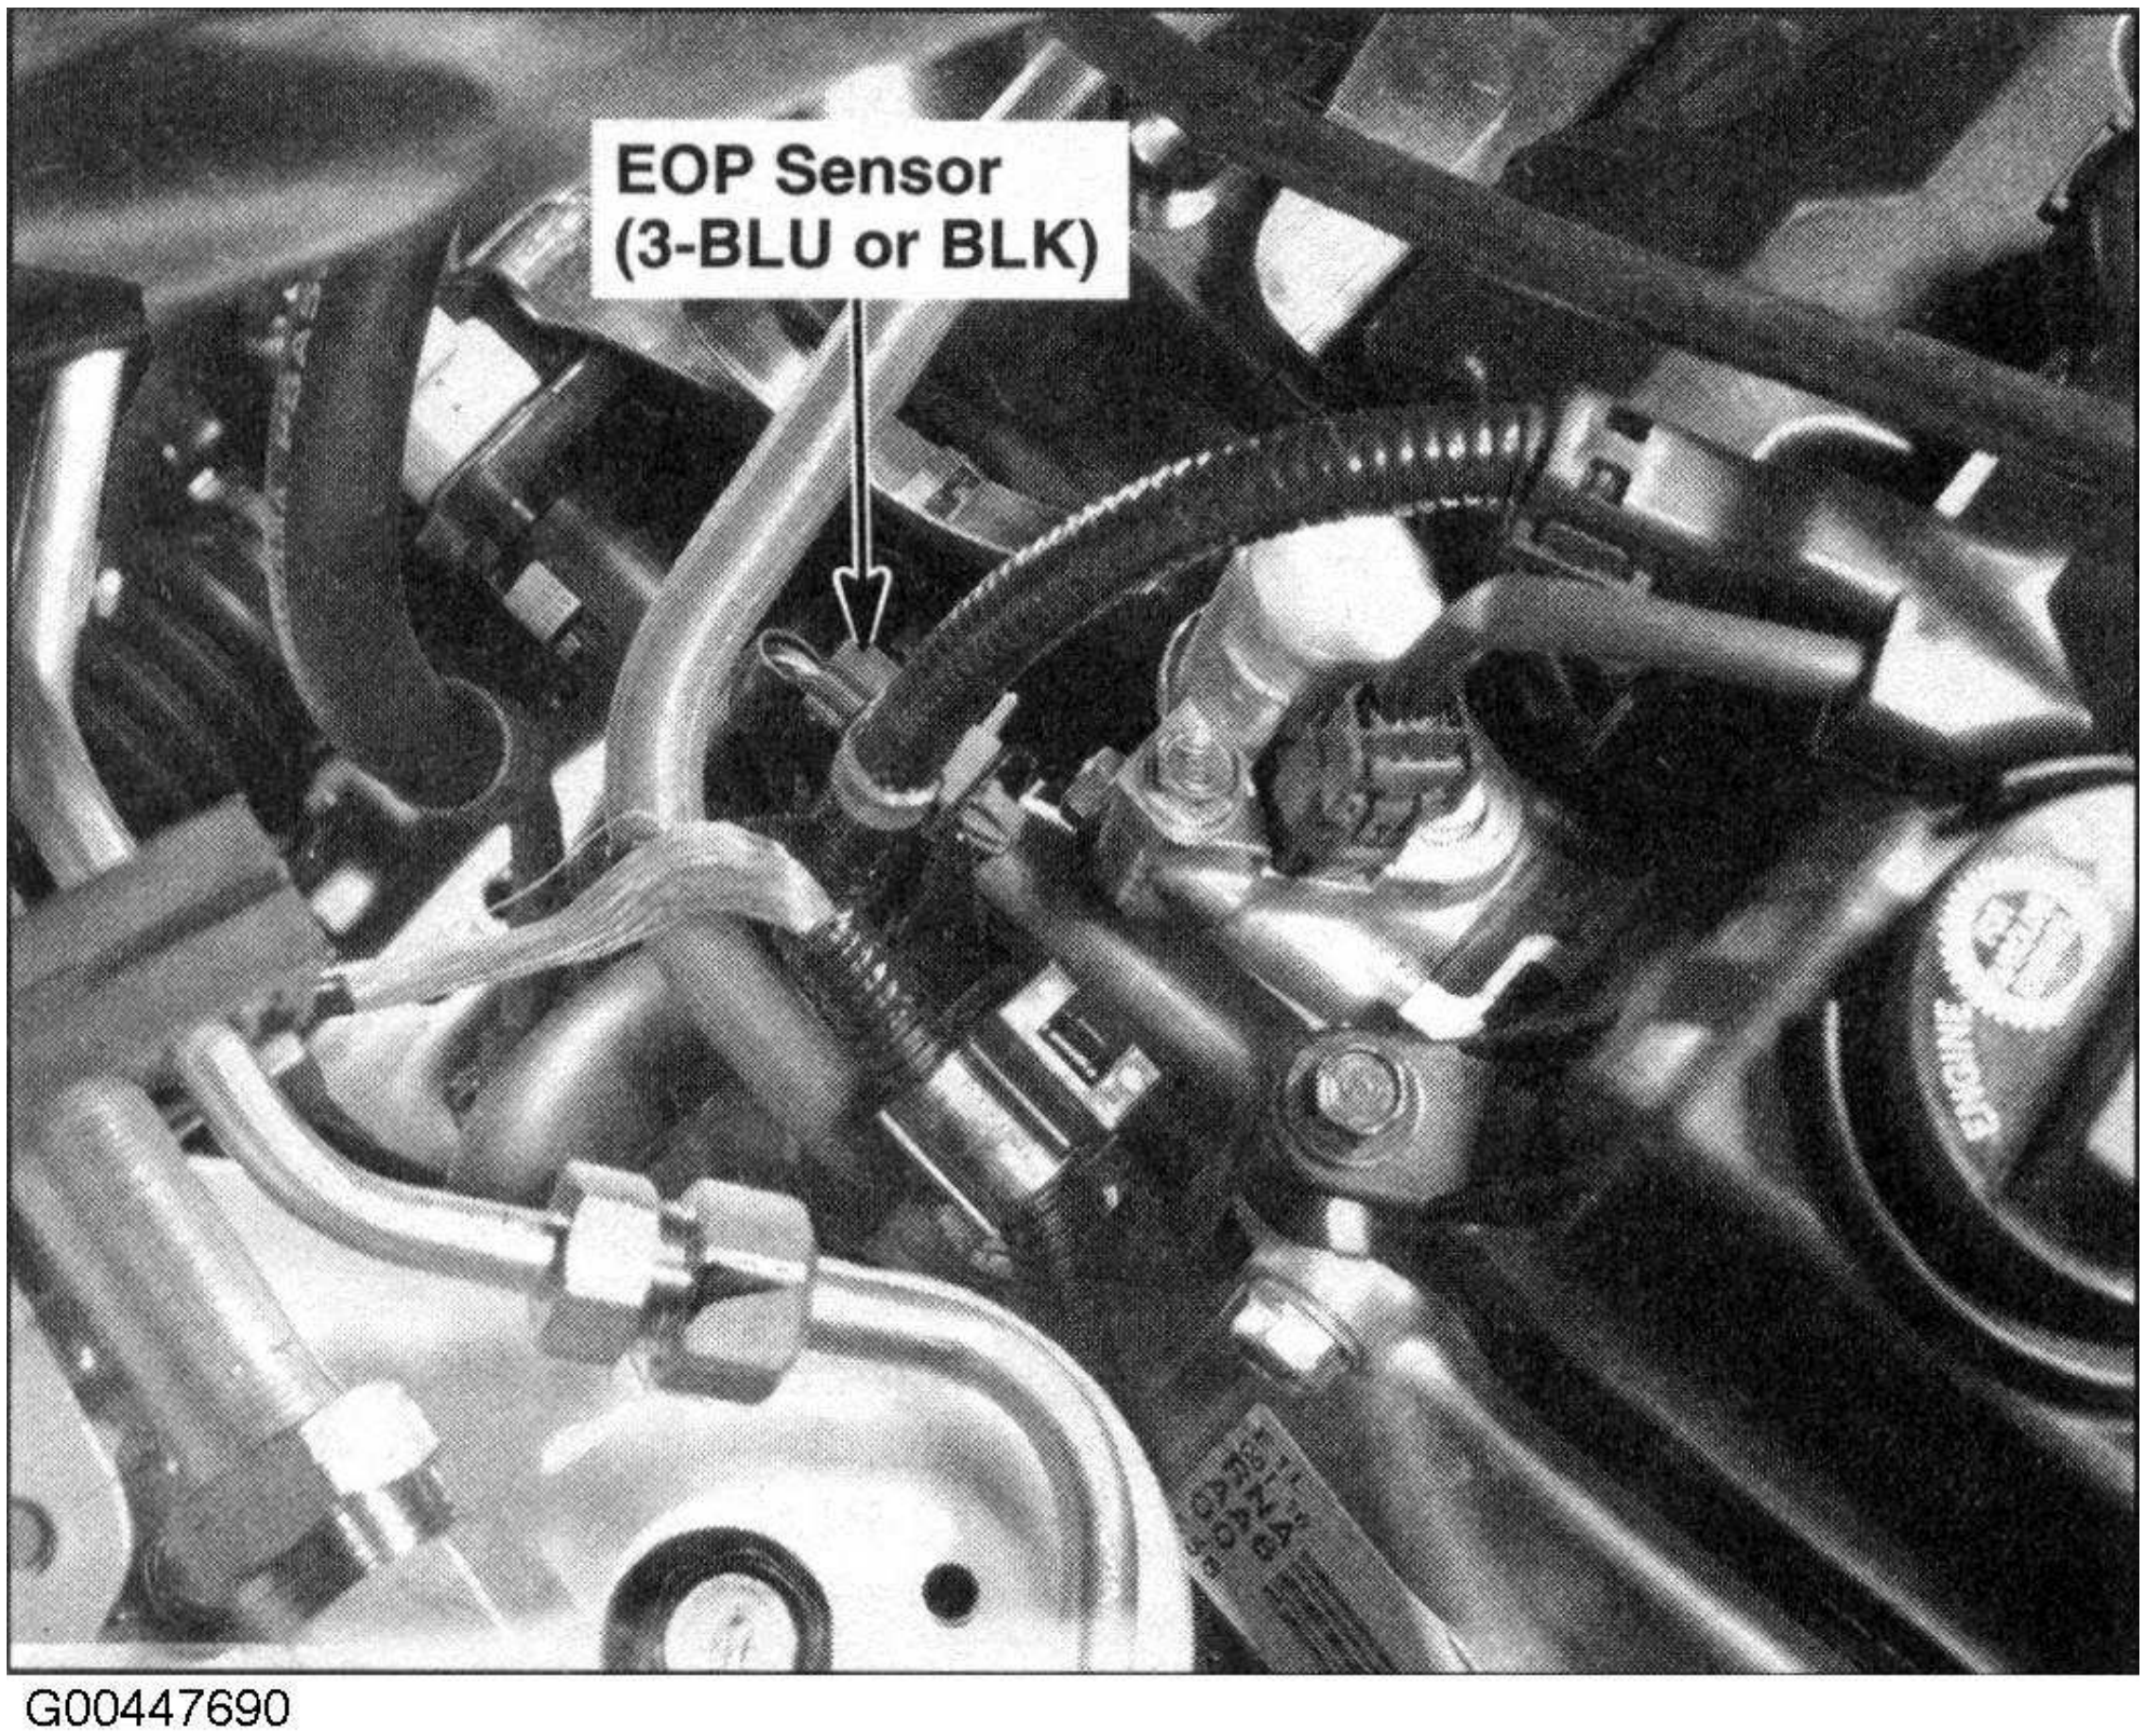
EOP Sensor
(3-BLU or BLK)
G00447690

Fig. 10: Right Front Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

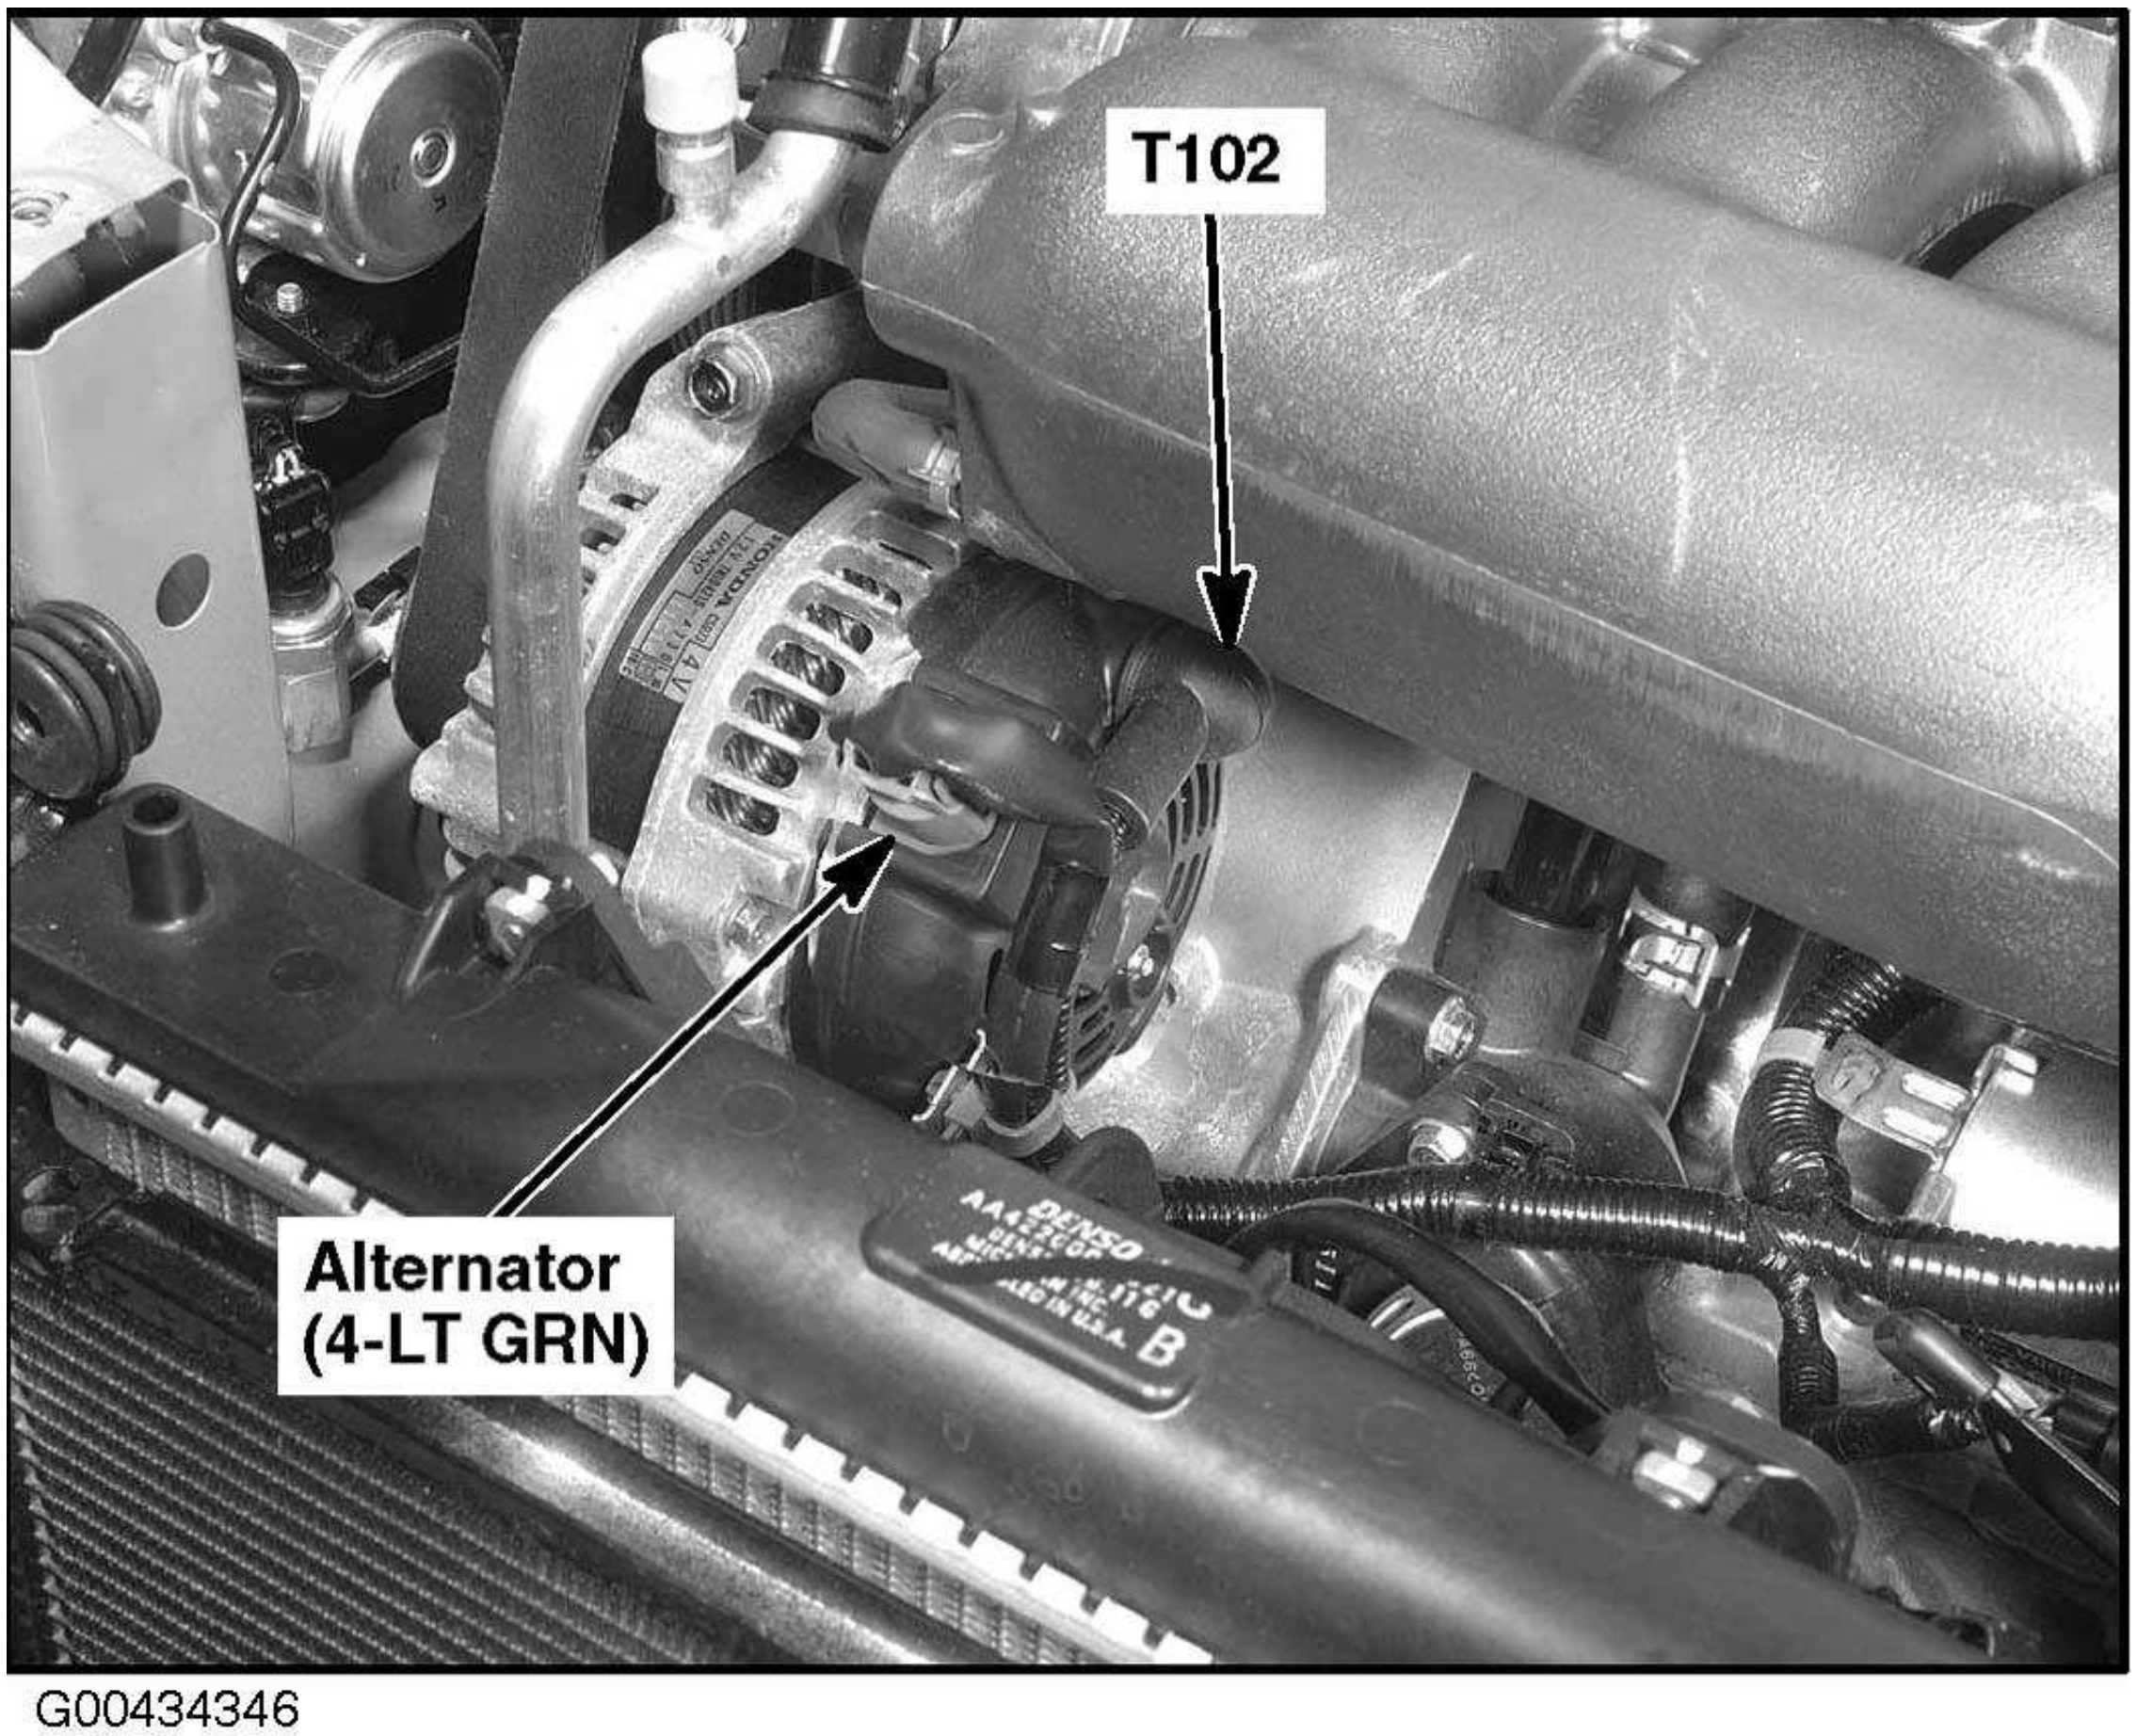
T102
Alternator
(4-LT GRN)
G00434346

Fig. 11: Left Front Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

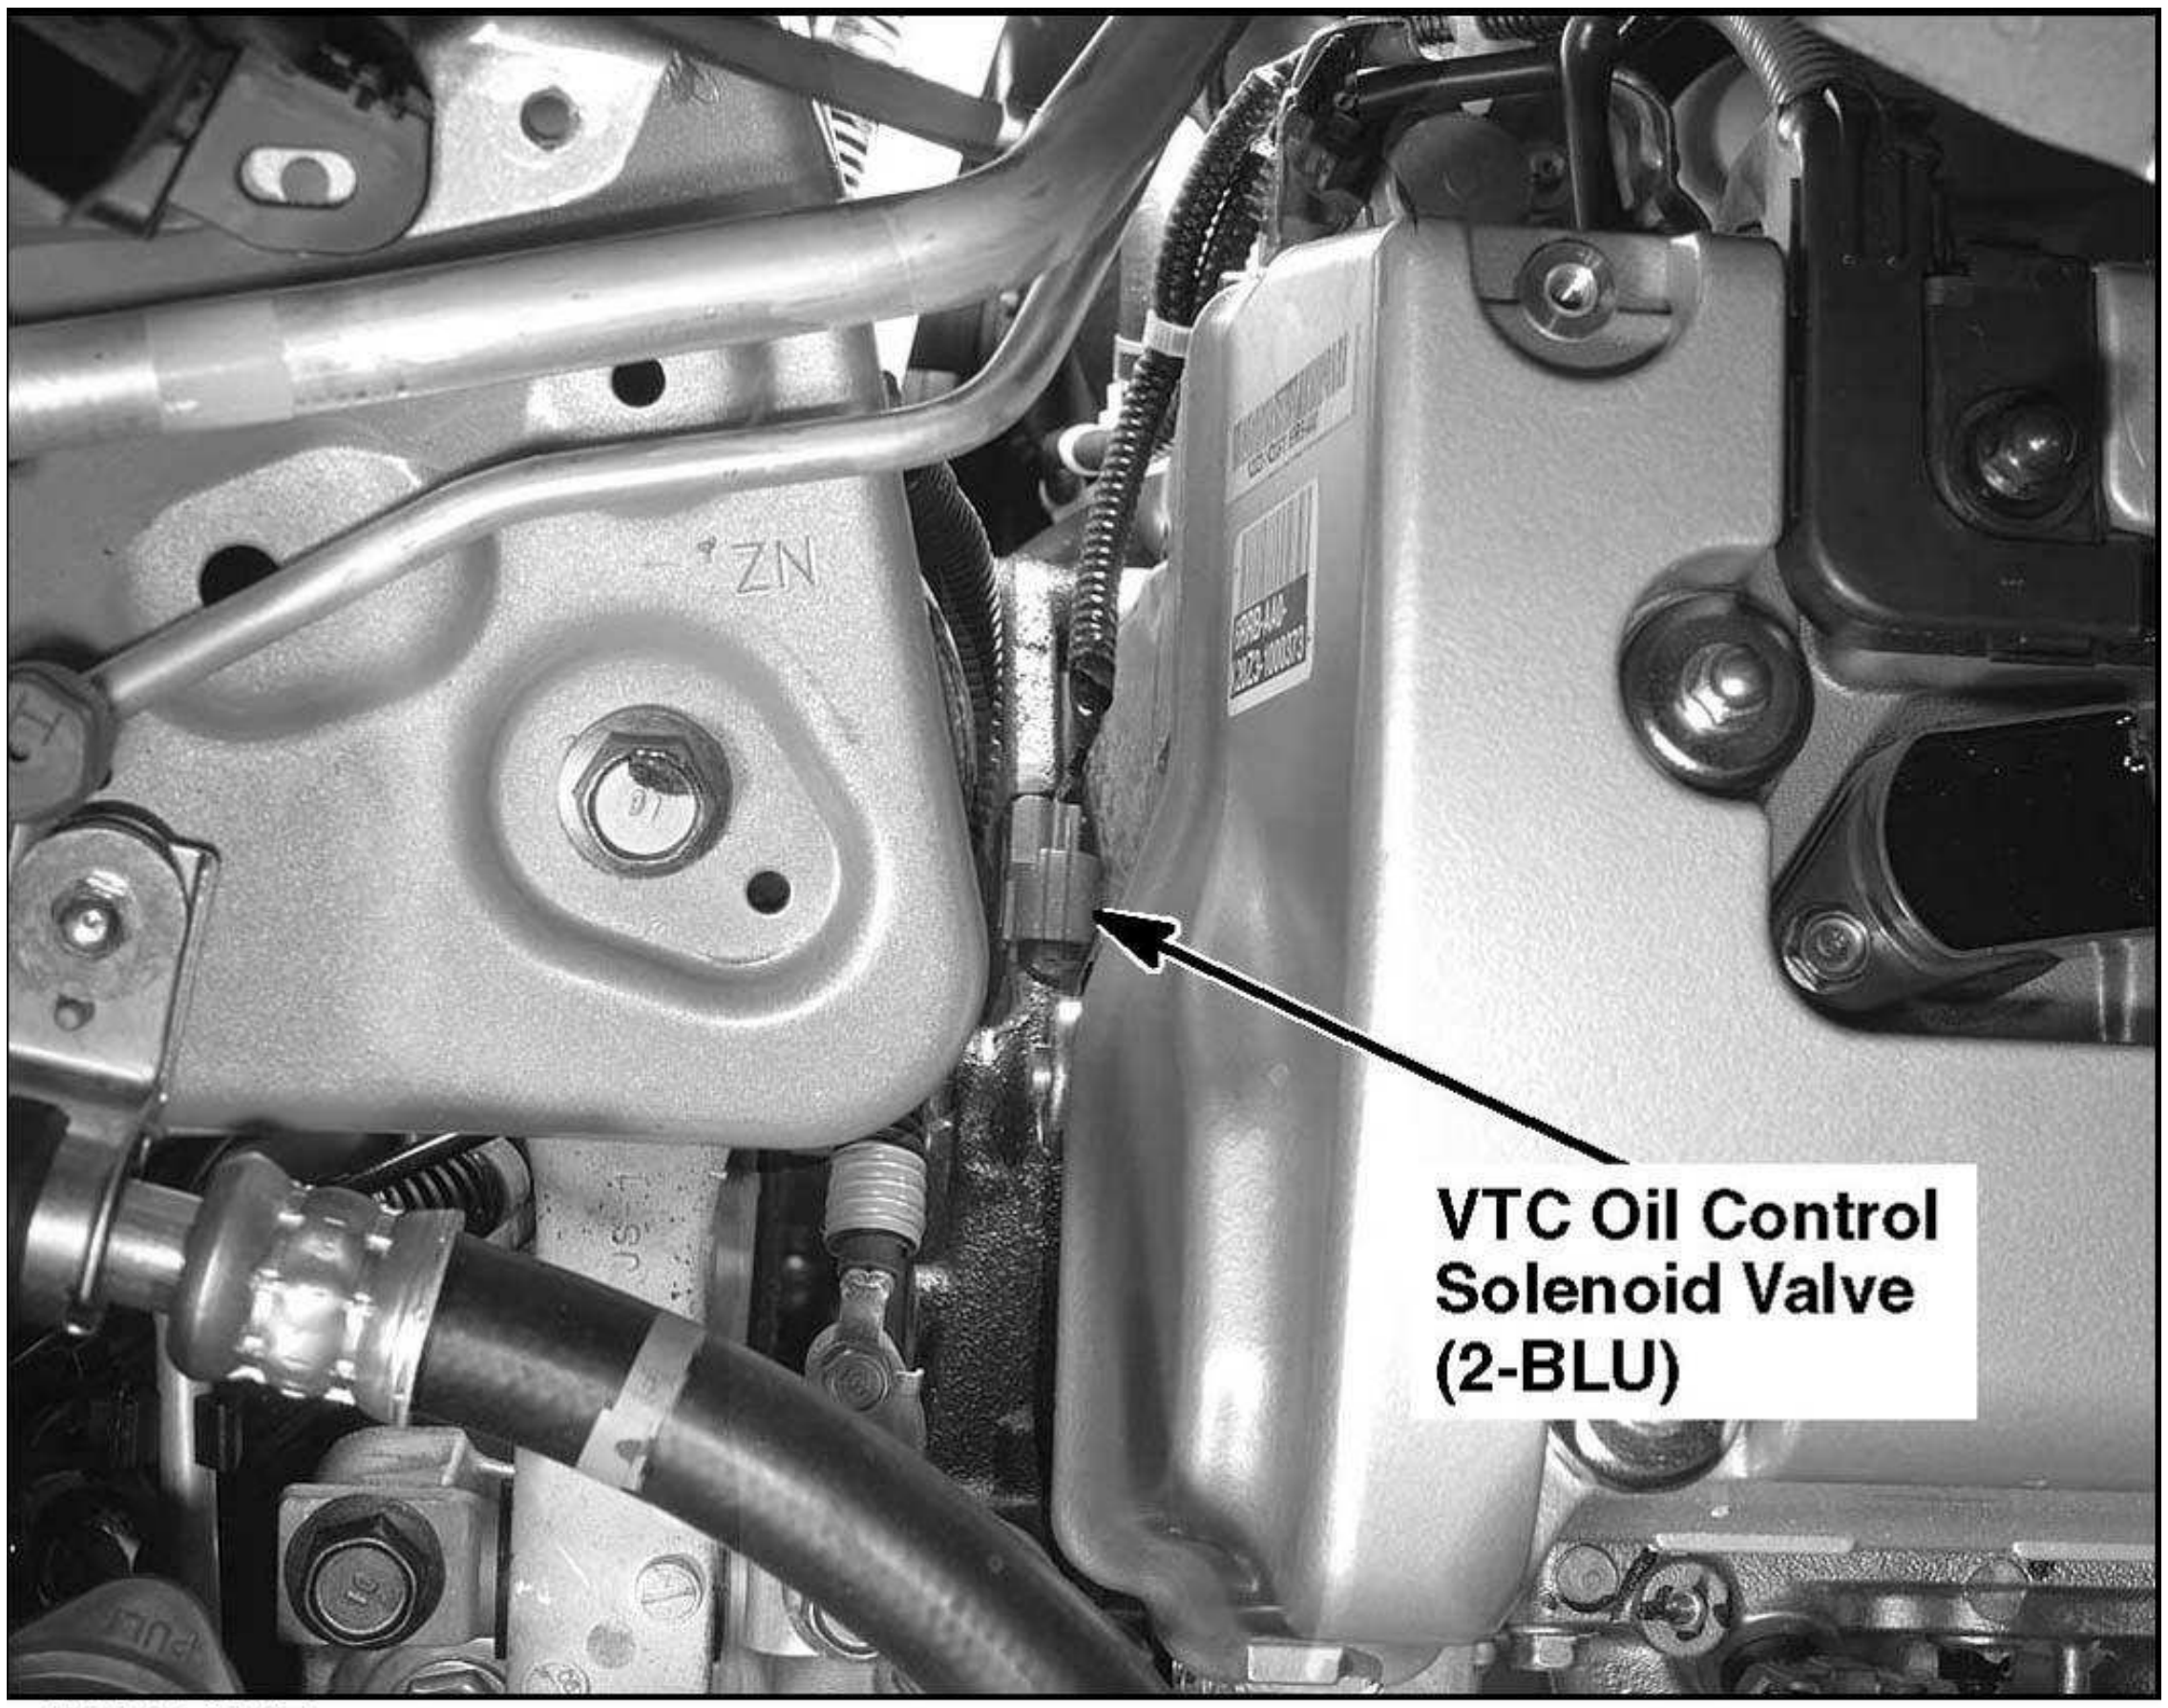
VTC Oil Control
Solenoid Valve
(2-BLU)
G00434347

Fig. 12: Front Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

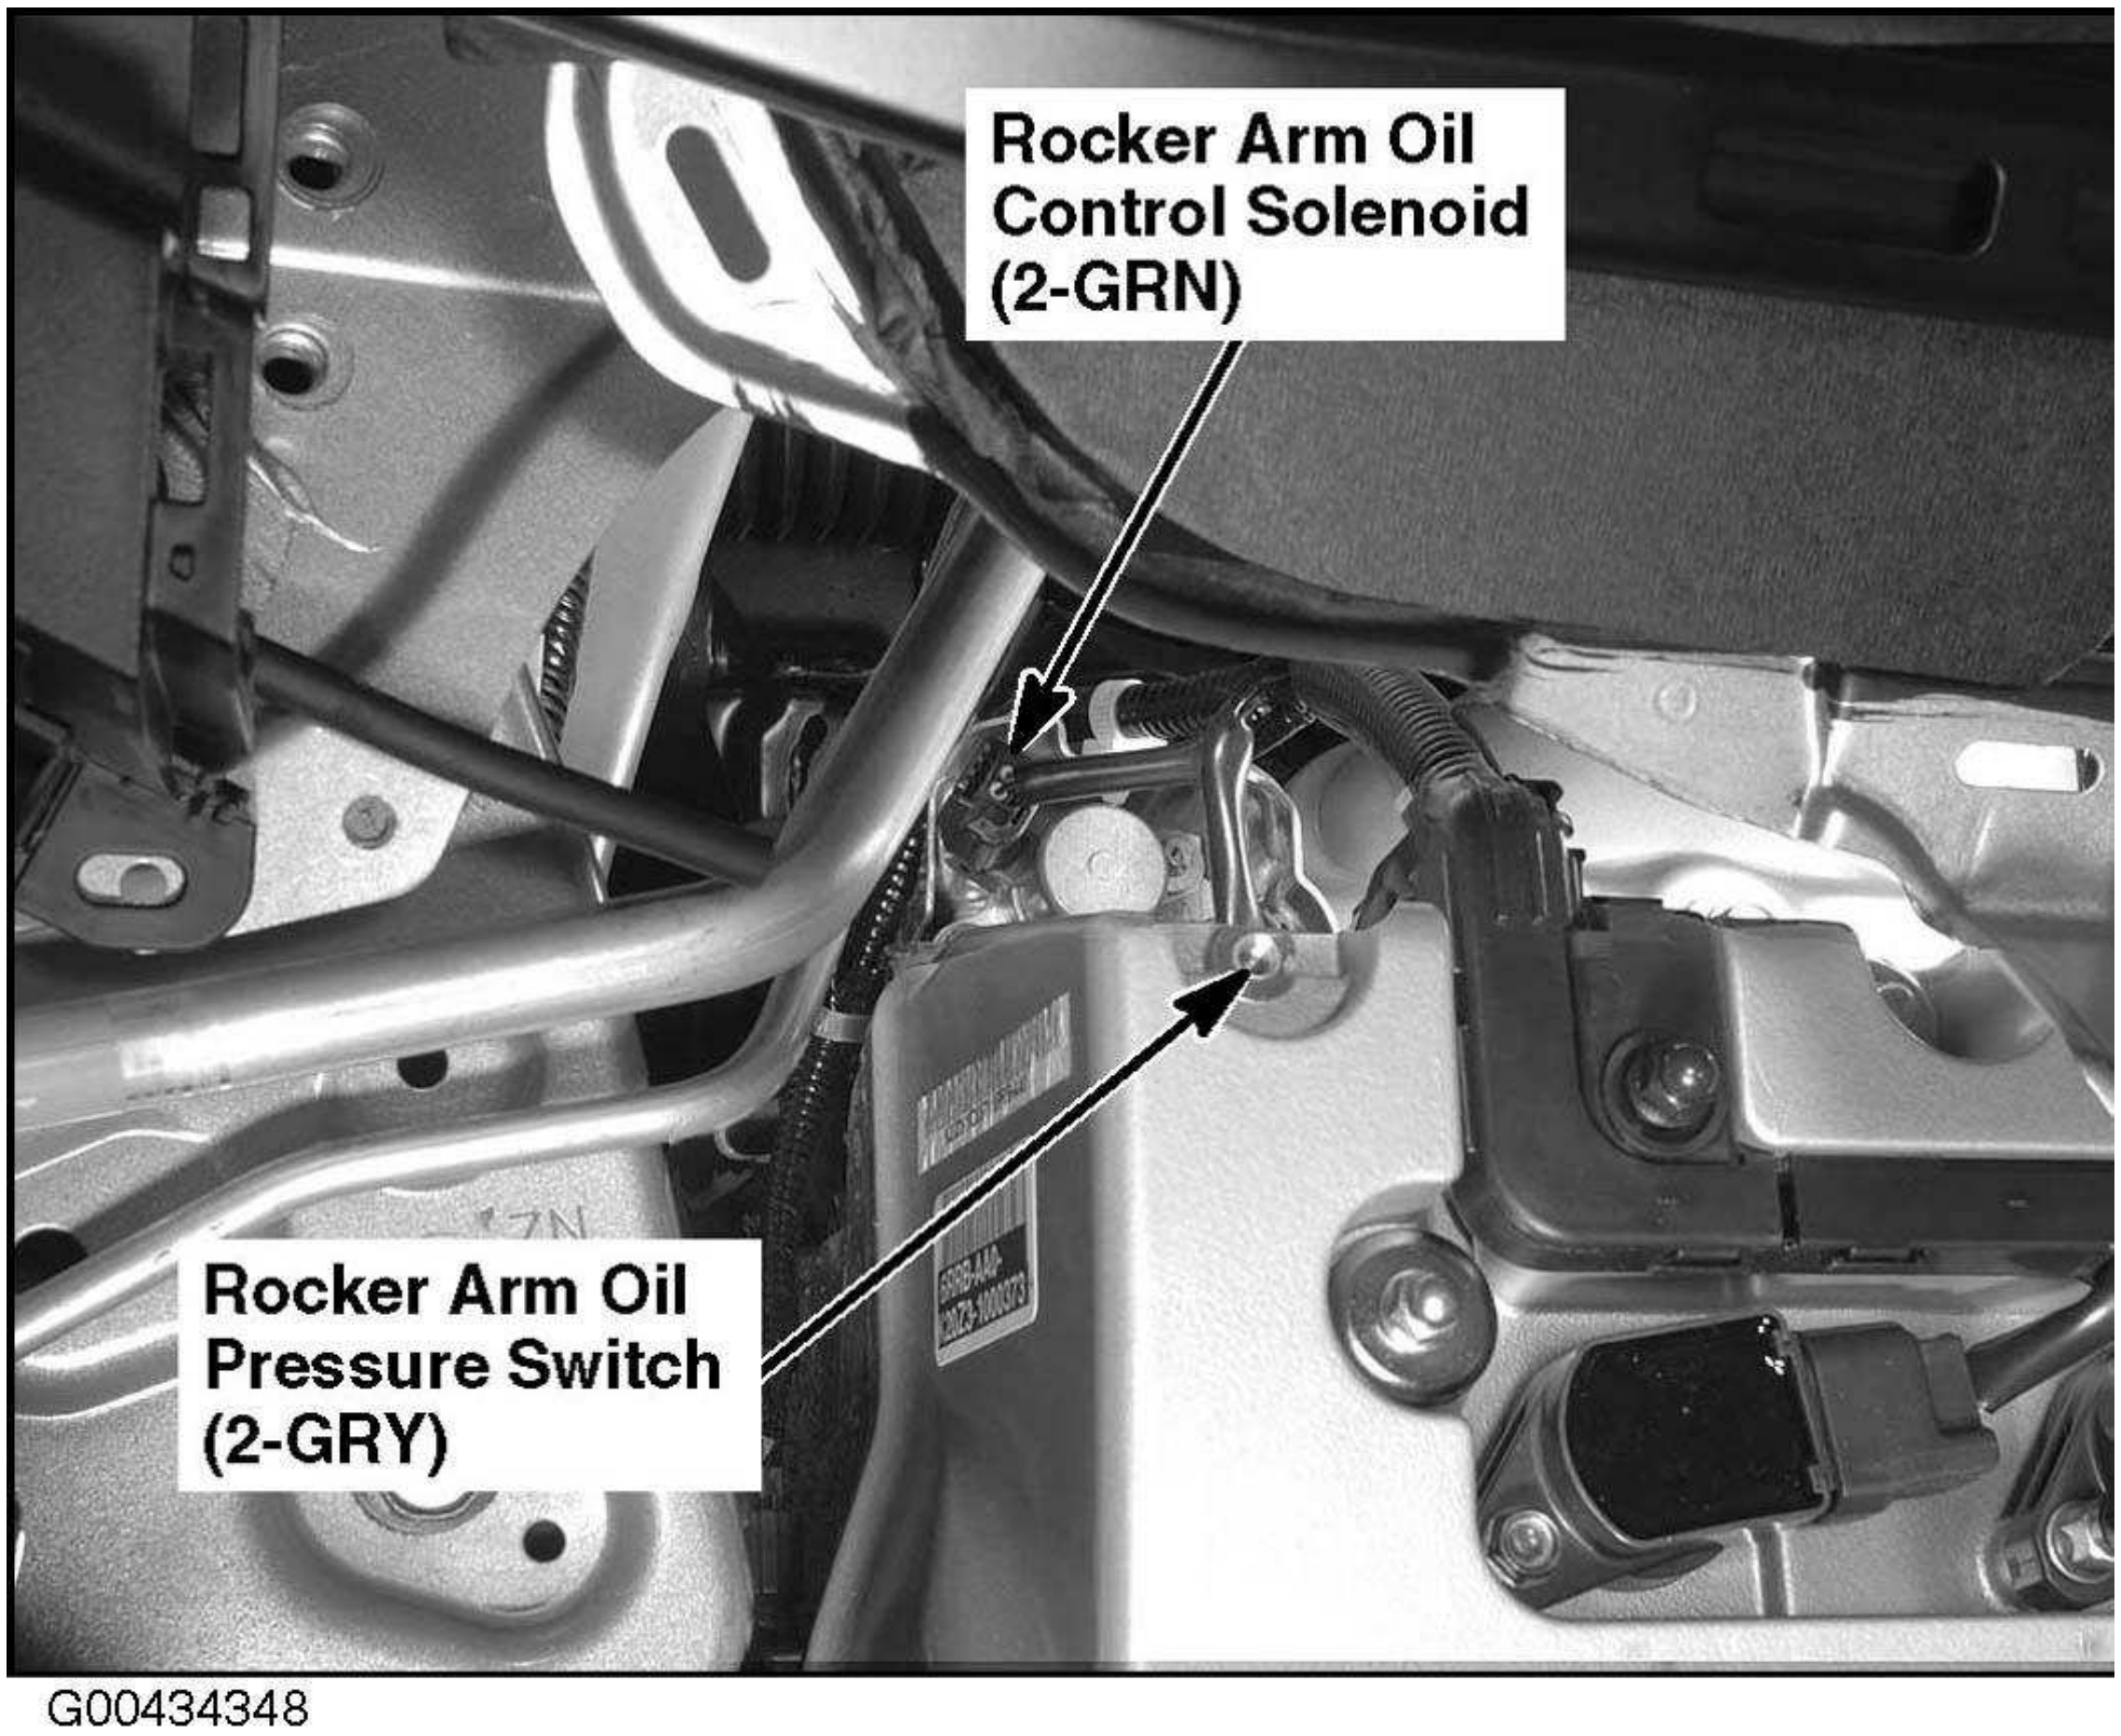
Rocker Arm Oil Control Solenoid (2-GRN)
Rocker Arm Oil Pressure Switch (2-GRY)
G00434348

Fig. 13: Front Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

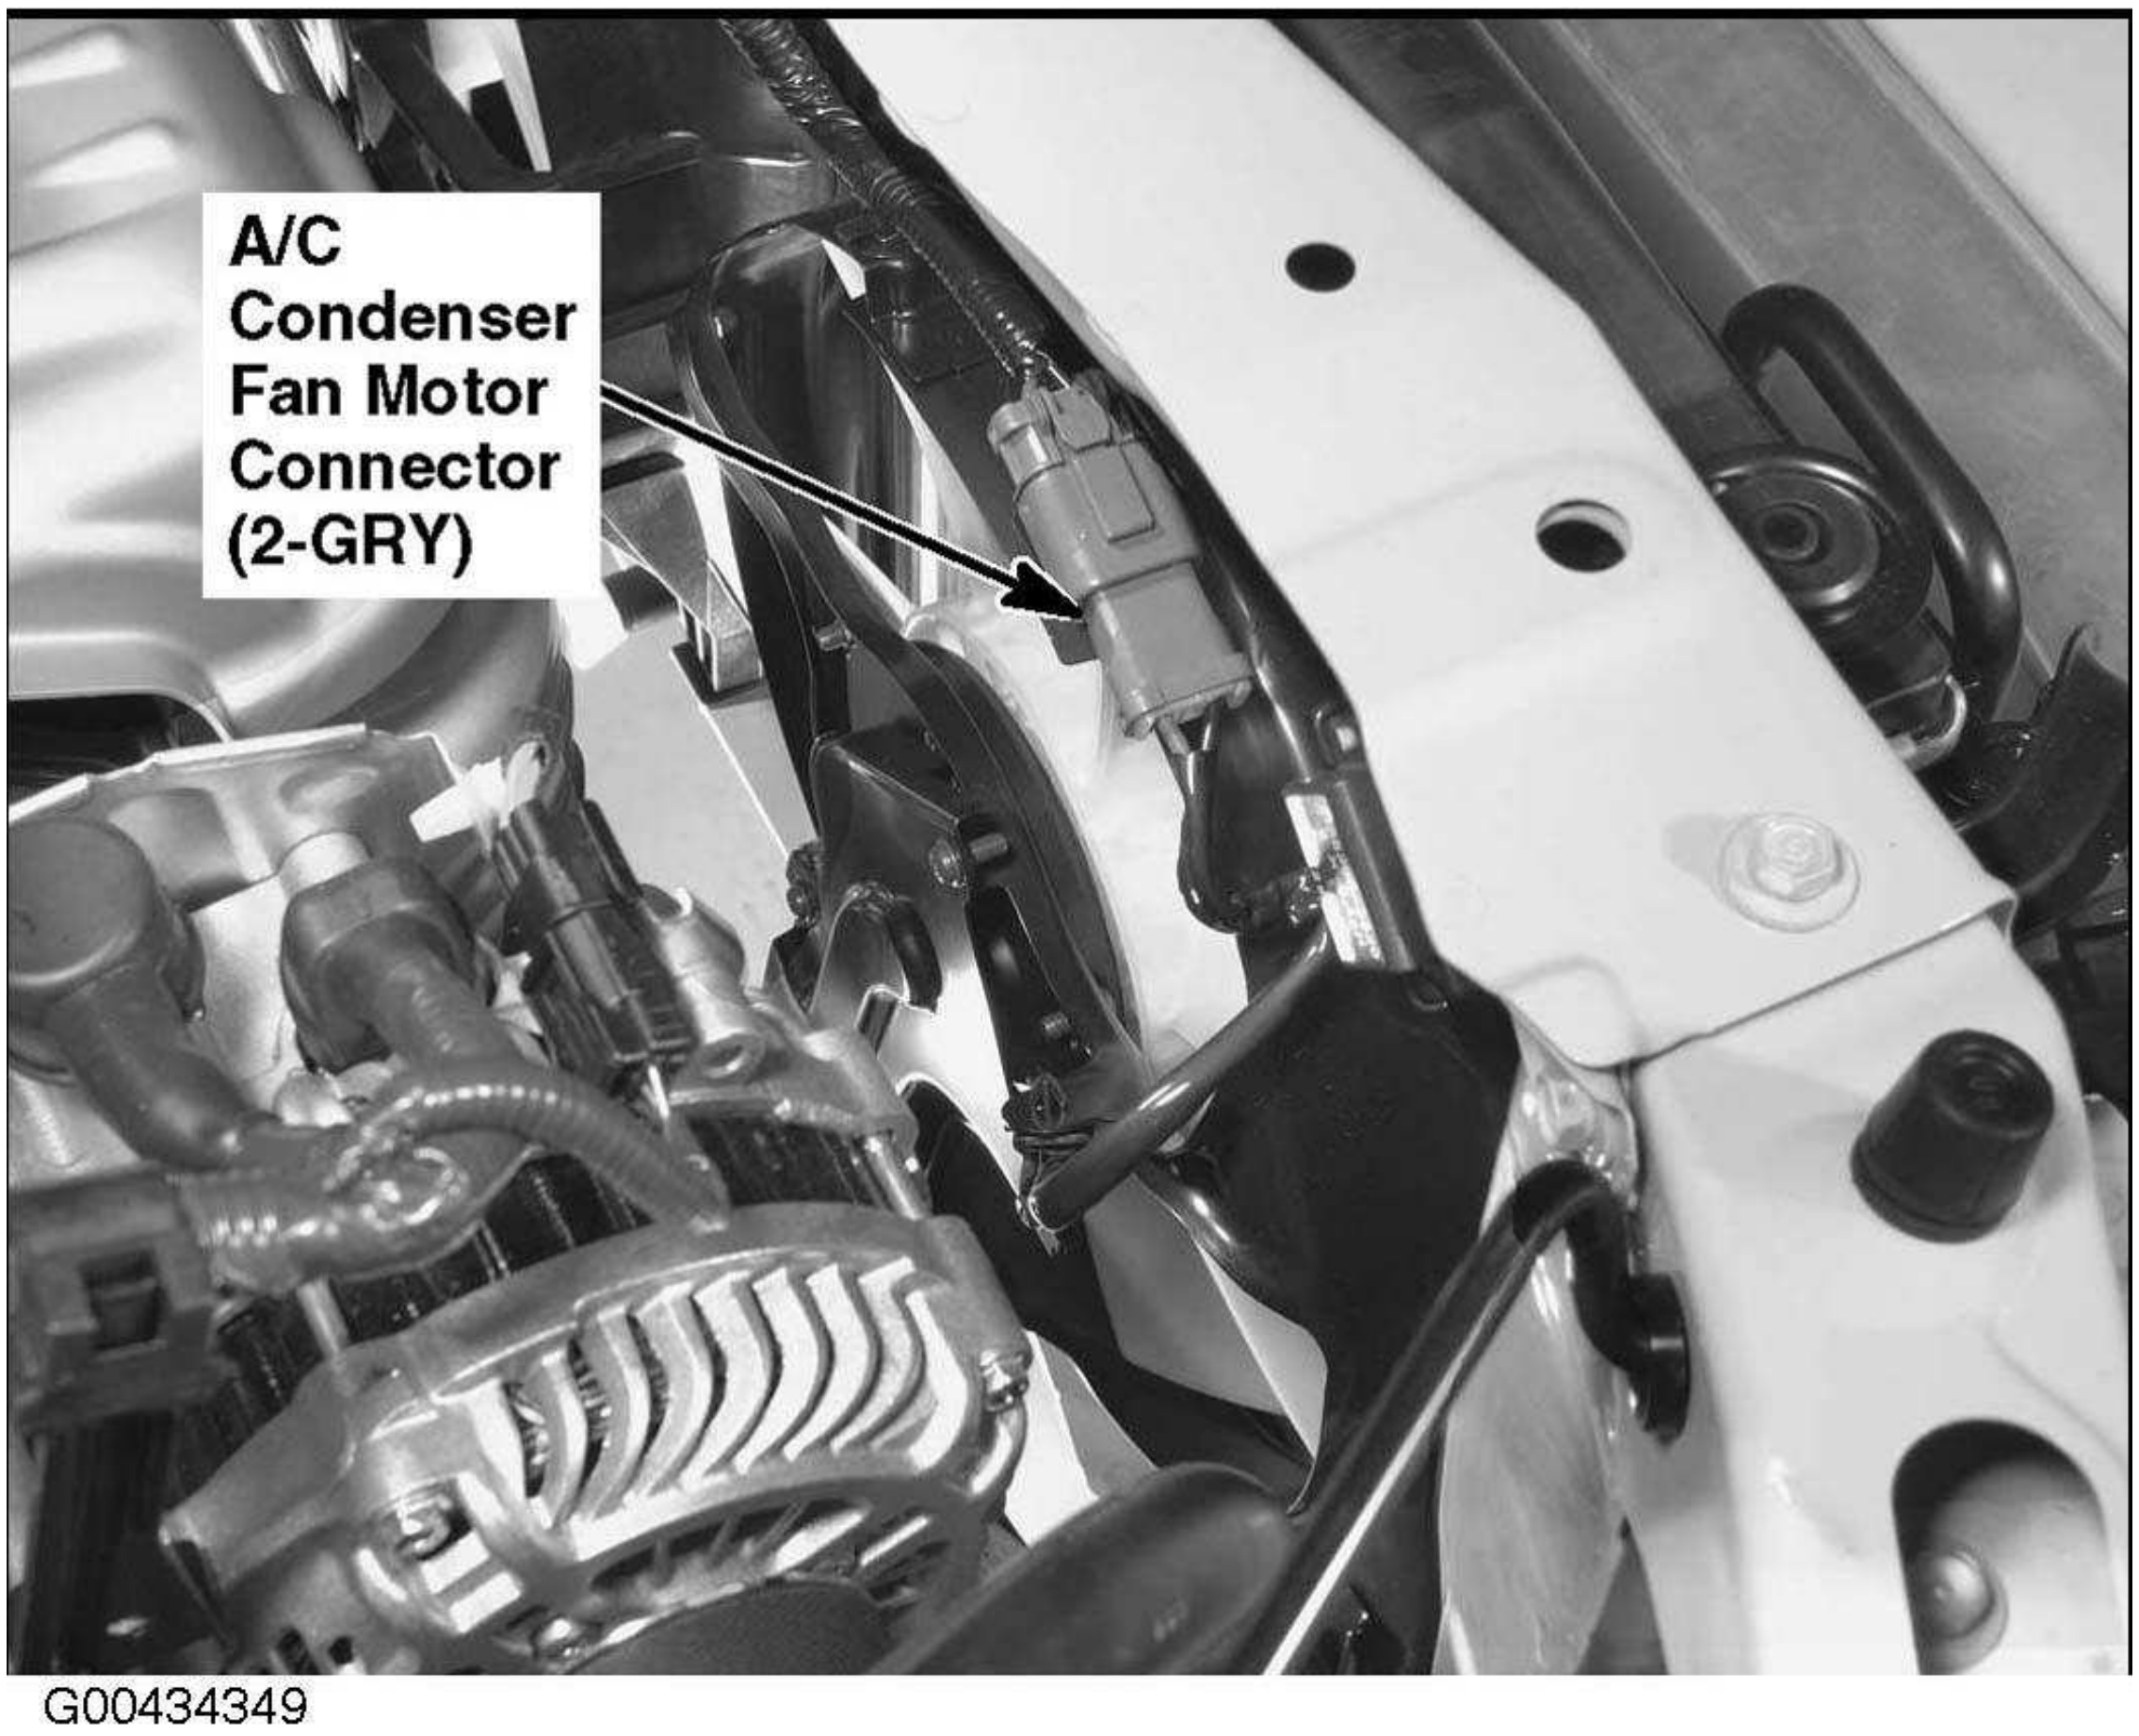

A/C Condenser Fan Motor Connector (2-GRY)
G00434349

Fig. 14: Right Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

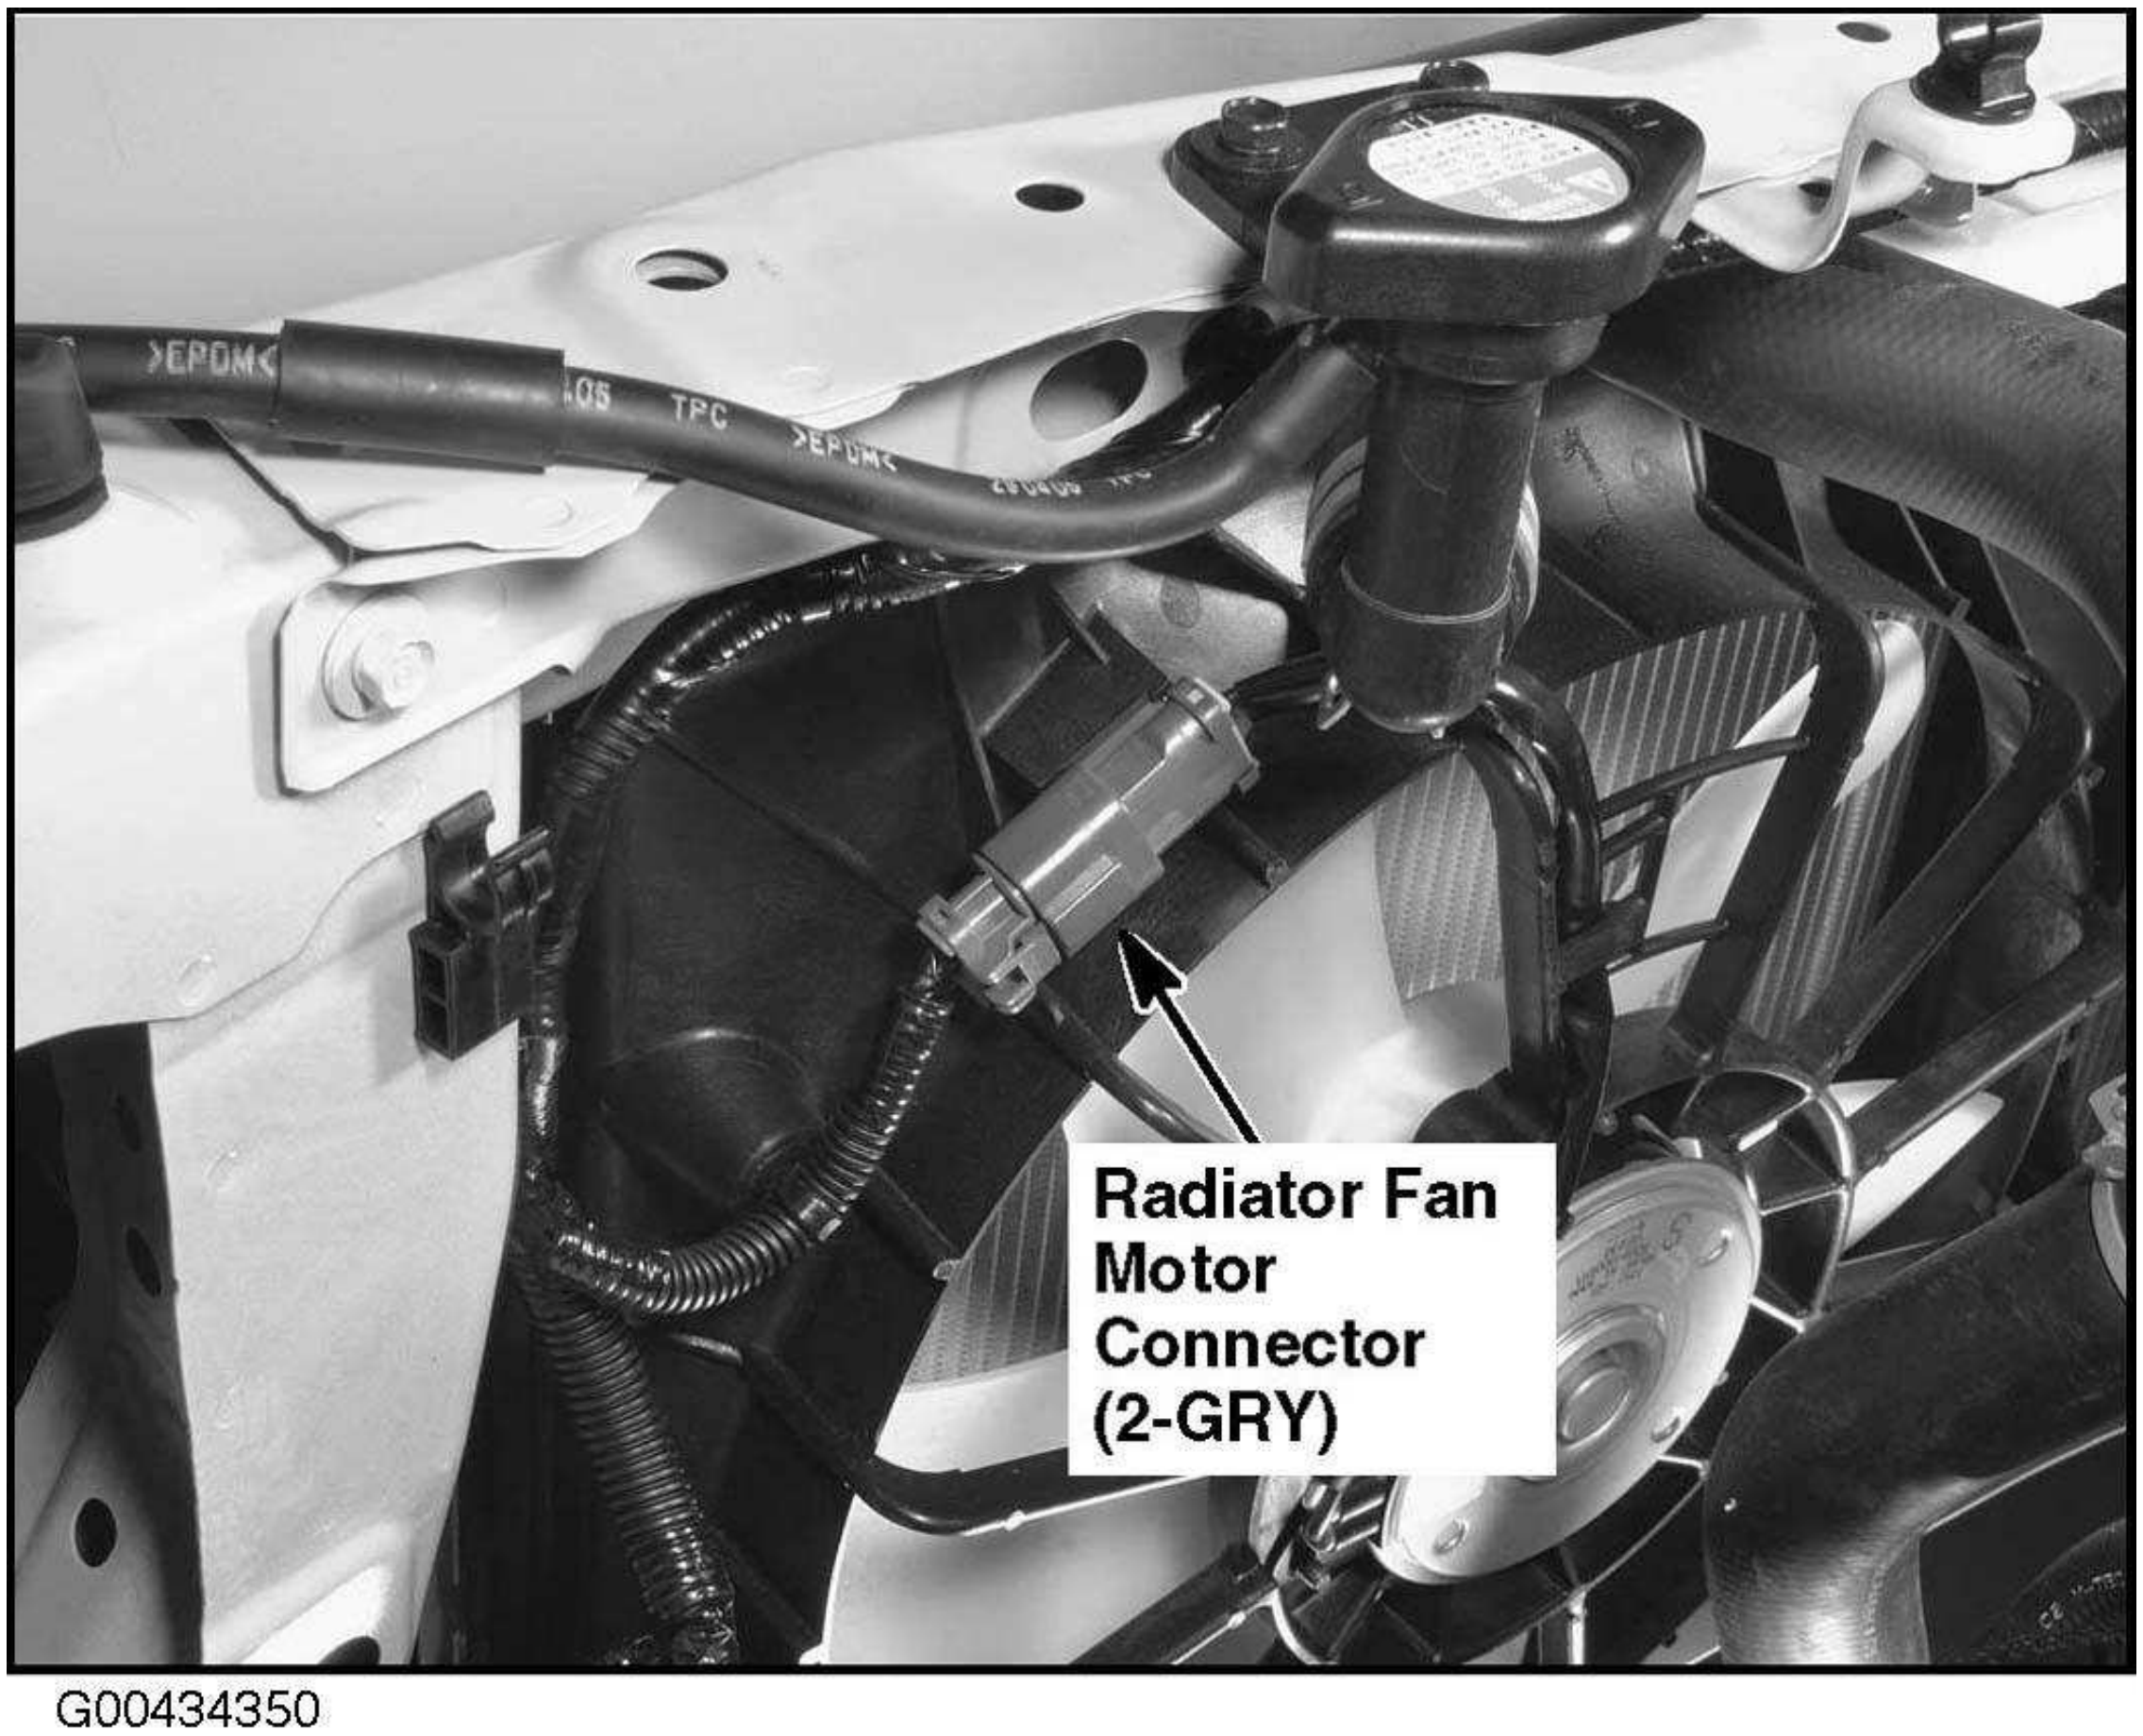

Radiator Fan Motor Connector (2-GRY)
G00434350

Fig. 15: Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

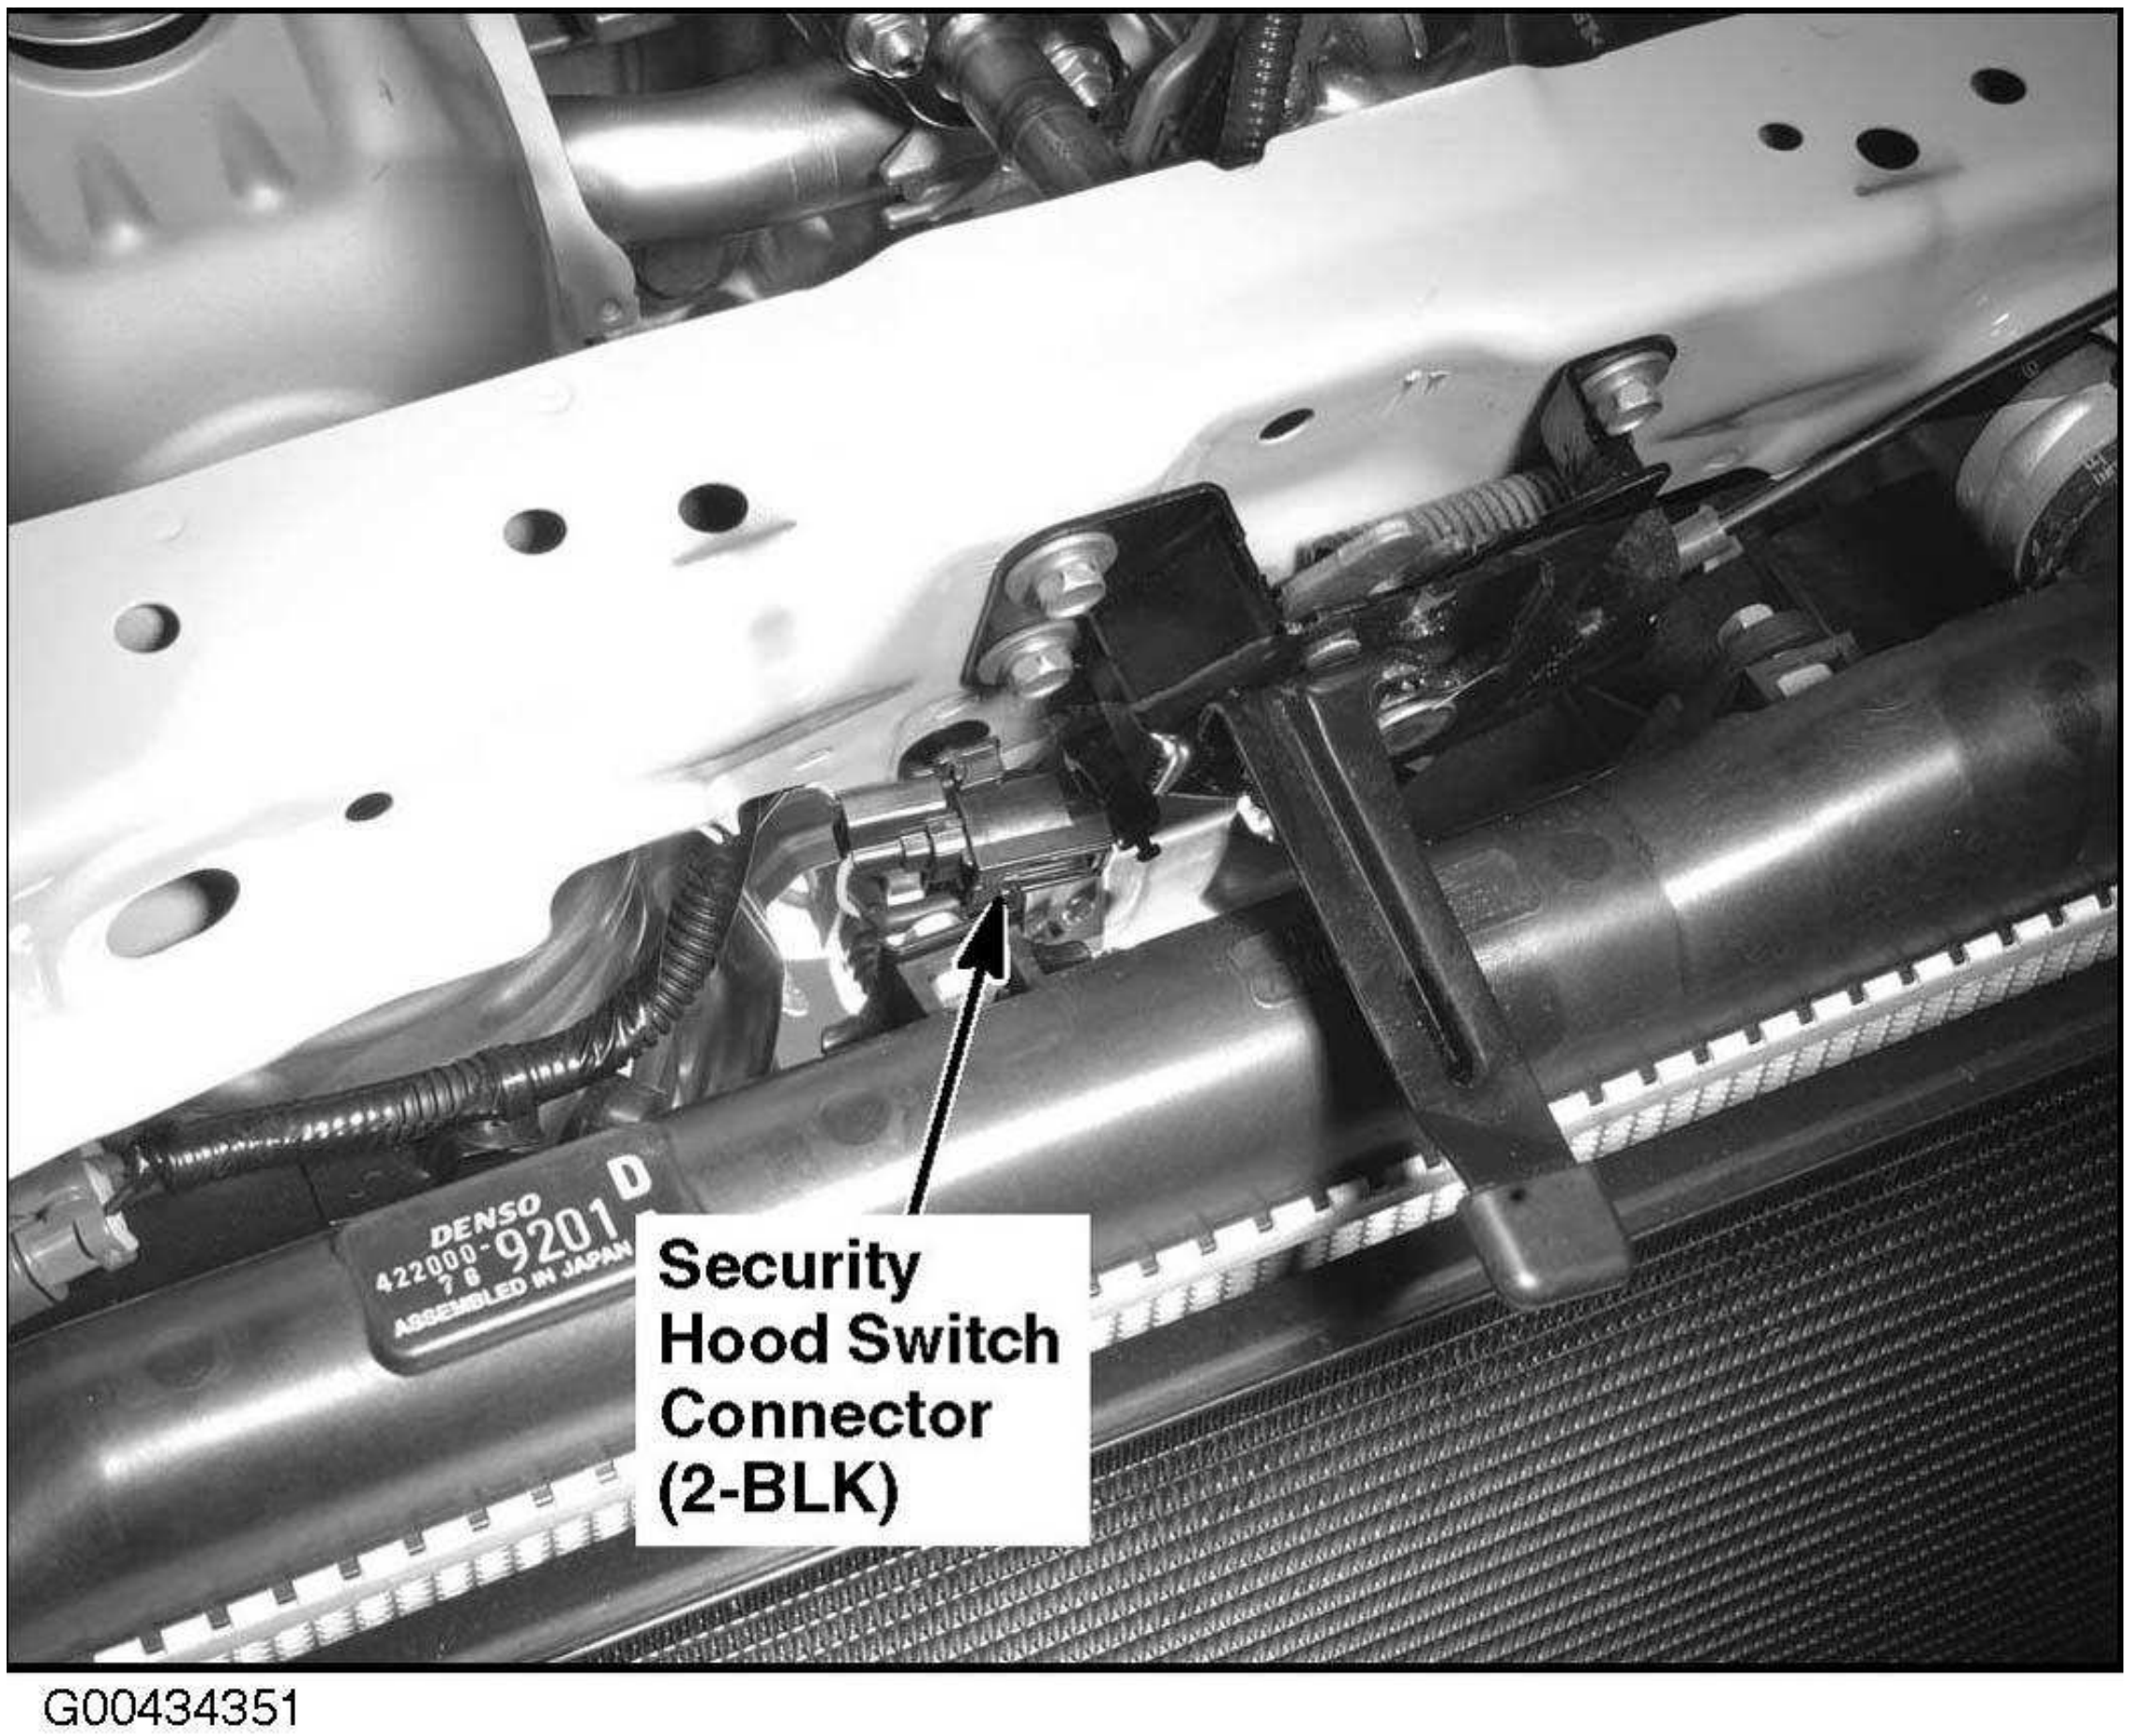
DENSO
422000-9201
D
ASSEMBLED IN JAPAN
Security Hood Switch Connector (2-BLK)
G00434351

Fig. 16: Front Of Engine Compartment (USA: LX, EX & Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

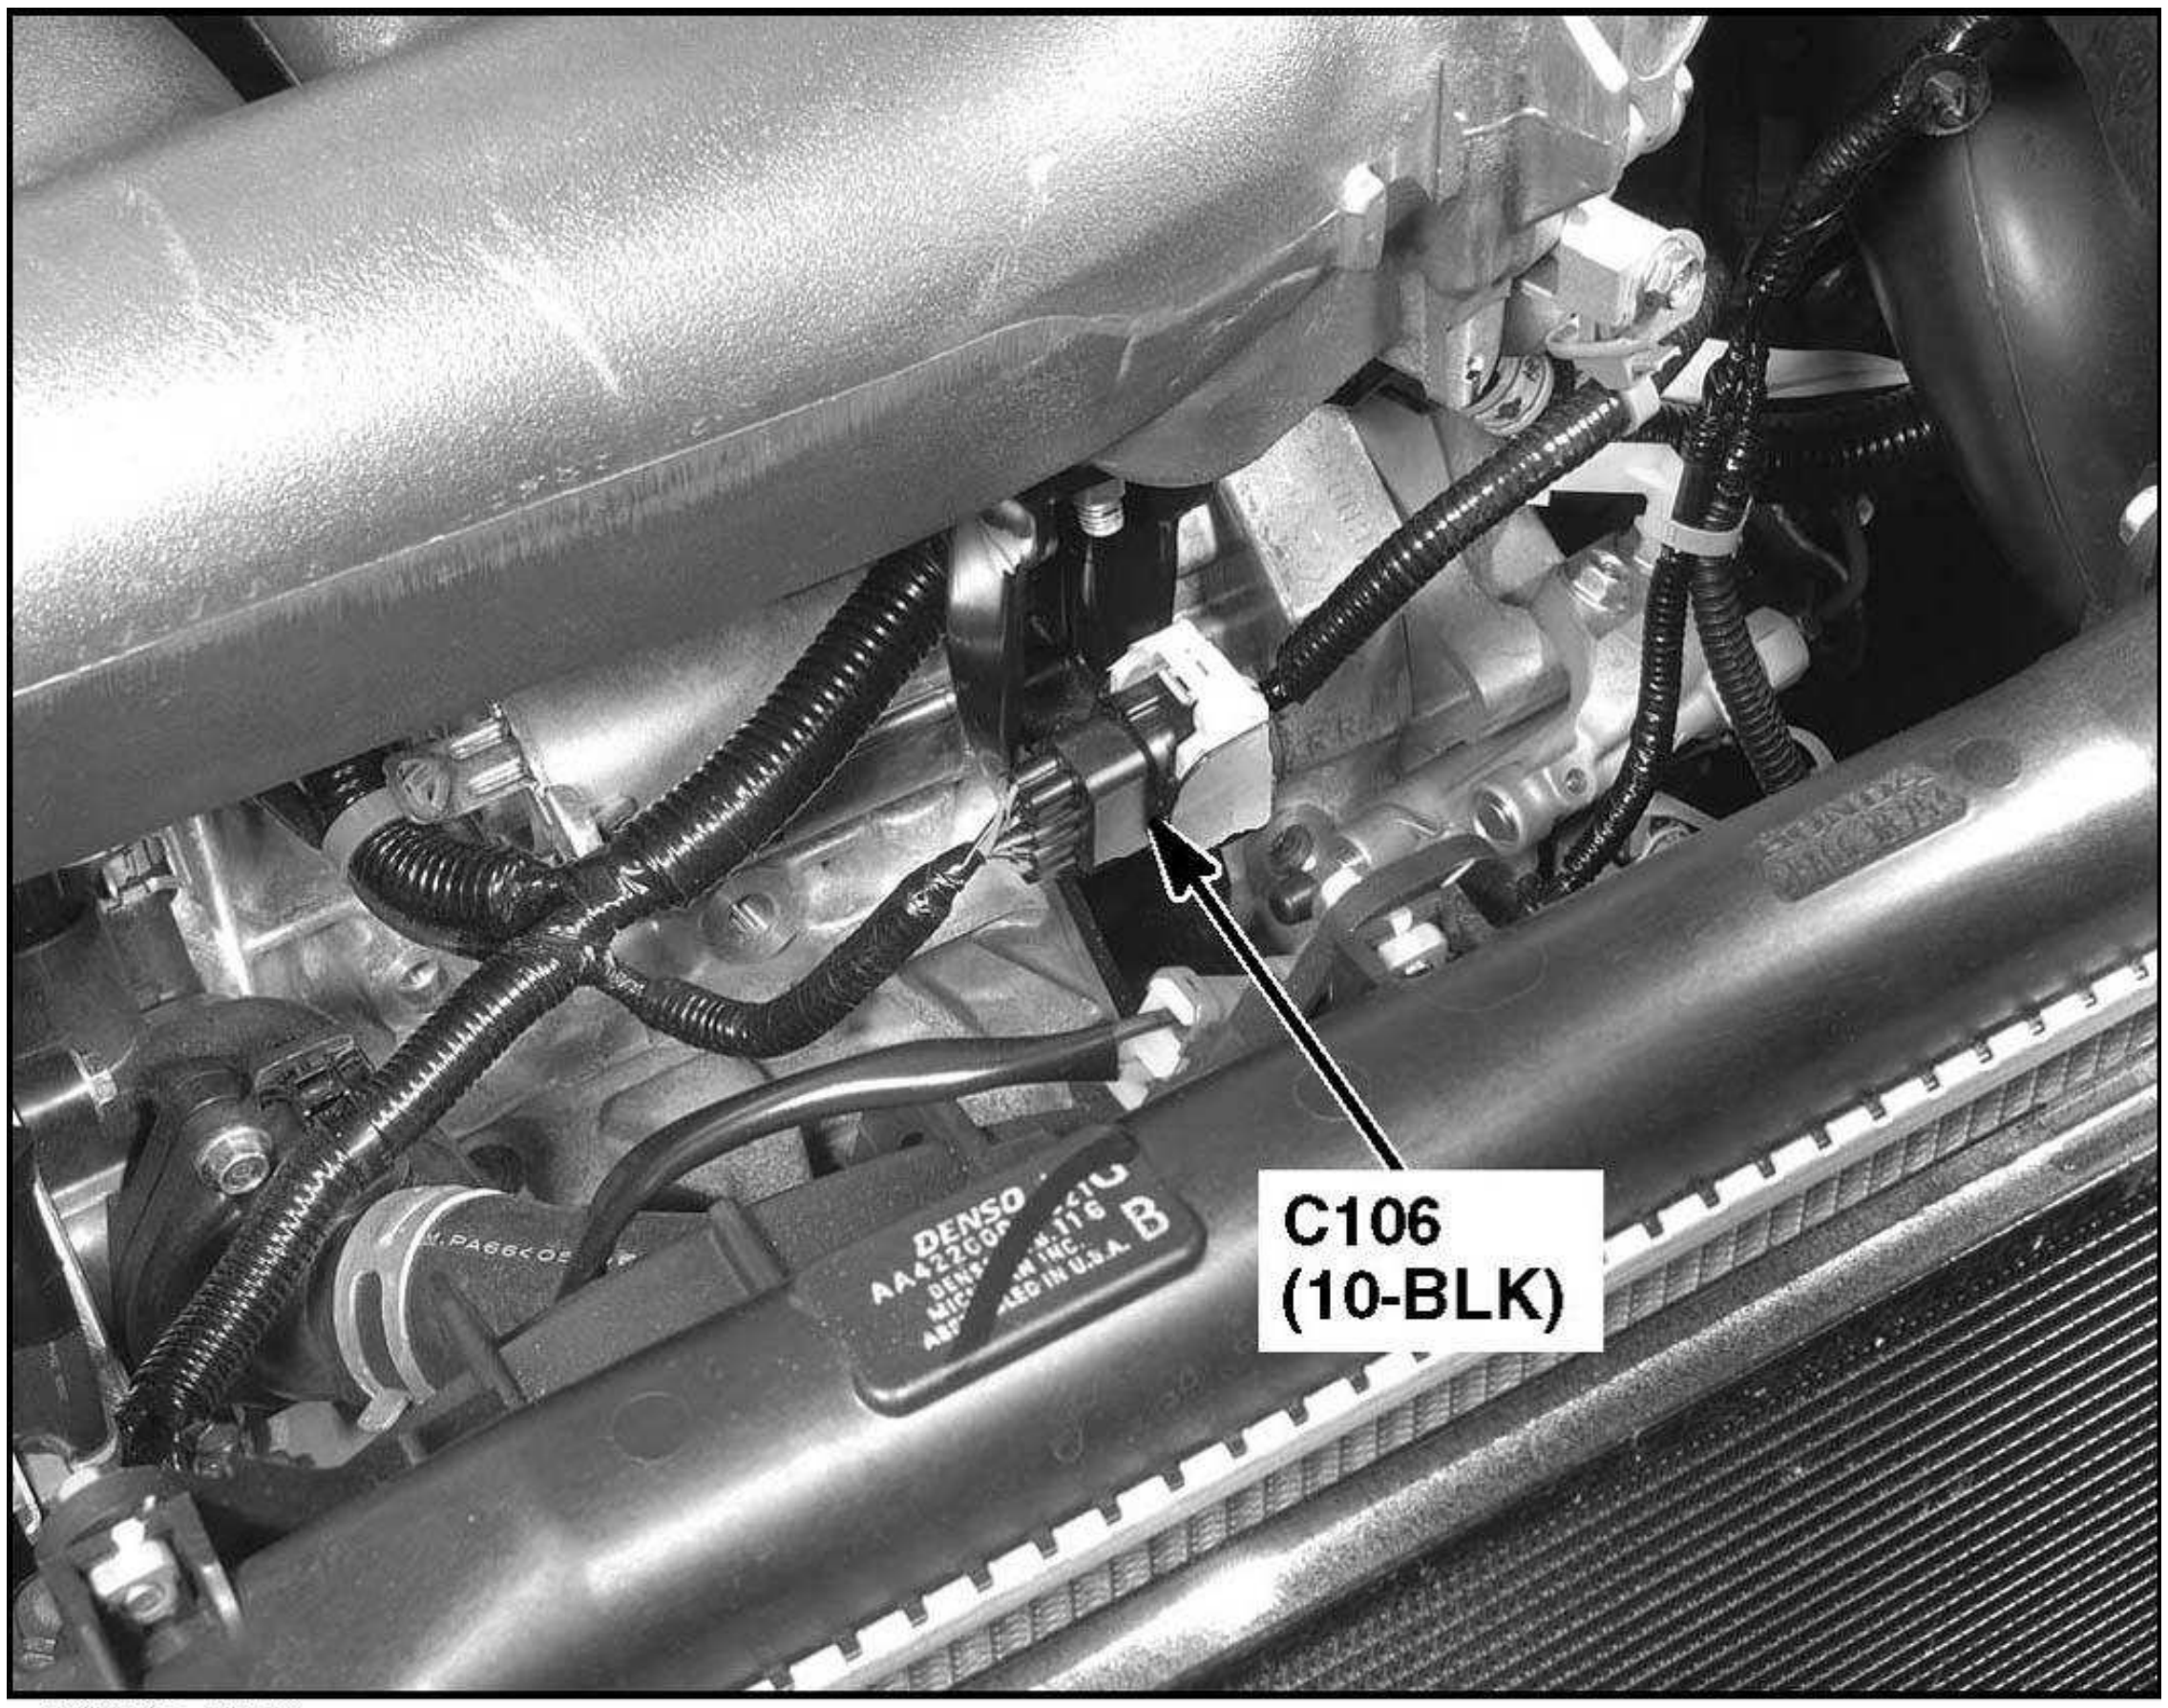
C106
(10-BLK)
G00434352

Fig. 17: Front Of Engine Compartment (Si)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

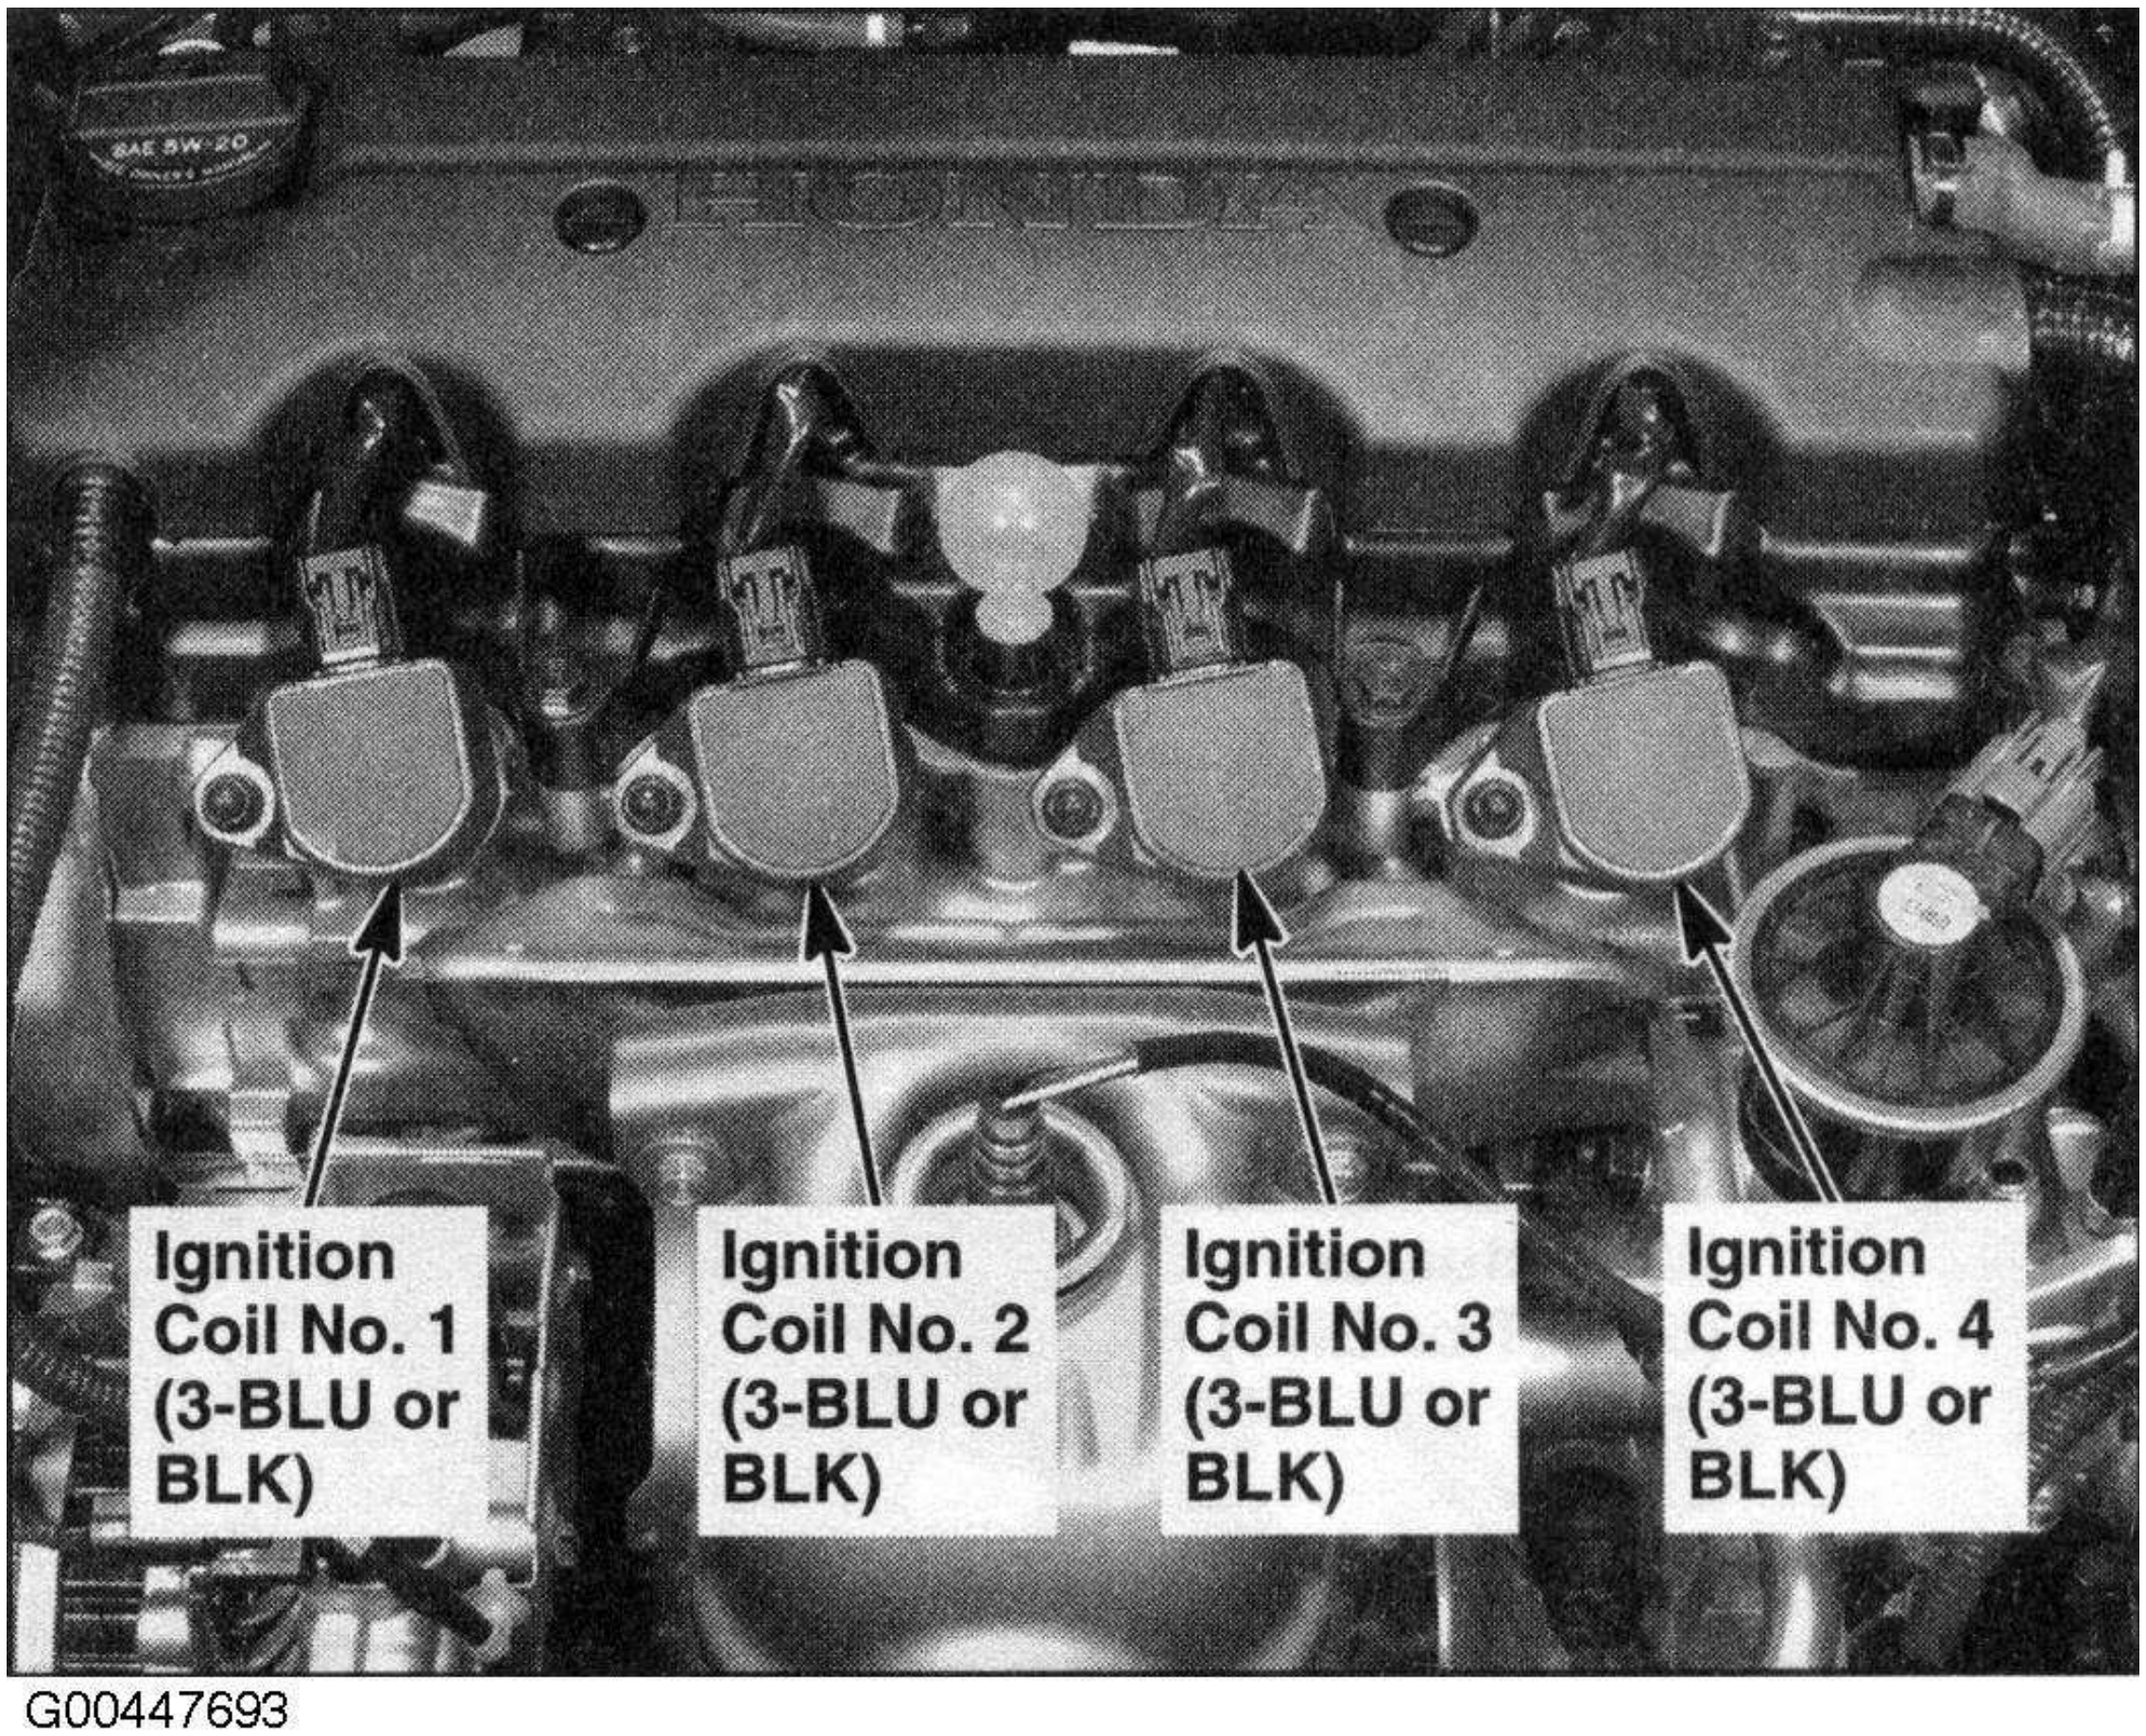
SAE 5W-20
HONDA
Ignition Coil No. 1 (3-BLU or BLK)
Ignition Coil No. 2 (3-BLU or BLK)
Ignition Coil No. 3 (3-BLU or BLK)
Ignition Coil No. 4 (3-BLU or BLK)
G00447693

Fig. 18: Top Of Engine (Except Si)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

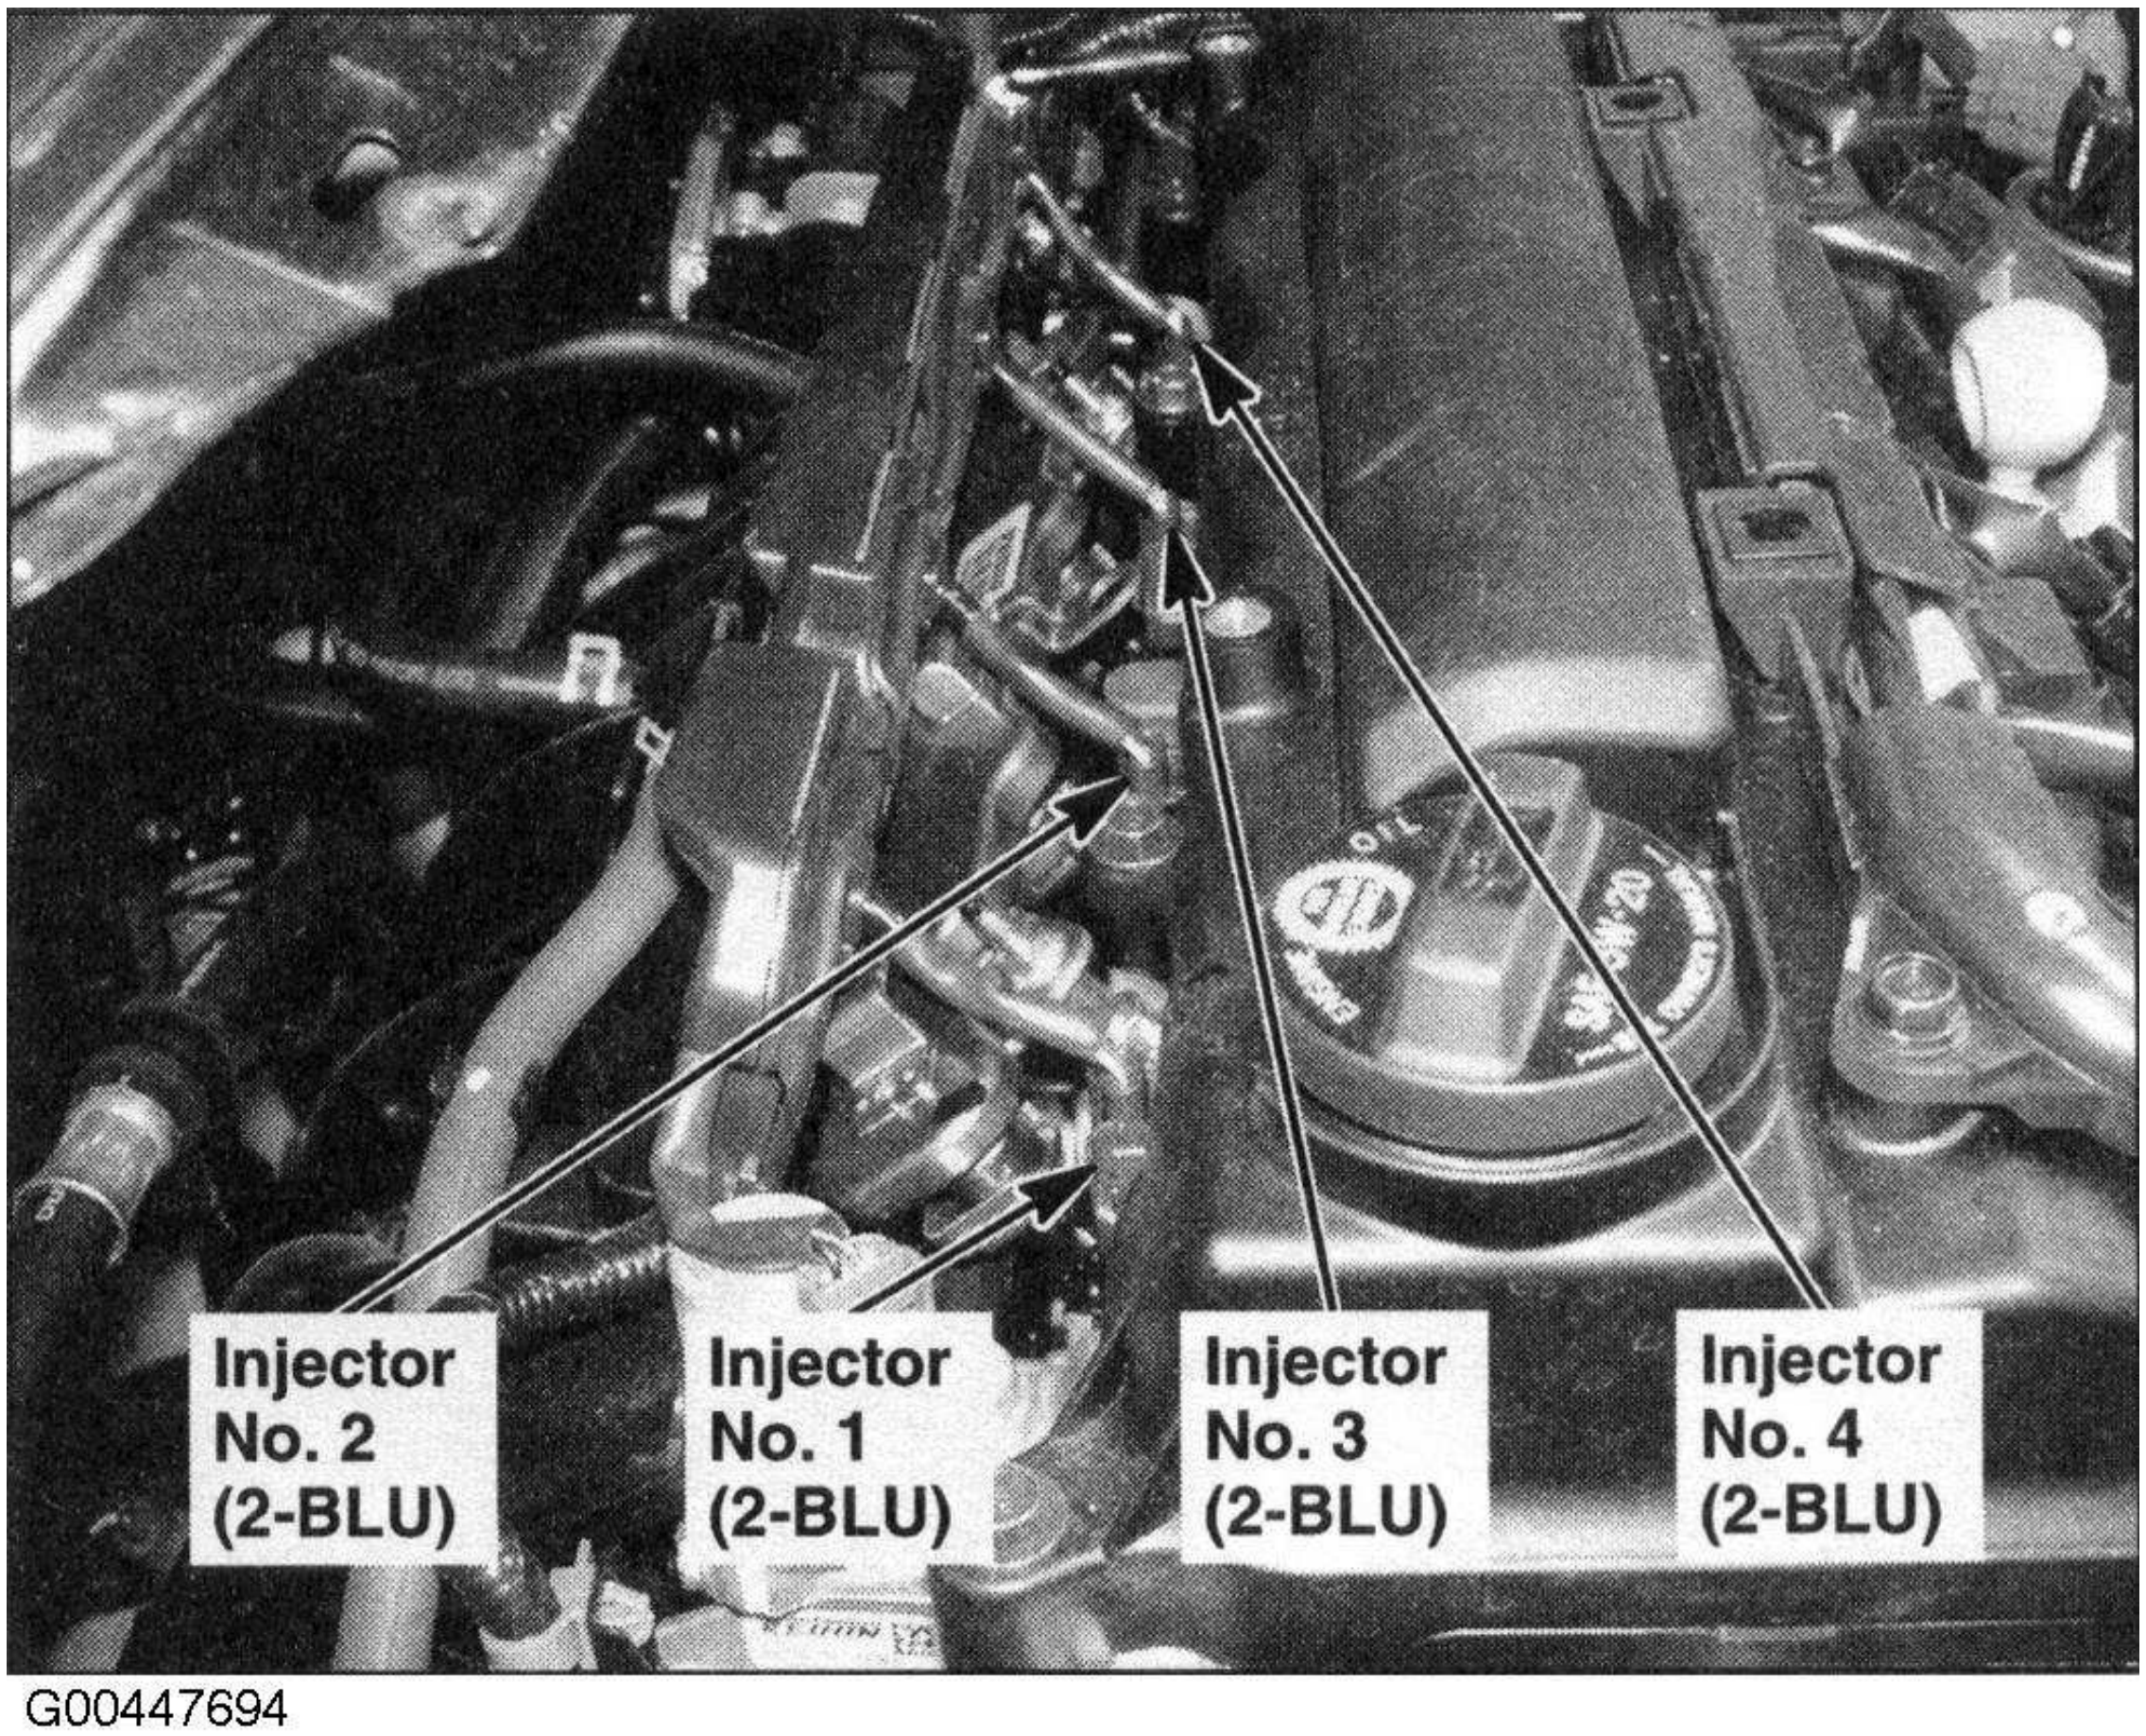
Injector No. 2 (2-BLU)
Injector No. 1 (2-BLU)
Injector No. 3 (2-BLU)
Injector No. 4 (2-BLU)
G00447694

Fig. 19: Top Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

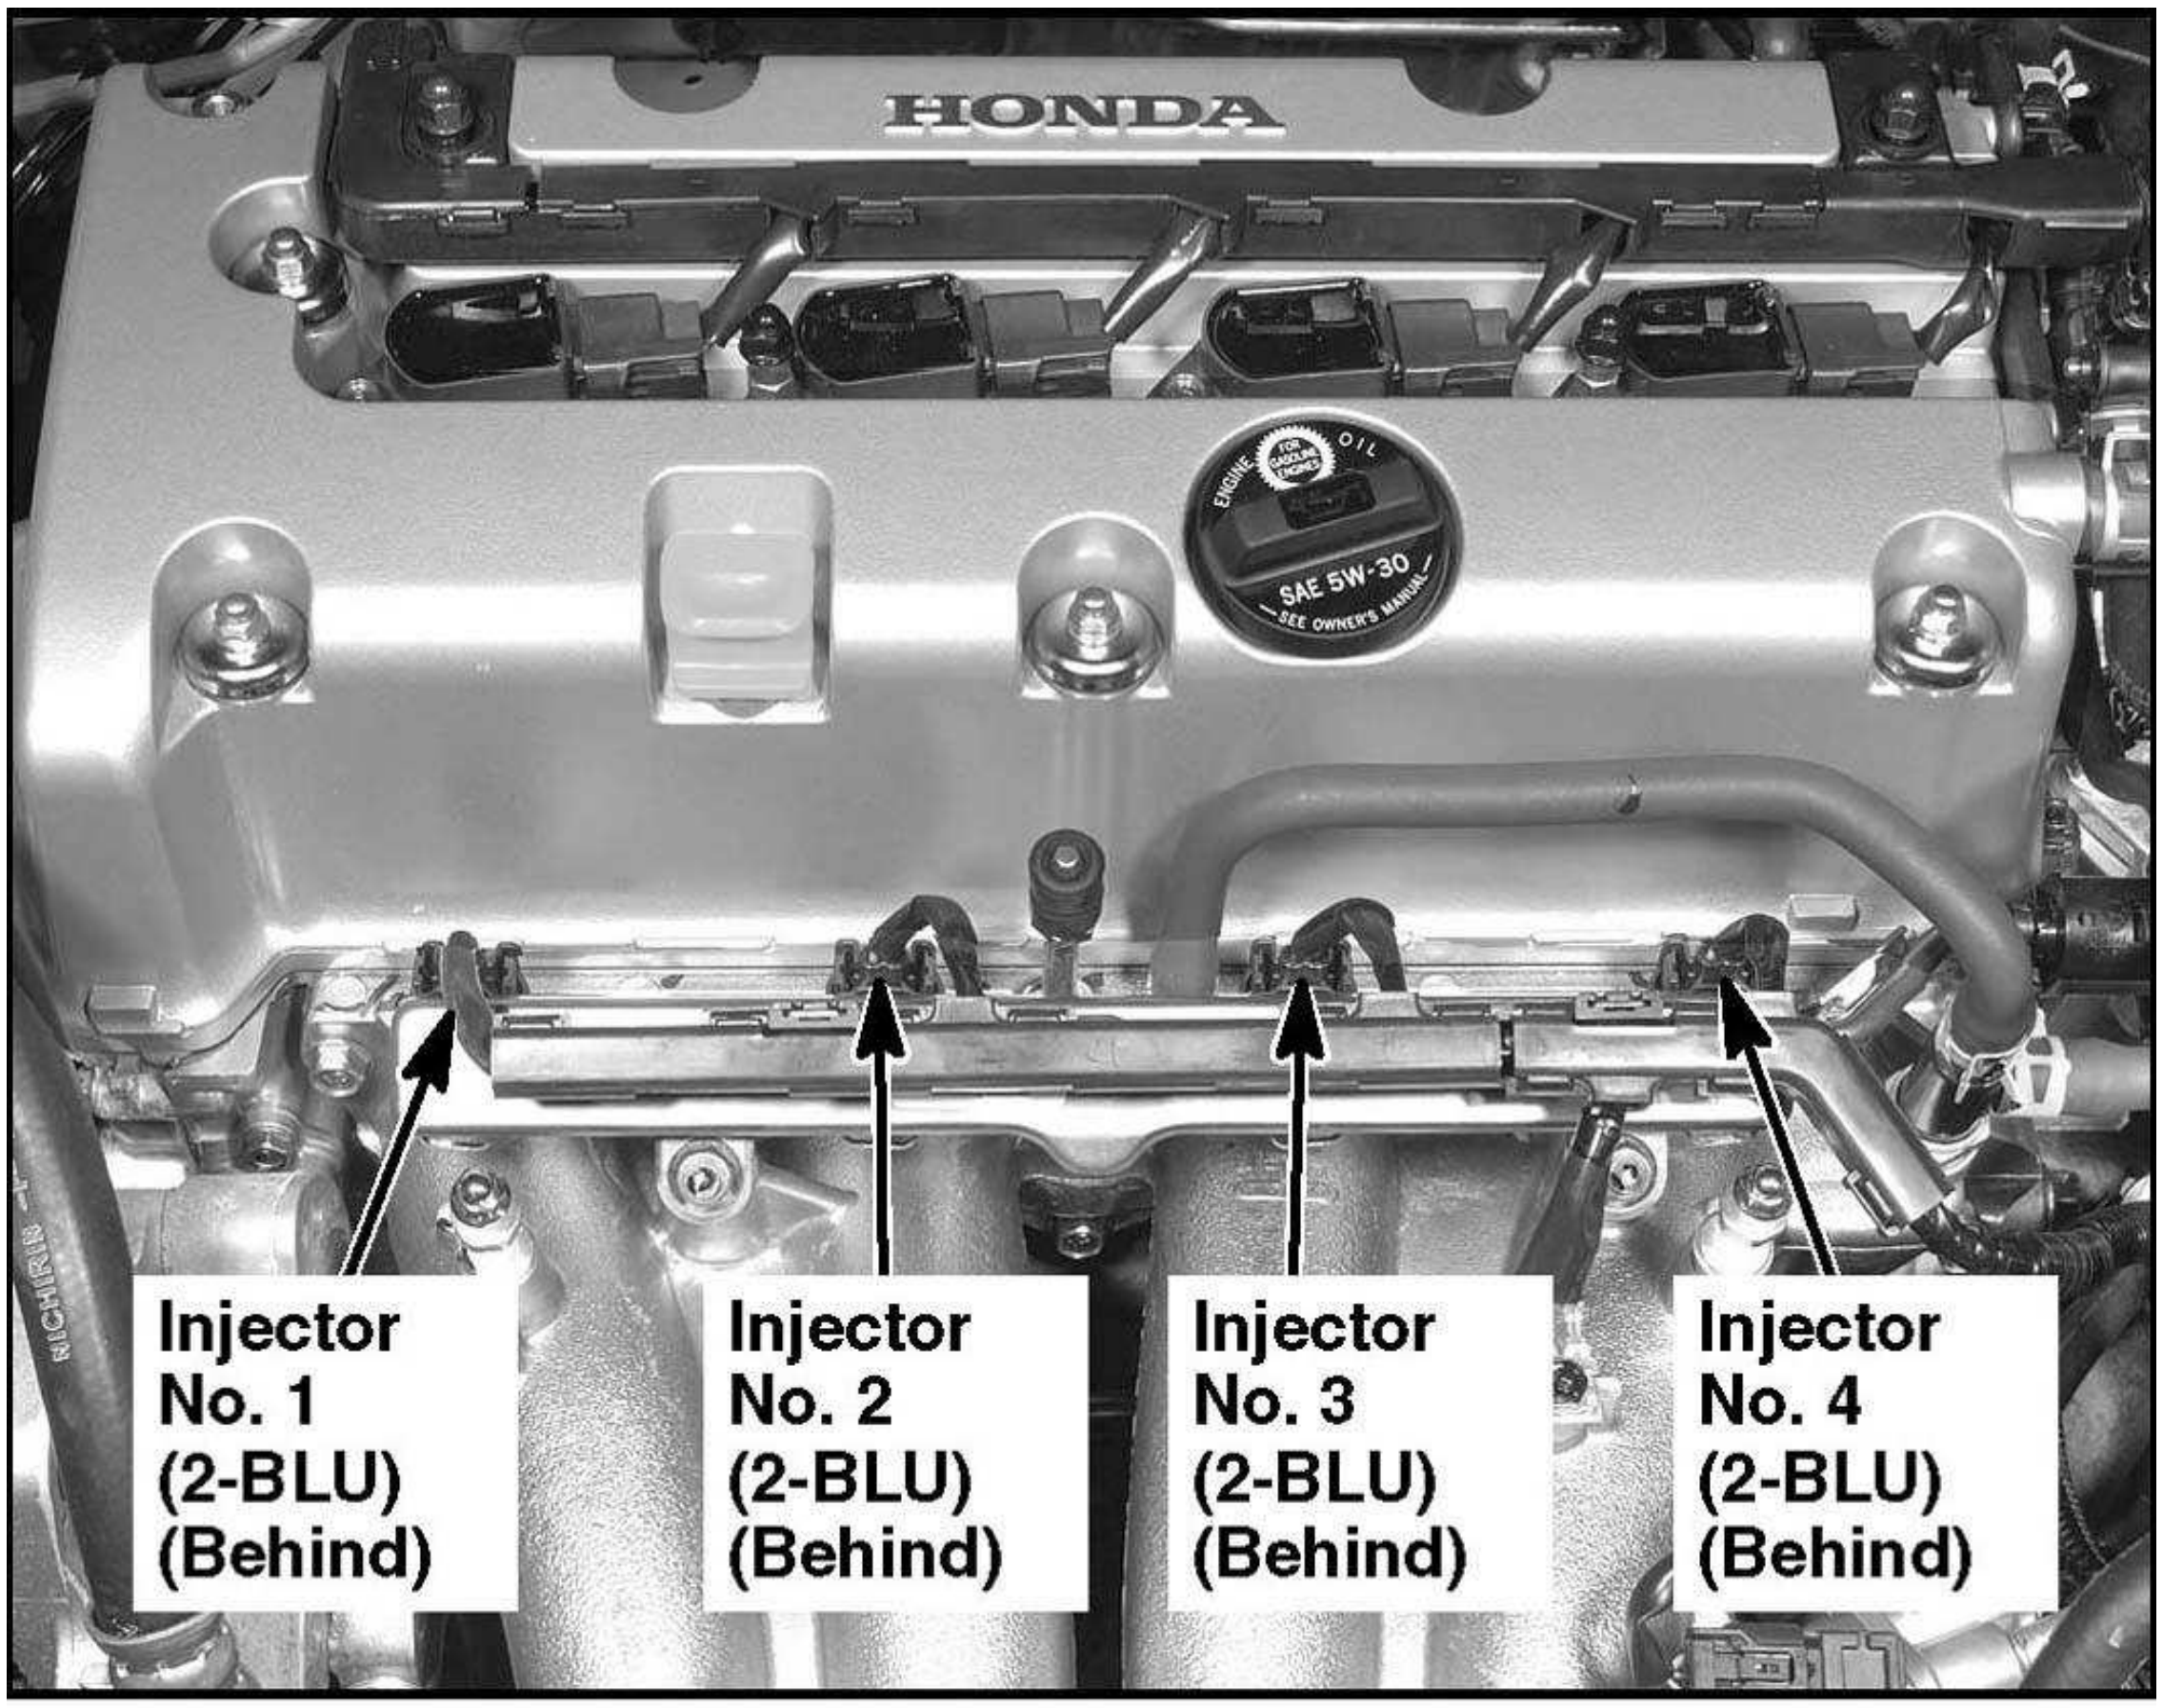
Injector No. 1 (2-BLU) (Behind)
Injector No. 2 (2-BLU) (Behind)
Injector No. 3 (2-BLU) (Behind)
Injector No. 4 (2-BLU) (Behind)
HONDA
ENGINE OIL
FOR GASOLINE ENGINES
SAE 5W-30
SEE OWNER'S MANUAL
RICHIRIN

G00434356

Fig. 20: Top Left Side Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

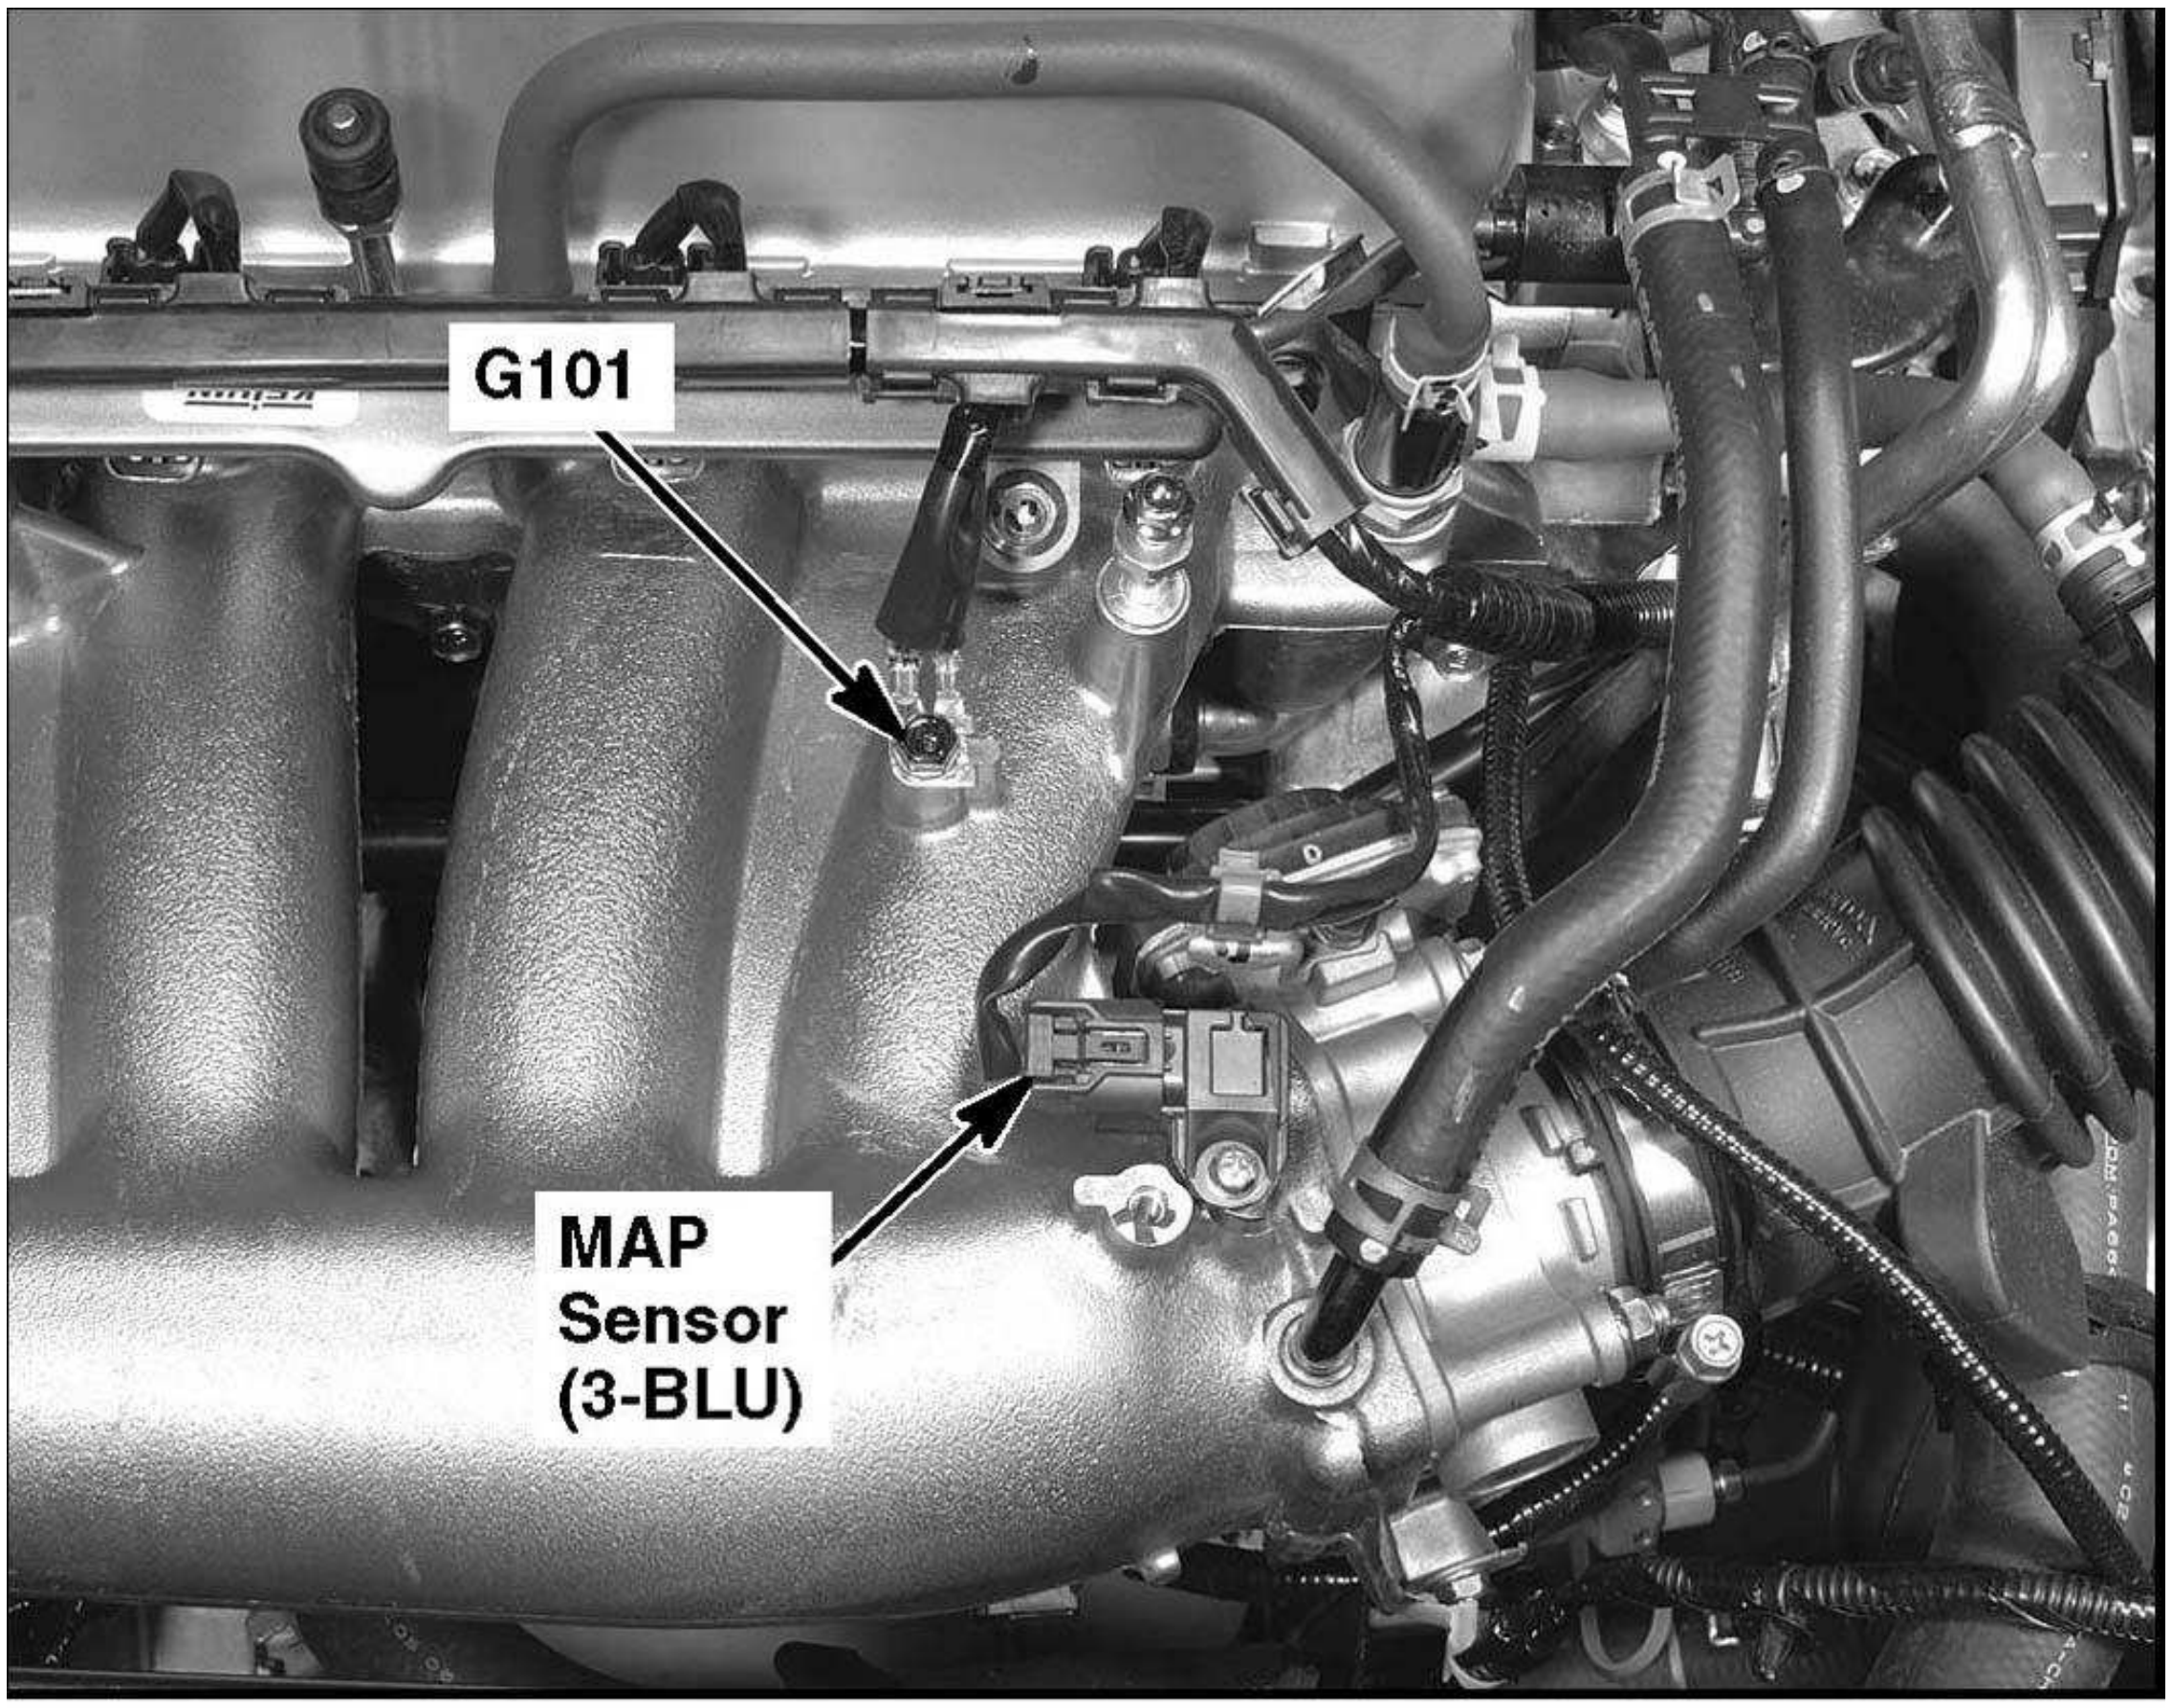
G101
MAP
Sensor
(3-BLU)

G00434357

Fig. 21: Left Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

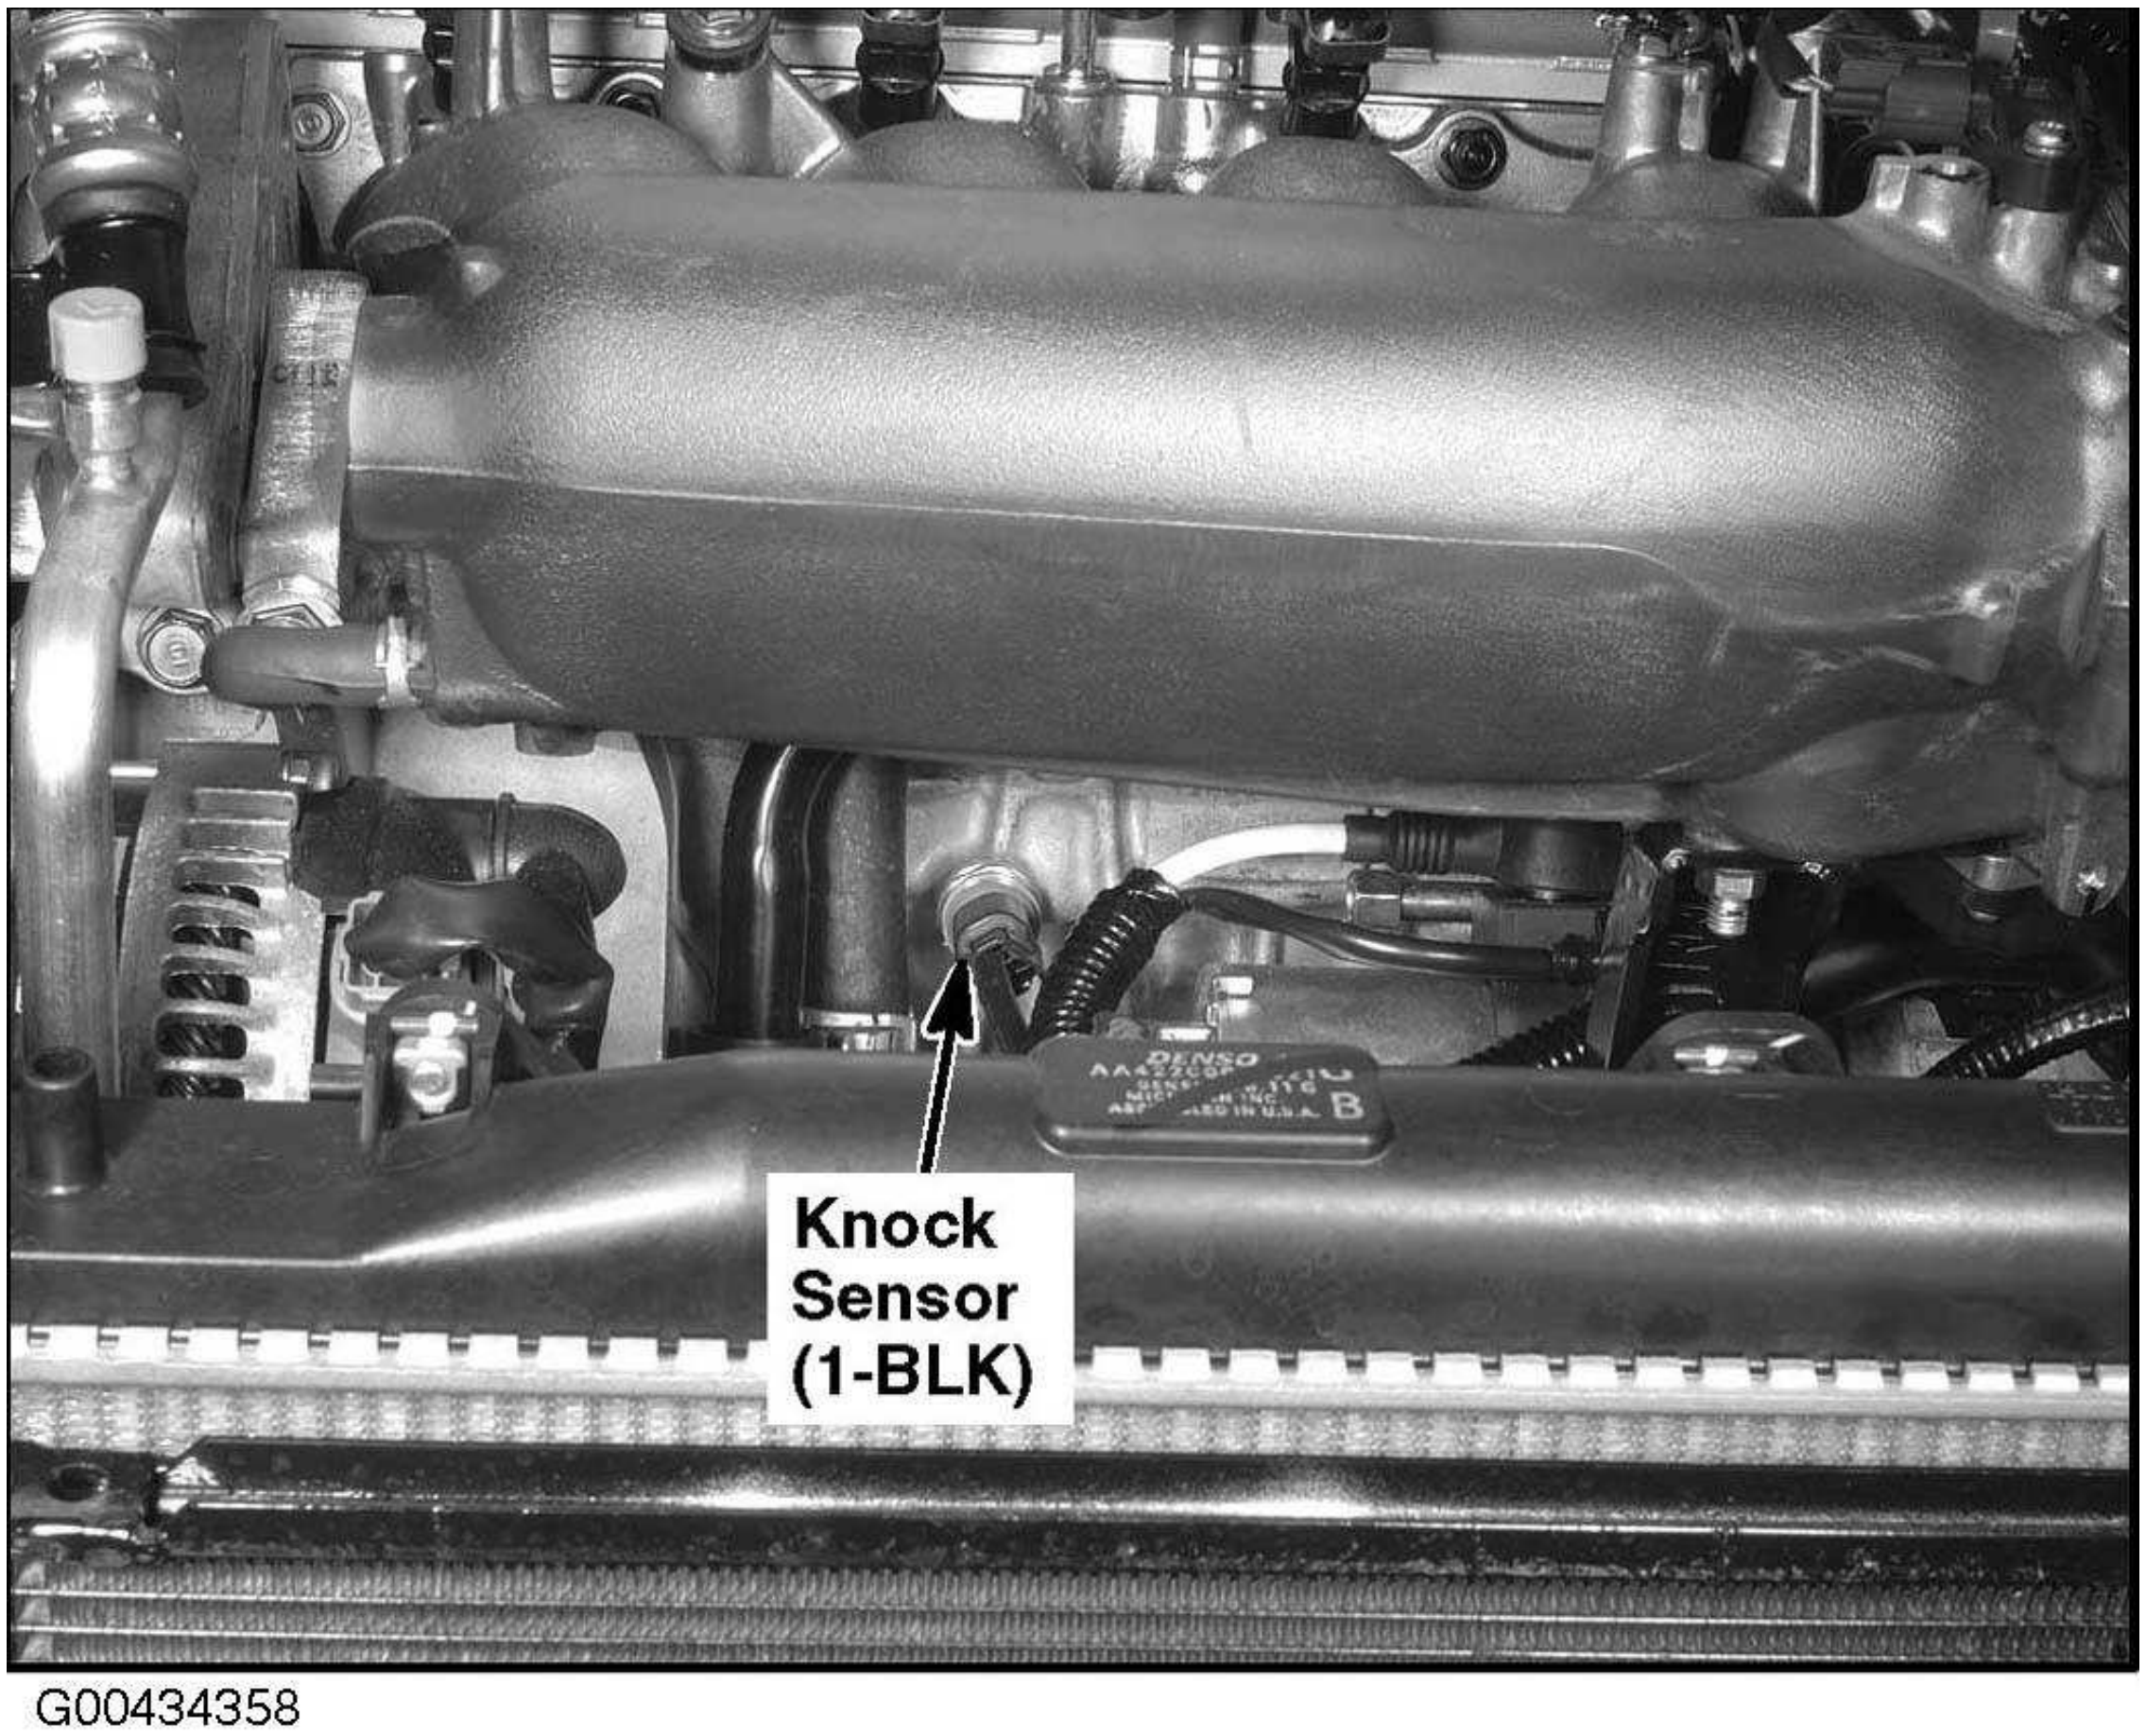
Knock Sensor (1-BLK)
G00434358

Fig. 22: Left Front Side Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

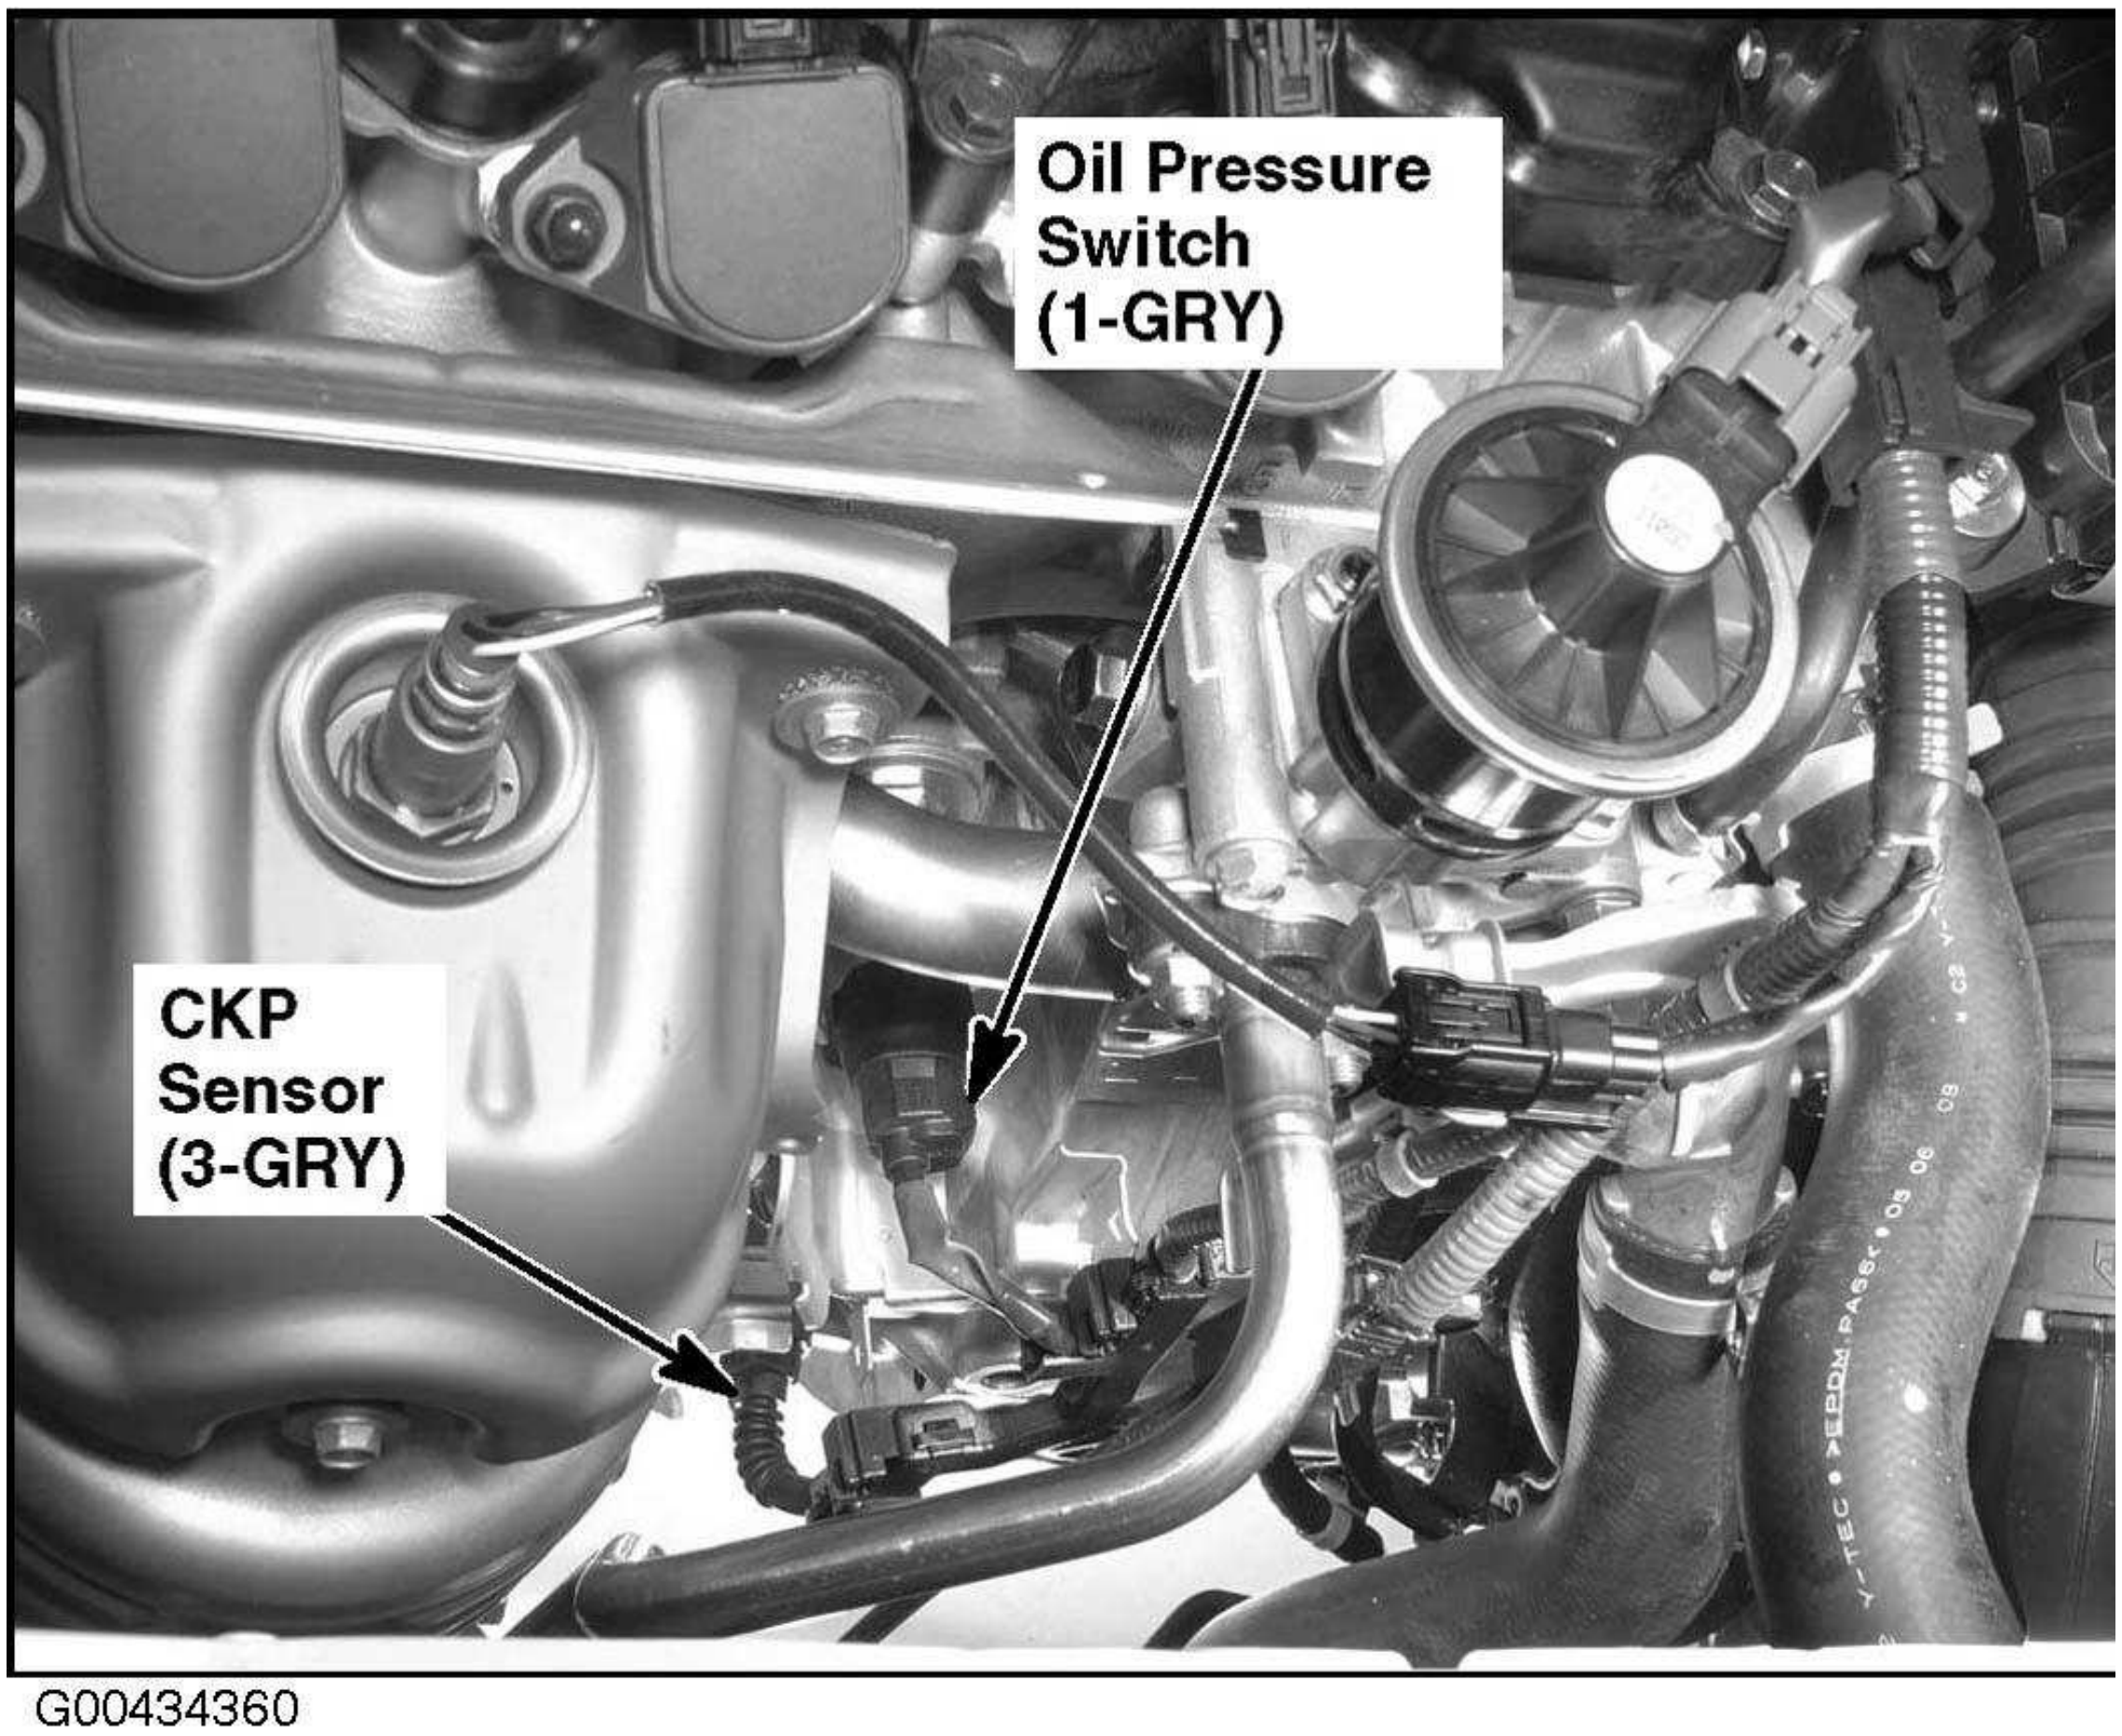
Oil Pressure Switch (1-GRY)
CKP Sensor (3-GRY)
G00434360

Fig. 23: Left Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

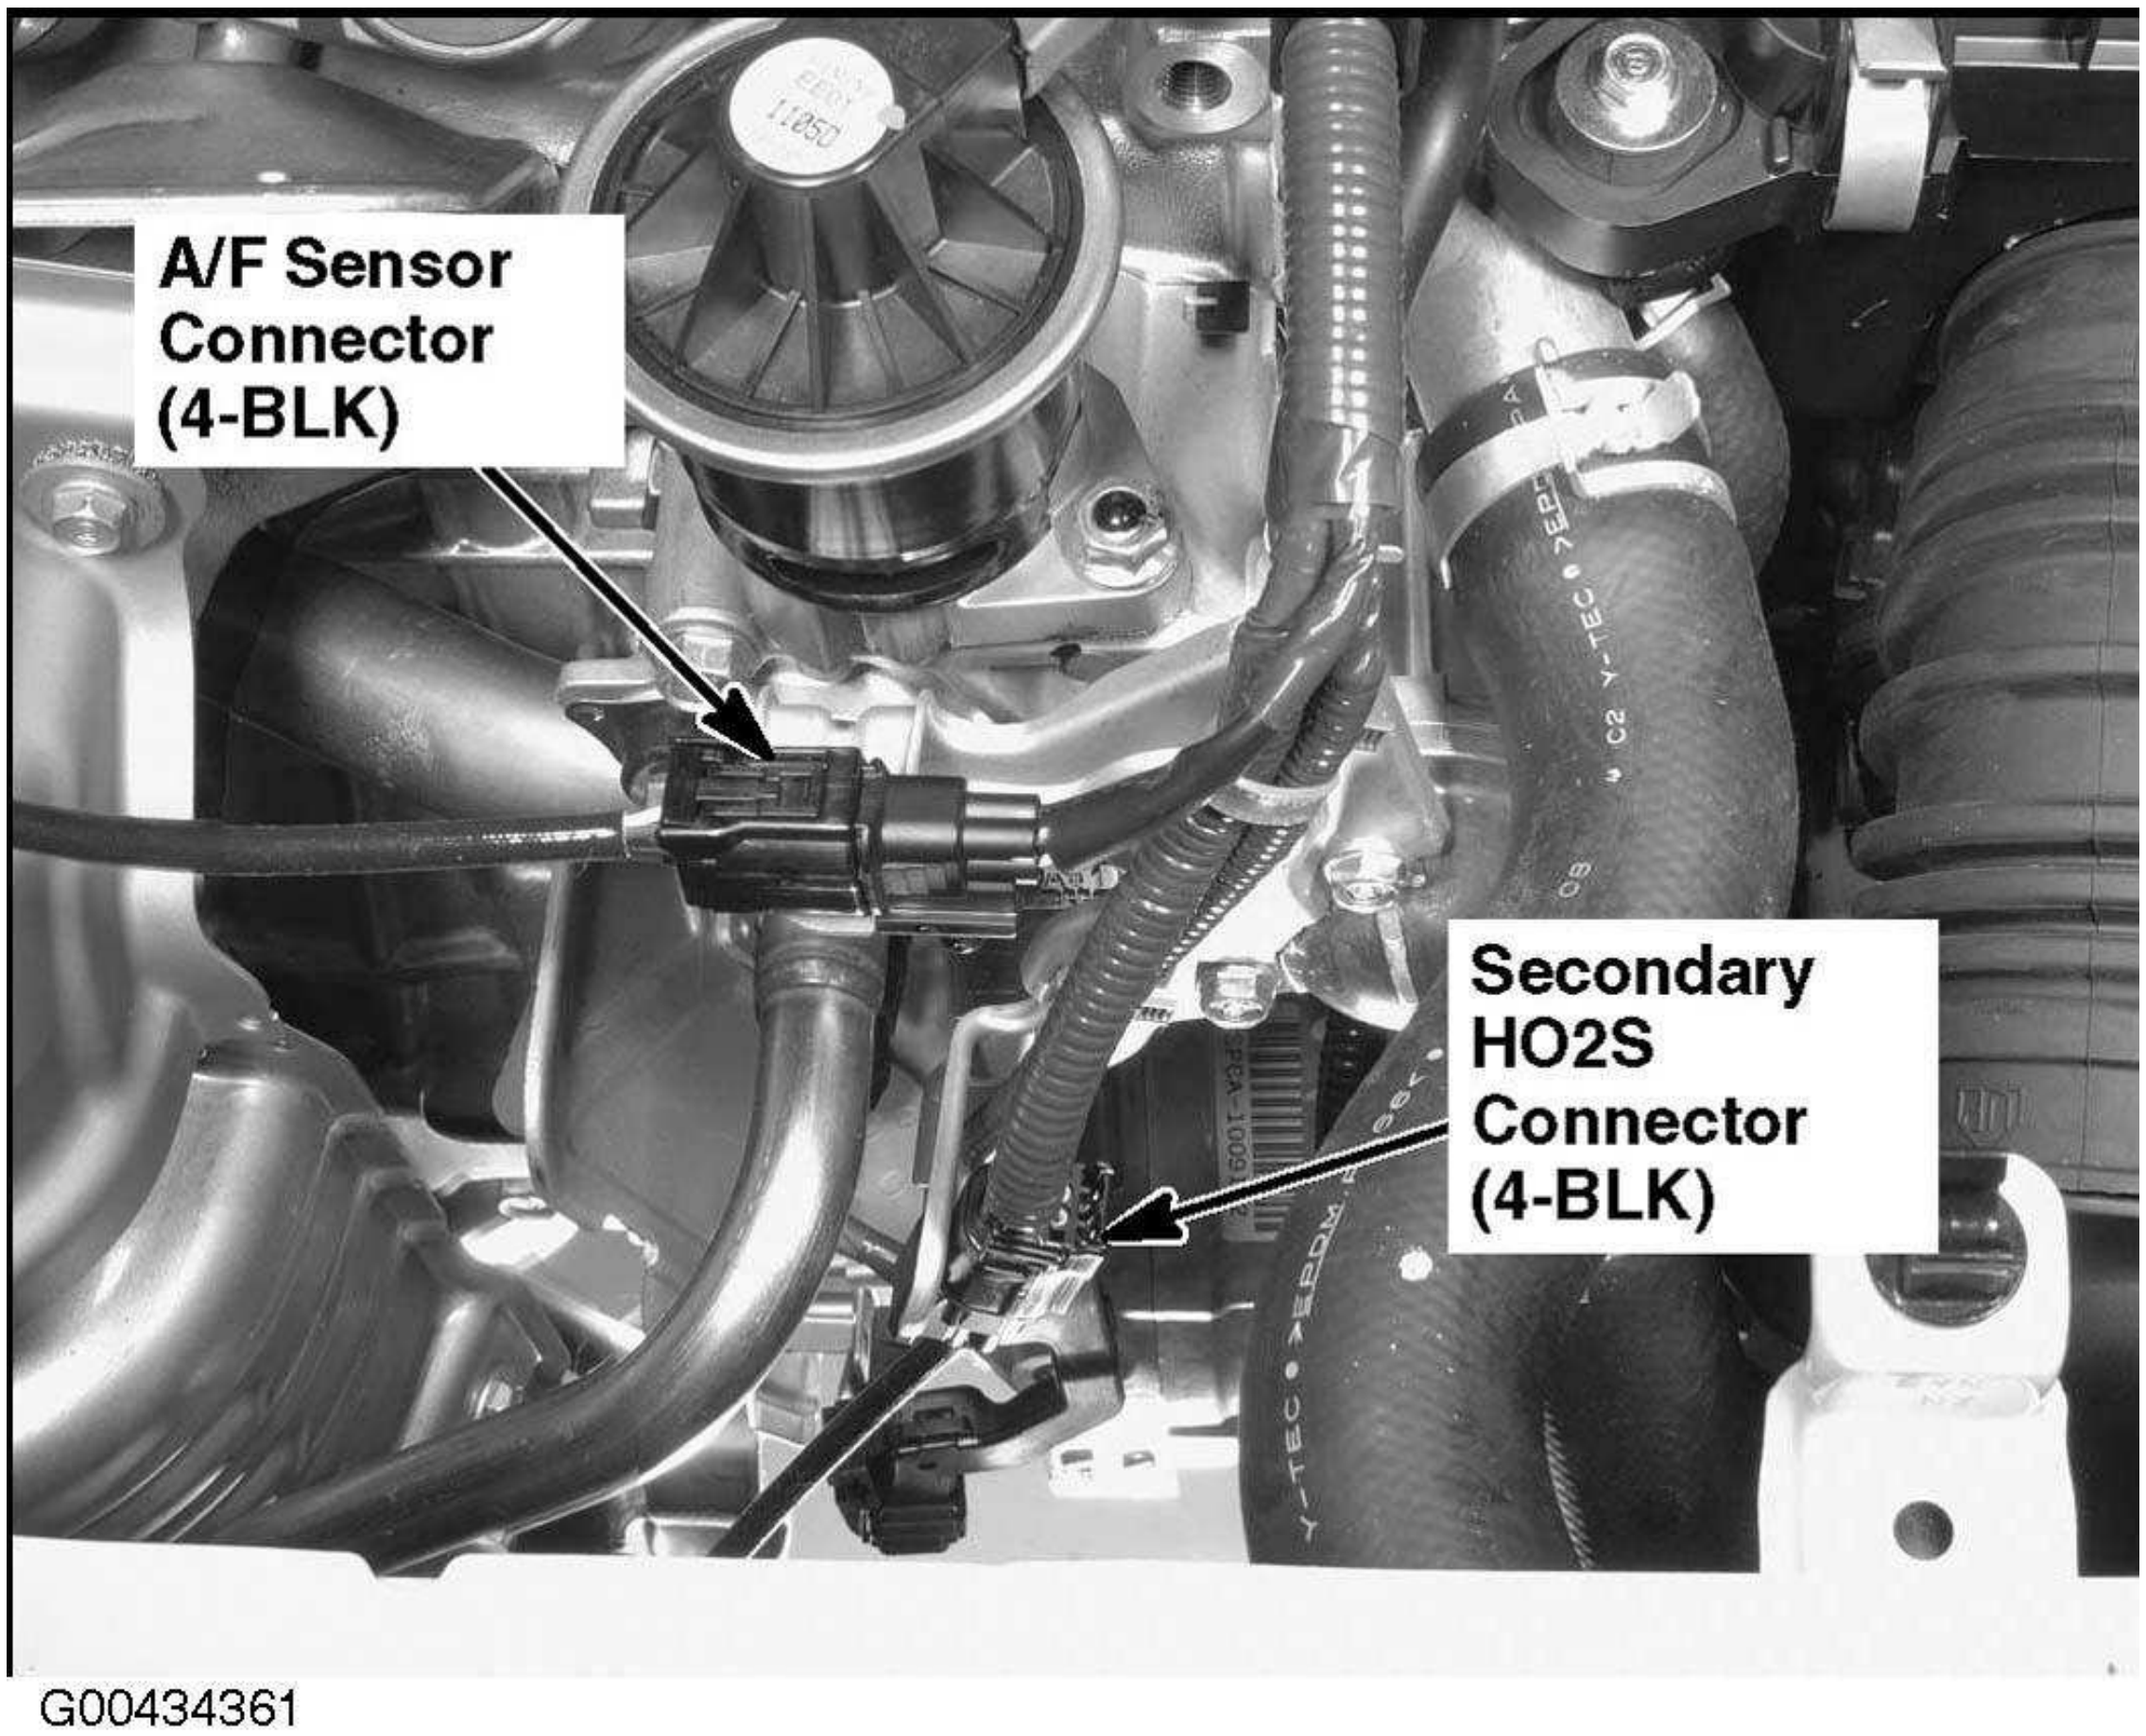
A/F Sensor Connector (4-BLK)
Secondary HO2S Connector (4-BLK)
G00434361

Fig. 24: Top Left Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

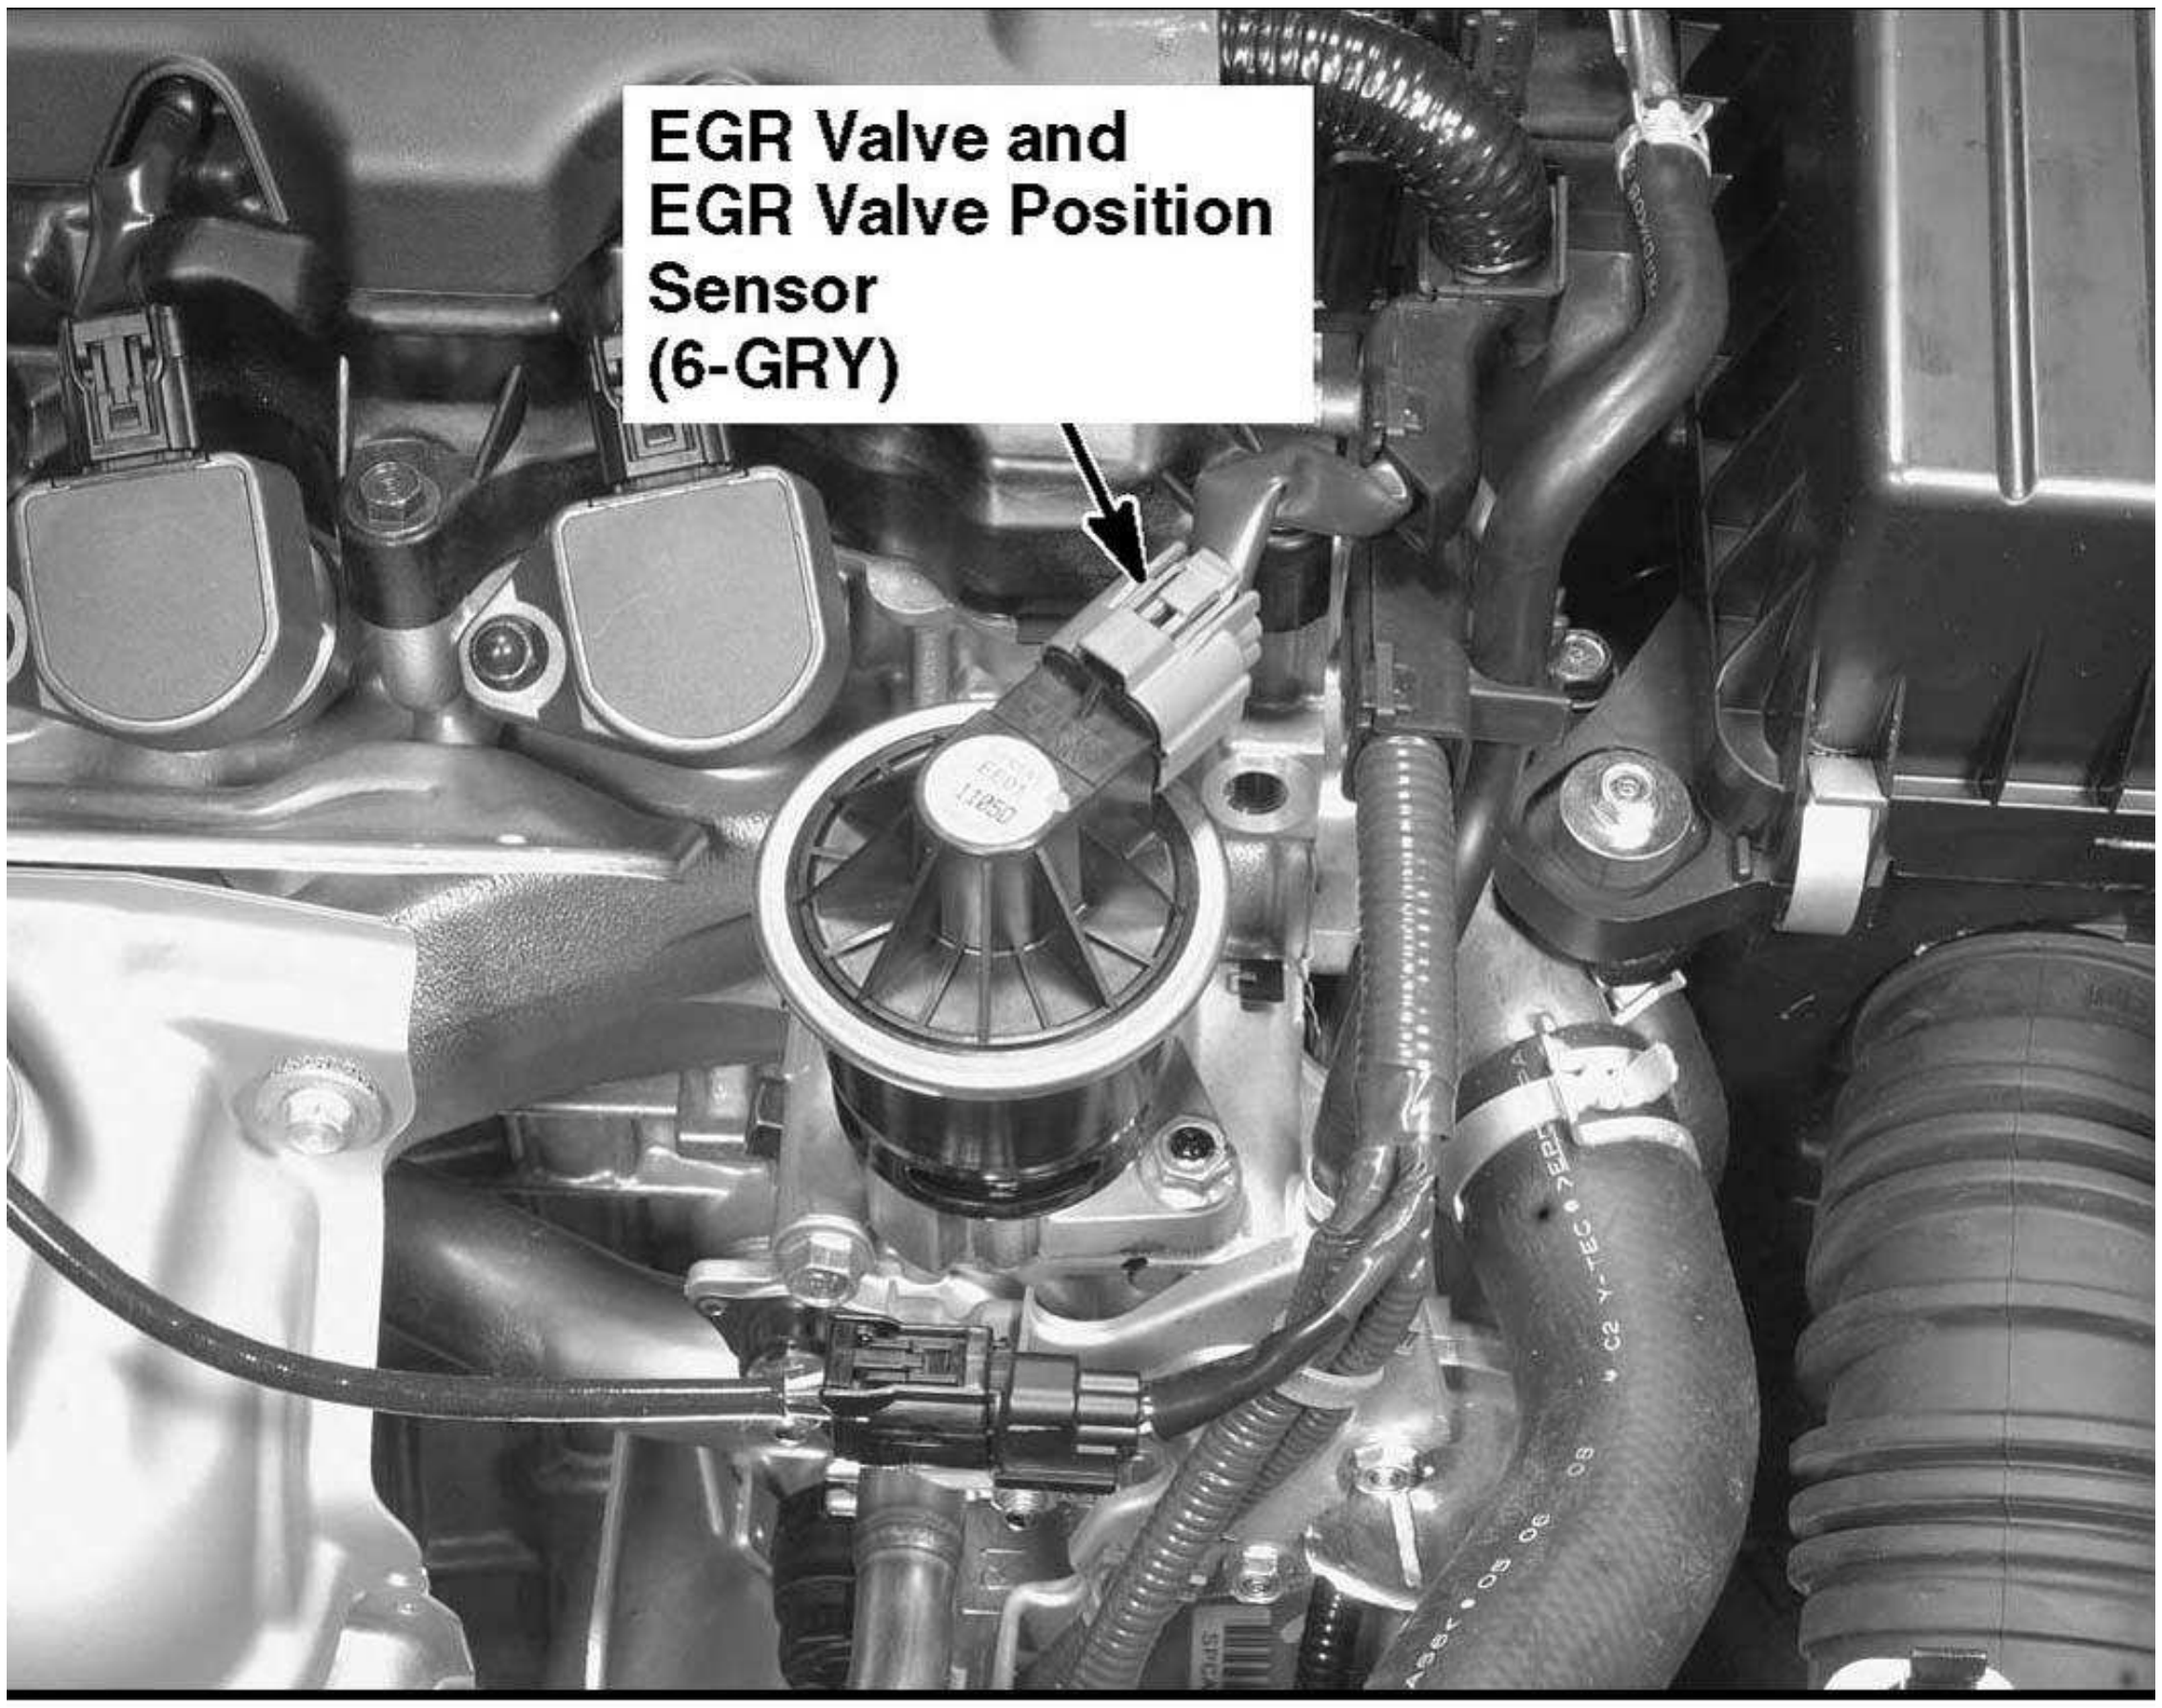
EGR Valve and
EGR Valve Position
Sensor
(6-GRY)
G00434362

Fig. 25: Top Left Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

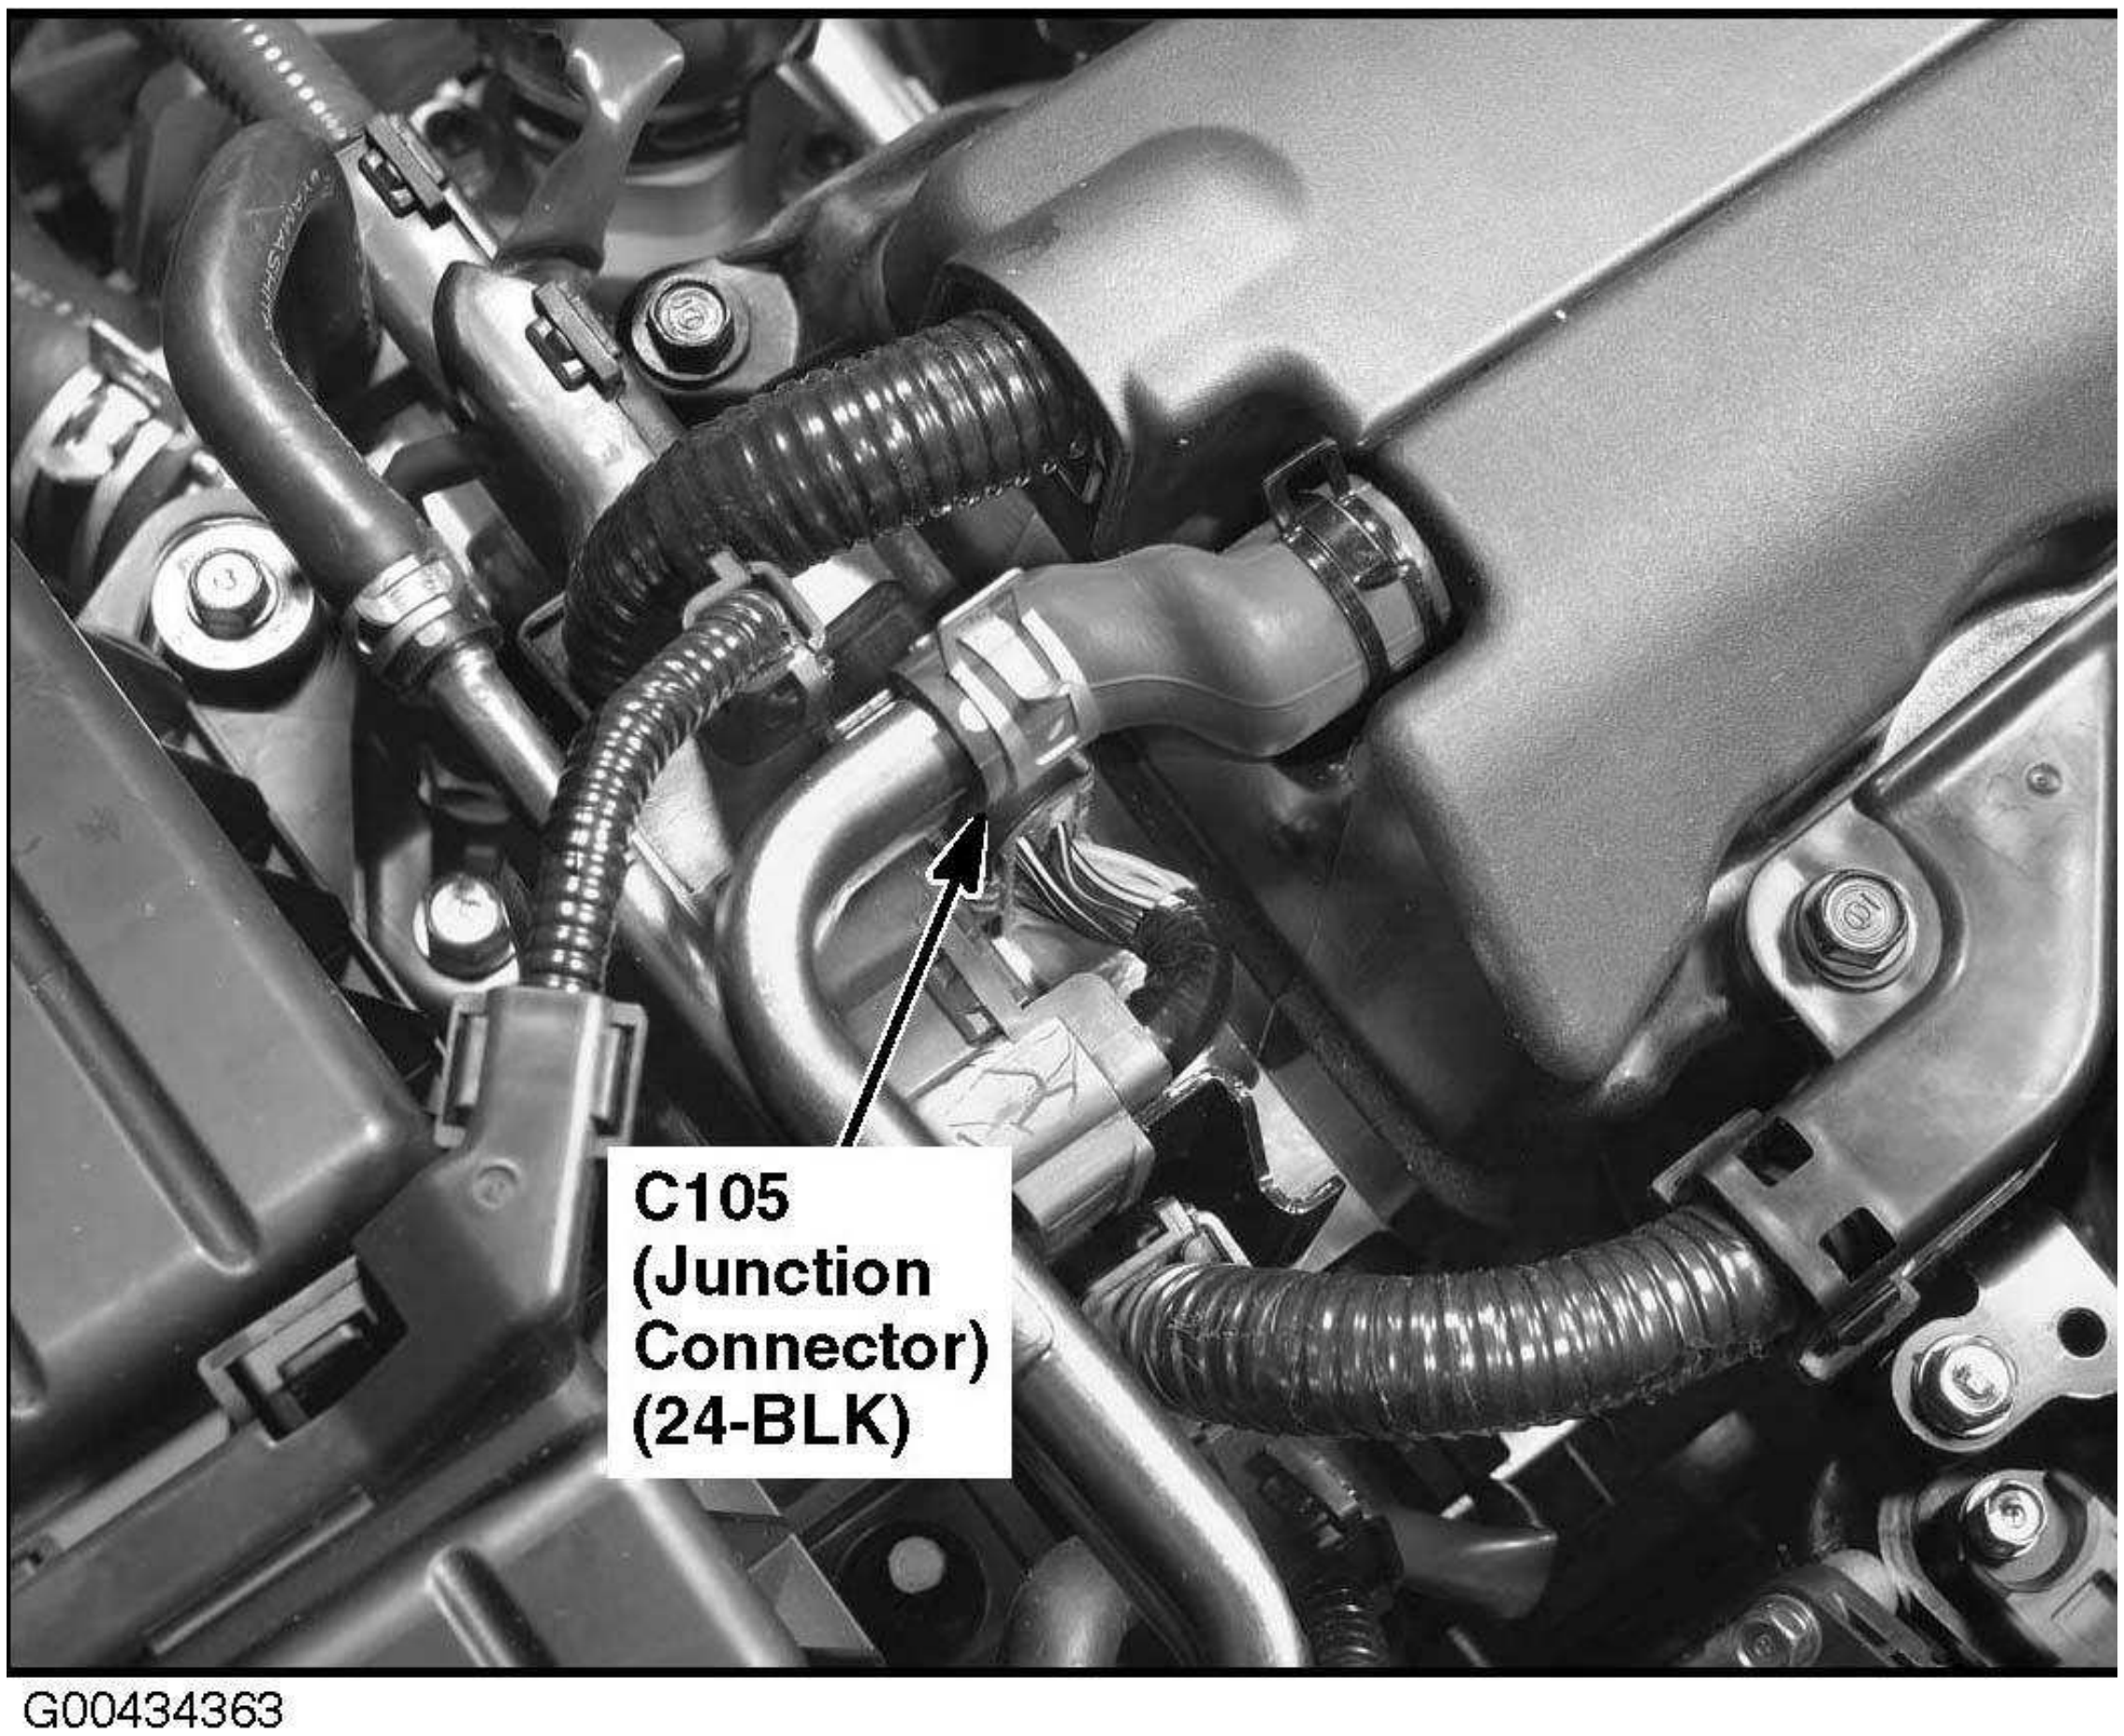
C105
(Junction
Connector)
(24-BLK)
G00434363

Fig. 26: Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

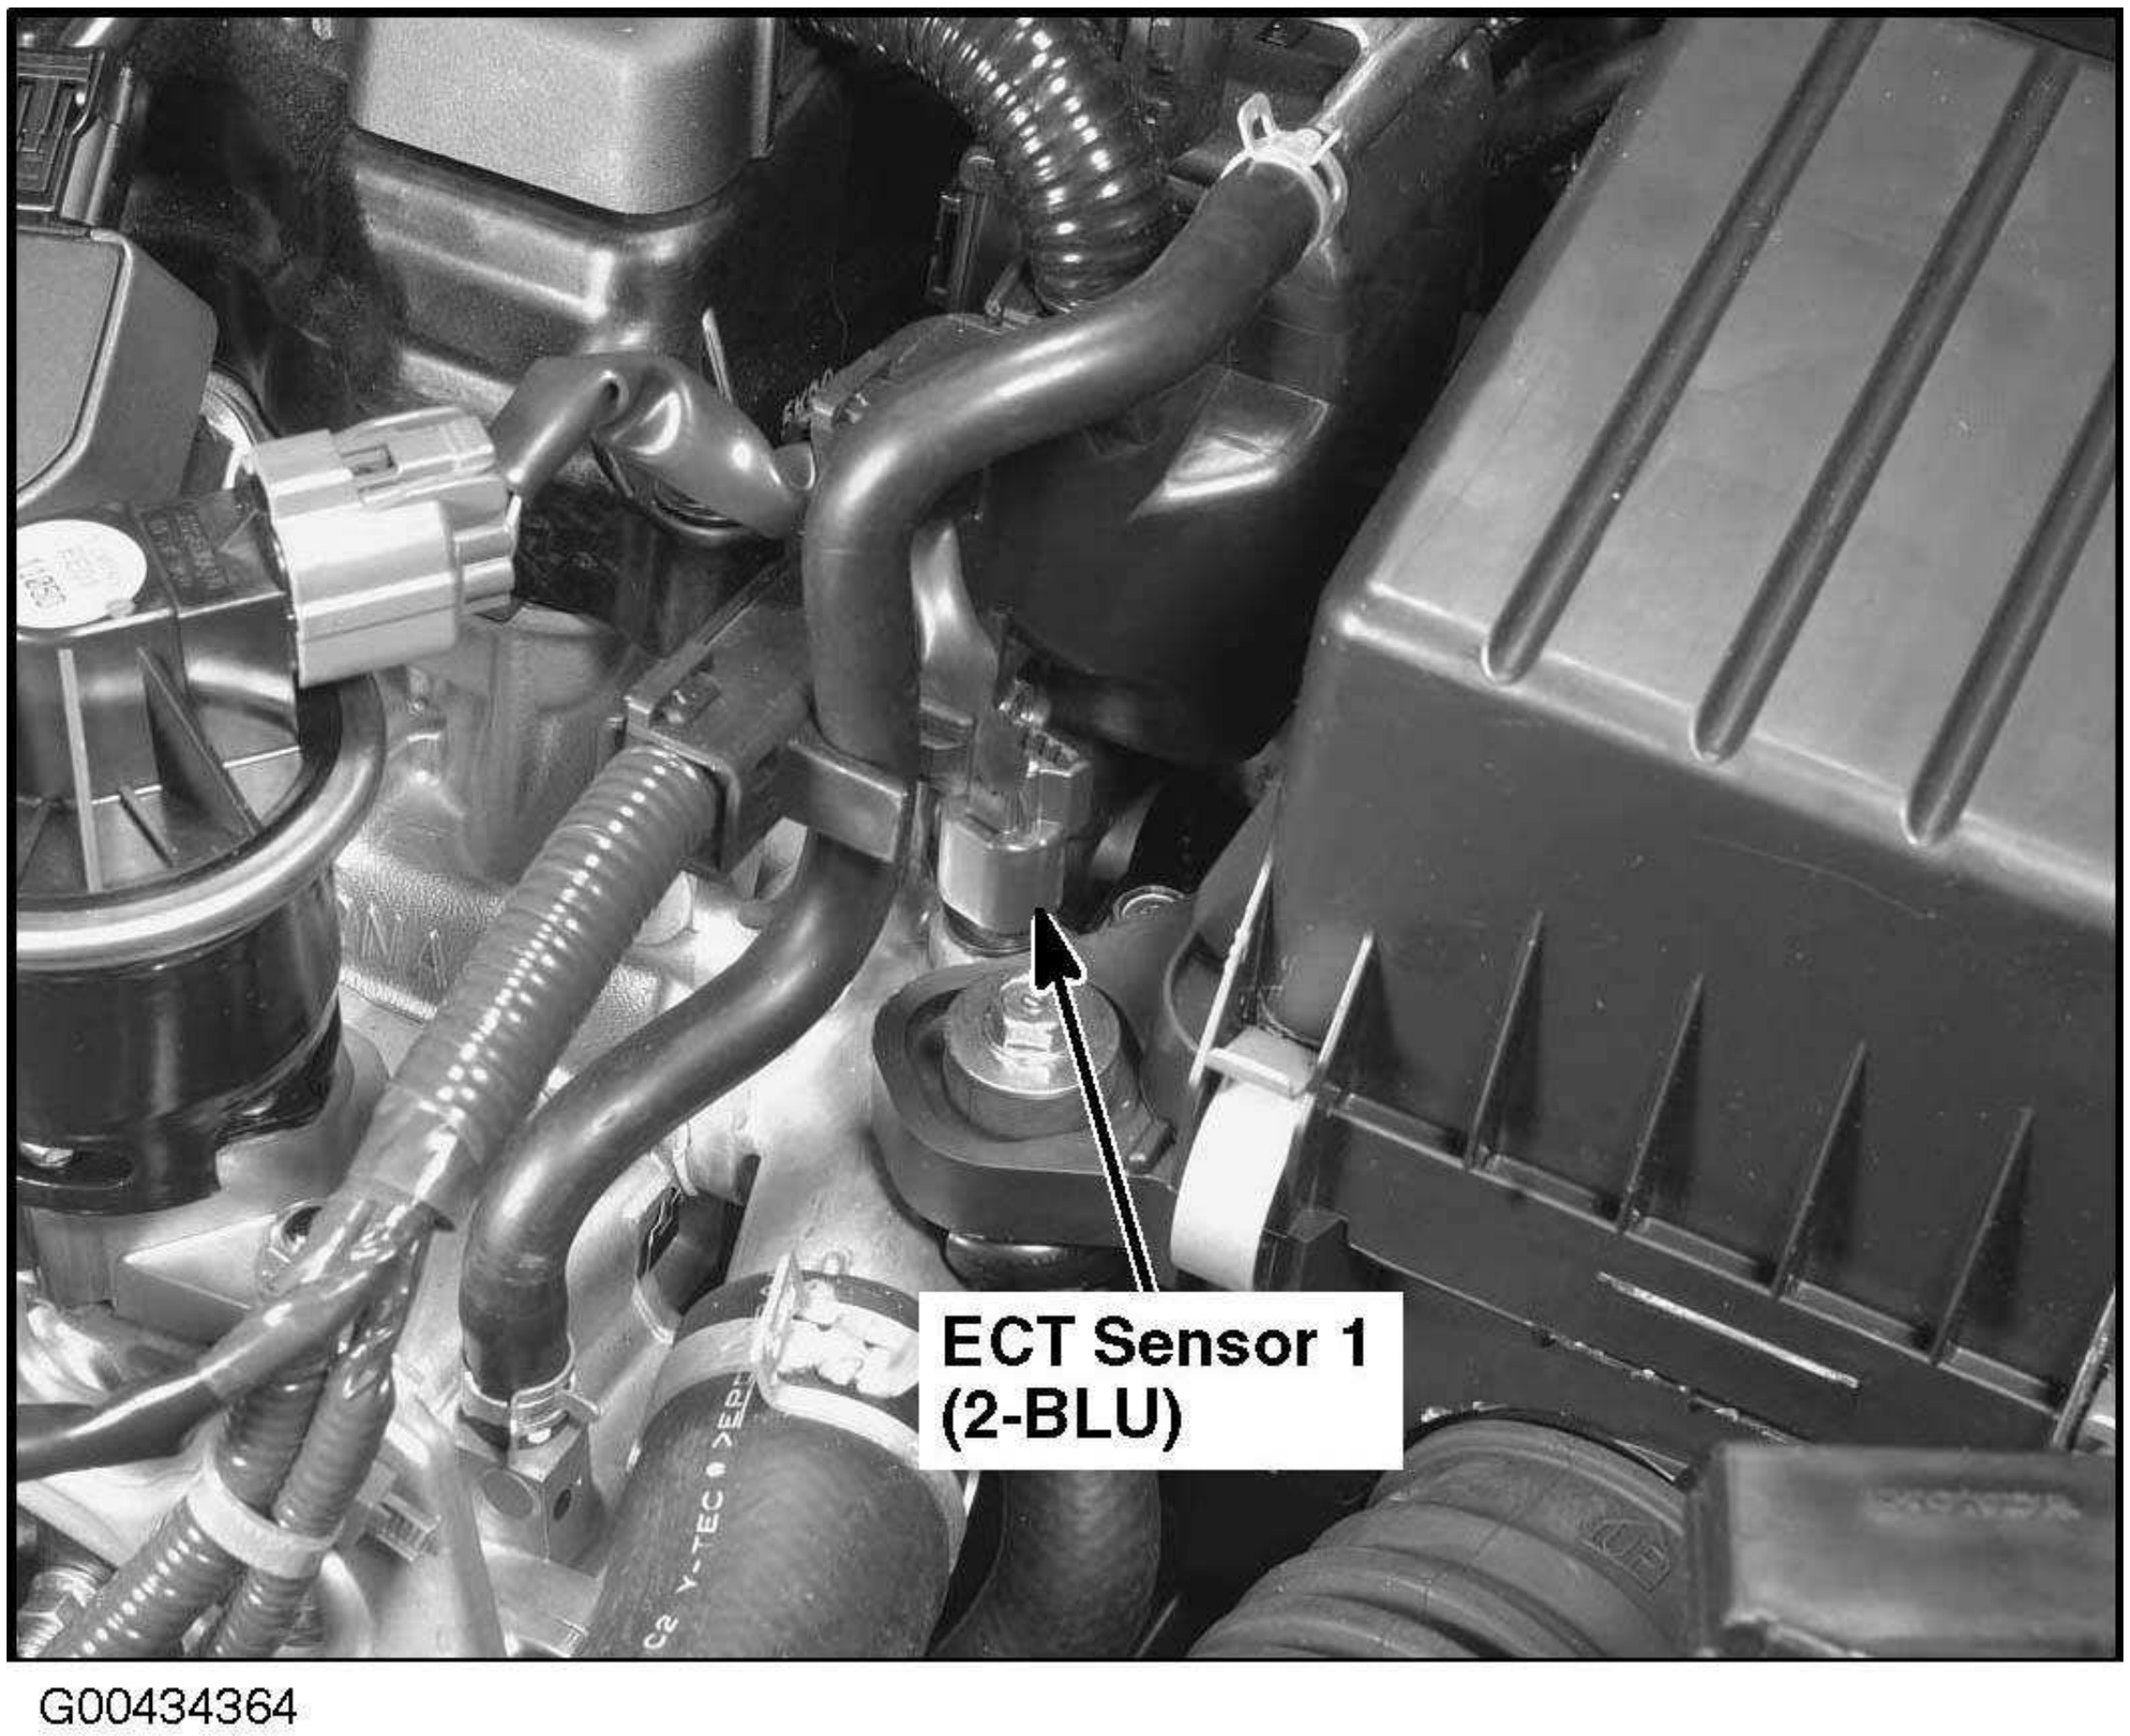
ECT Sensor 1
(2-BLU)
G00434364

Fig. 27: Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

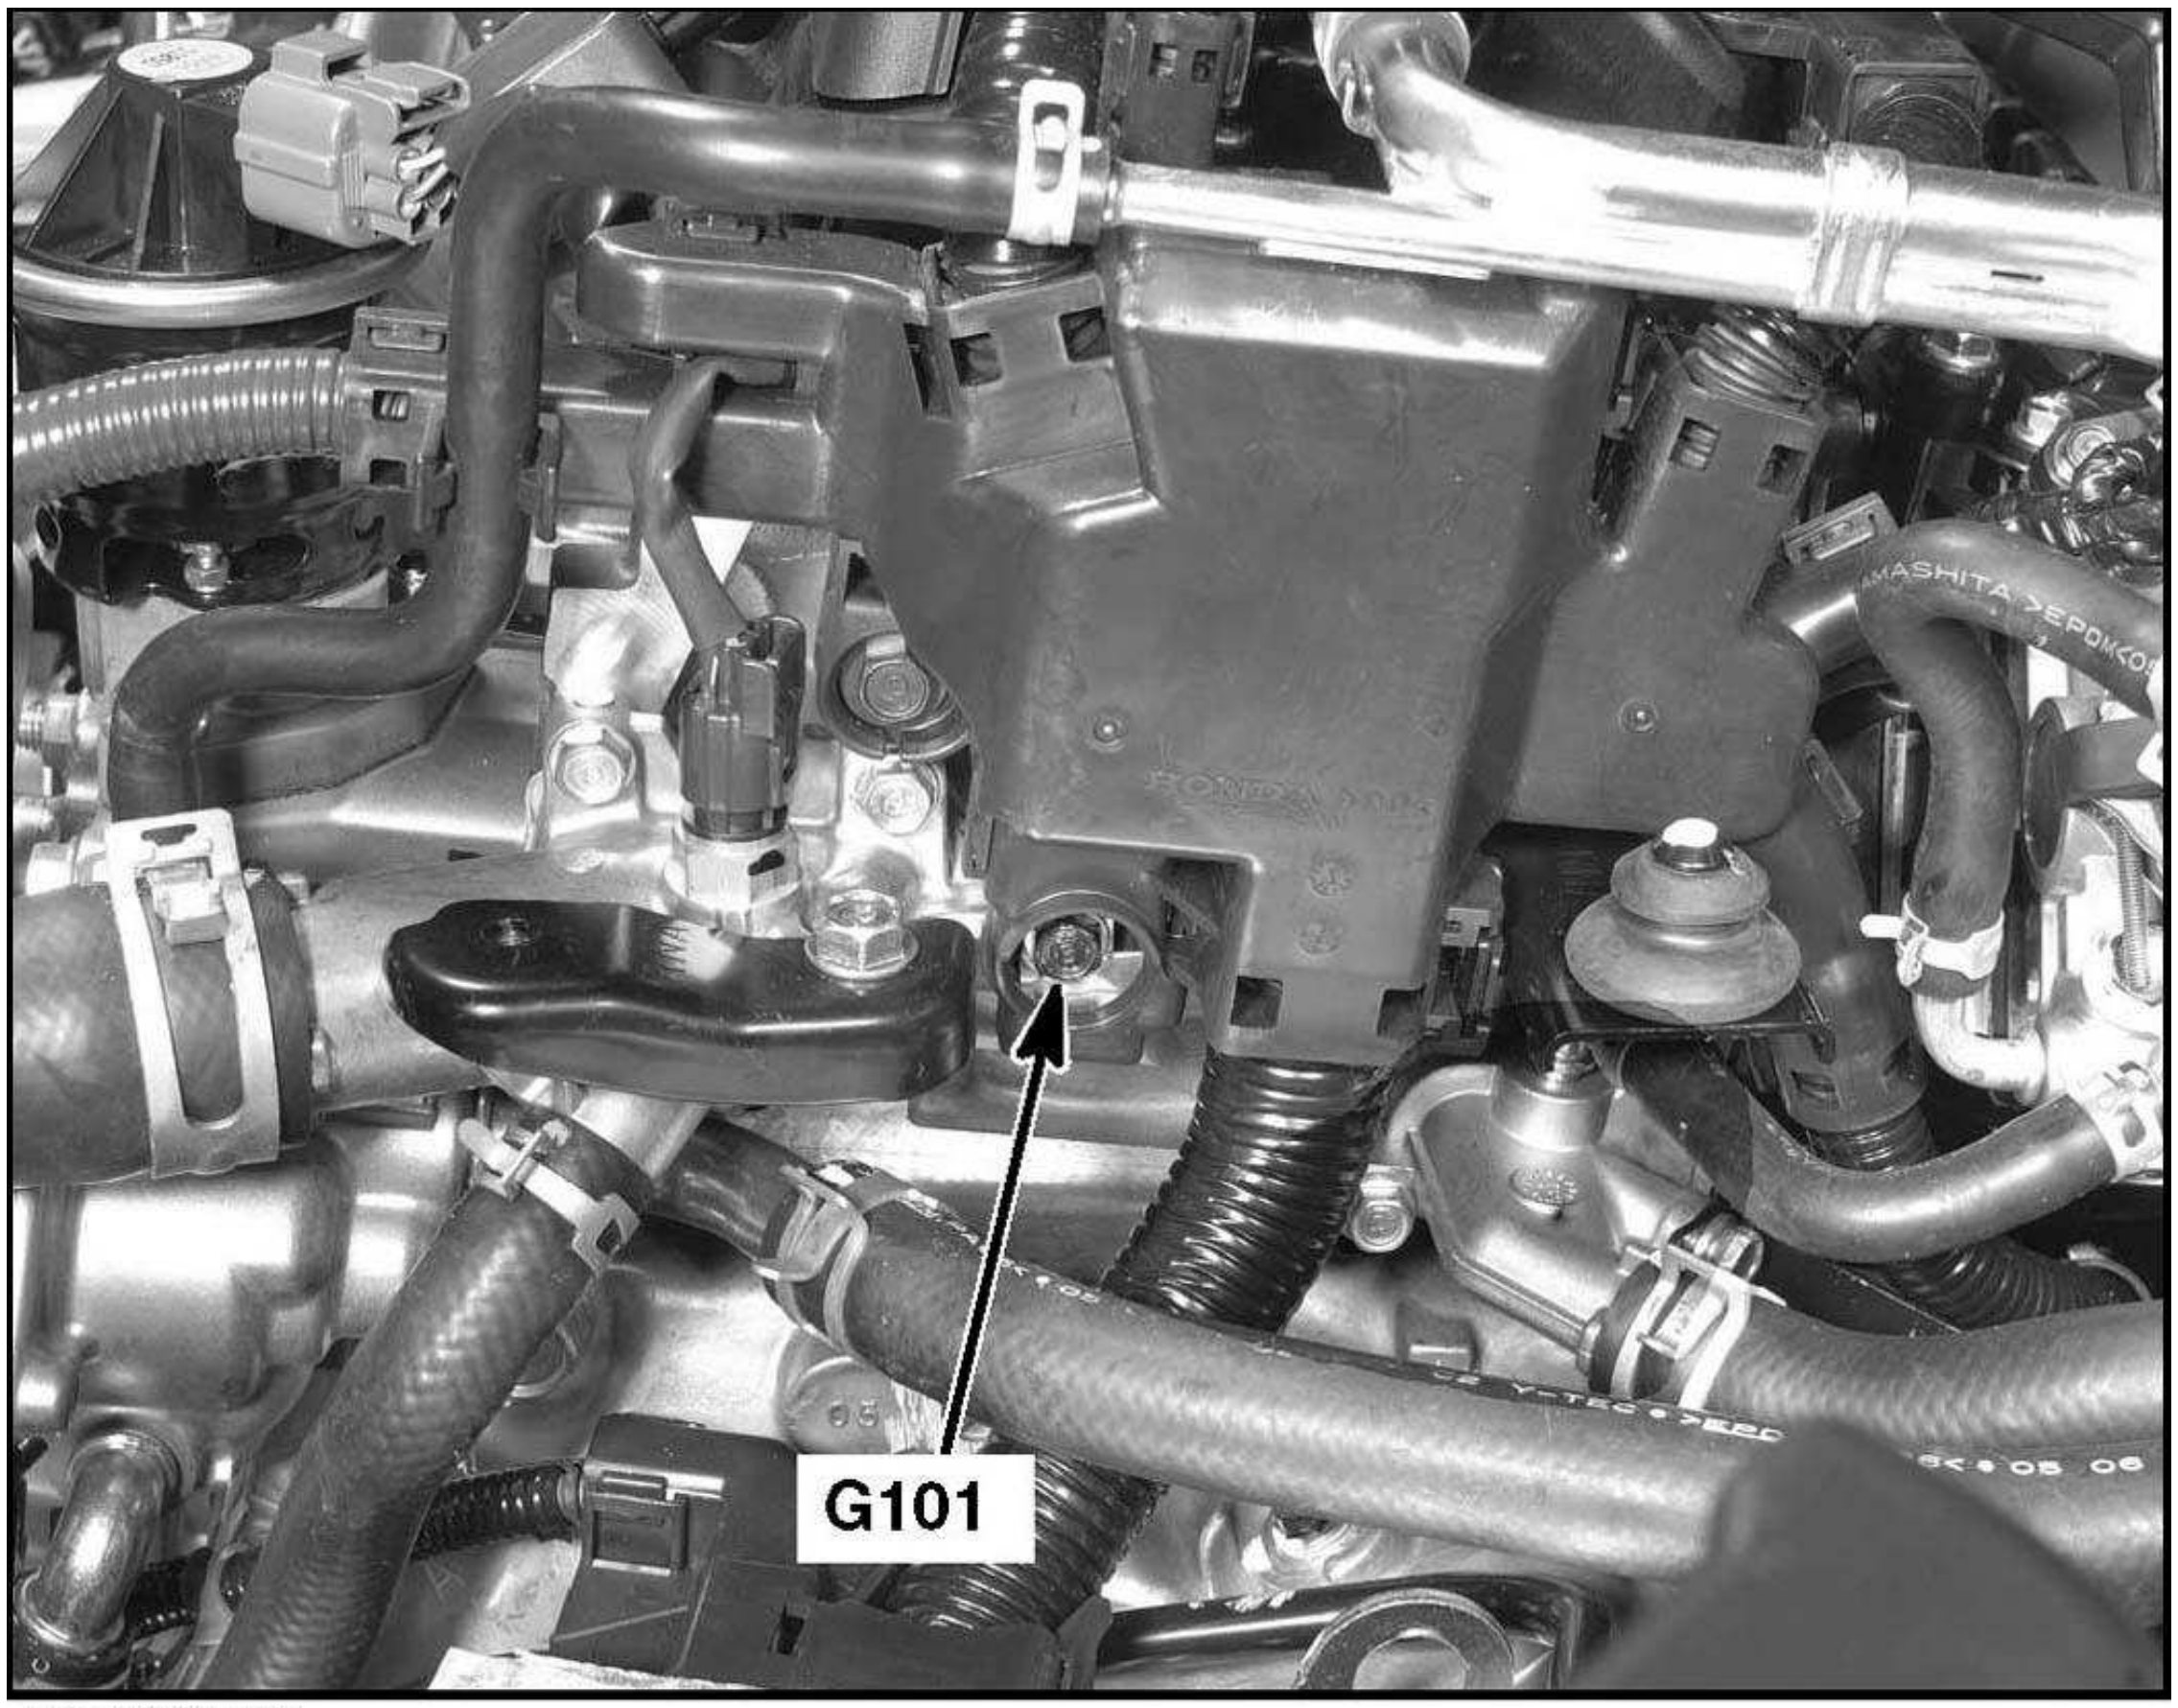
G101
G00434365

Fig. 28: Right Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

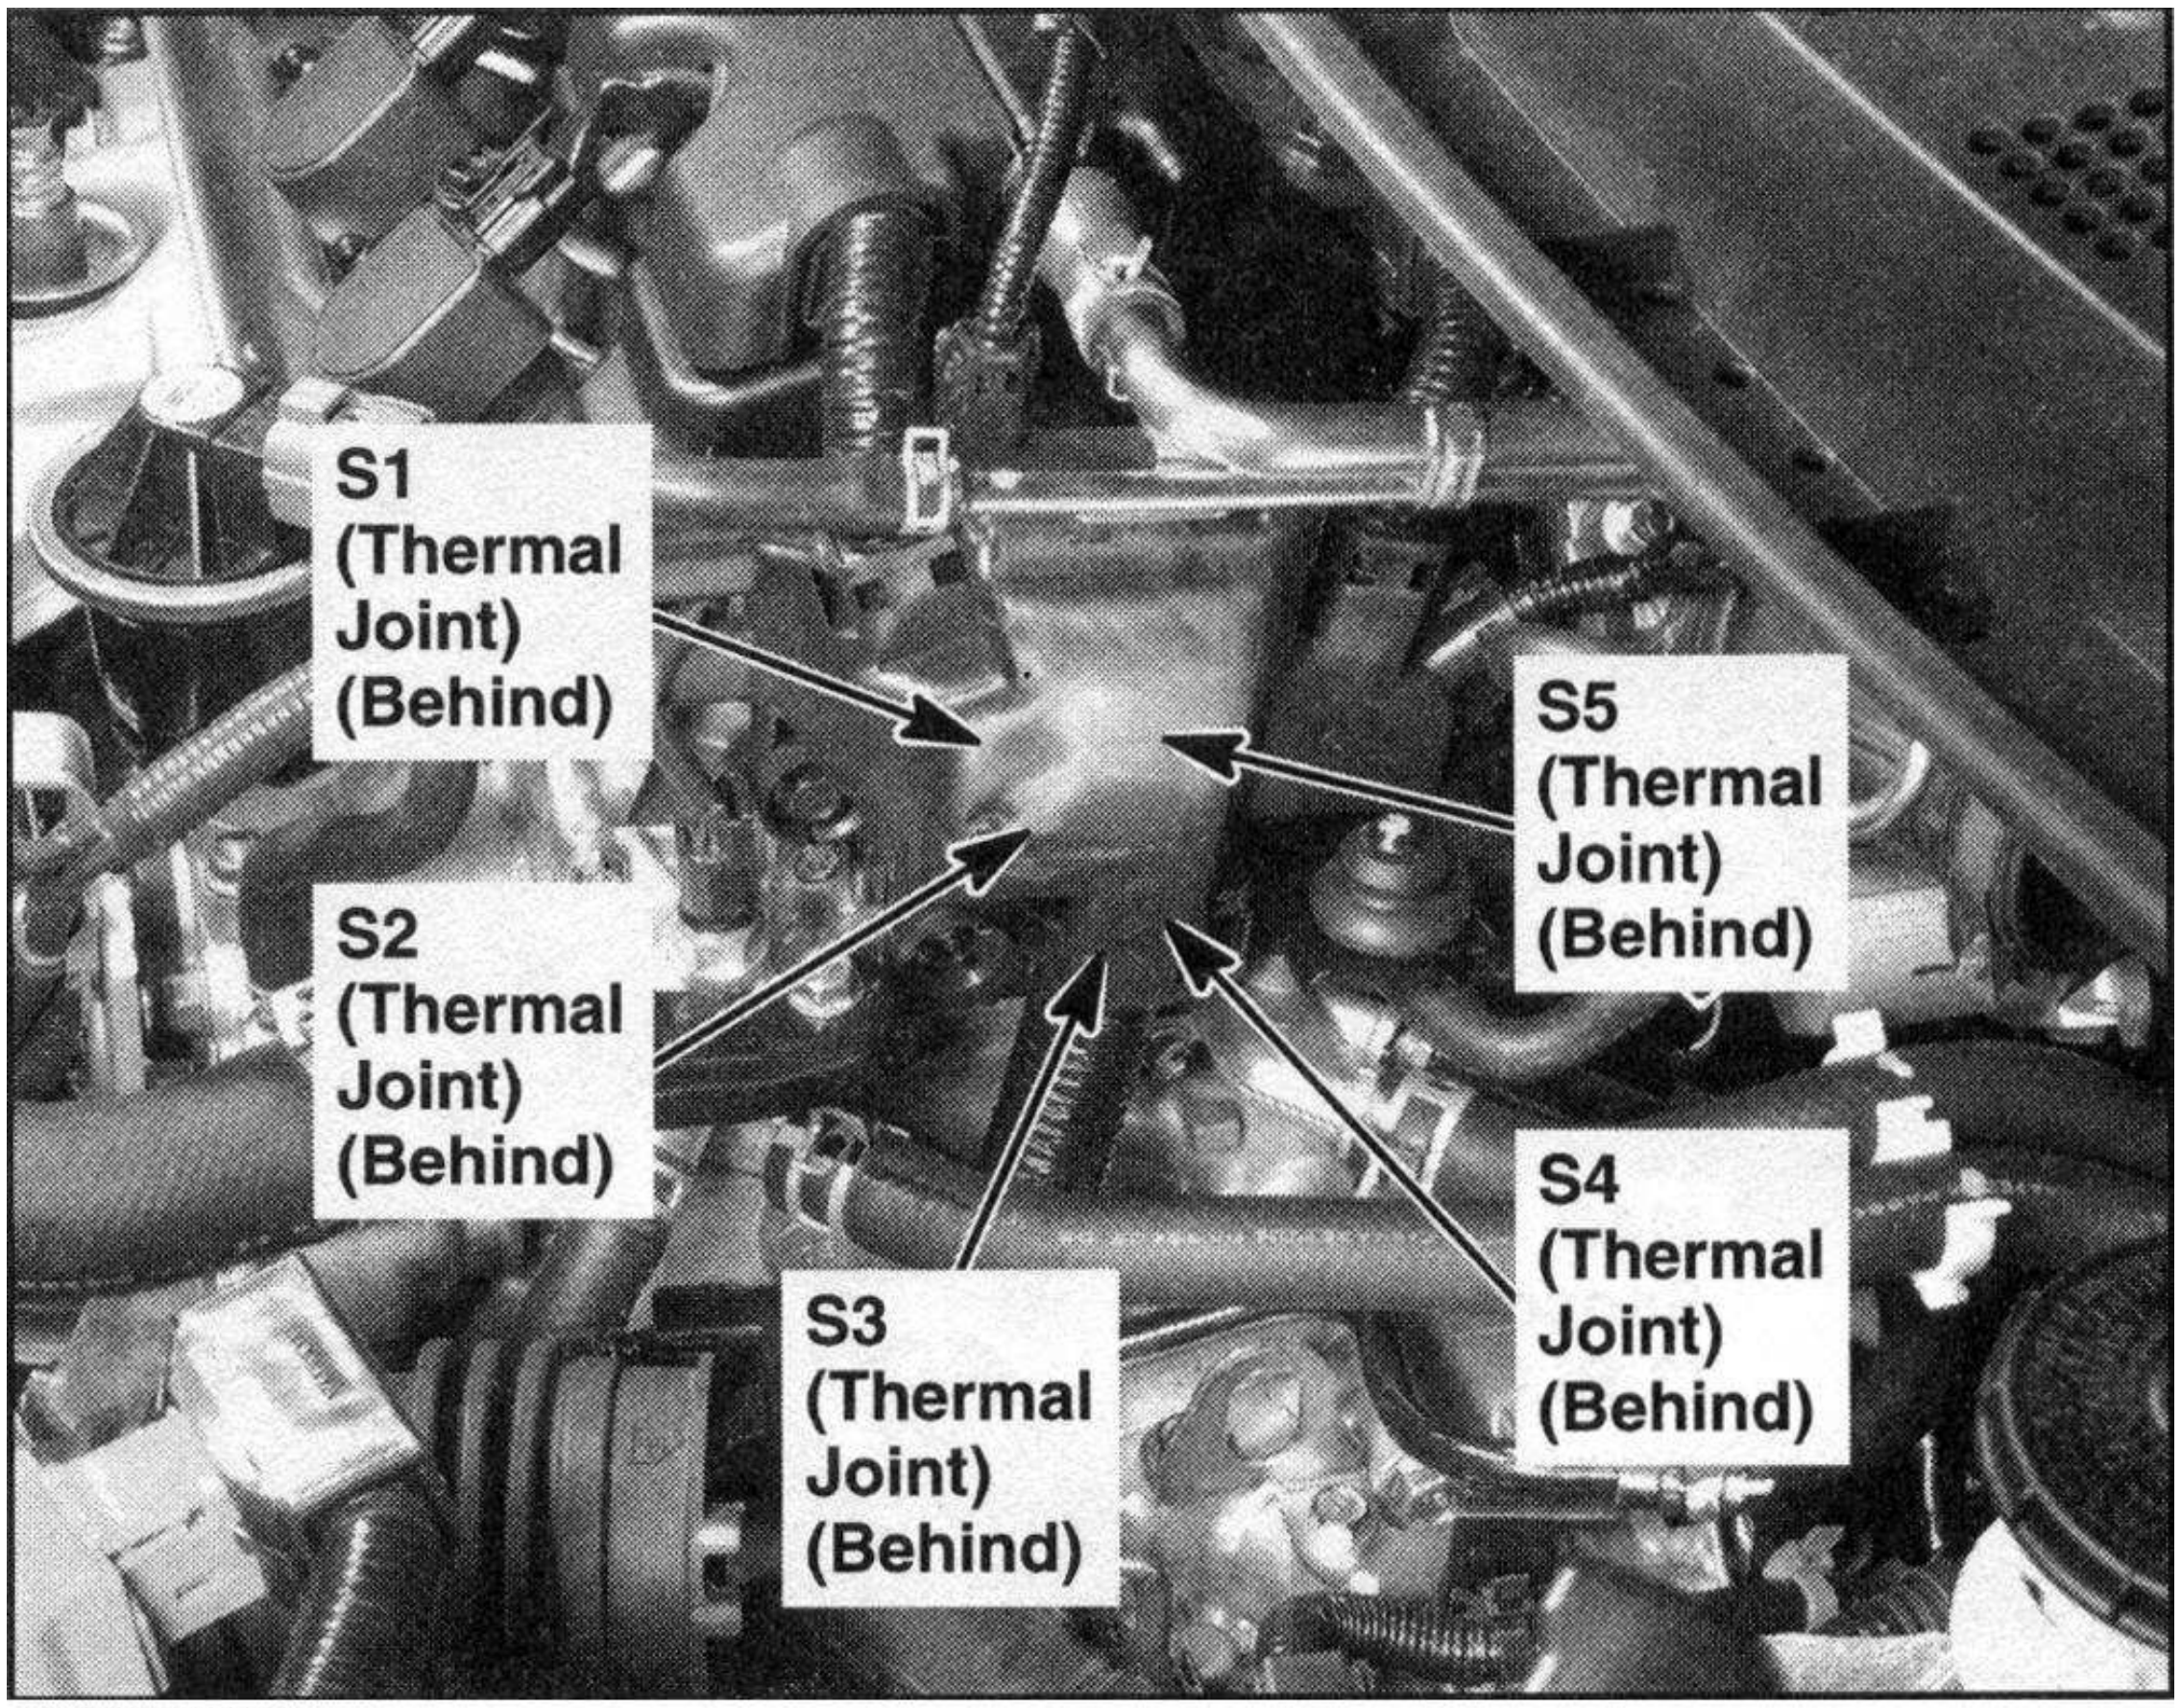
S1 (Thermal Joint) (Behind)
S5 (Thermal Joint) (Behind)
S2 (Thermal Joint) (Behind)
S4 (Thermal Joint) (Behind)
S3 (Thermal Joint) (Behind)

G00447696

Fig. 29: Rear Of Engine (Except Si)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

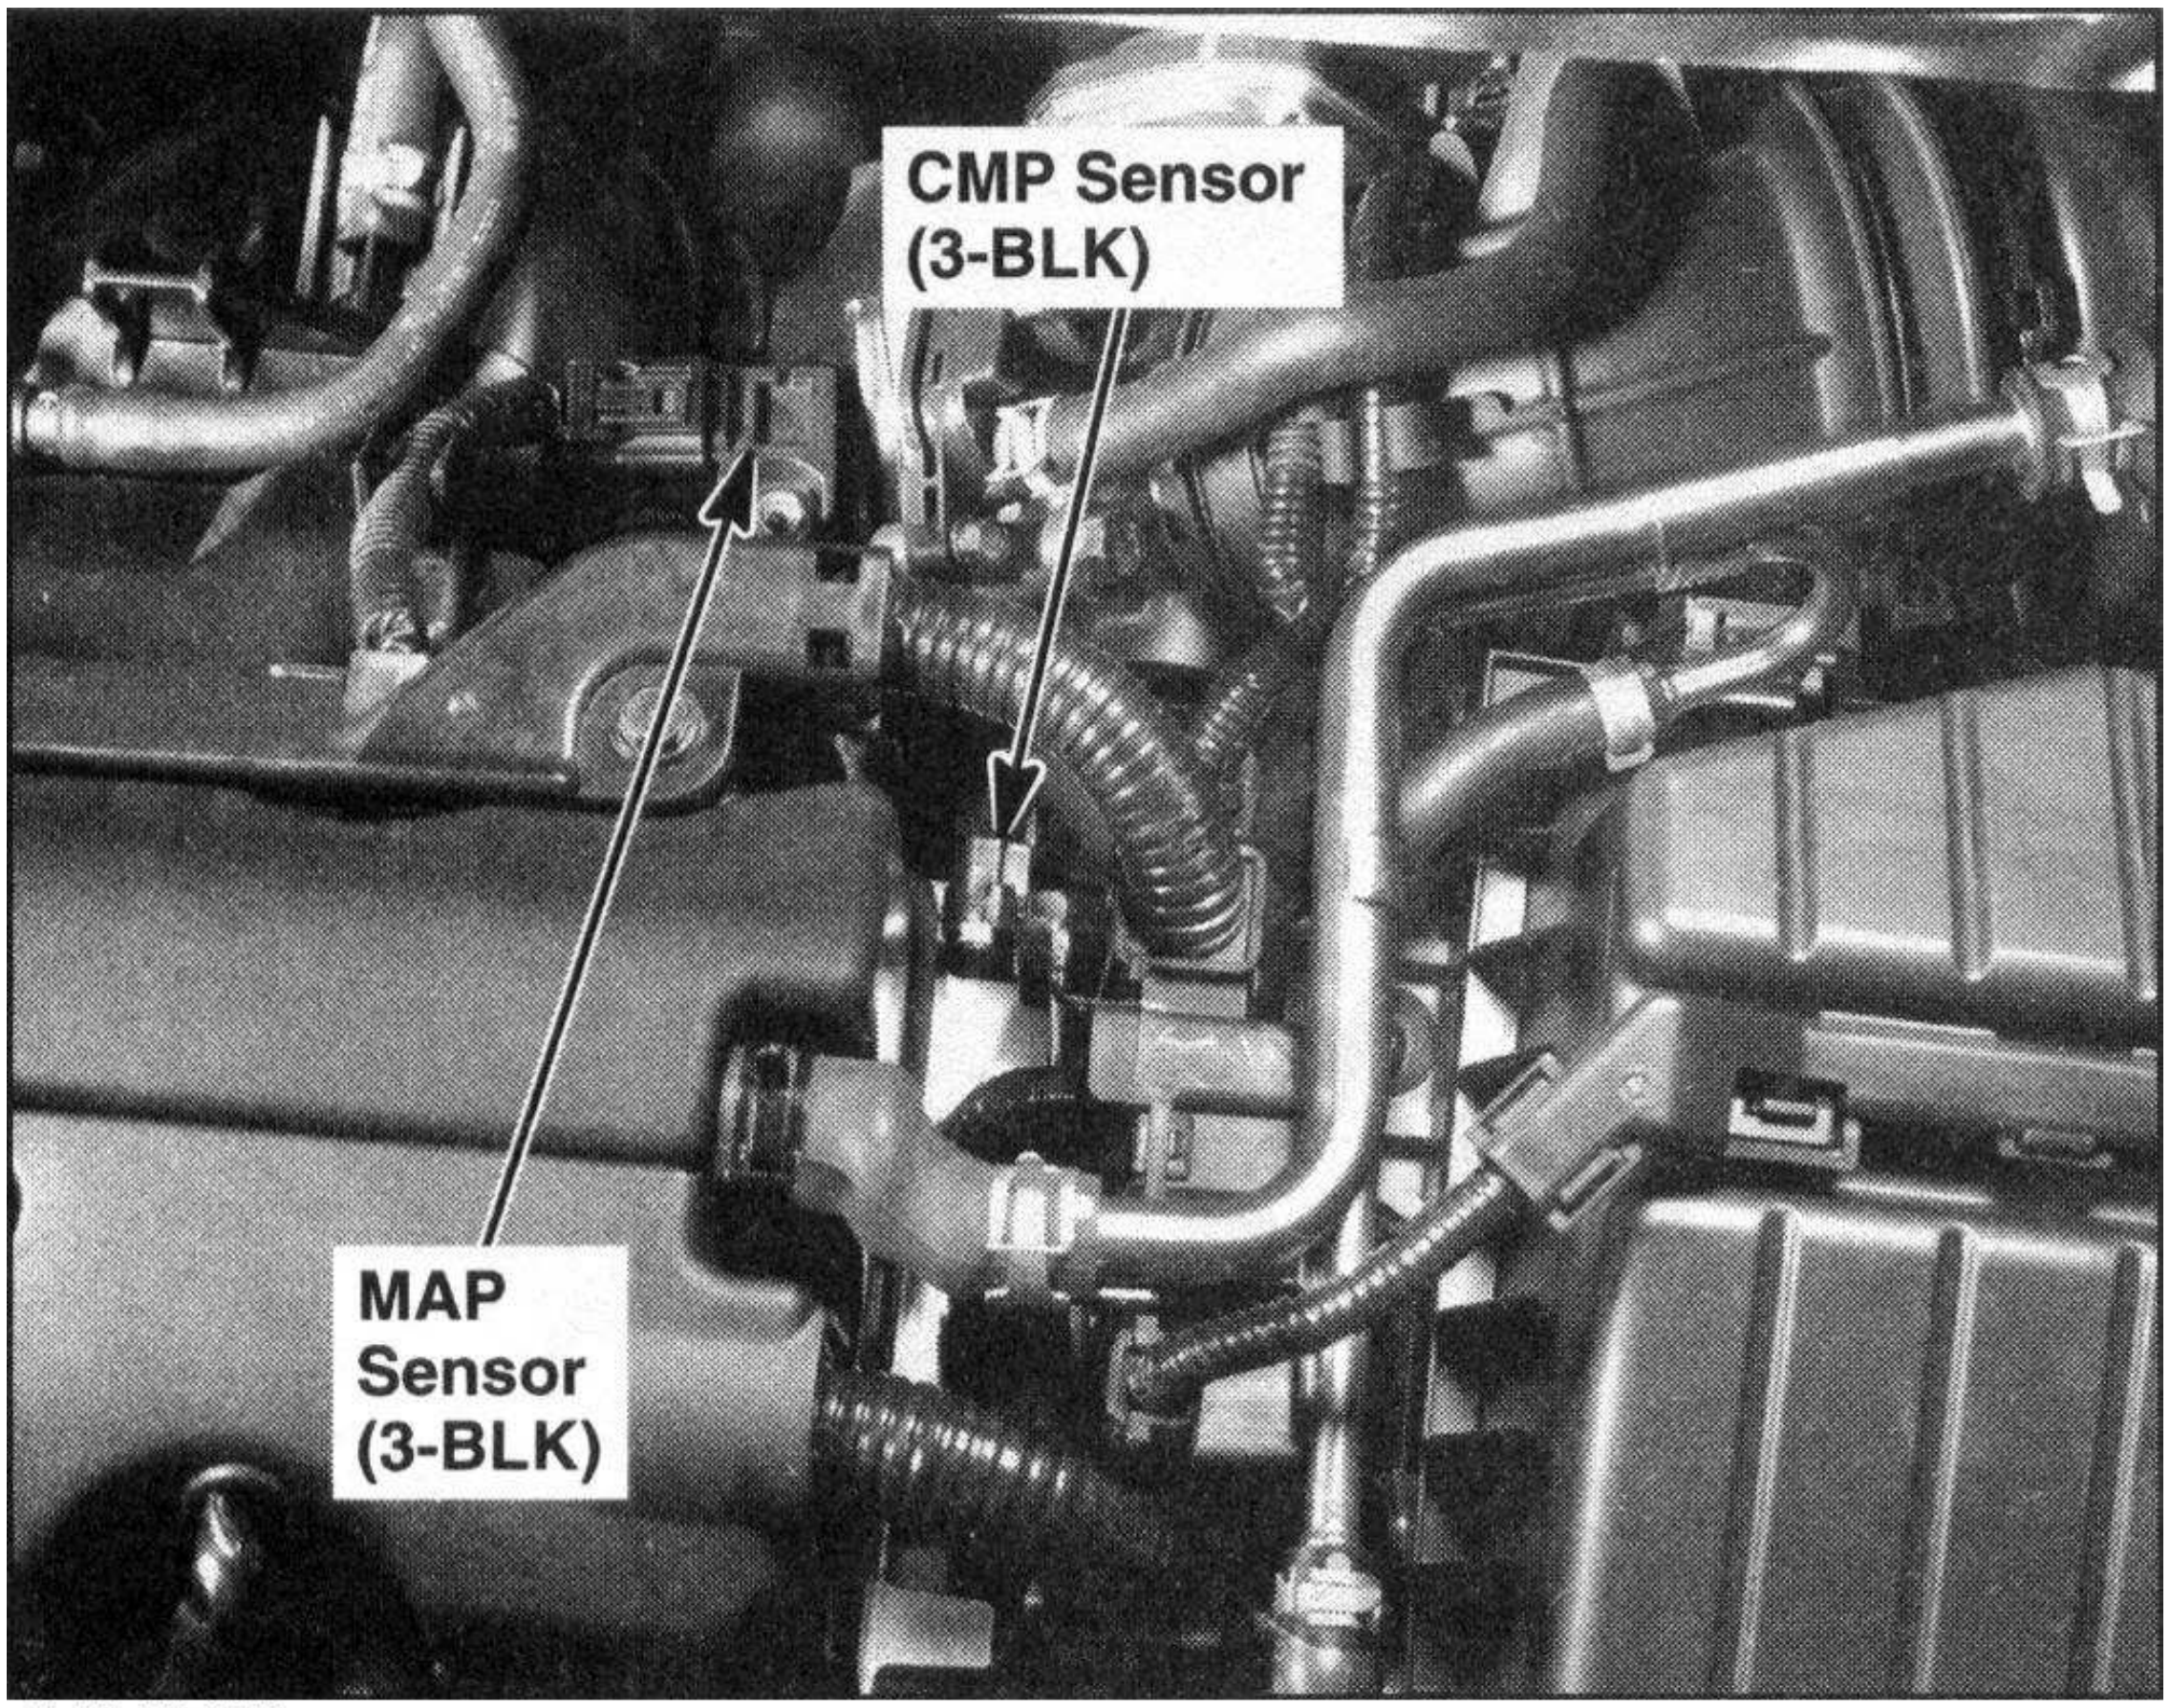
CMP Sensor
(3-BLK)
MAP
Sensor
(3-BLK)
G00447698

Fig. 30: Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

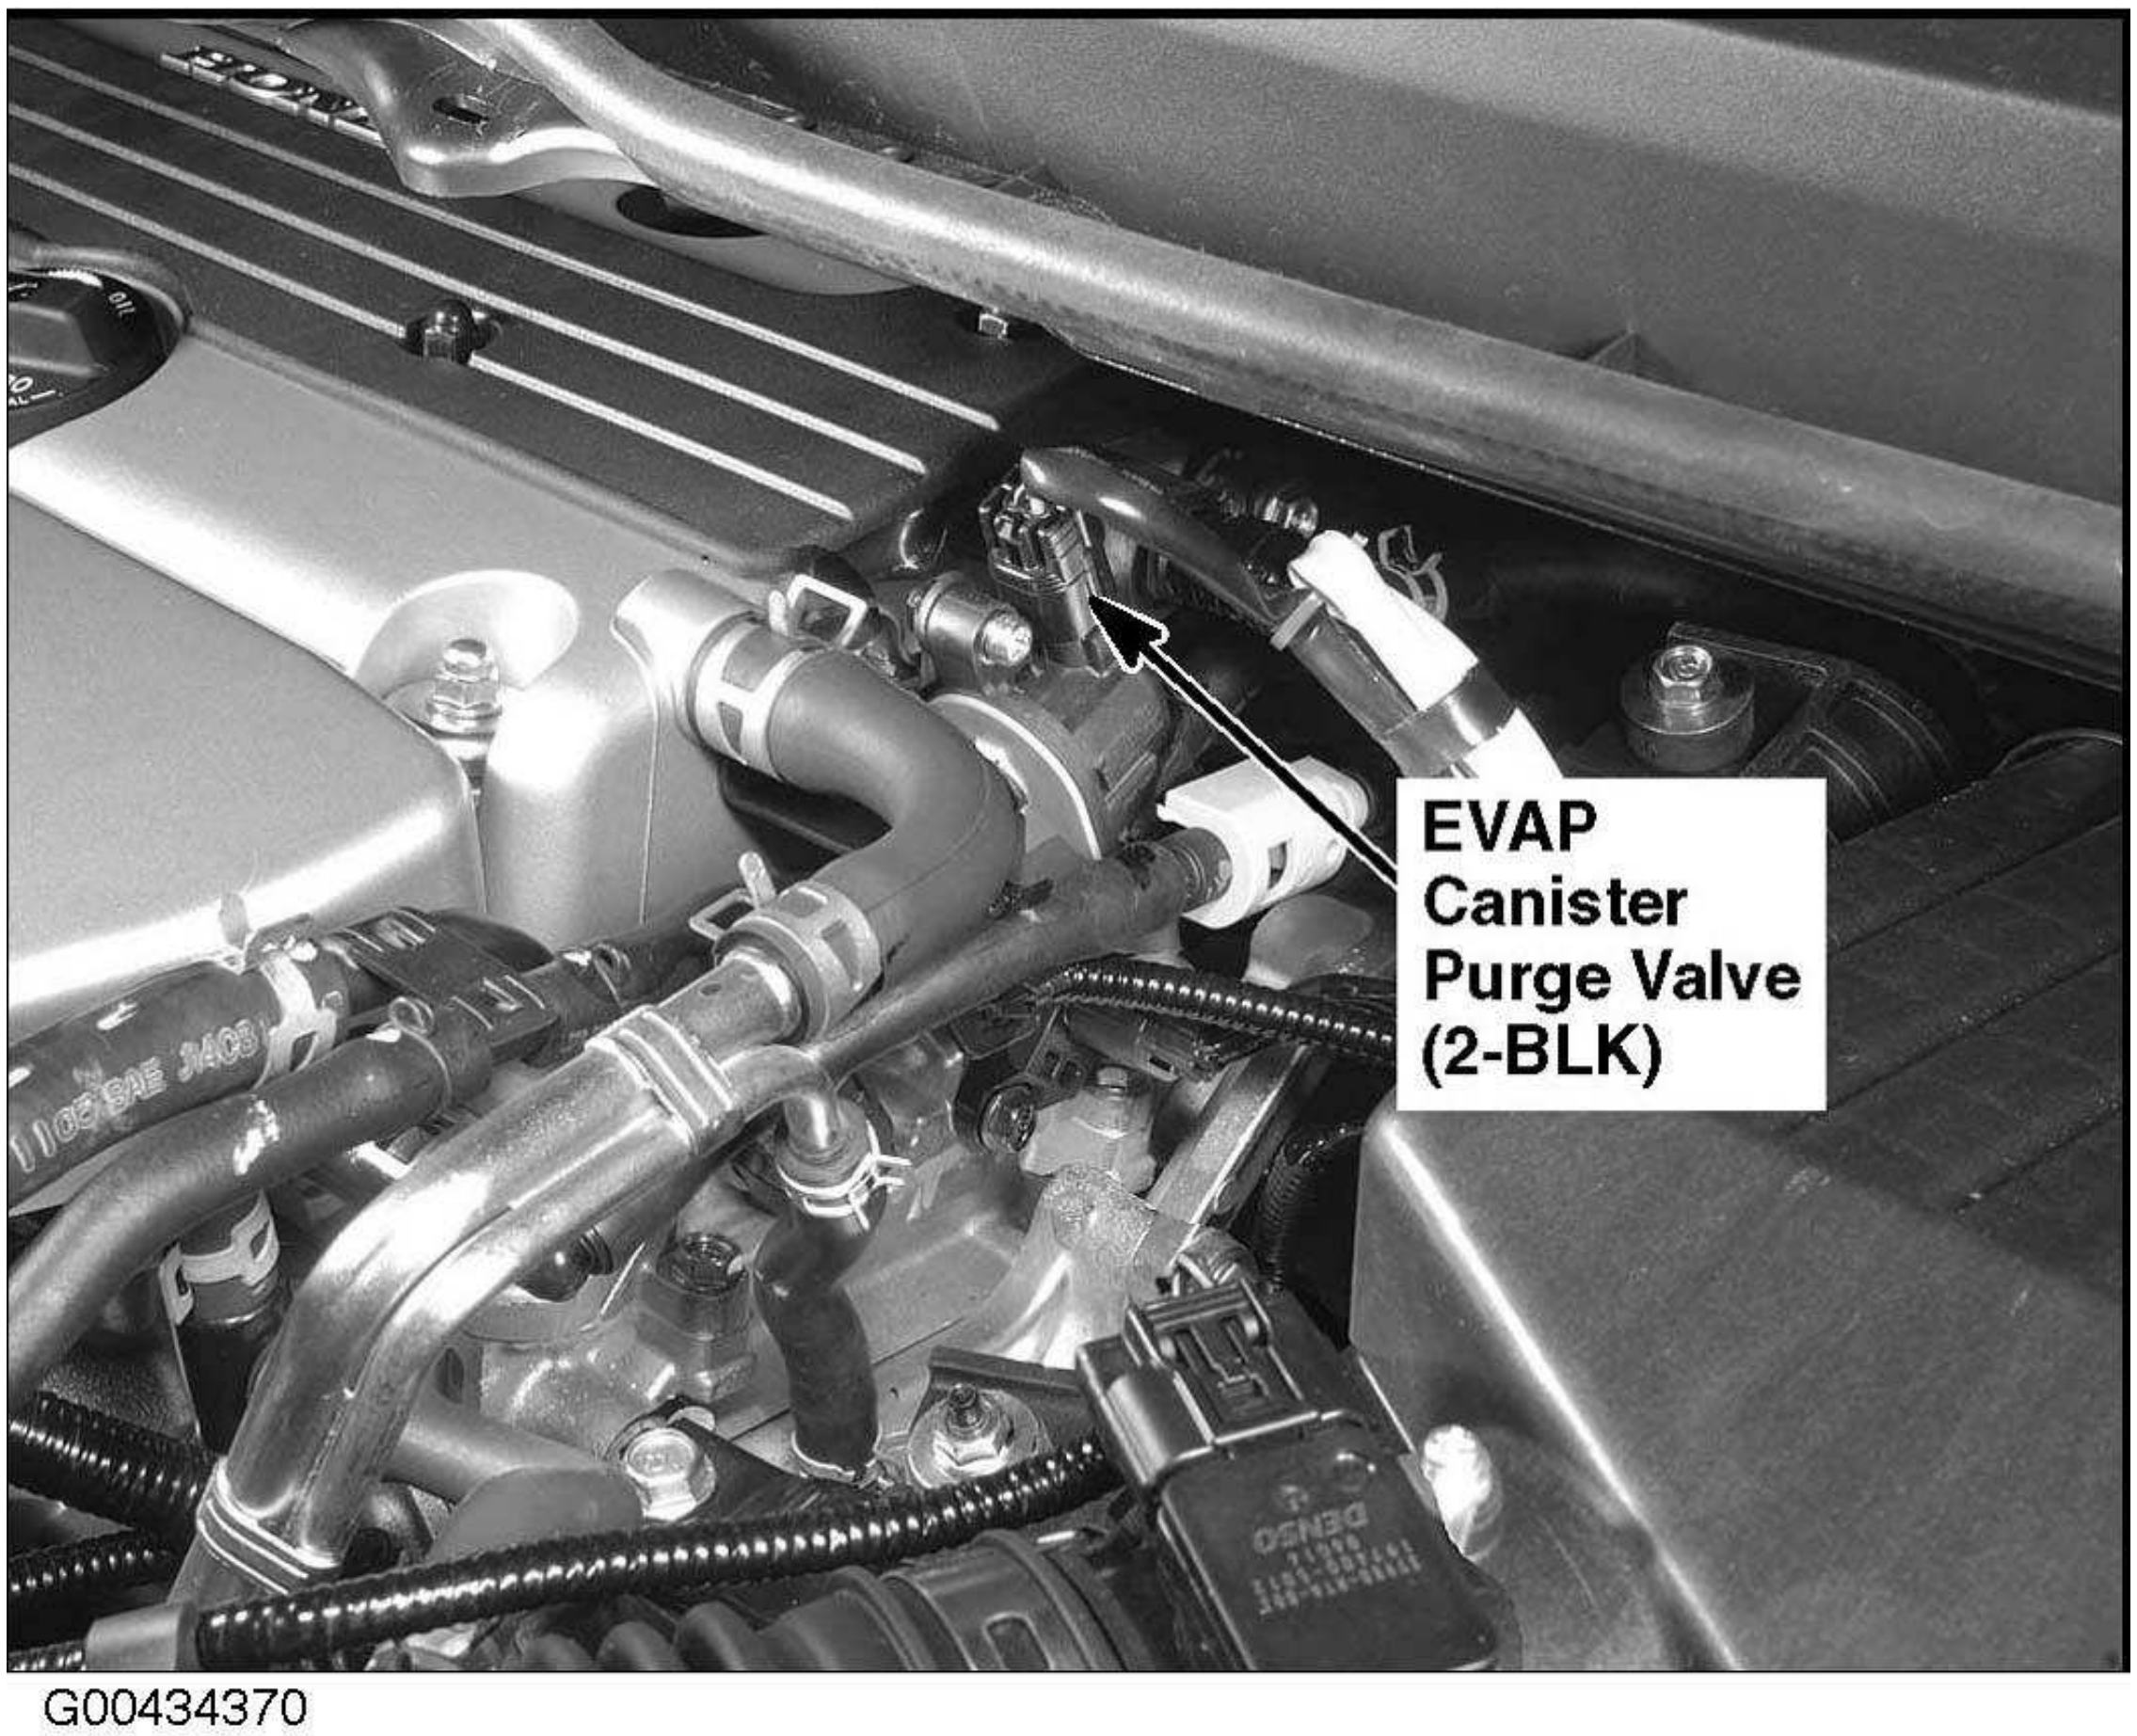
EVAP
Canister
Purge Valve
(2-BLK)
G00434370

Fig. 31: Right Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

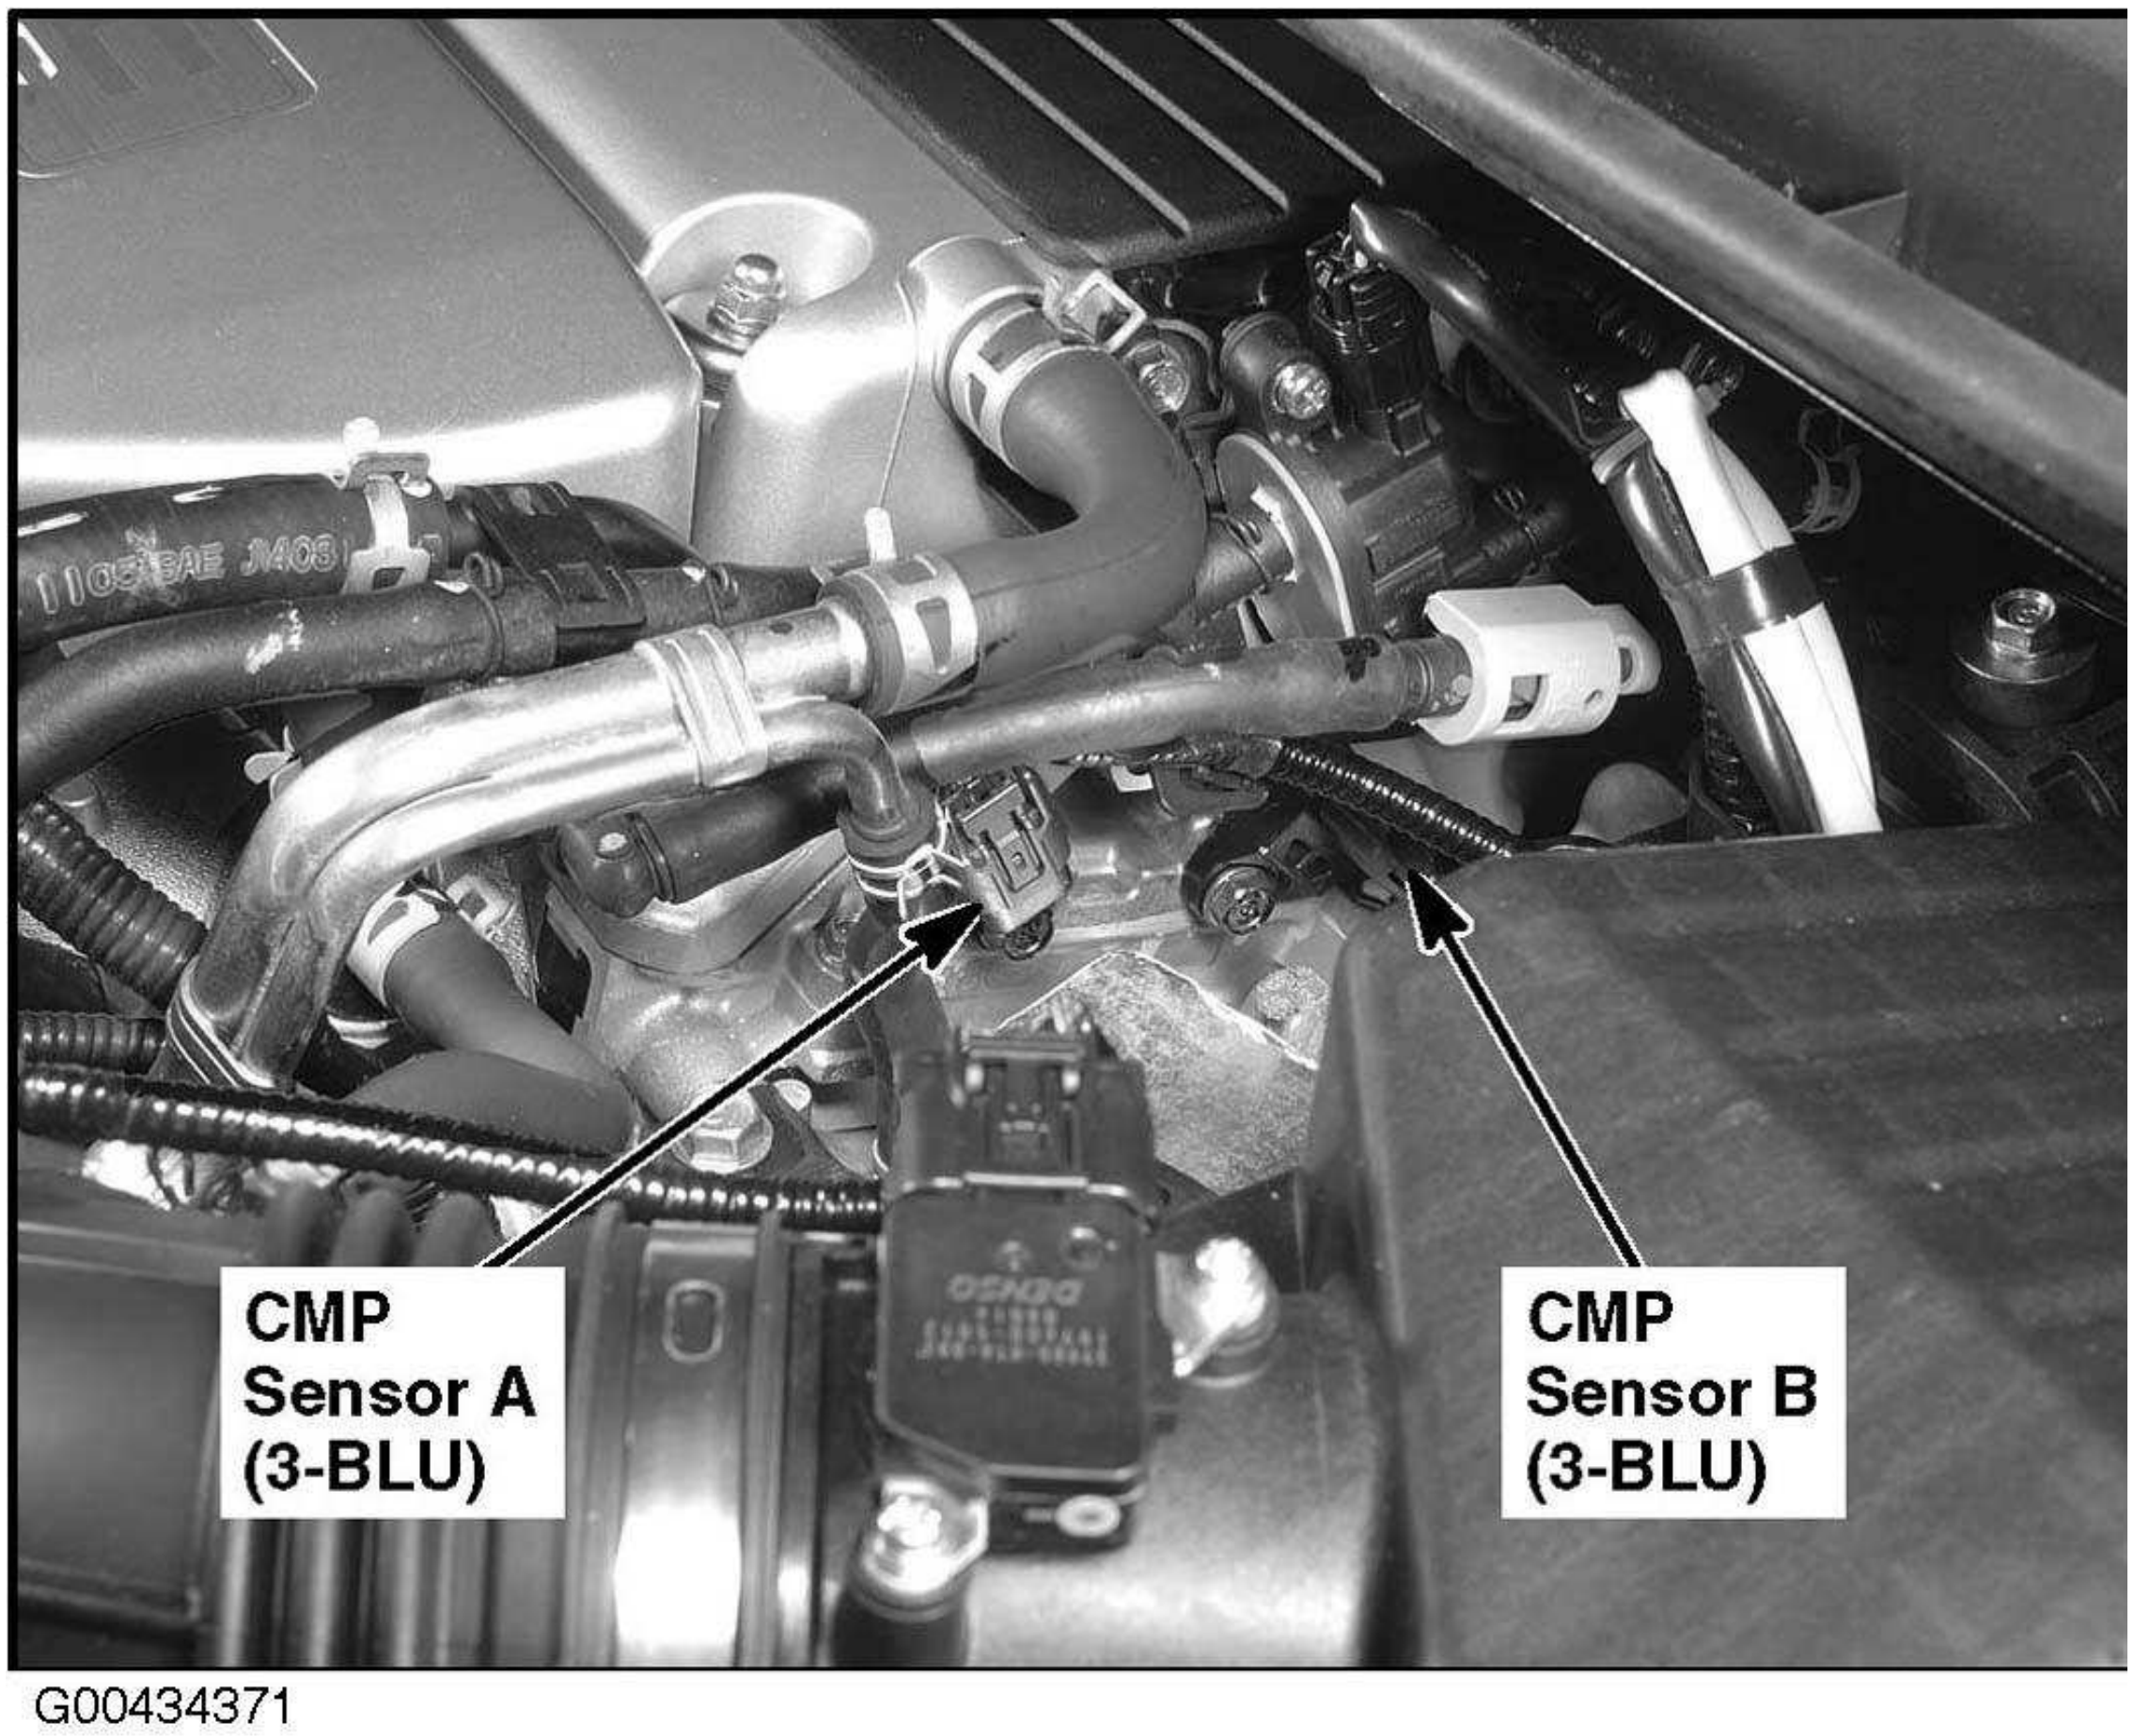
CMP
Sensor A
(3-BLU)
CMP
Sensor B
(3-BLU)
G00434371

Fig. 32: Right Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

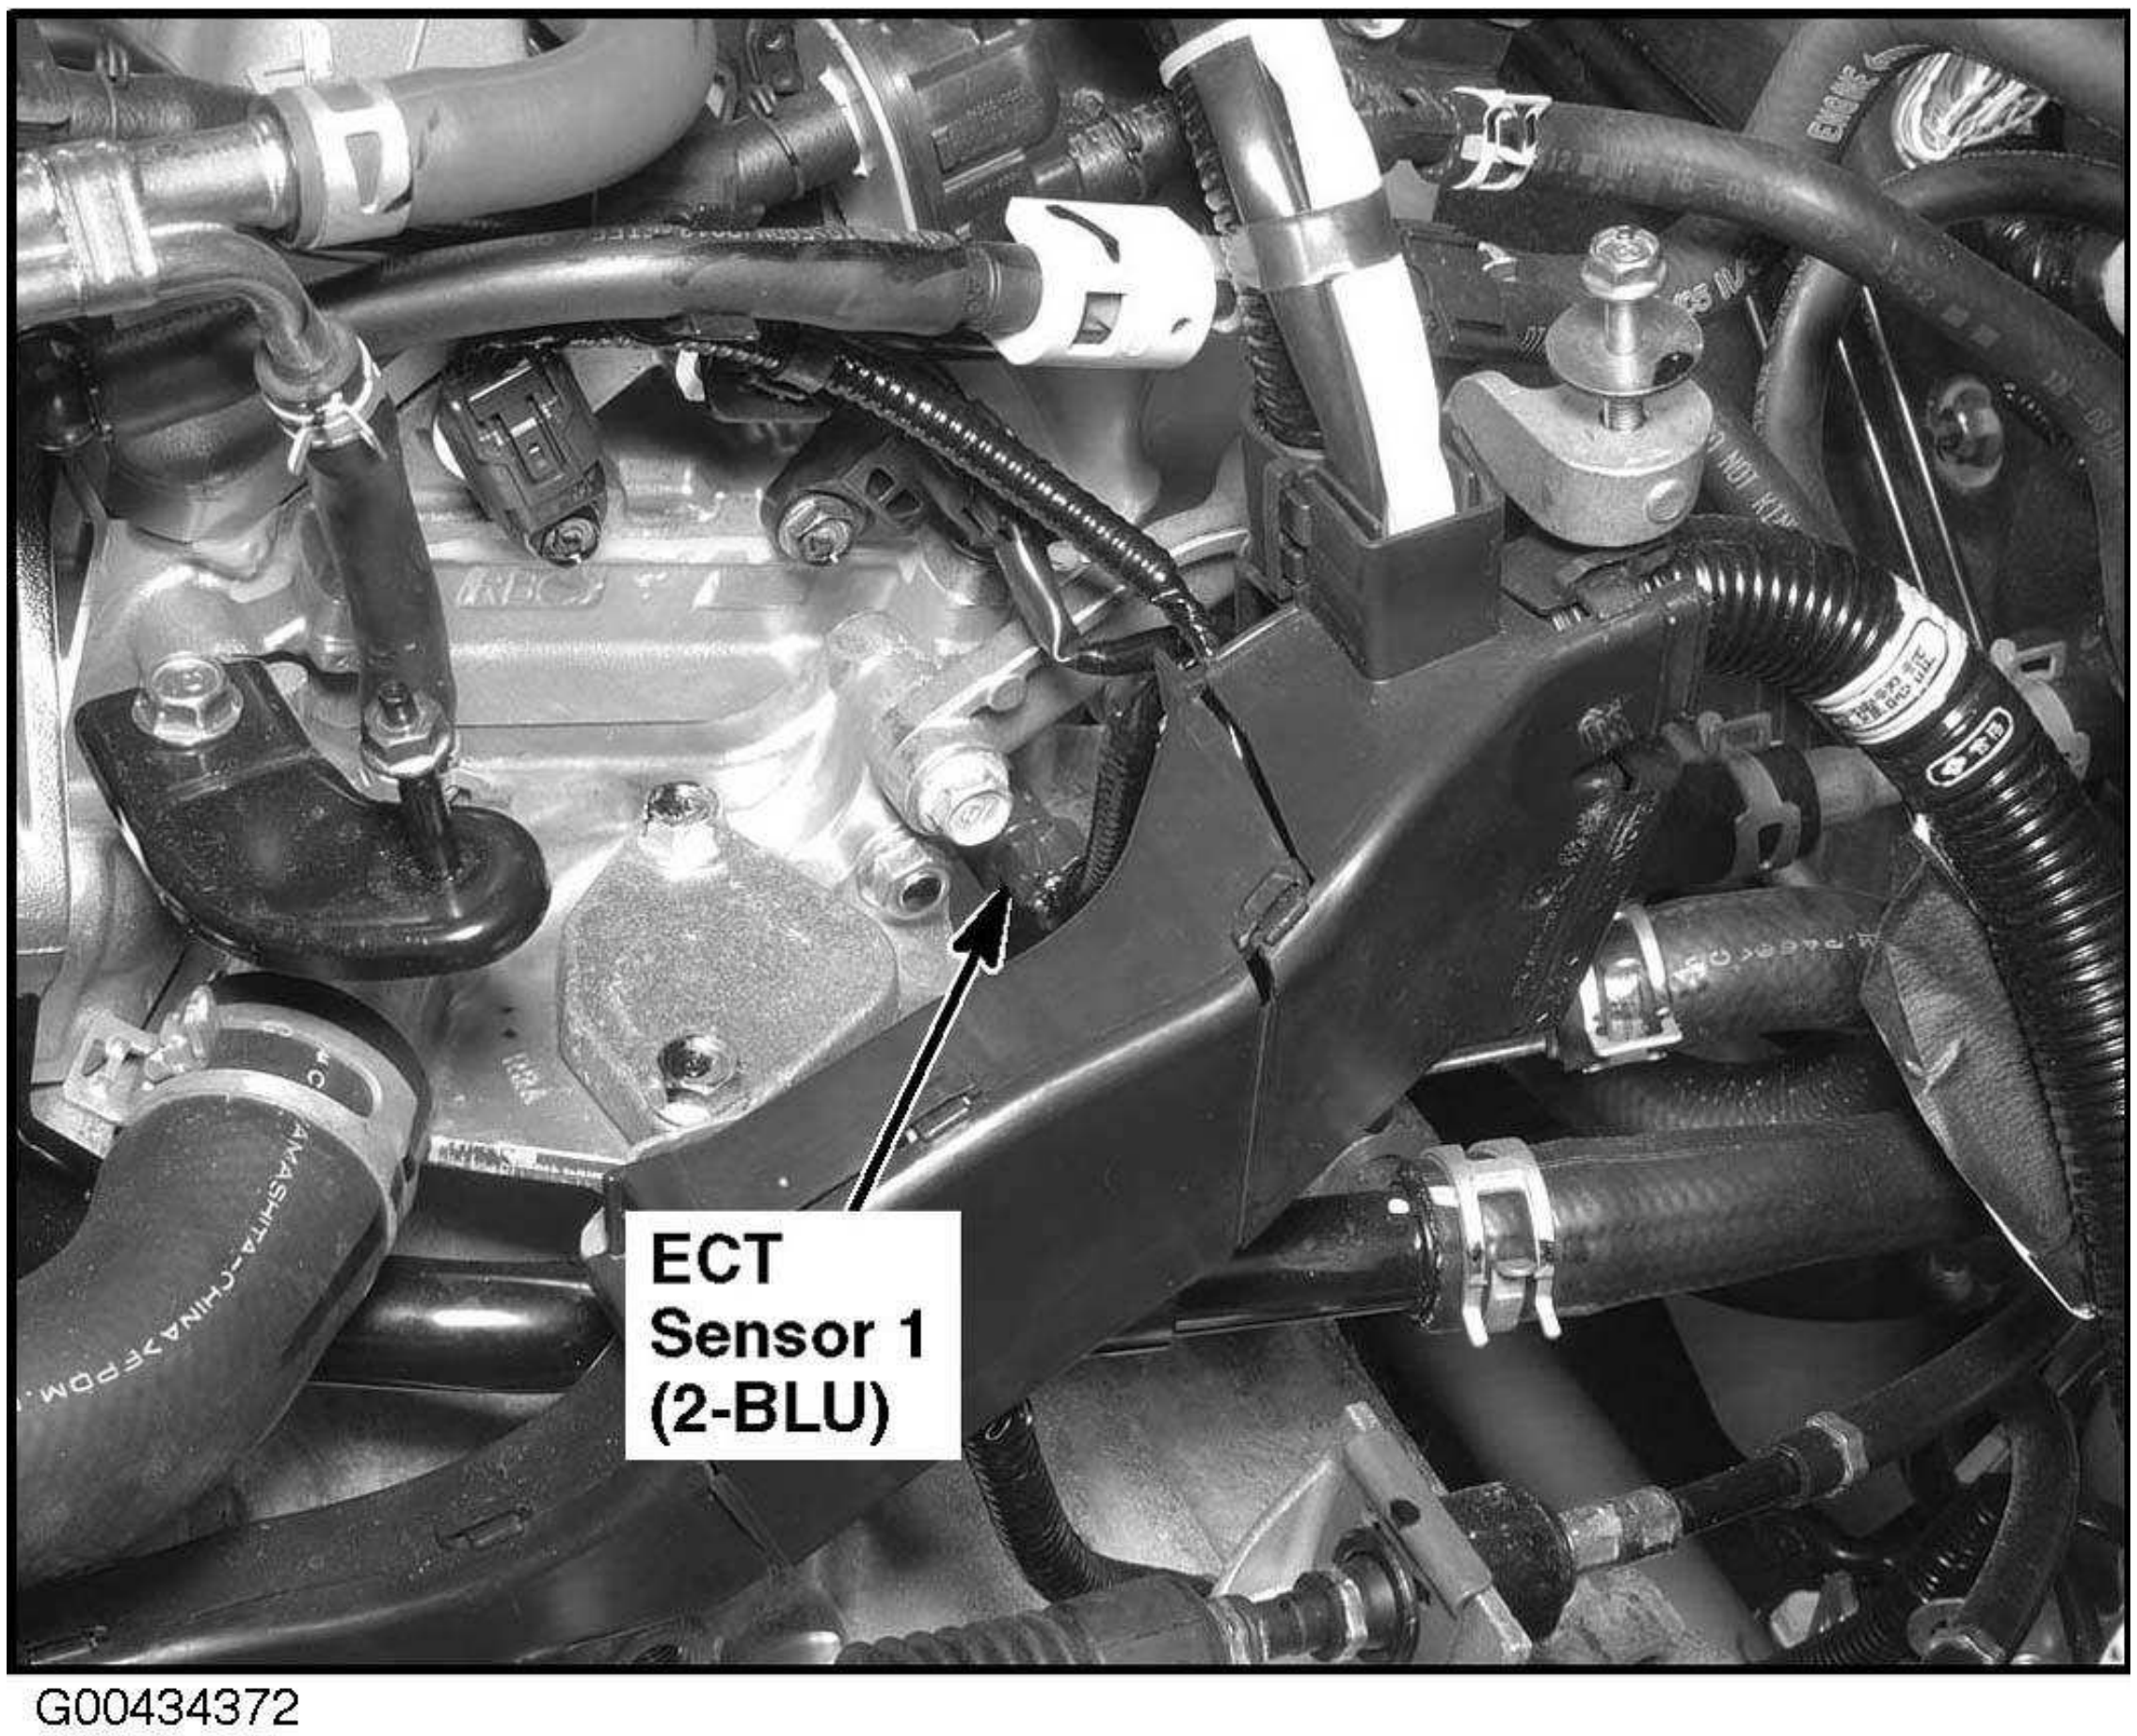
ECT
Sensor 1
(2-BLU)
G00434372

Fig. 33: Right Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

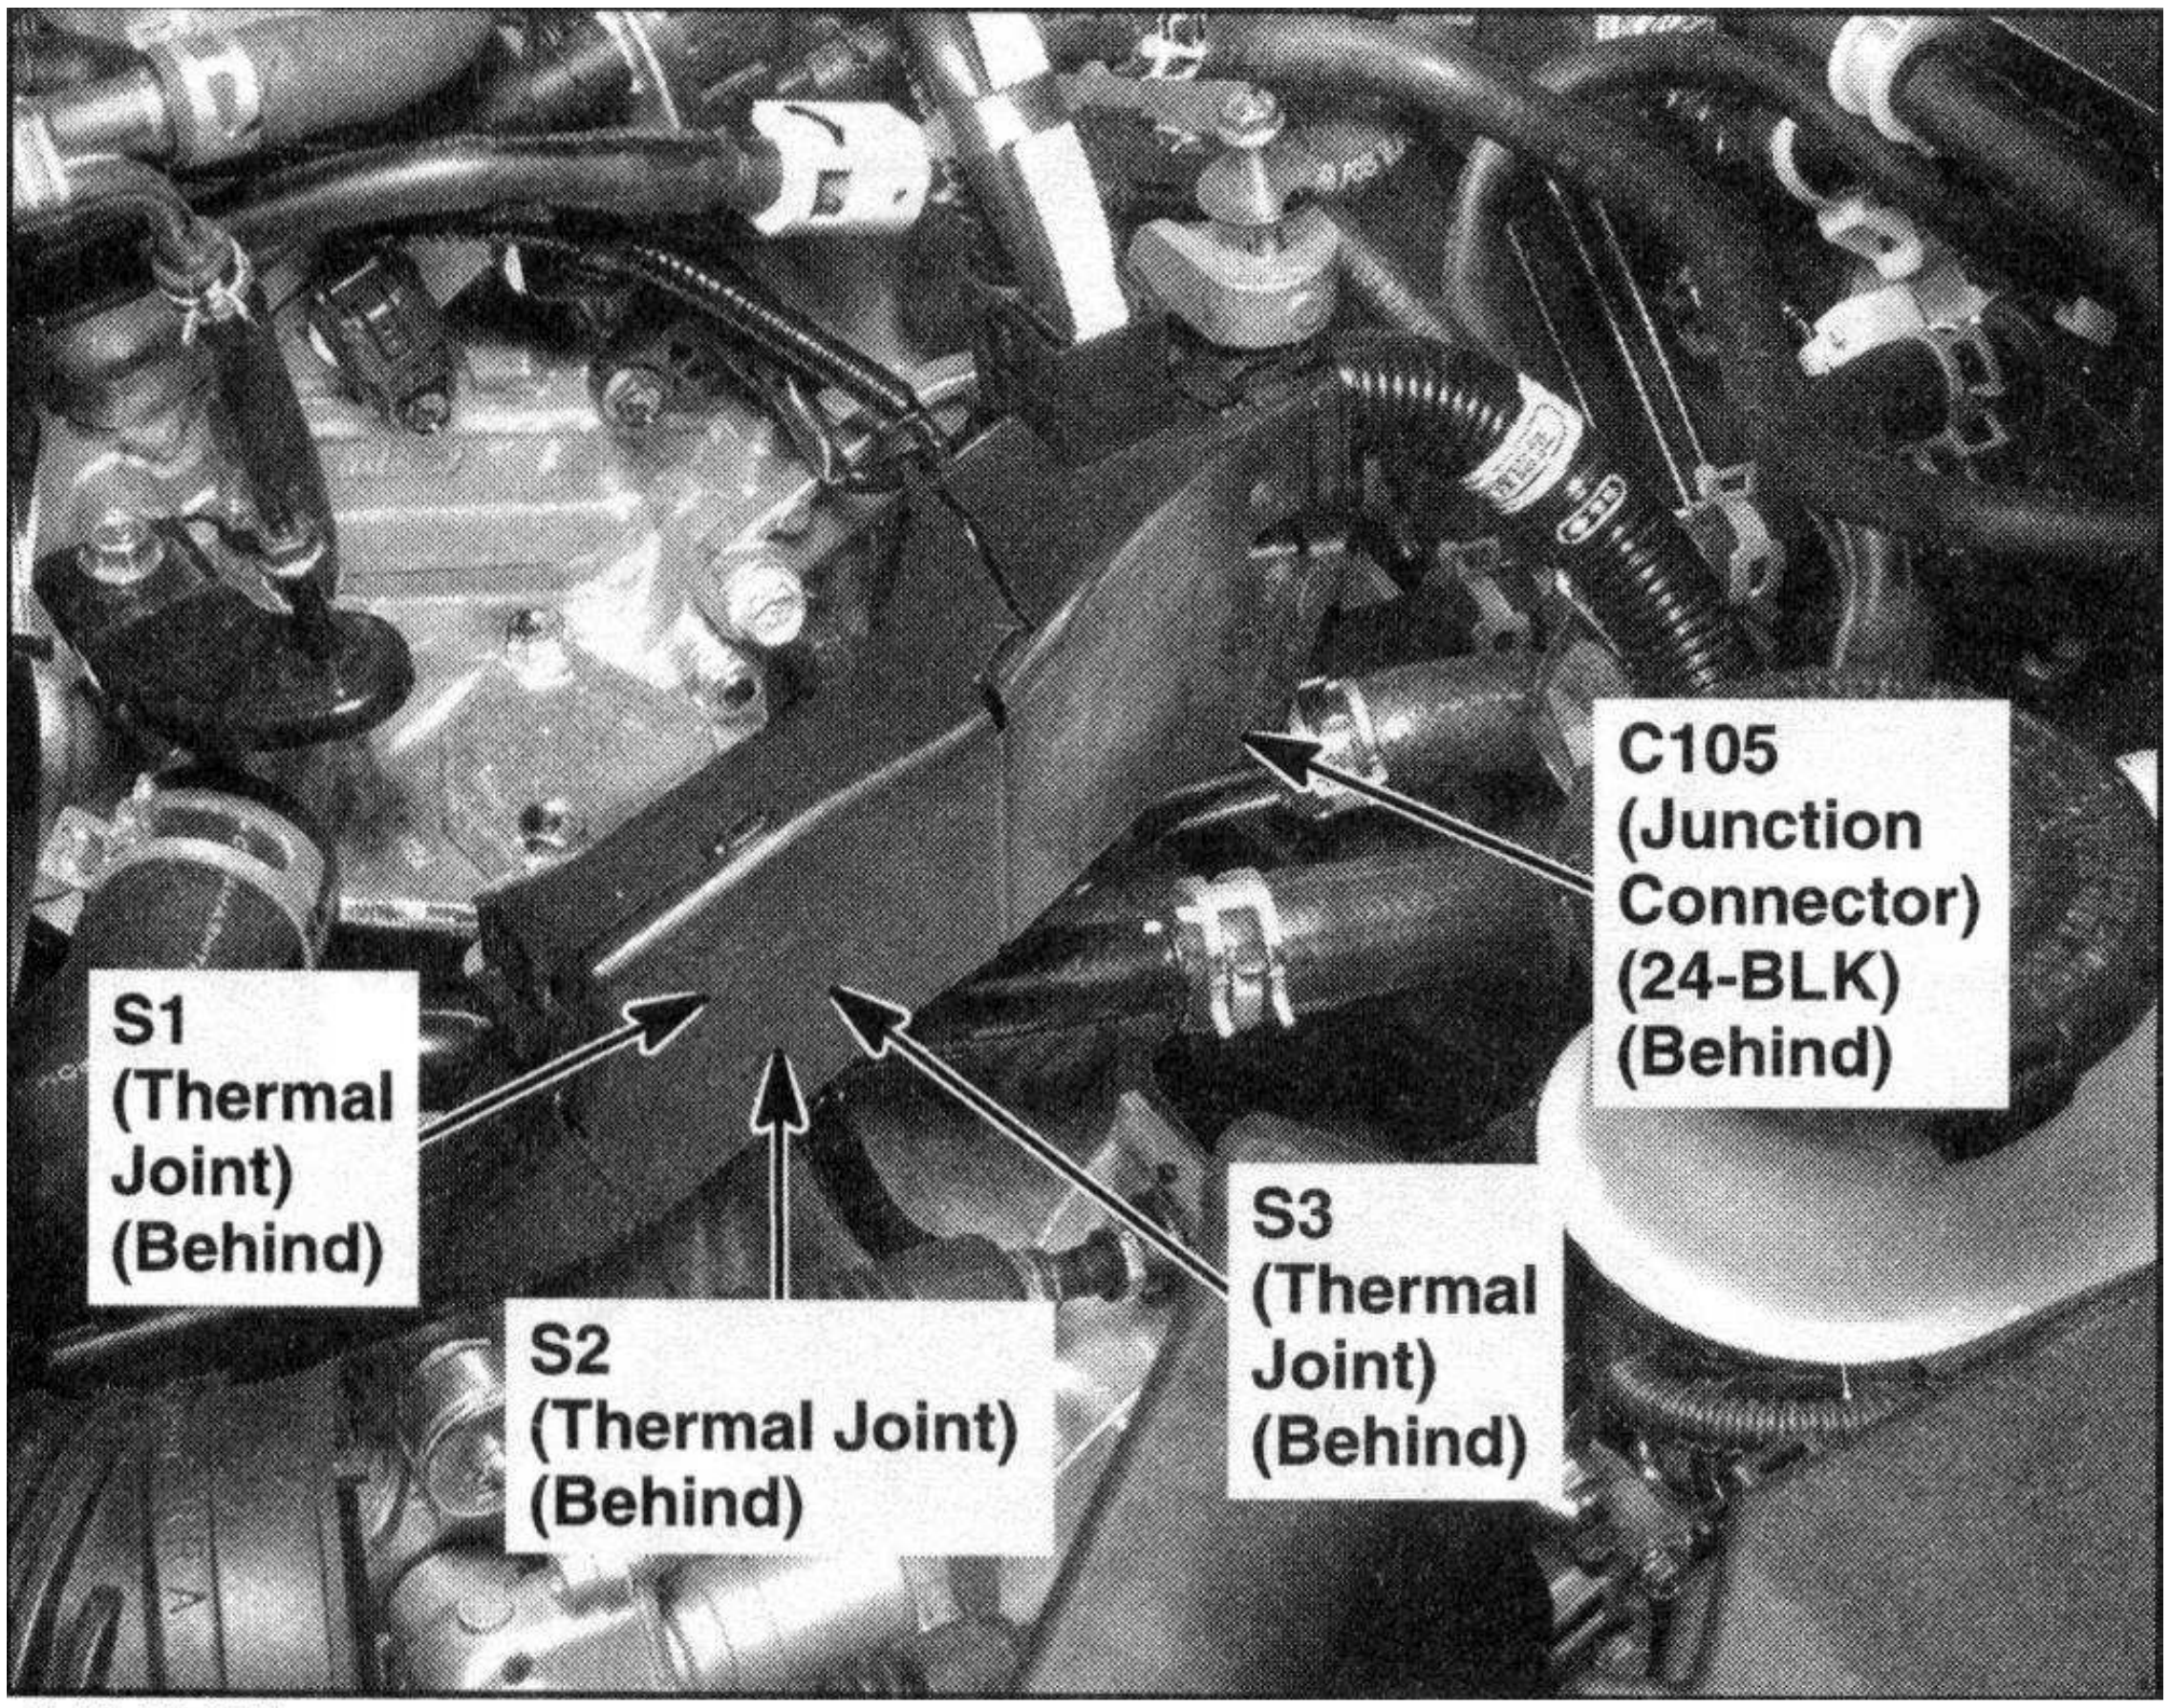
C105
(Junction
Connector)
(24-BLK)
(Behind)
S1
(Thermal
Joint)
(Behind)
S2
(Thermal Joint)
(Behind)
S3
(Thermal
Joint)
(Behind)
G00447699

Fig. 34: Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

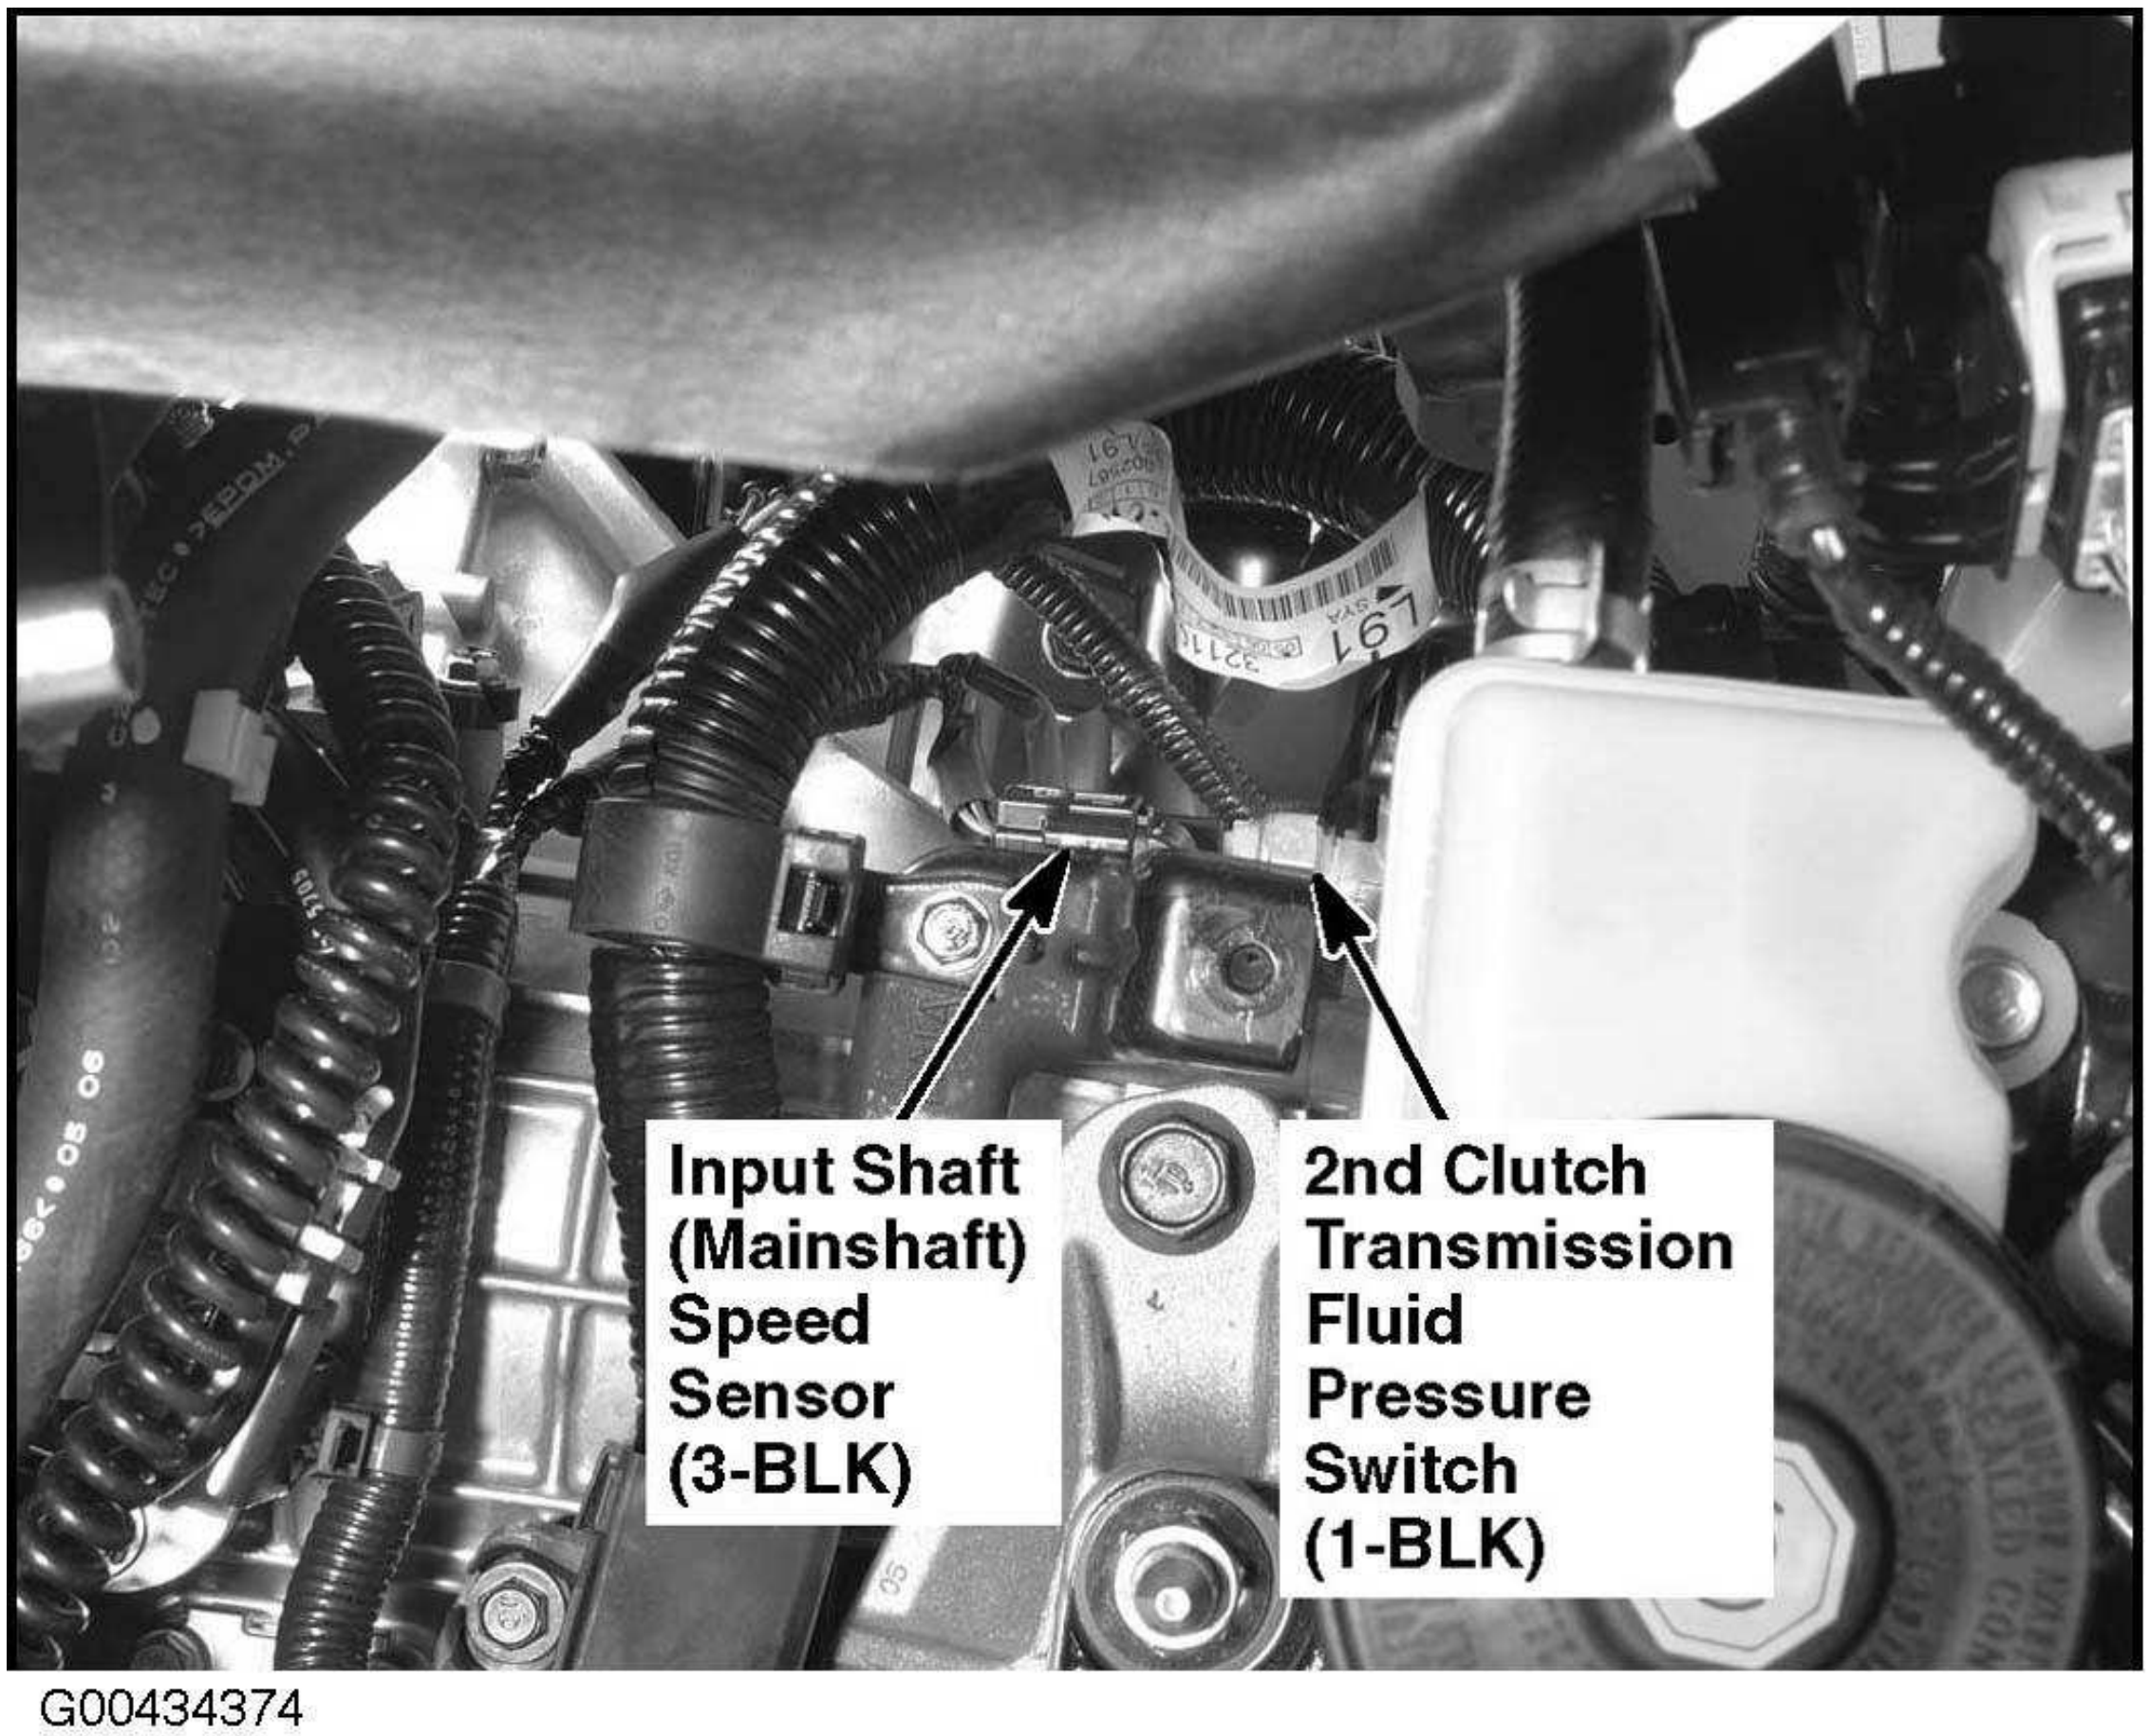
Input Shaft (Mainshaft) Speed Sensor (3-BLK)
2nd Clutch Transmission Fluid Pressure Switch (1-BLK)
G00434374

Fig. 35: Transmission Housing (A/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

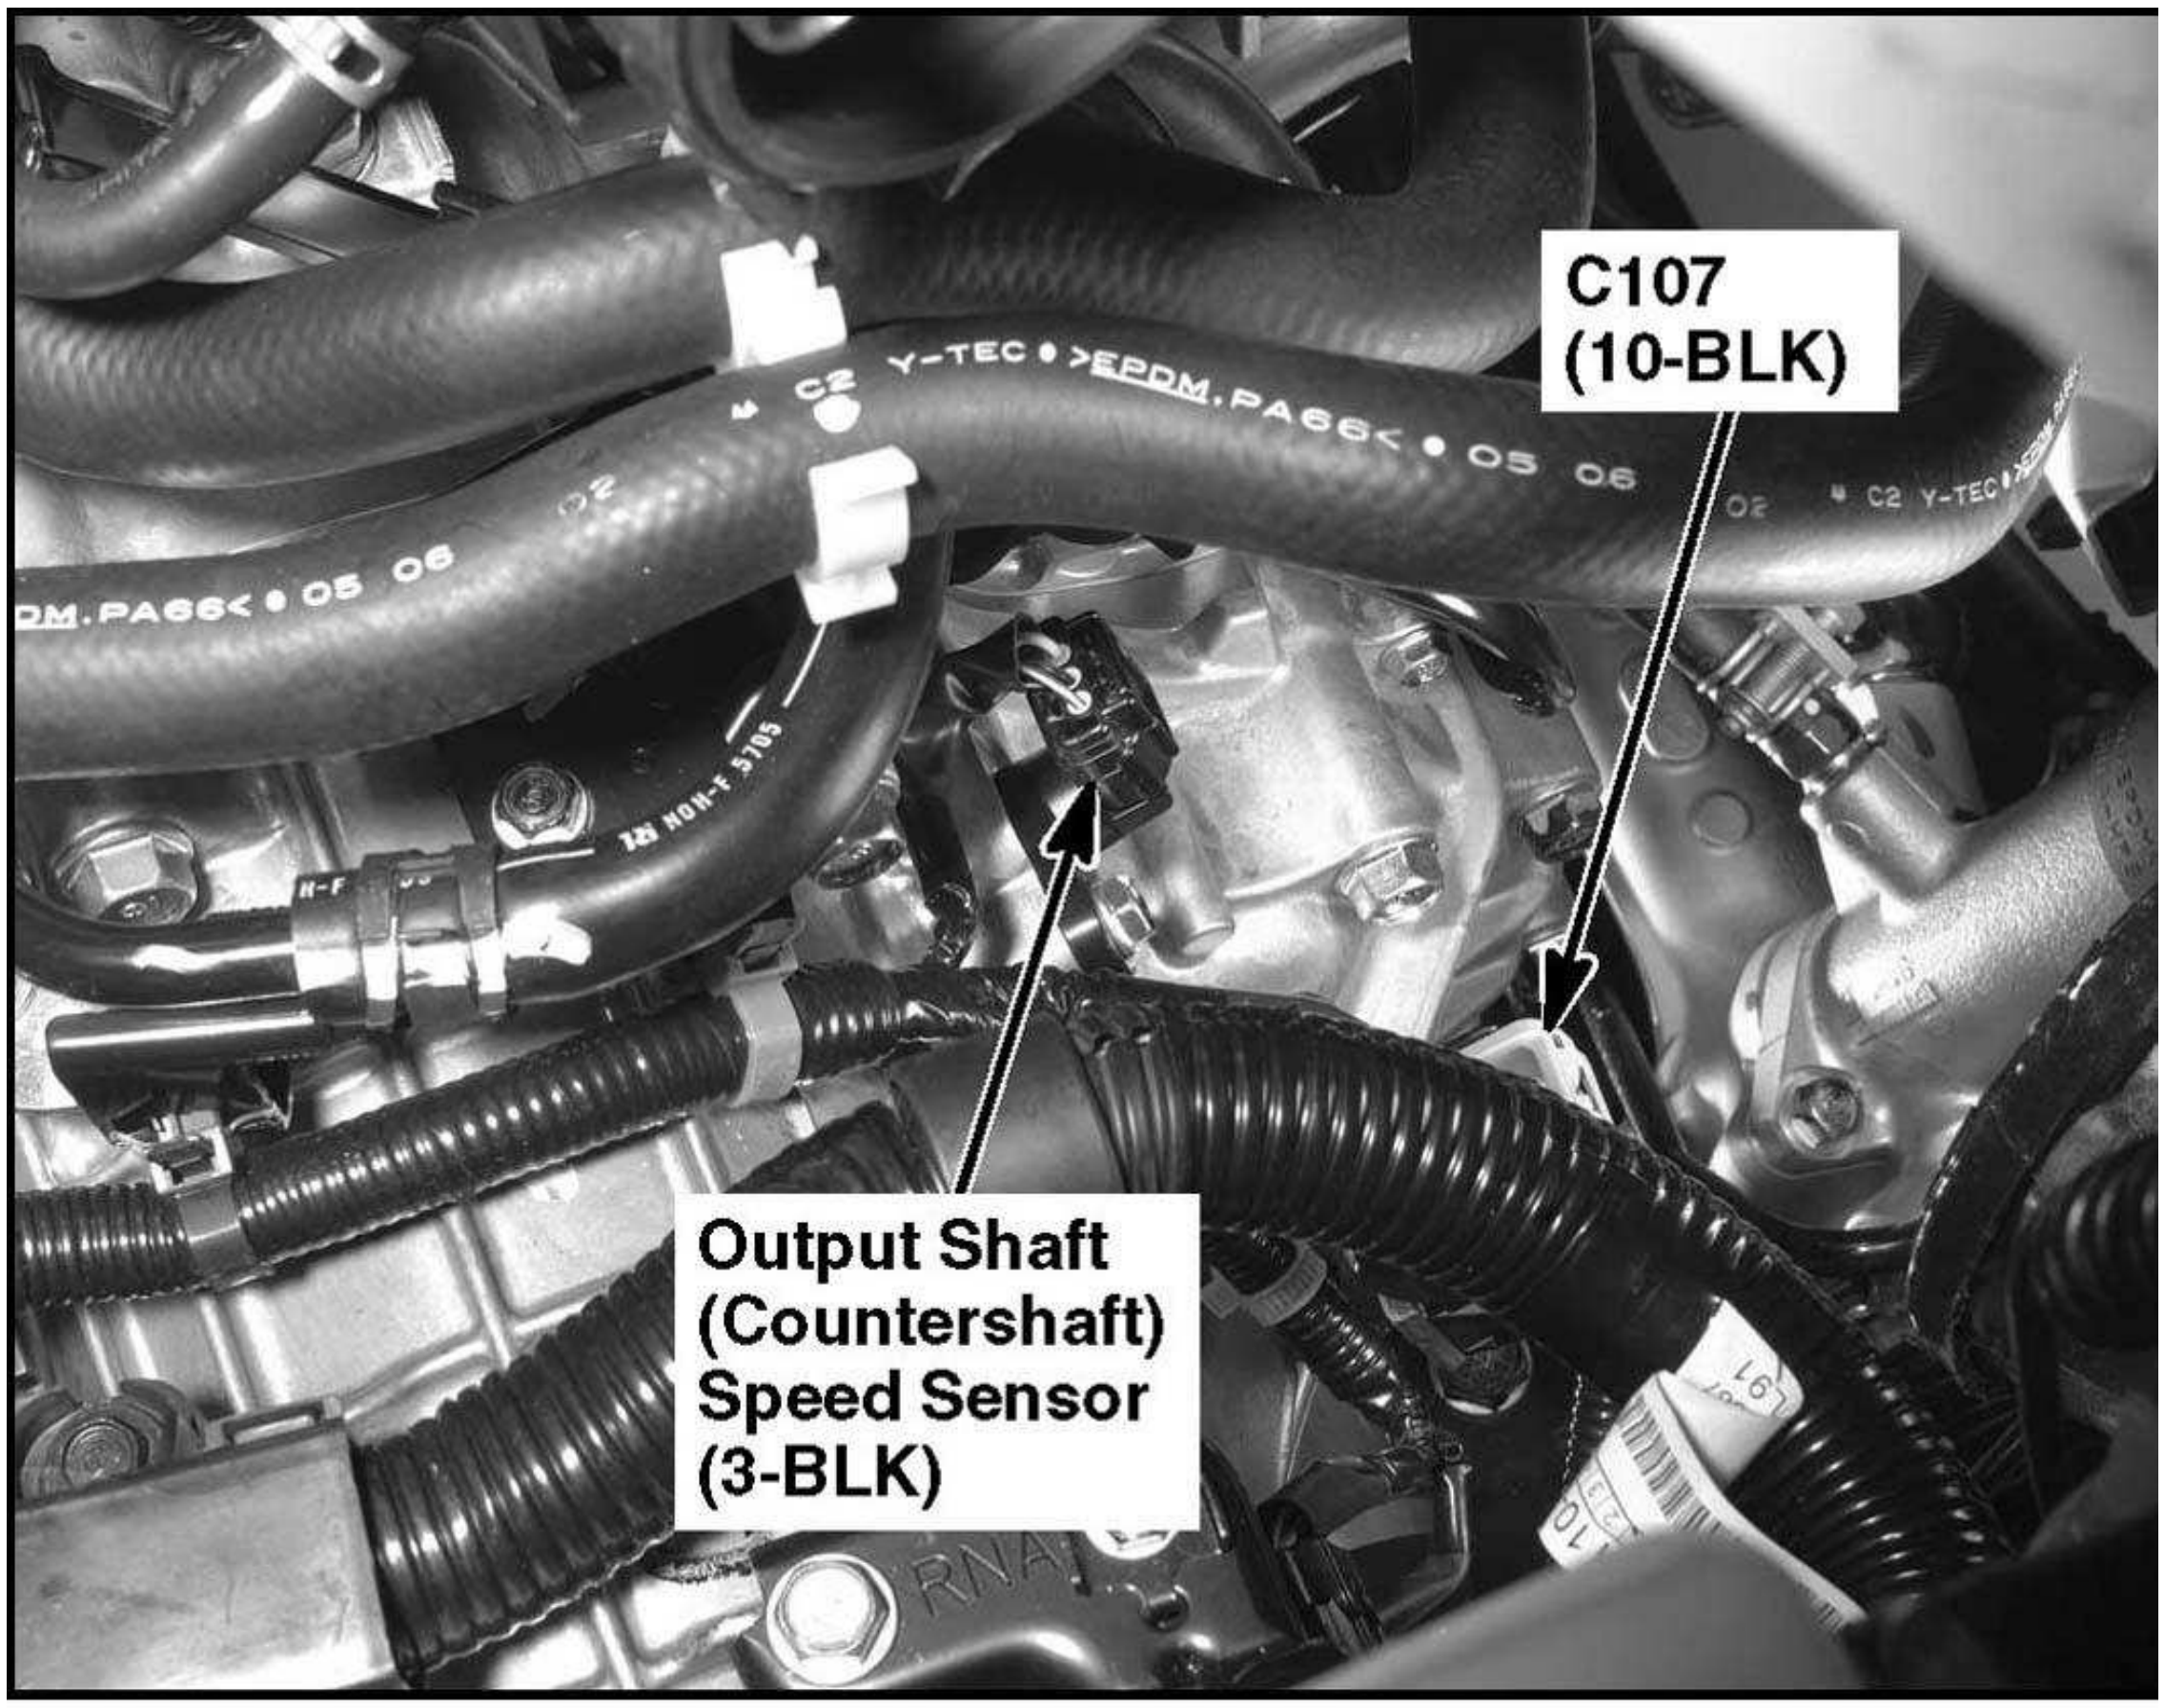
C107
(10-BLK)
Output Shaft
(Countershaft)
Speed Sensor
(3-BLK)
G00434375

Fig. 36: Transmission Housing (A/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

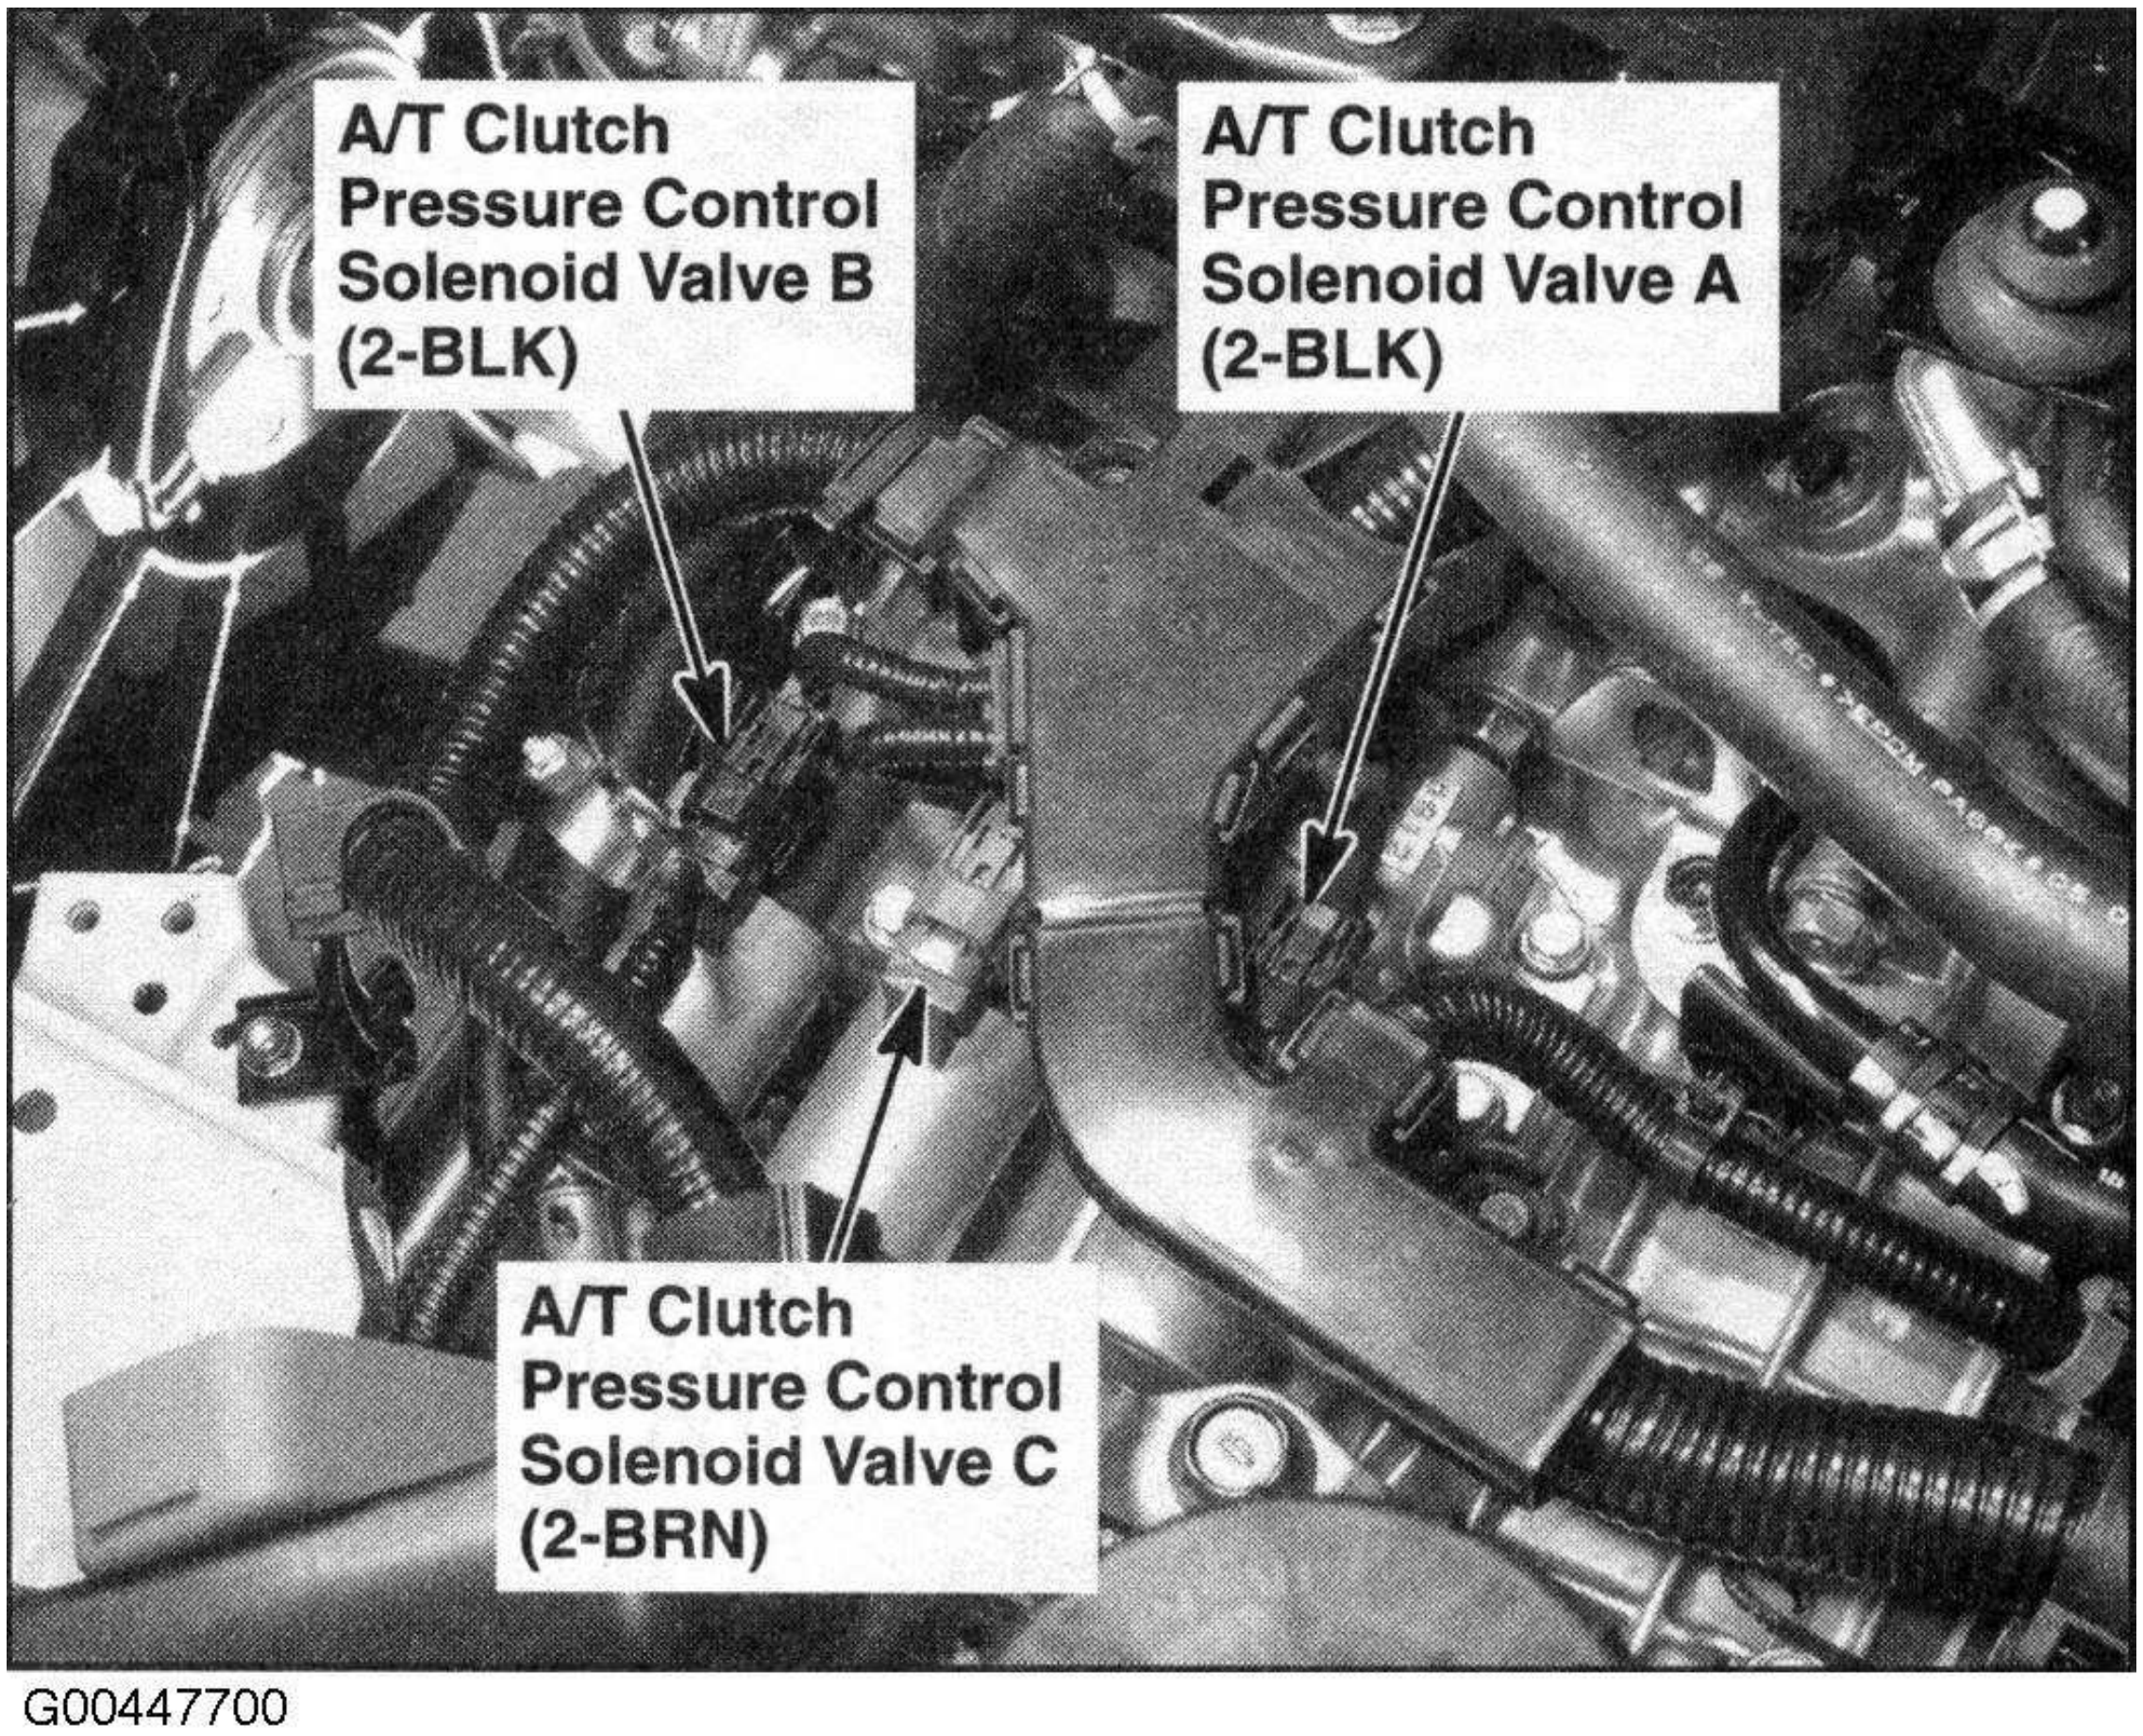
A/T Clutch Pressure Control Solenoid Valve B (2-BLK)
A/T Clutch Pressure Control Solenoid Valve A (2-BLK)
A/T Clutch Pressure Control Solenoid Valve C (2-BRN)
G00447700

Fig. 37: Transmission Housing (A/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

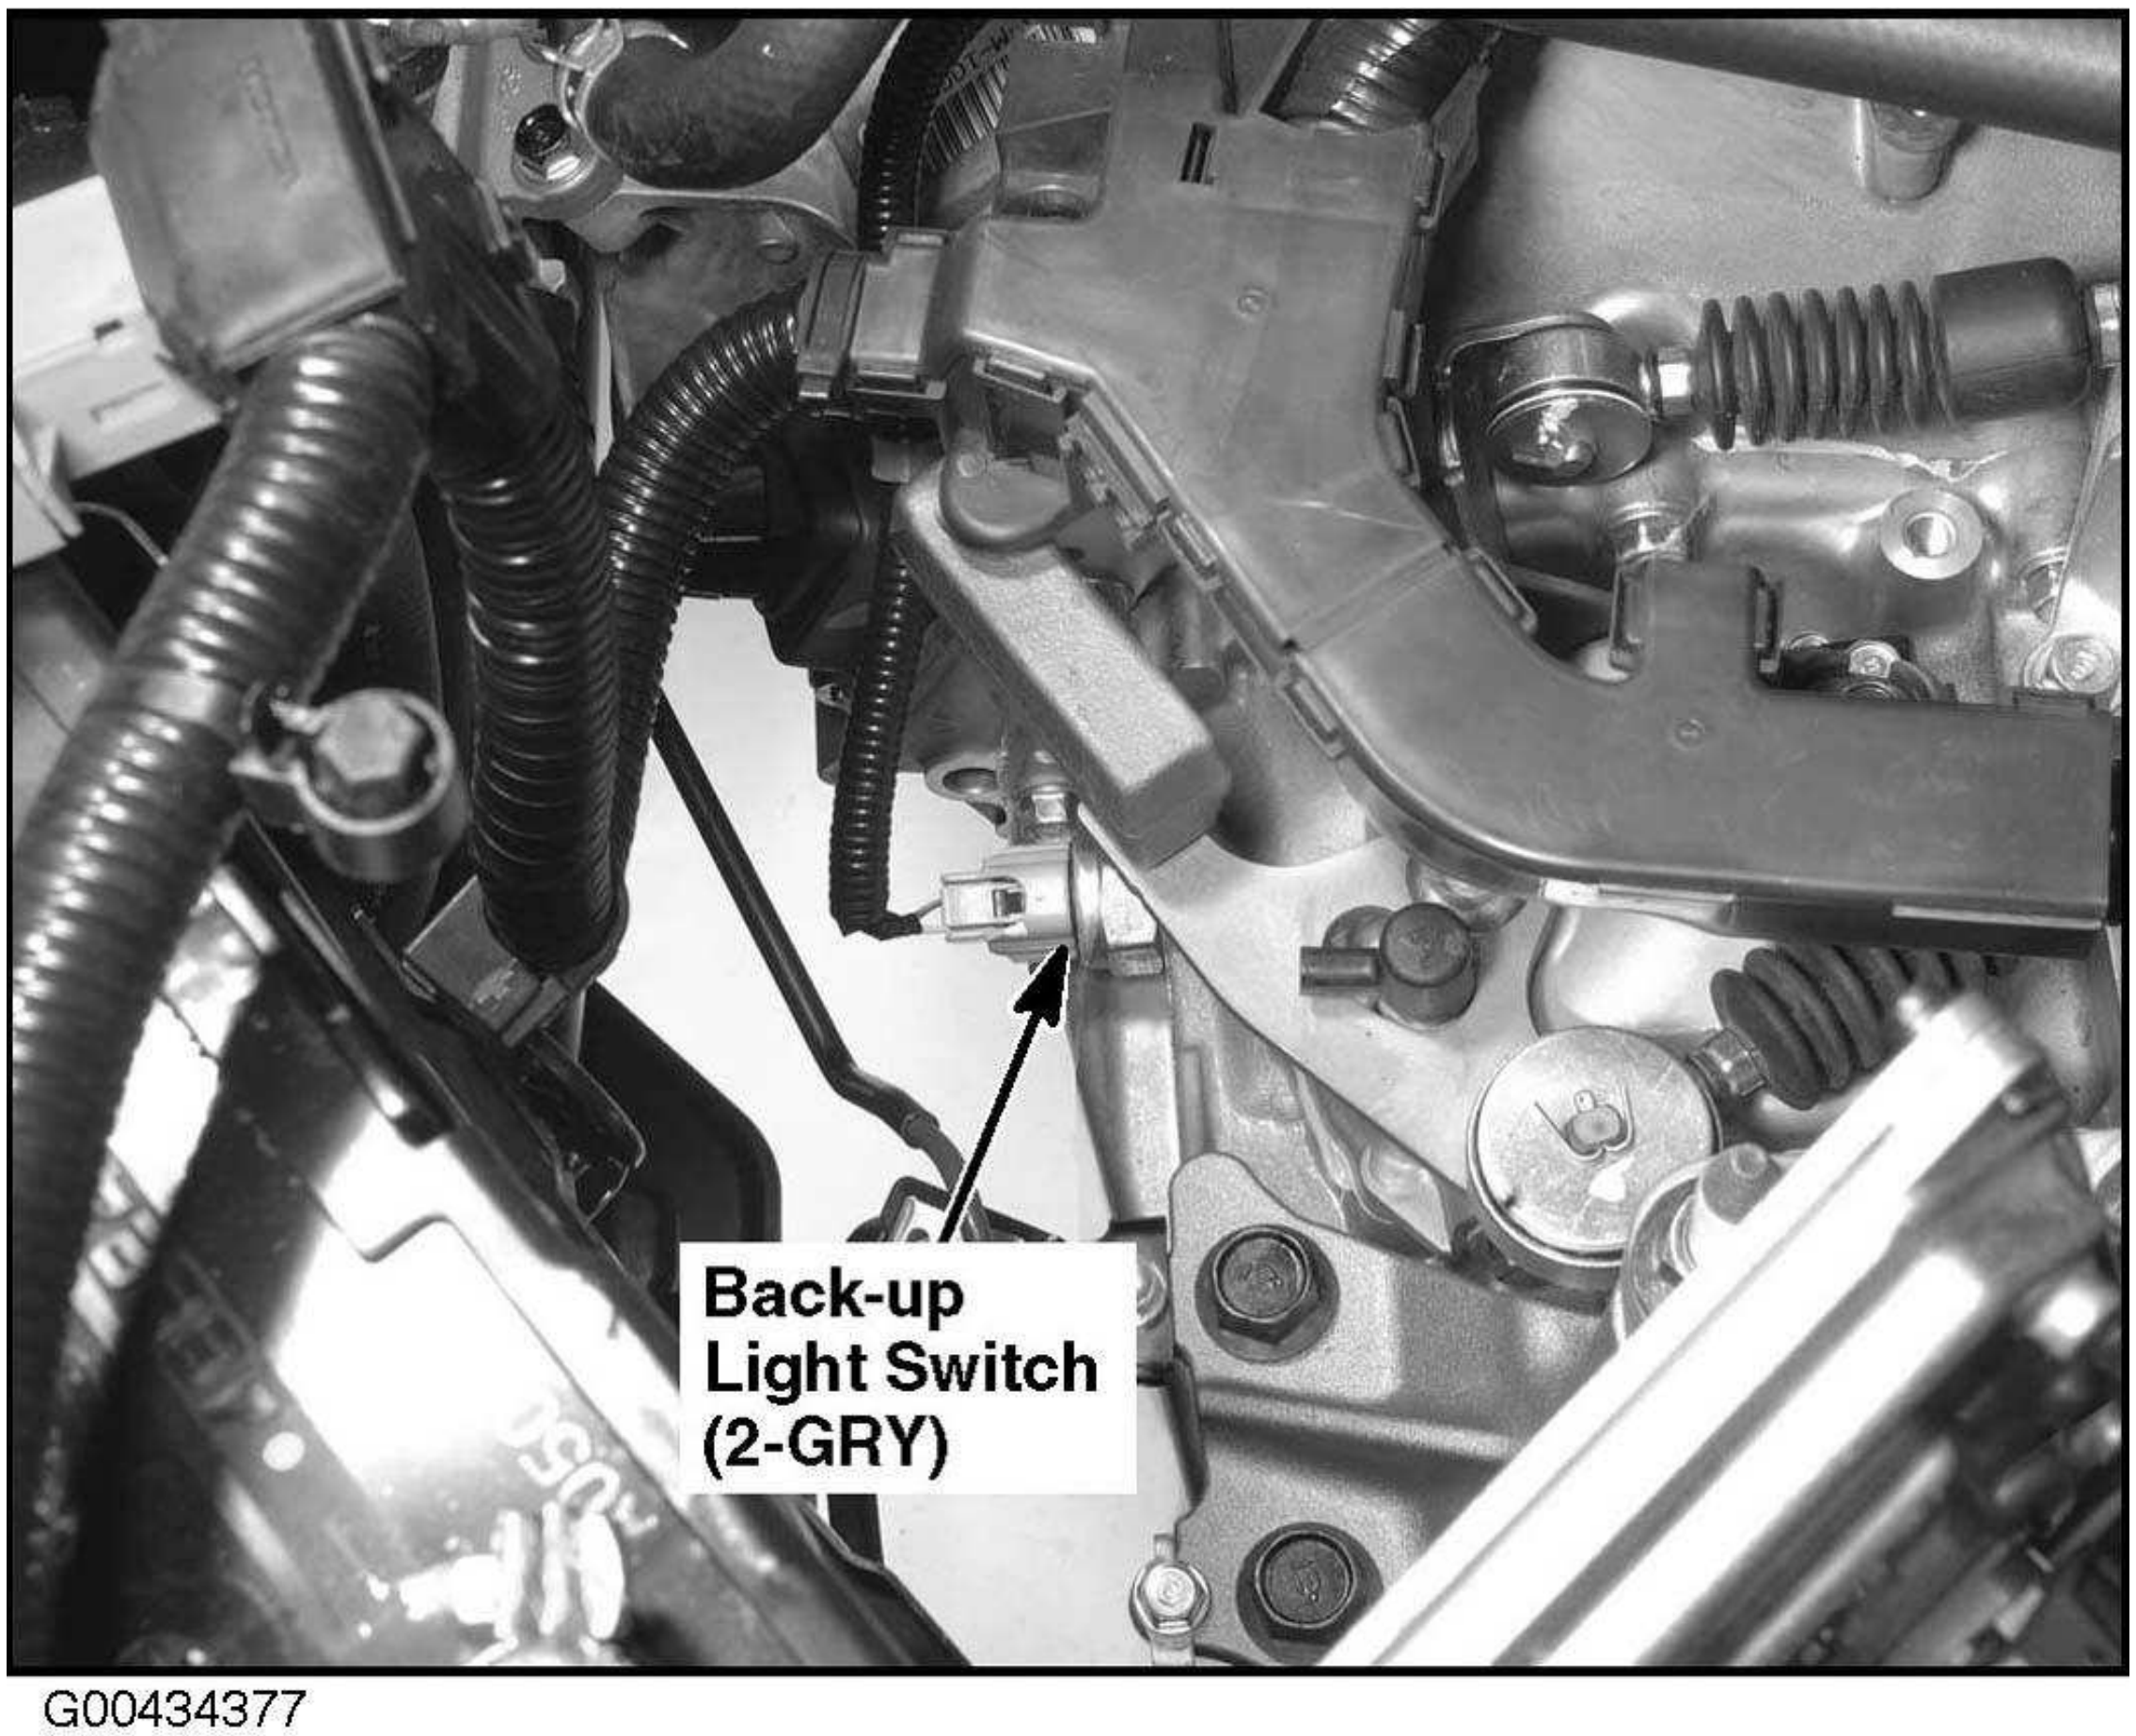
Back-up
Light Switch
(2-GRY)
G00434377

Fig. 38: Transaxle Housing (Except Si) (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

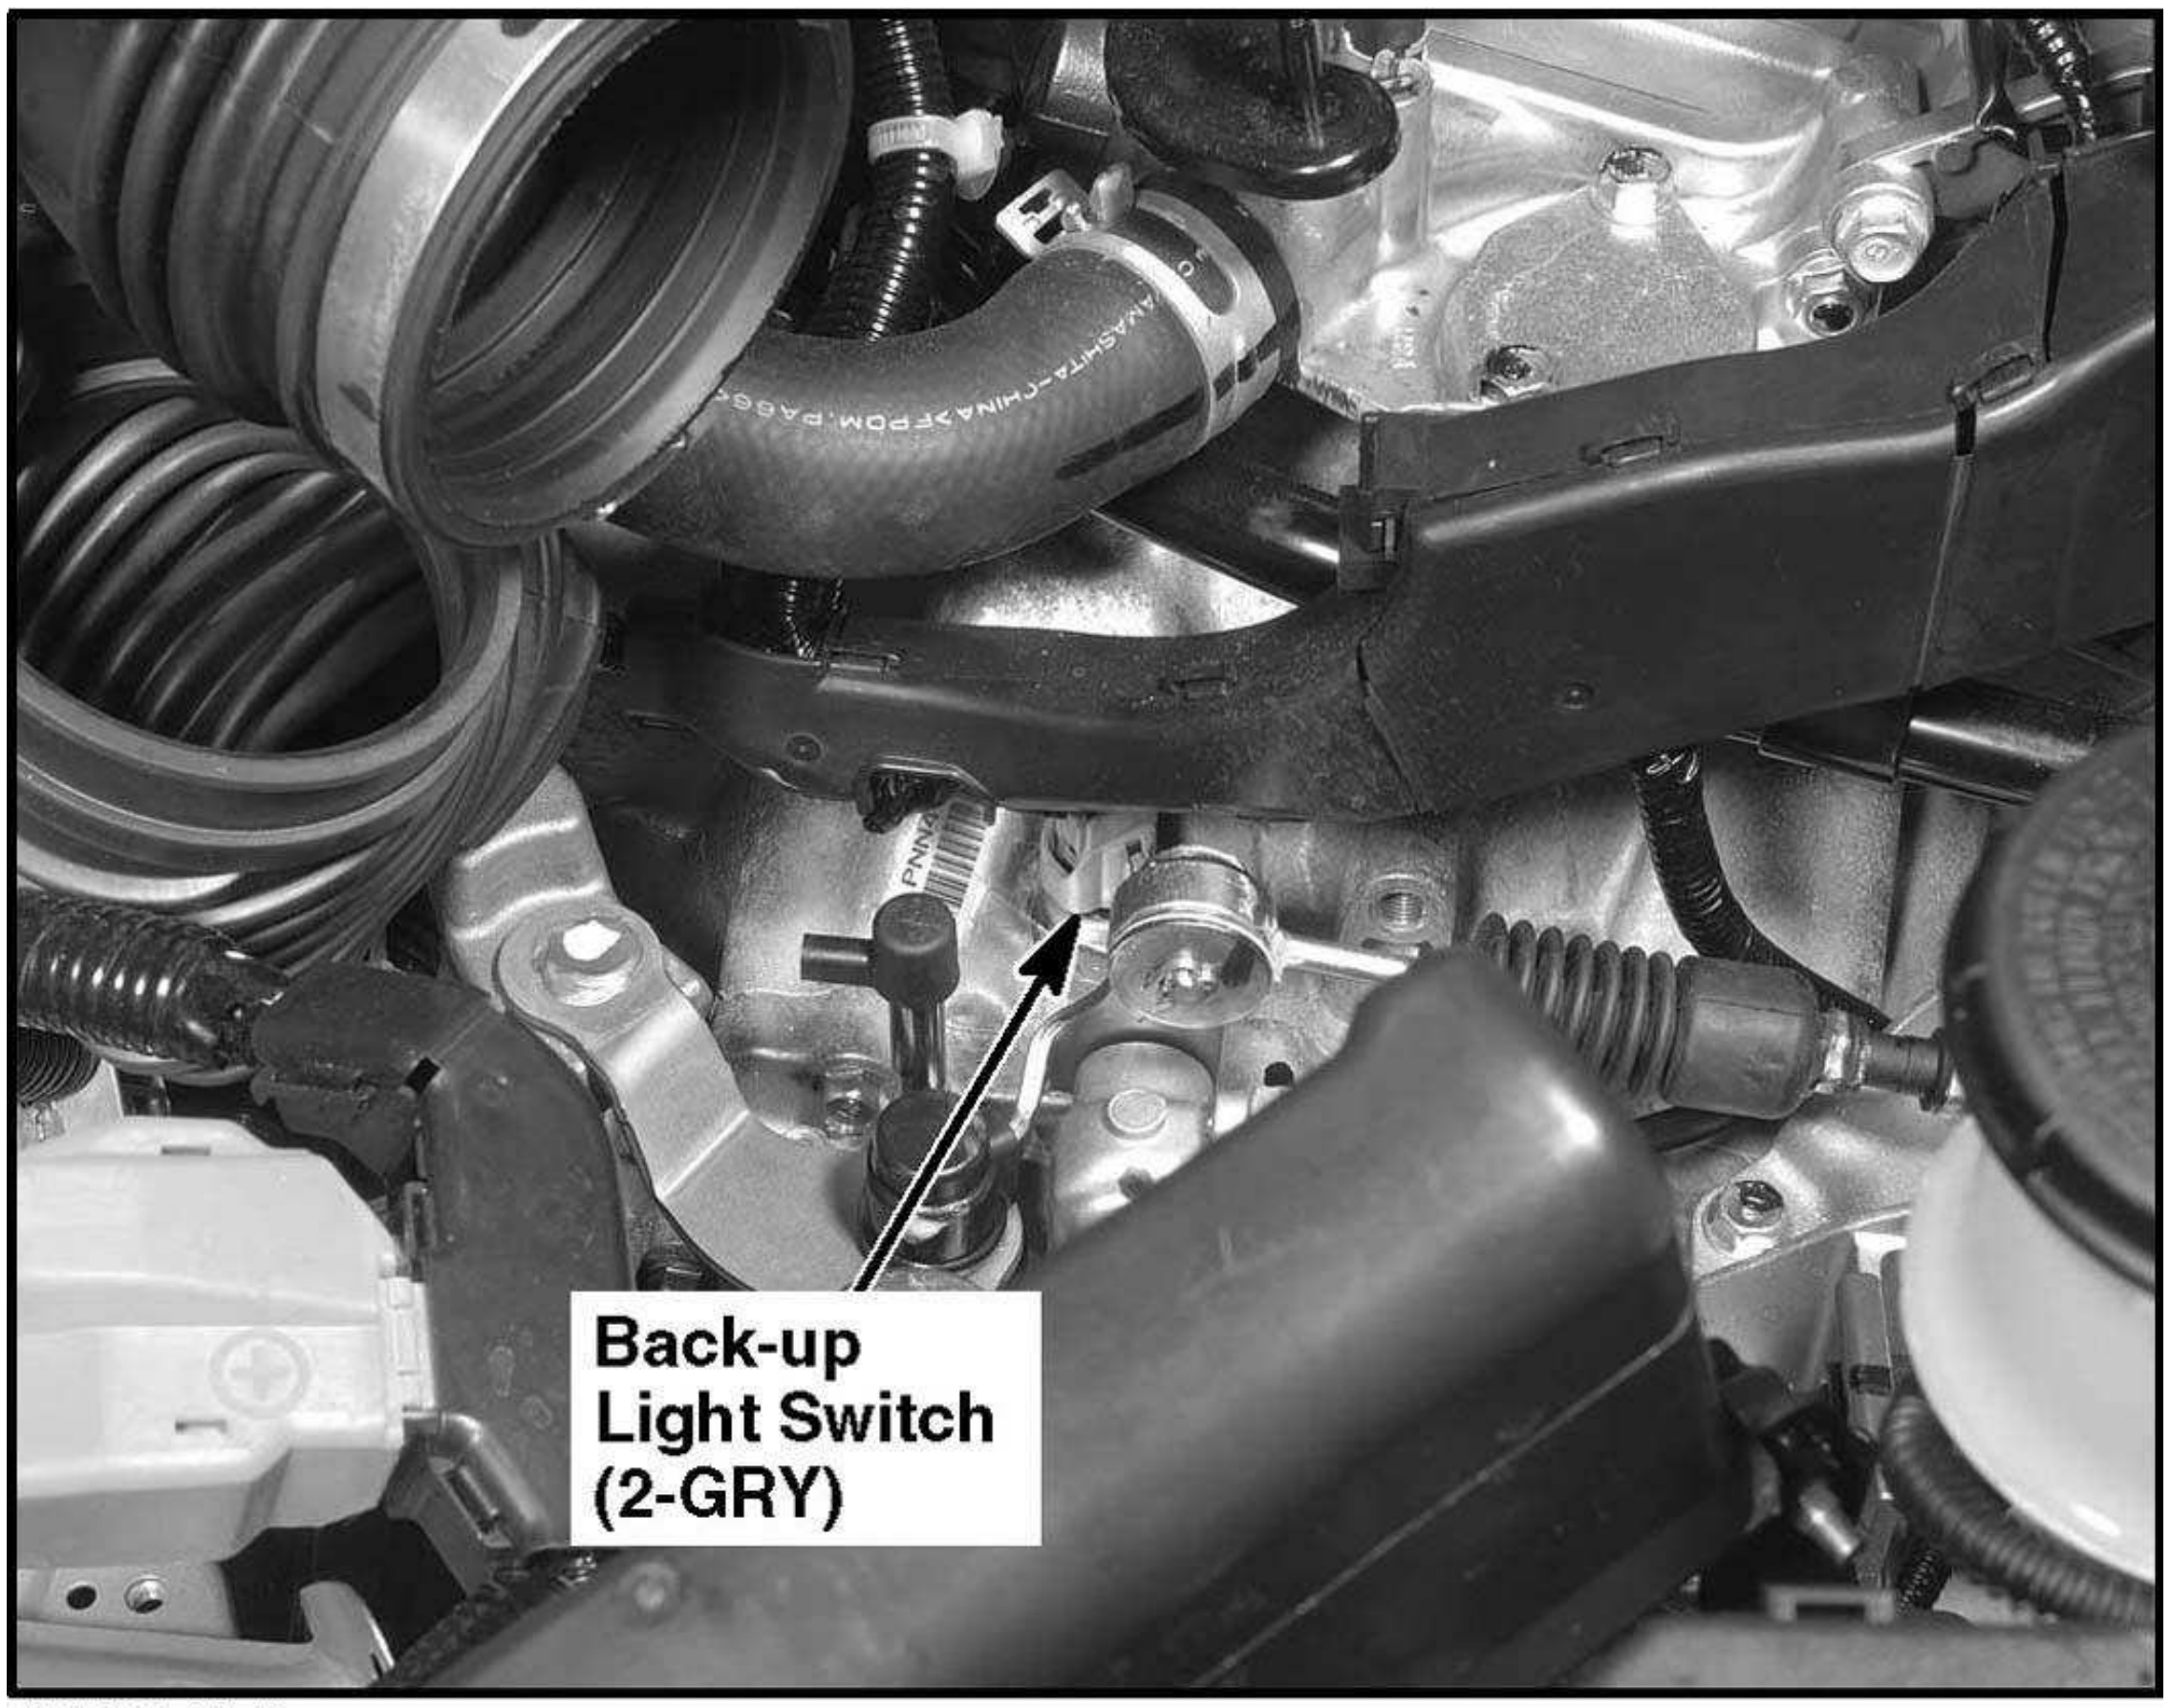
Back-up
Light Switch
(2-GRY)

G00434378

Fig. 39: Transmission Housing (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

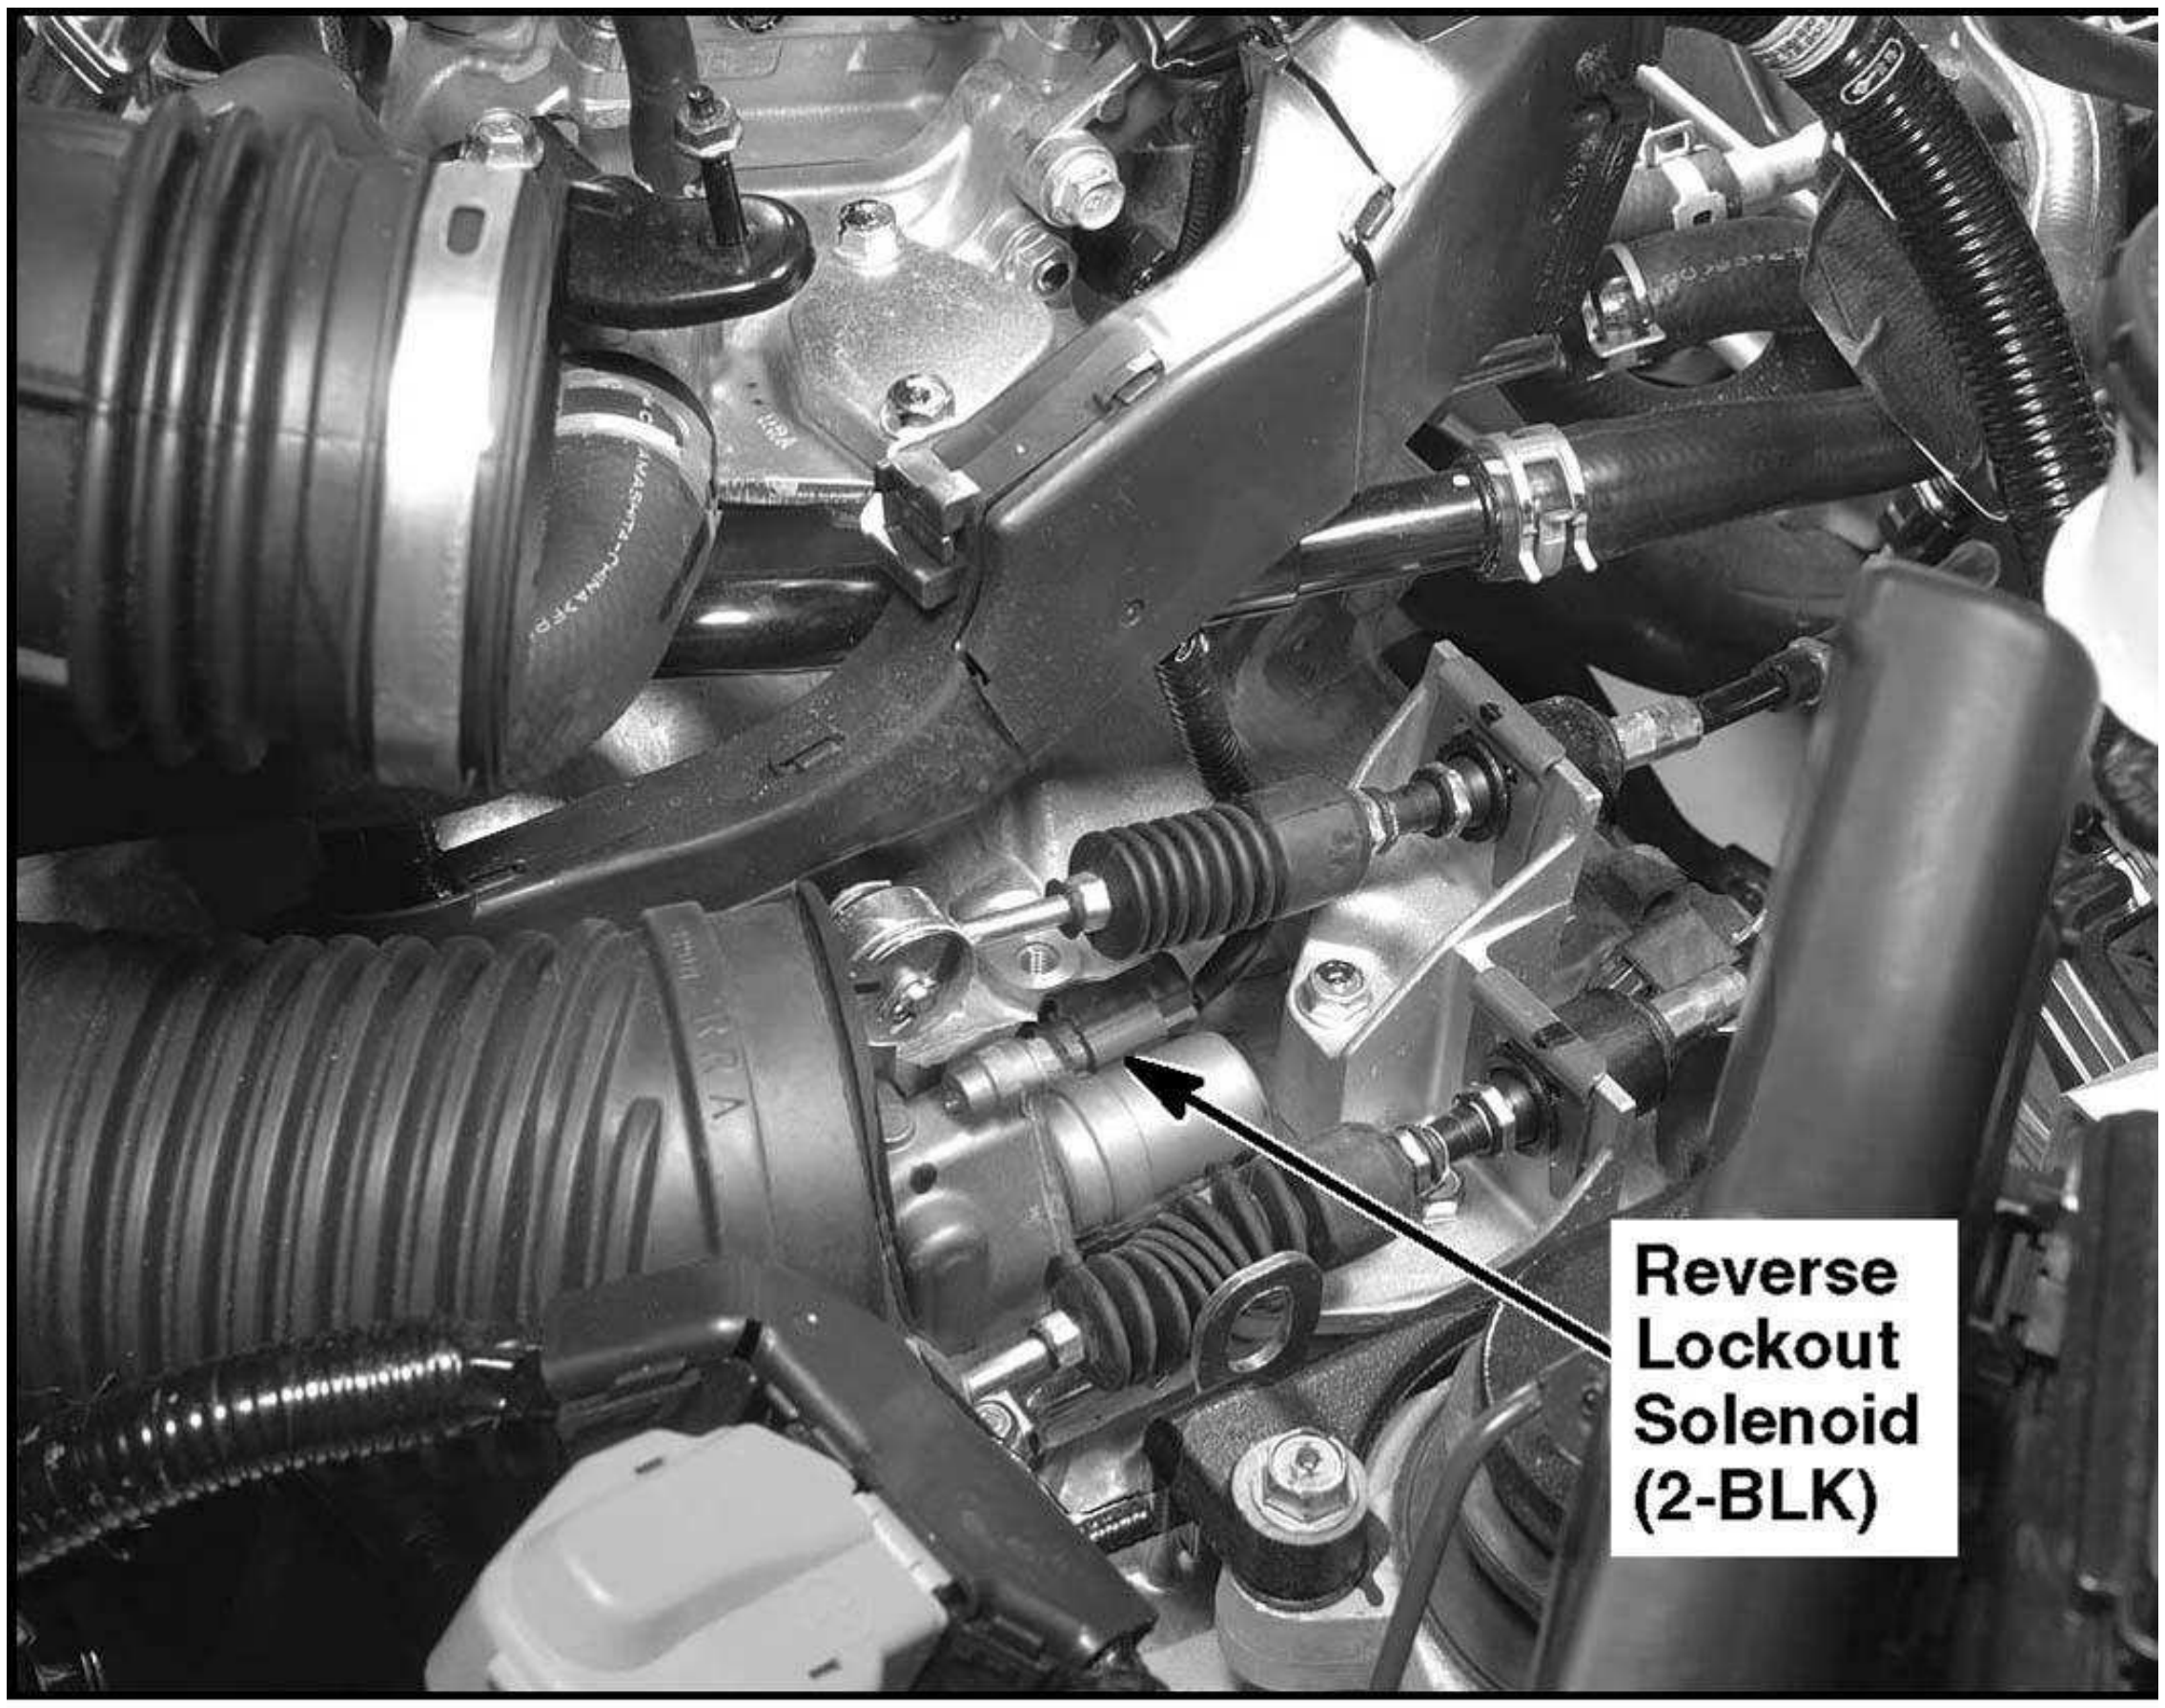
Reverse
Lockout
Solenoid
(2-BLK)
G00434379

Fig. 40: Transmission Housing (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

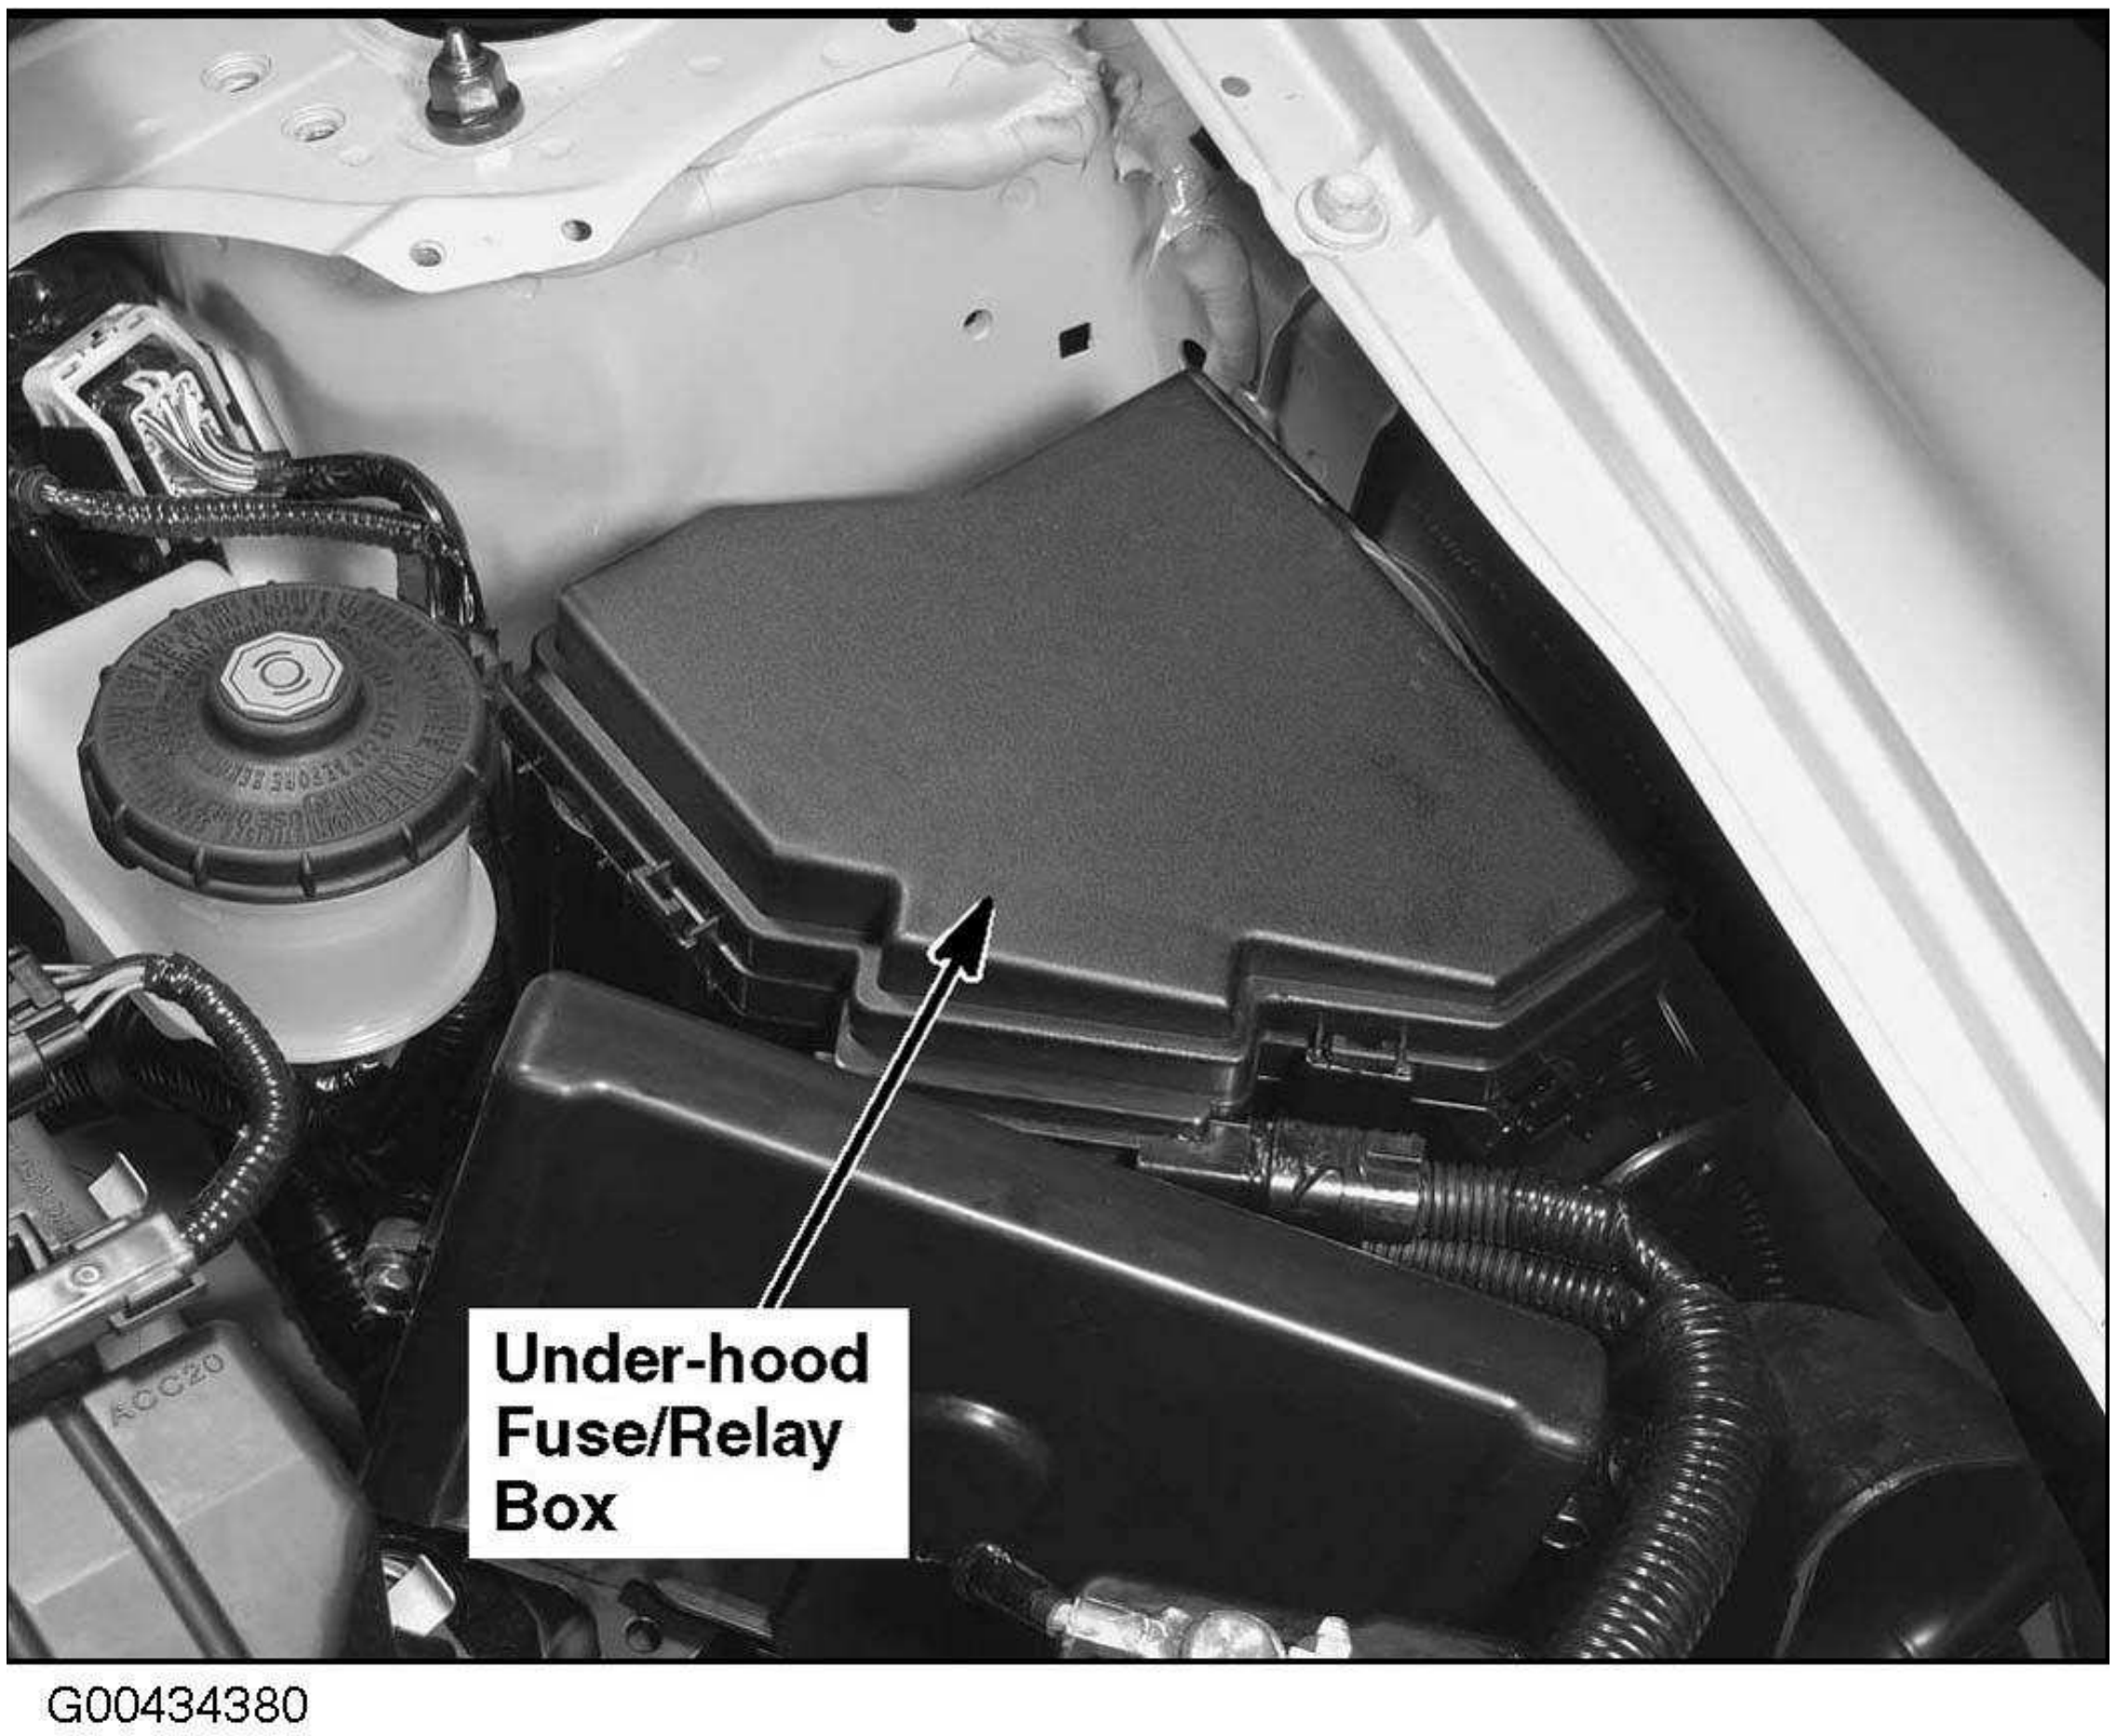
Under-hood Fuse/Relay Box
G00434380

Fig. 41: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

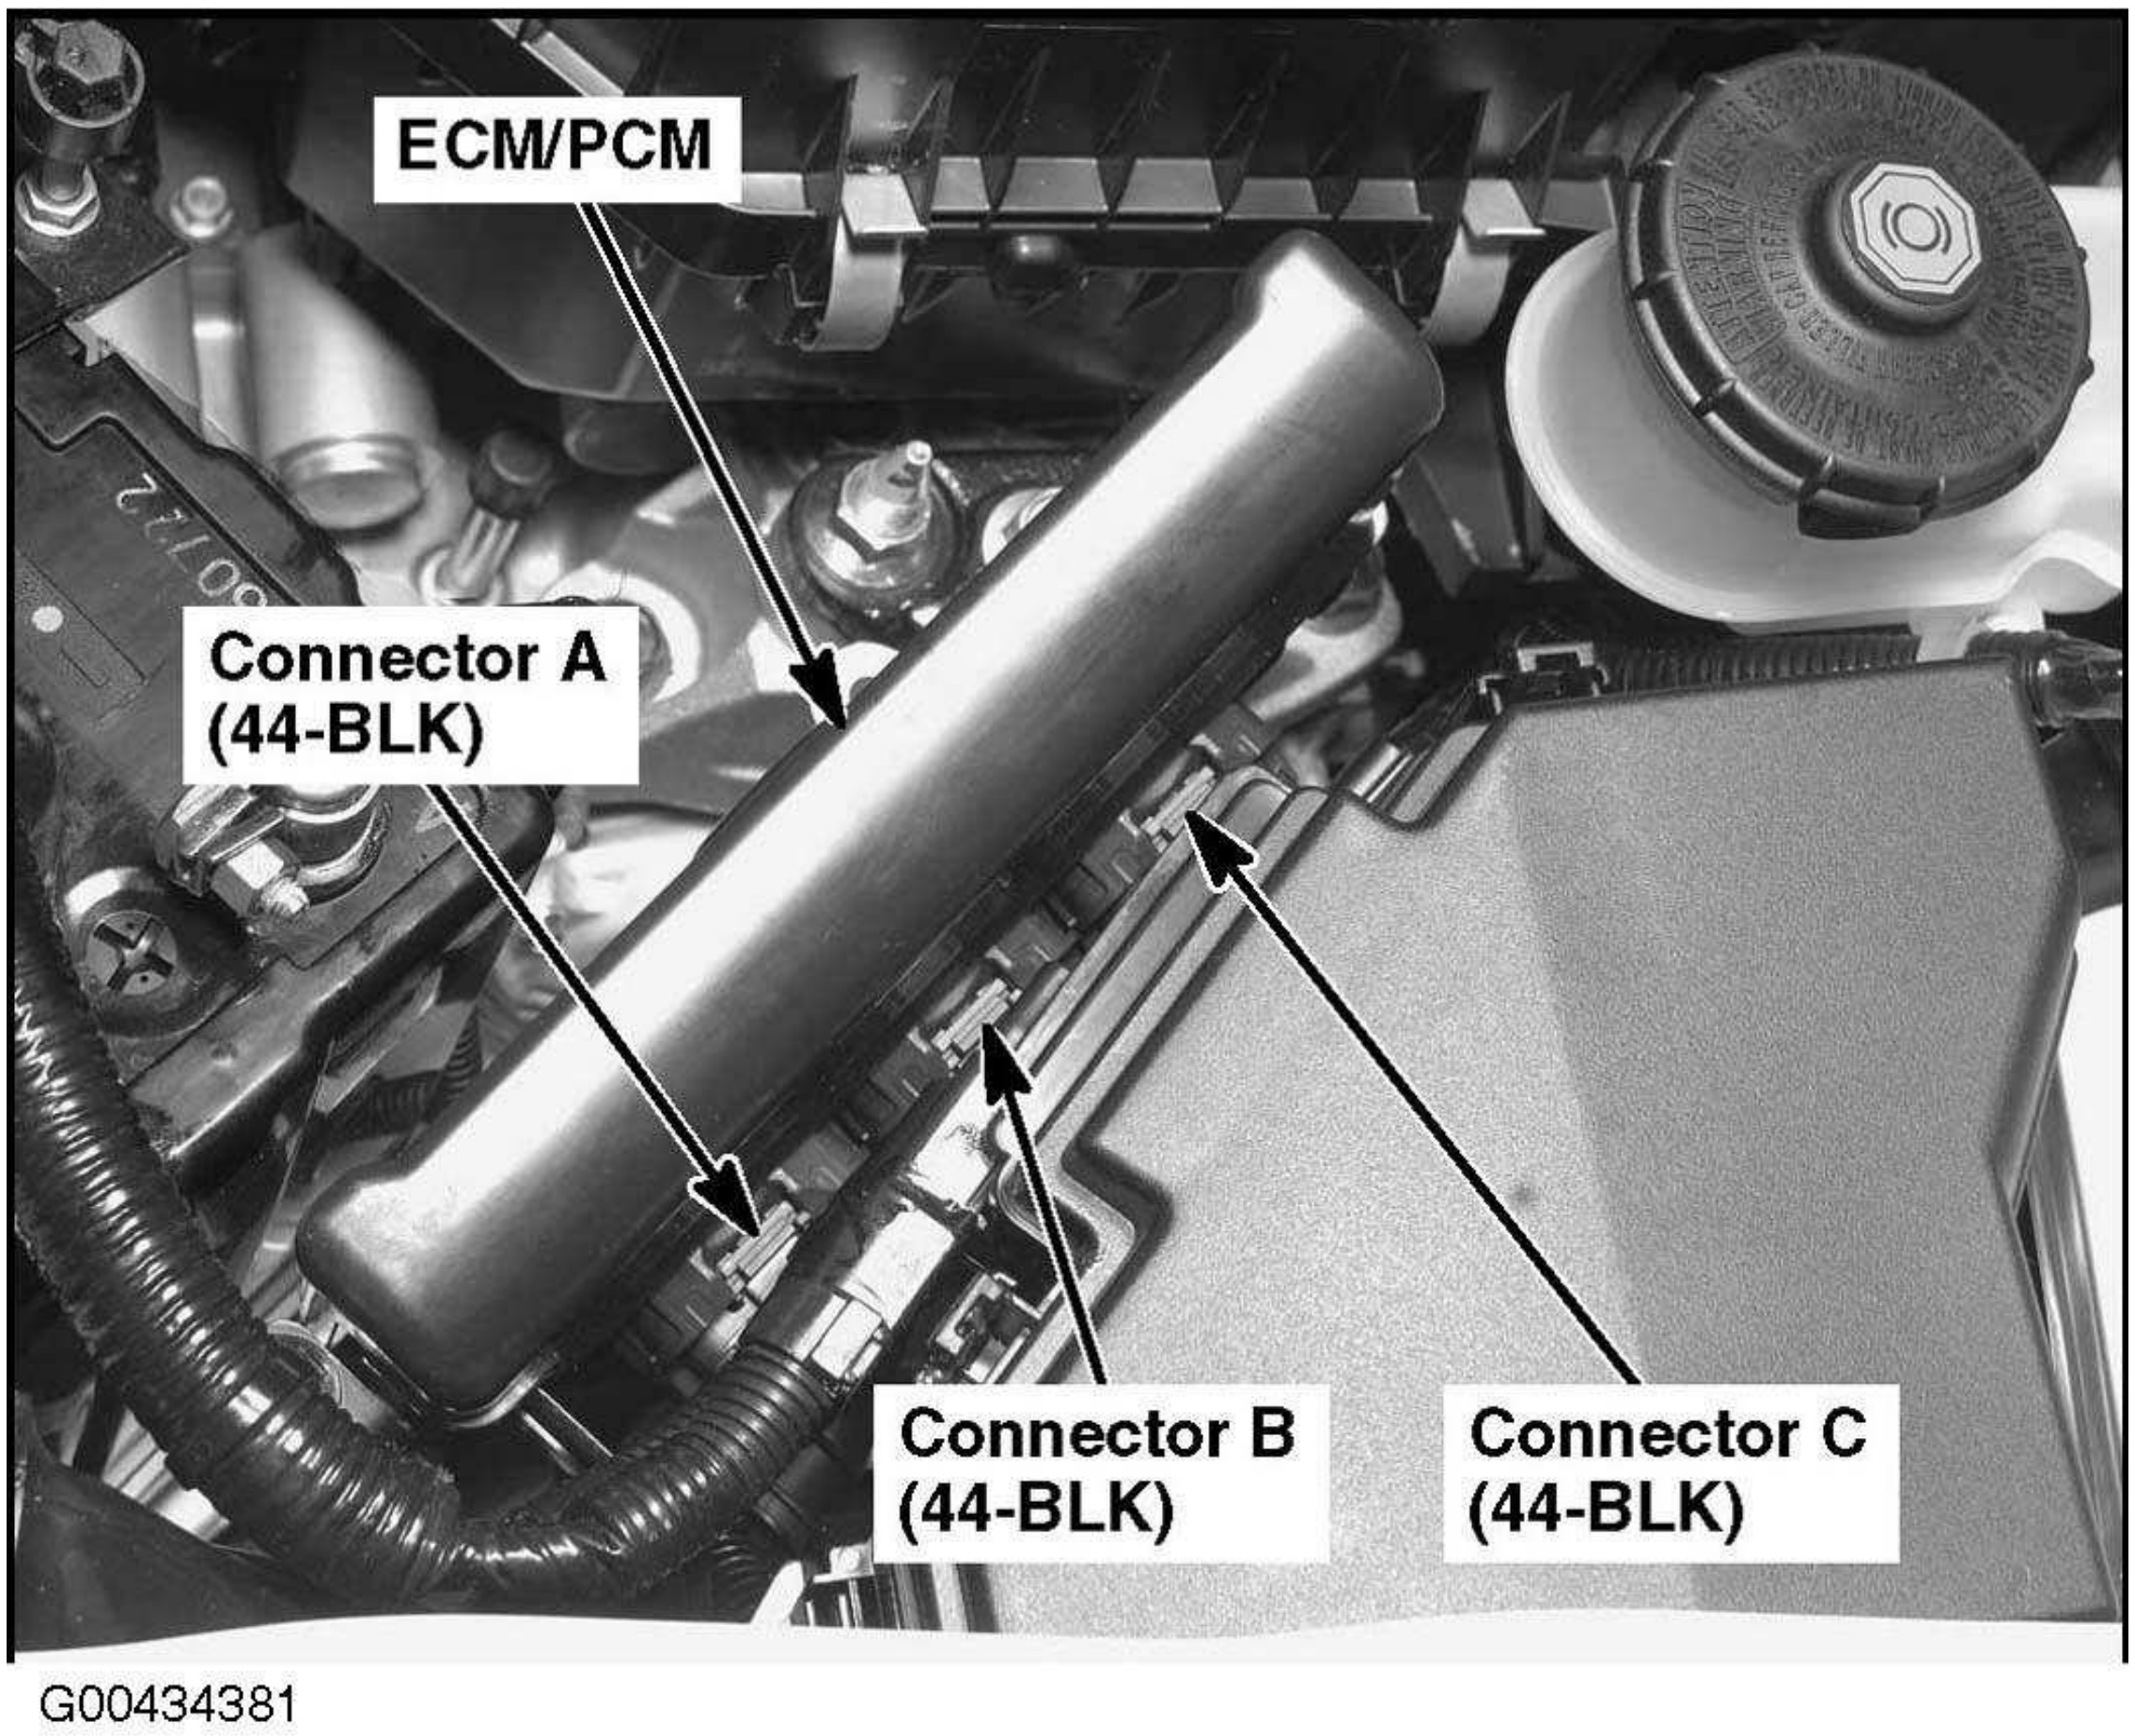
ECM/PCM
Connector A (44-BLK)
Connector B (44-BLK)
Connector C (44-BLK)
G00434381

Fig. 42: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

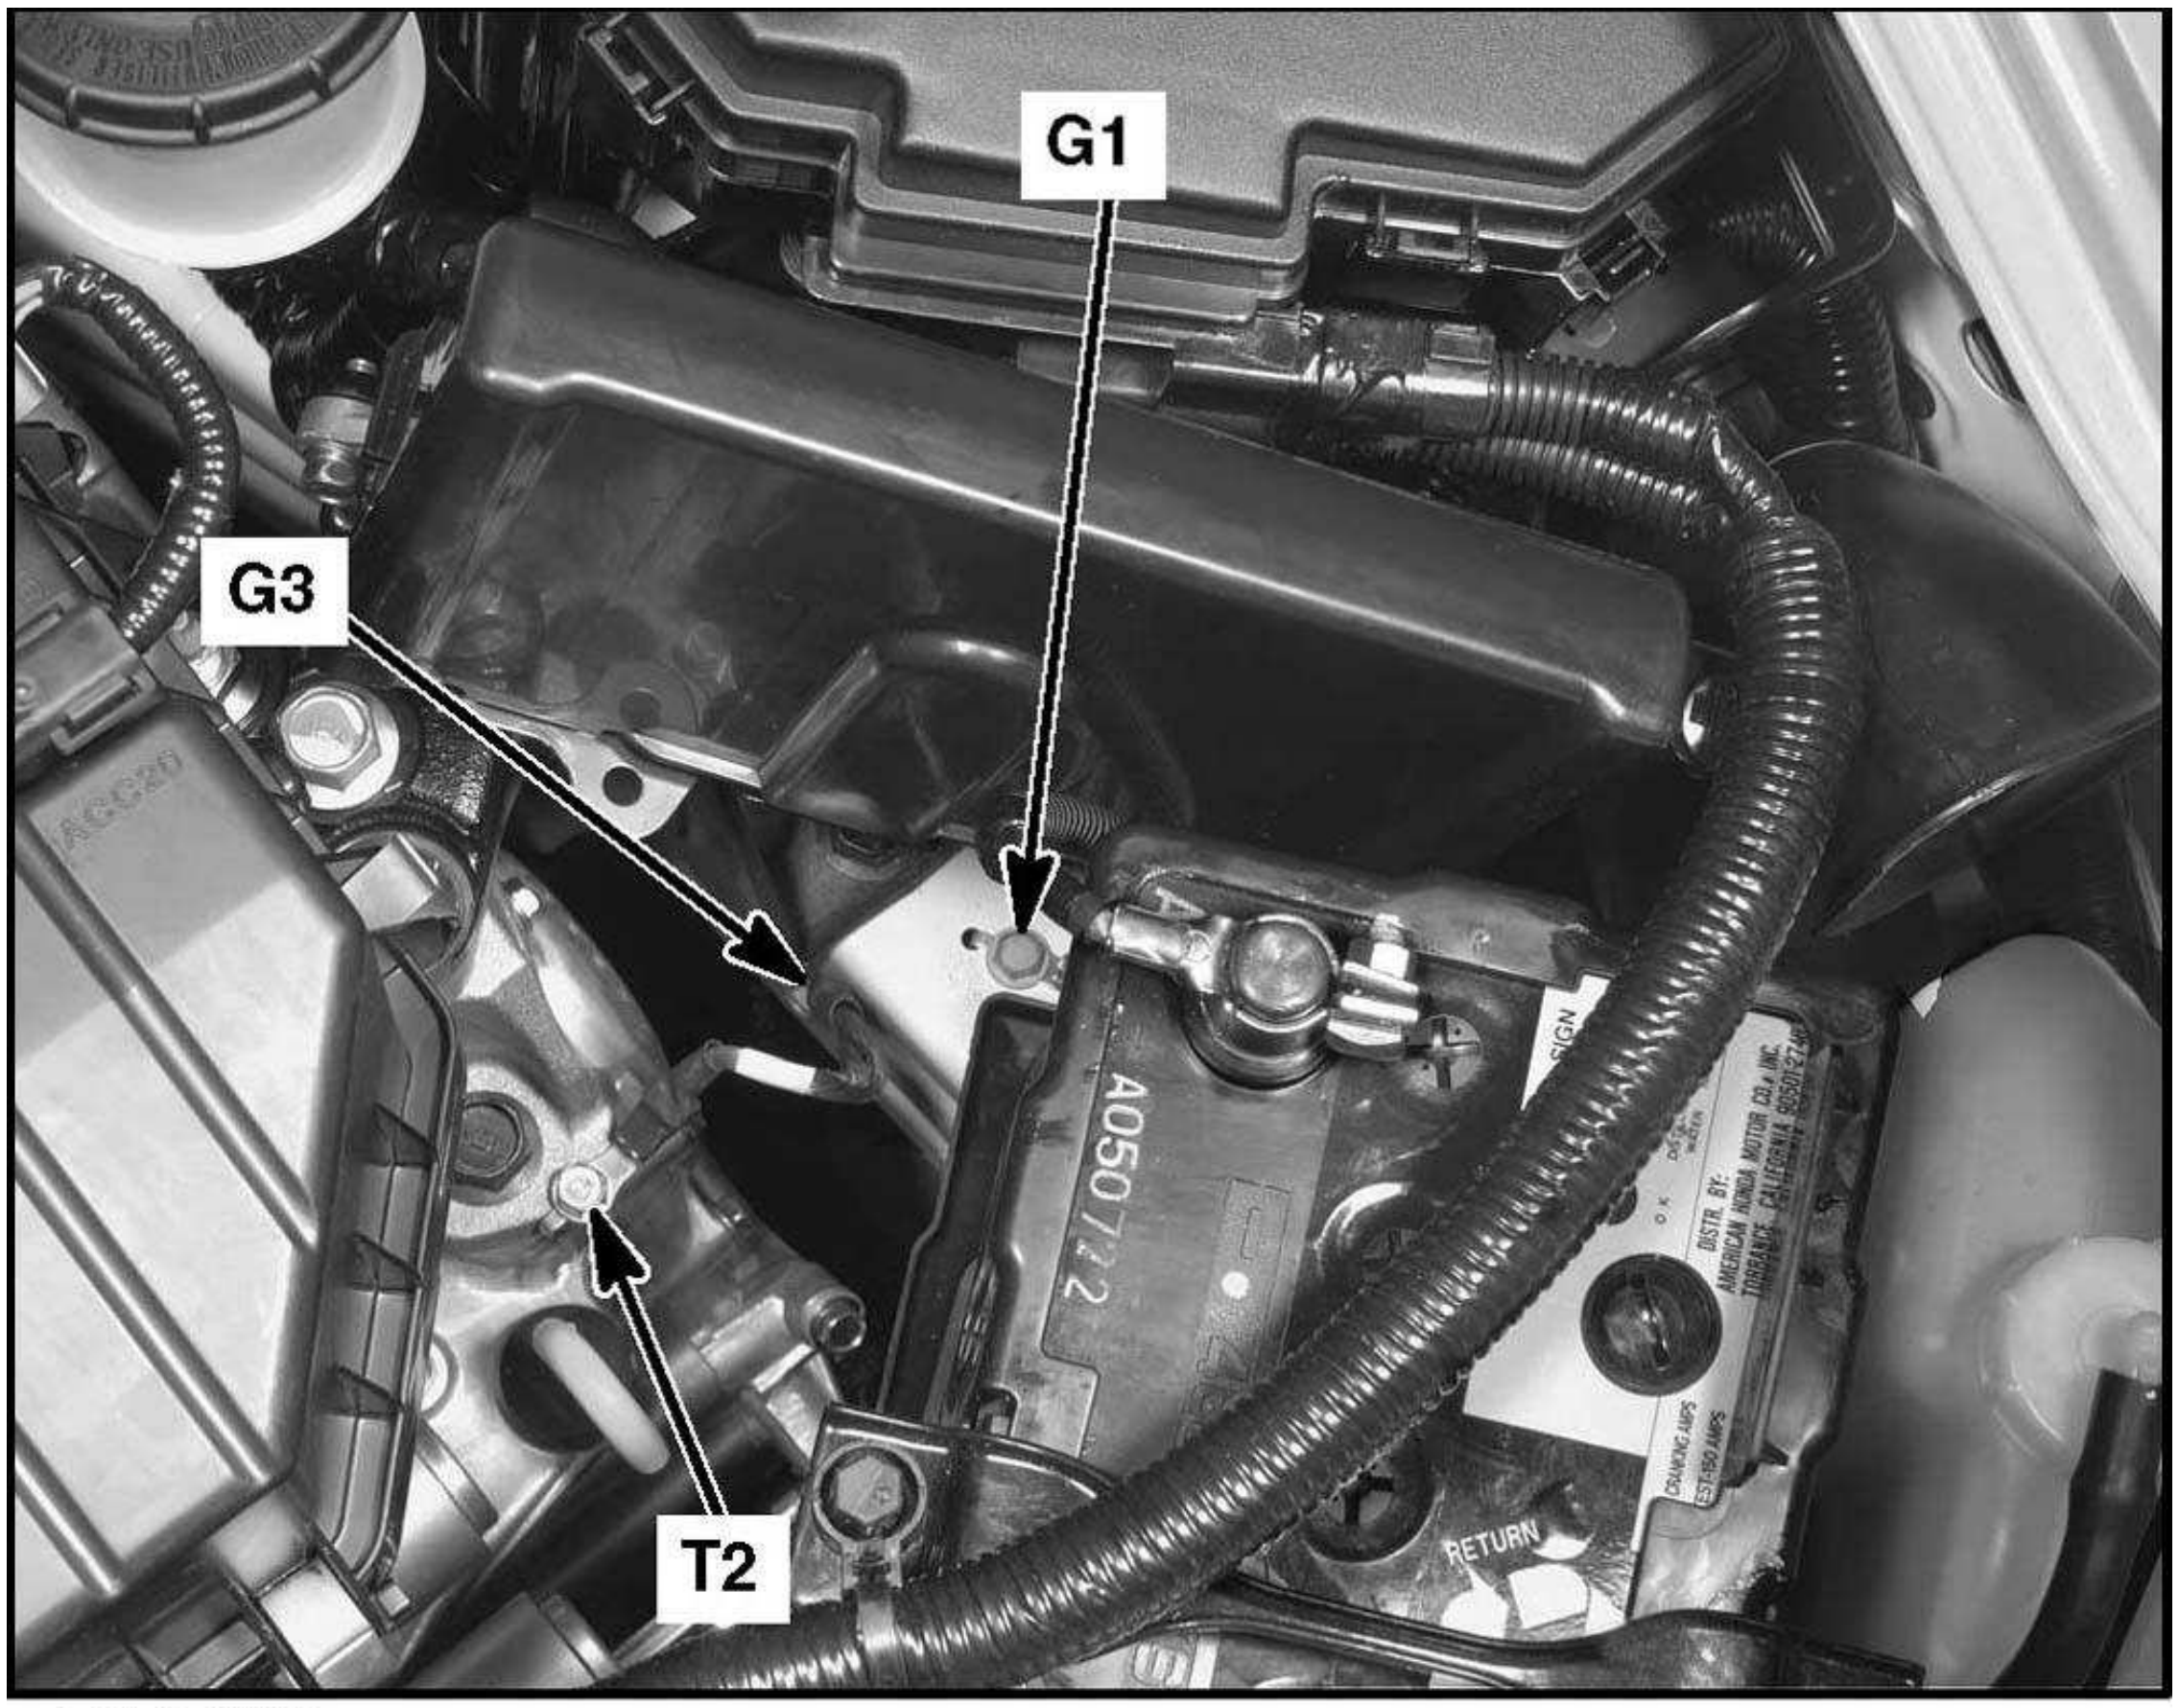
G1
G3
T2
G00434382

Fig. 43: Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

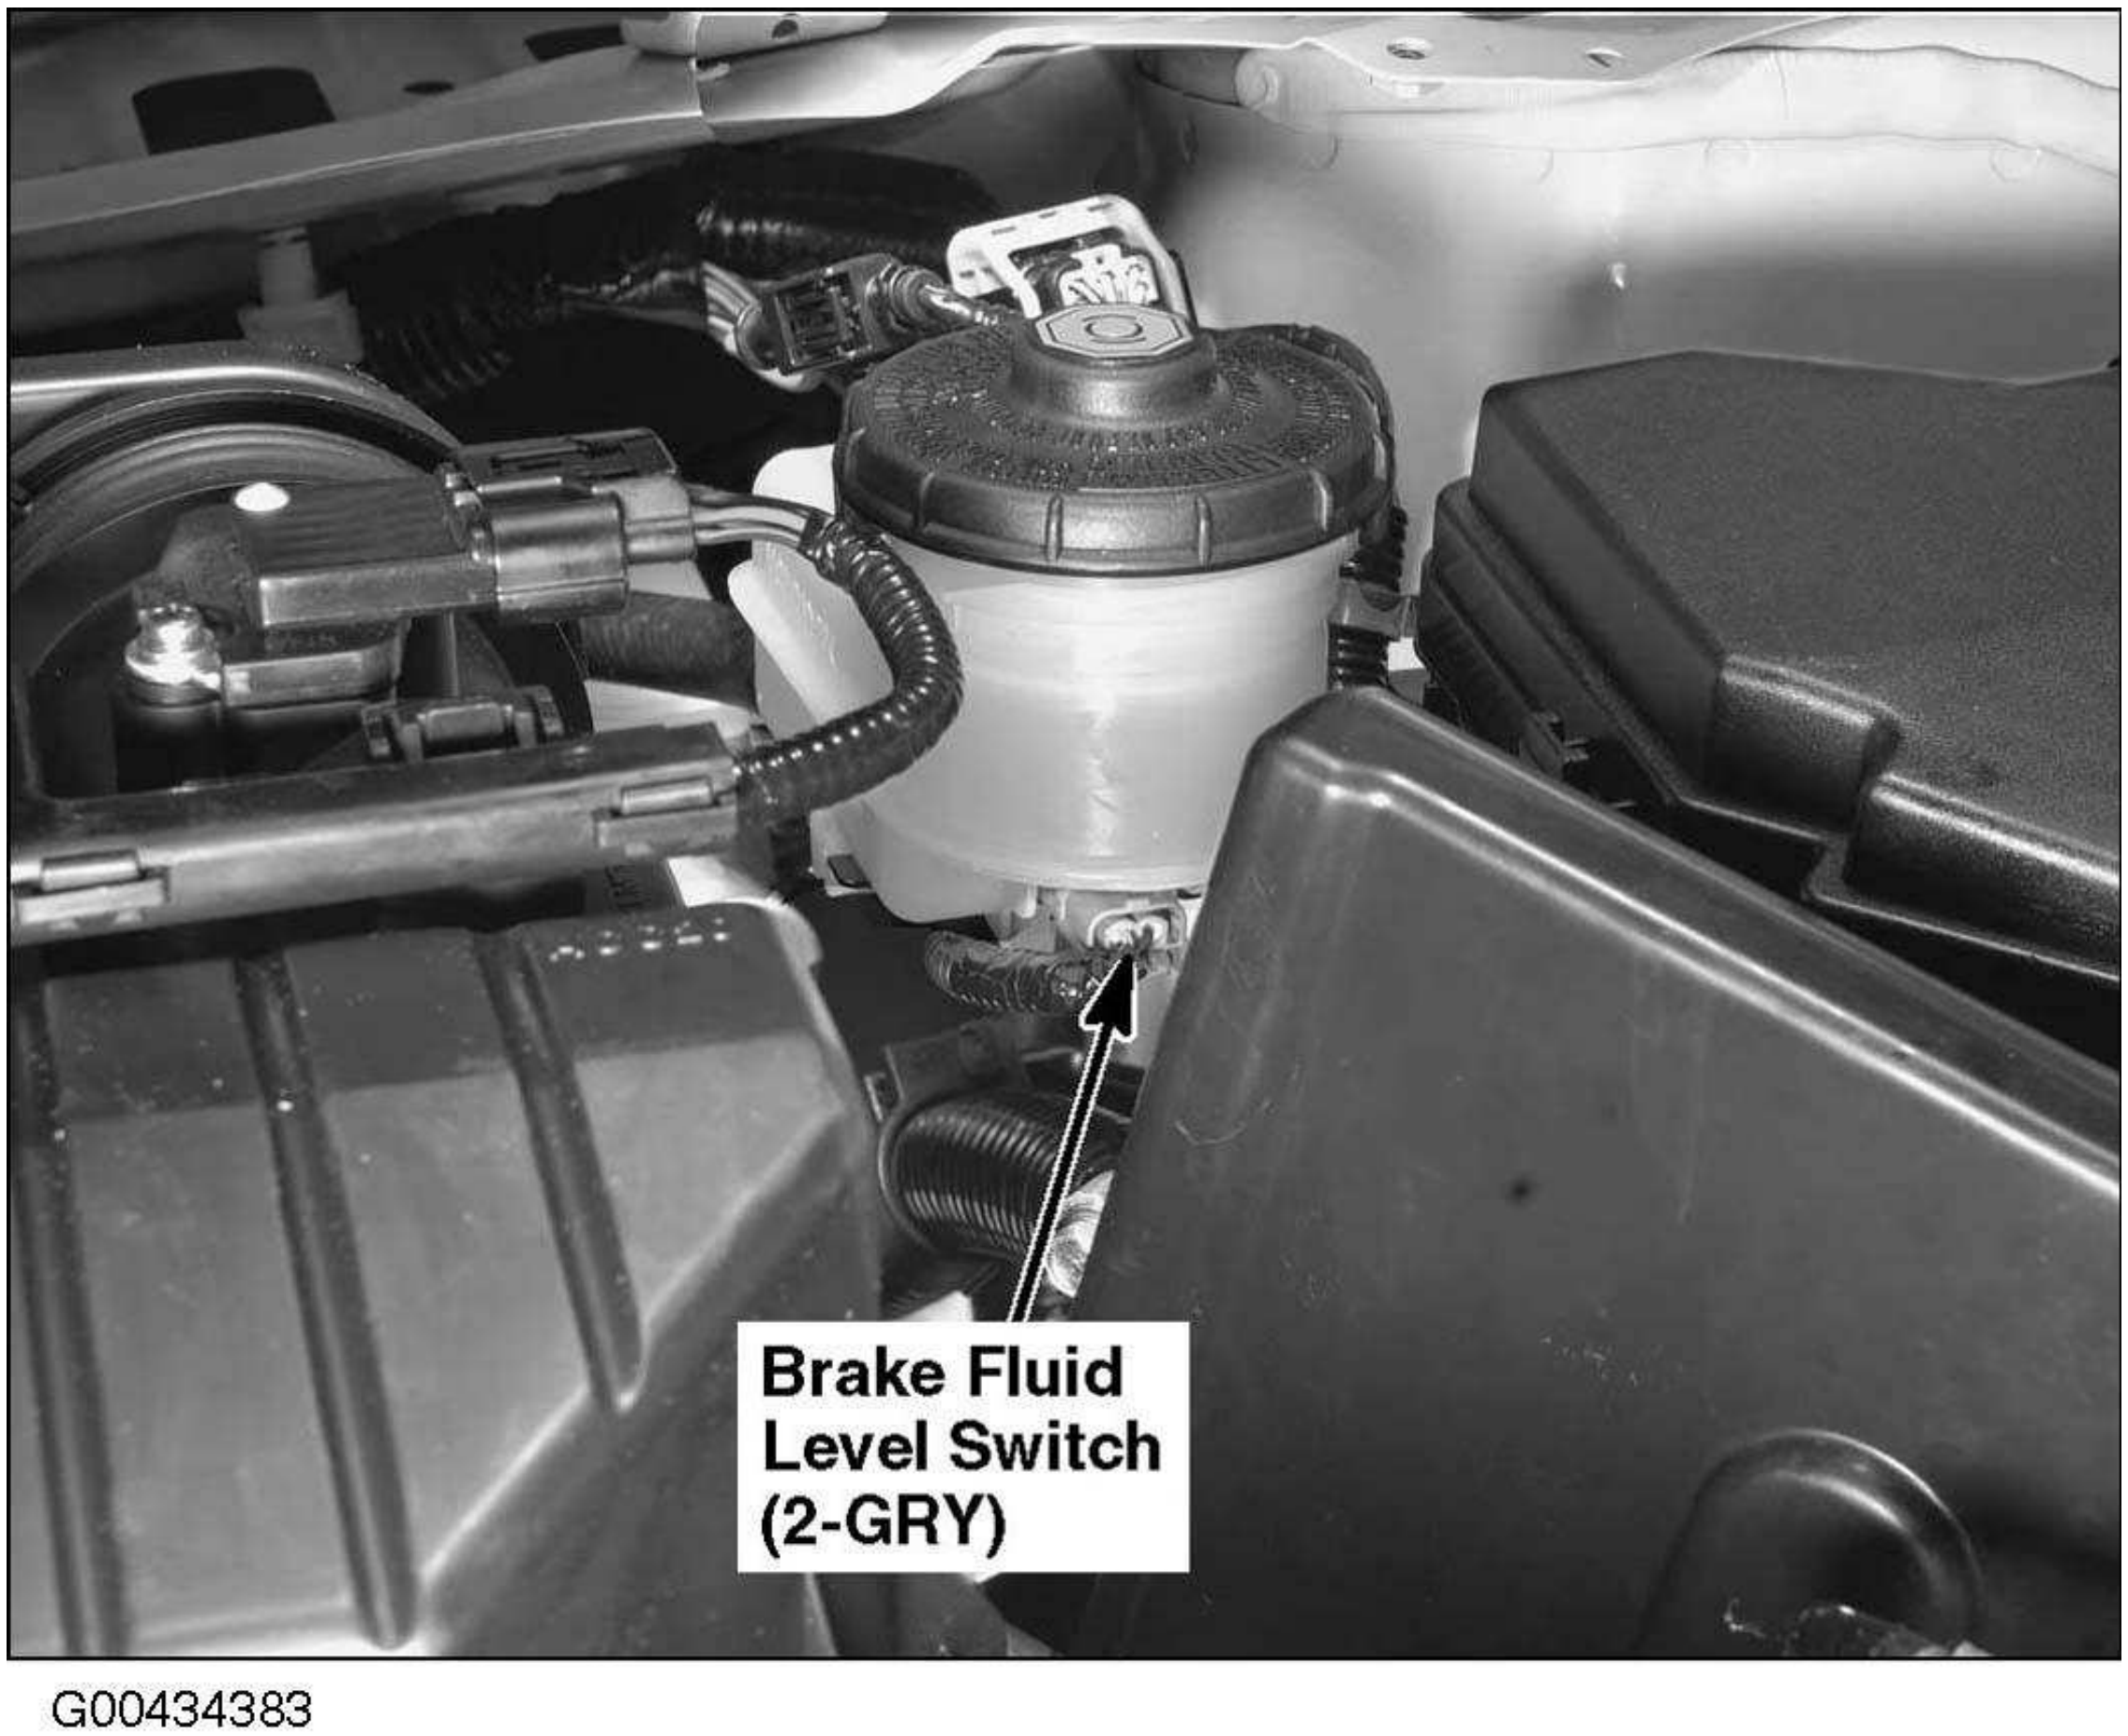
Brake Fluid
Level Switch
(2-GRY)
G00434383

Fig. 44: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

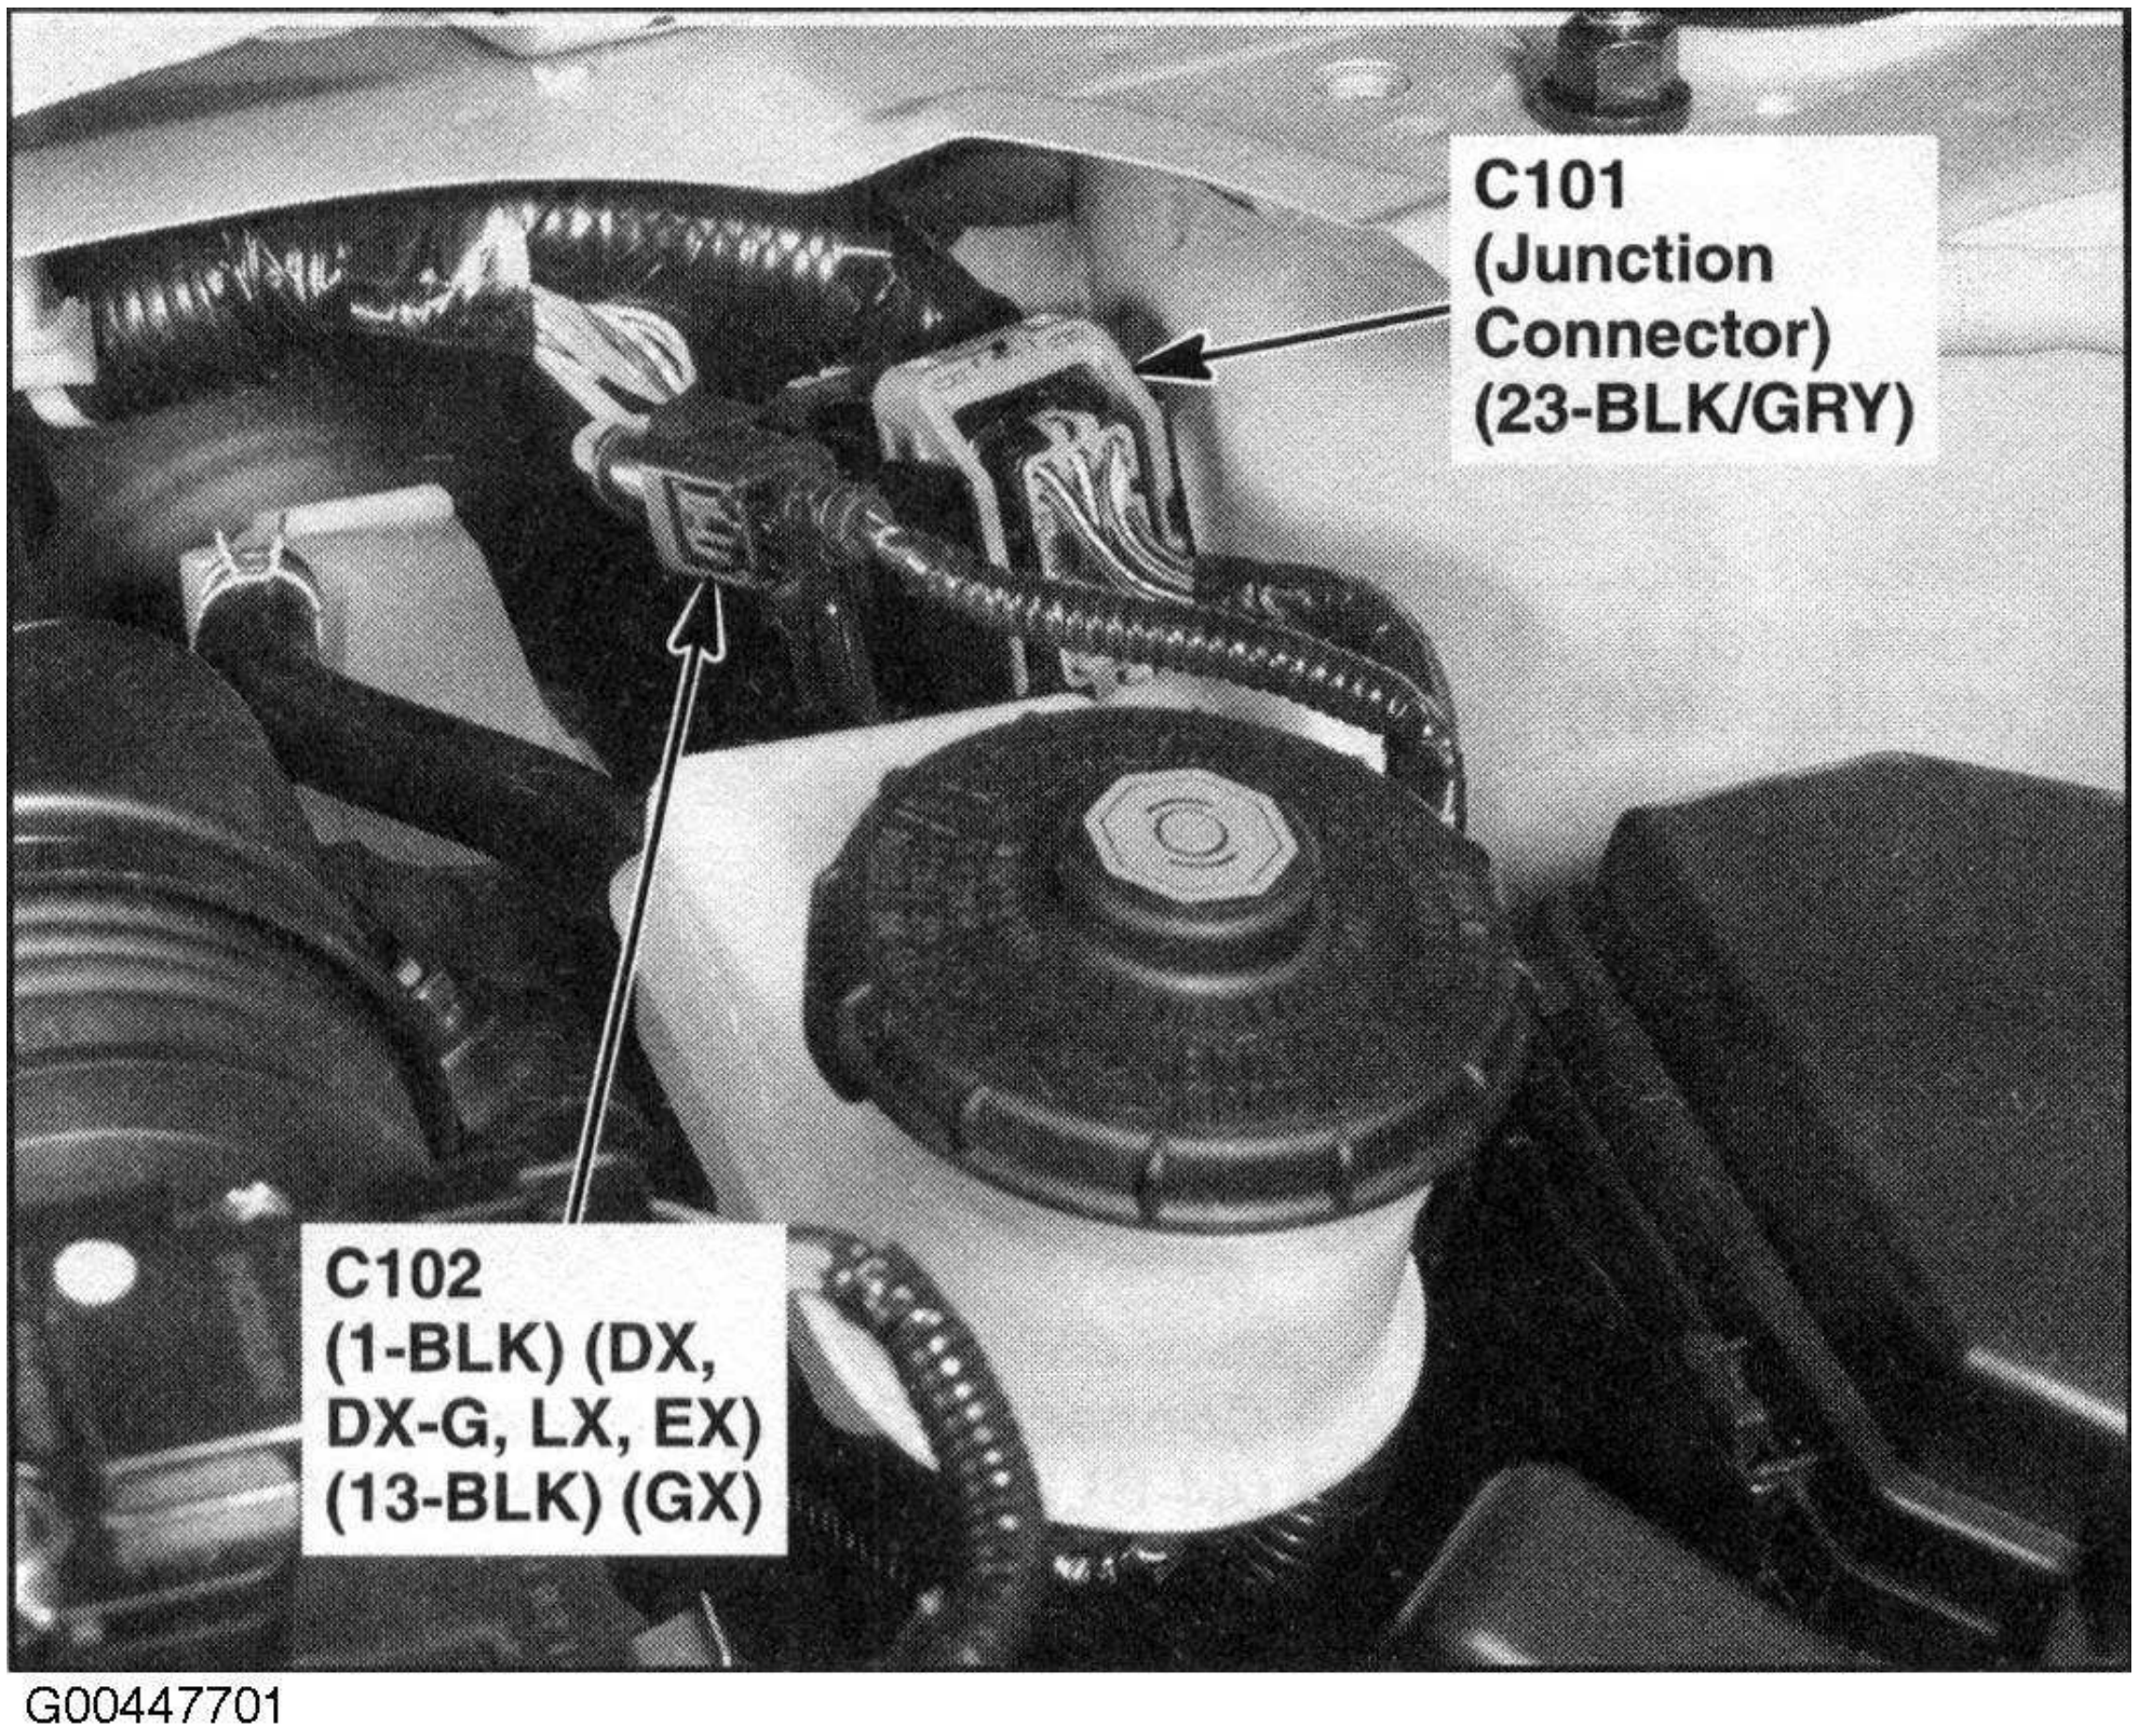
C101
(Junction
Connector)
(23-BLK/GRY)
C102
(1-BLK) (DX,
DX-G, LX, EX)
(13-BLK) (GX)
G00447701

Fig. 45: Left Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

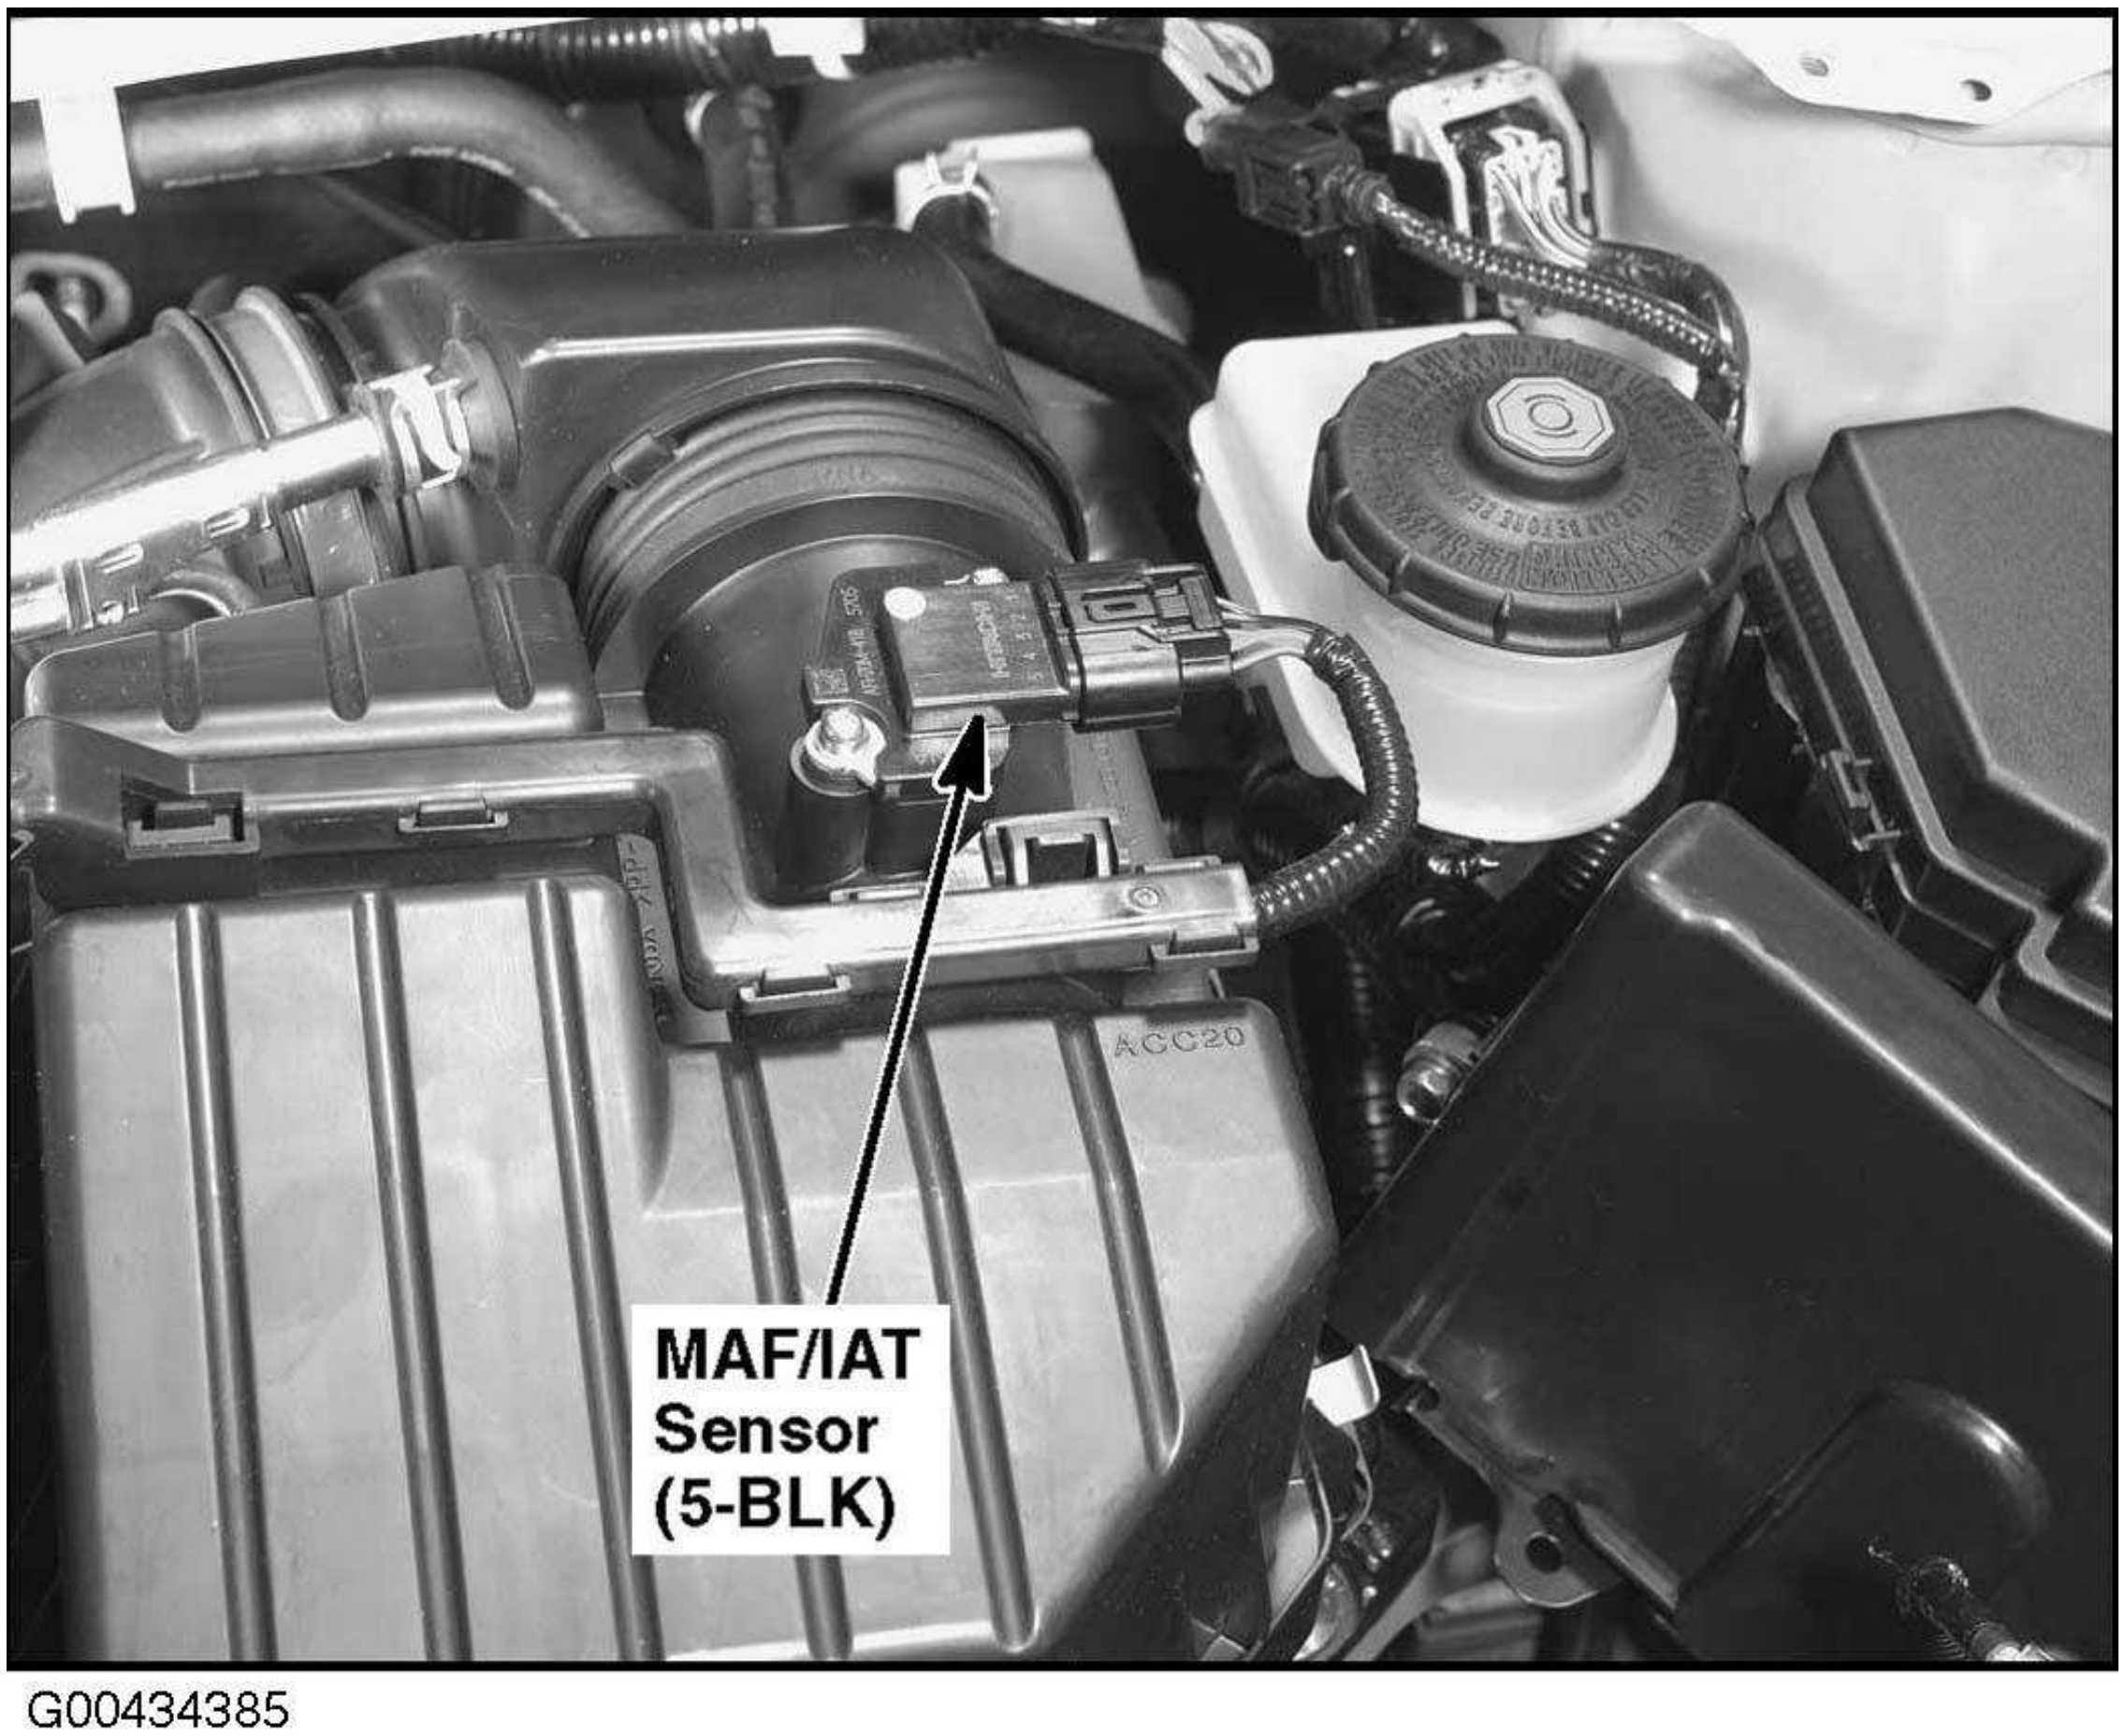
MAF/IAT
Sensor
(5-BLK)
G00434385

Fig. 46: Left Rear Of Engine Compartment (Except Si)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

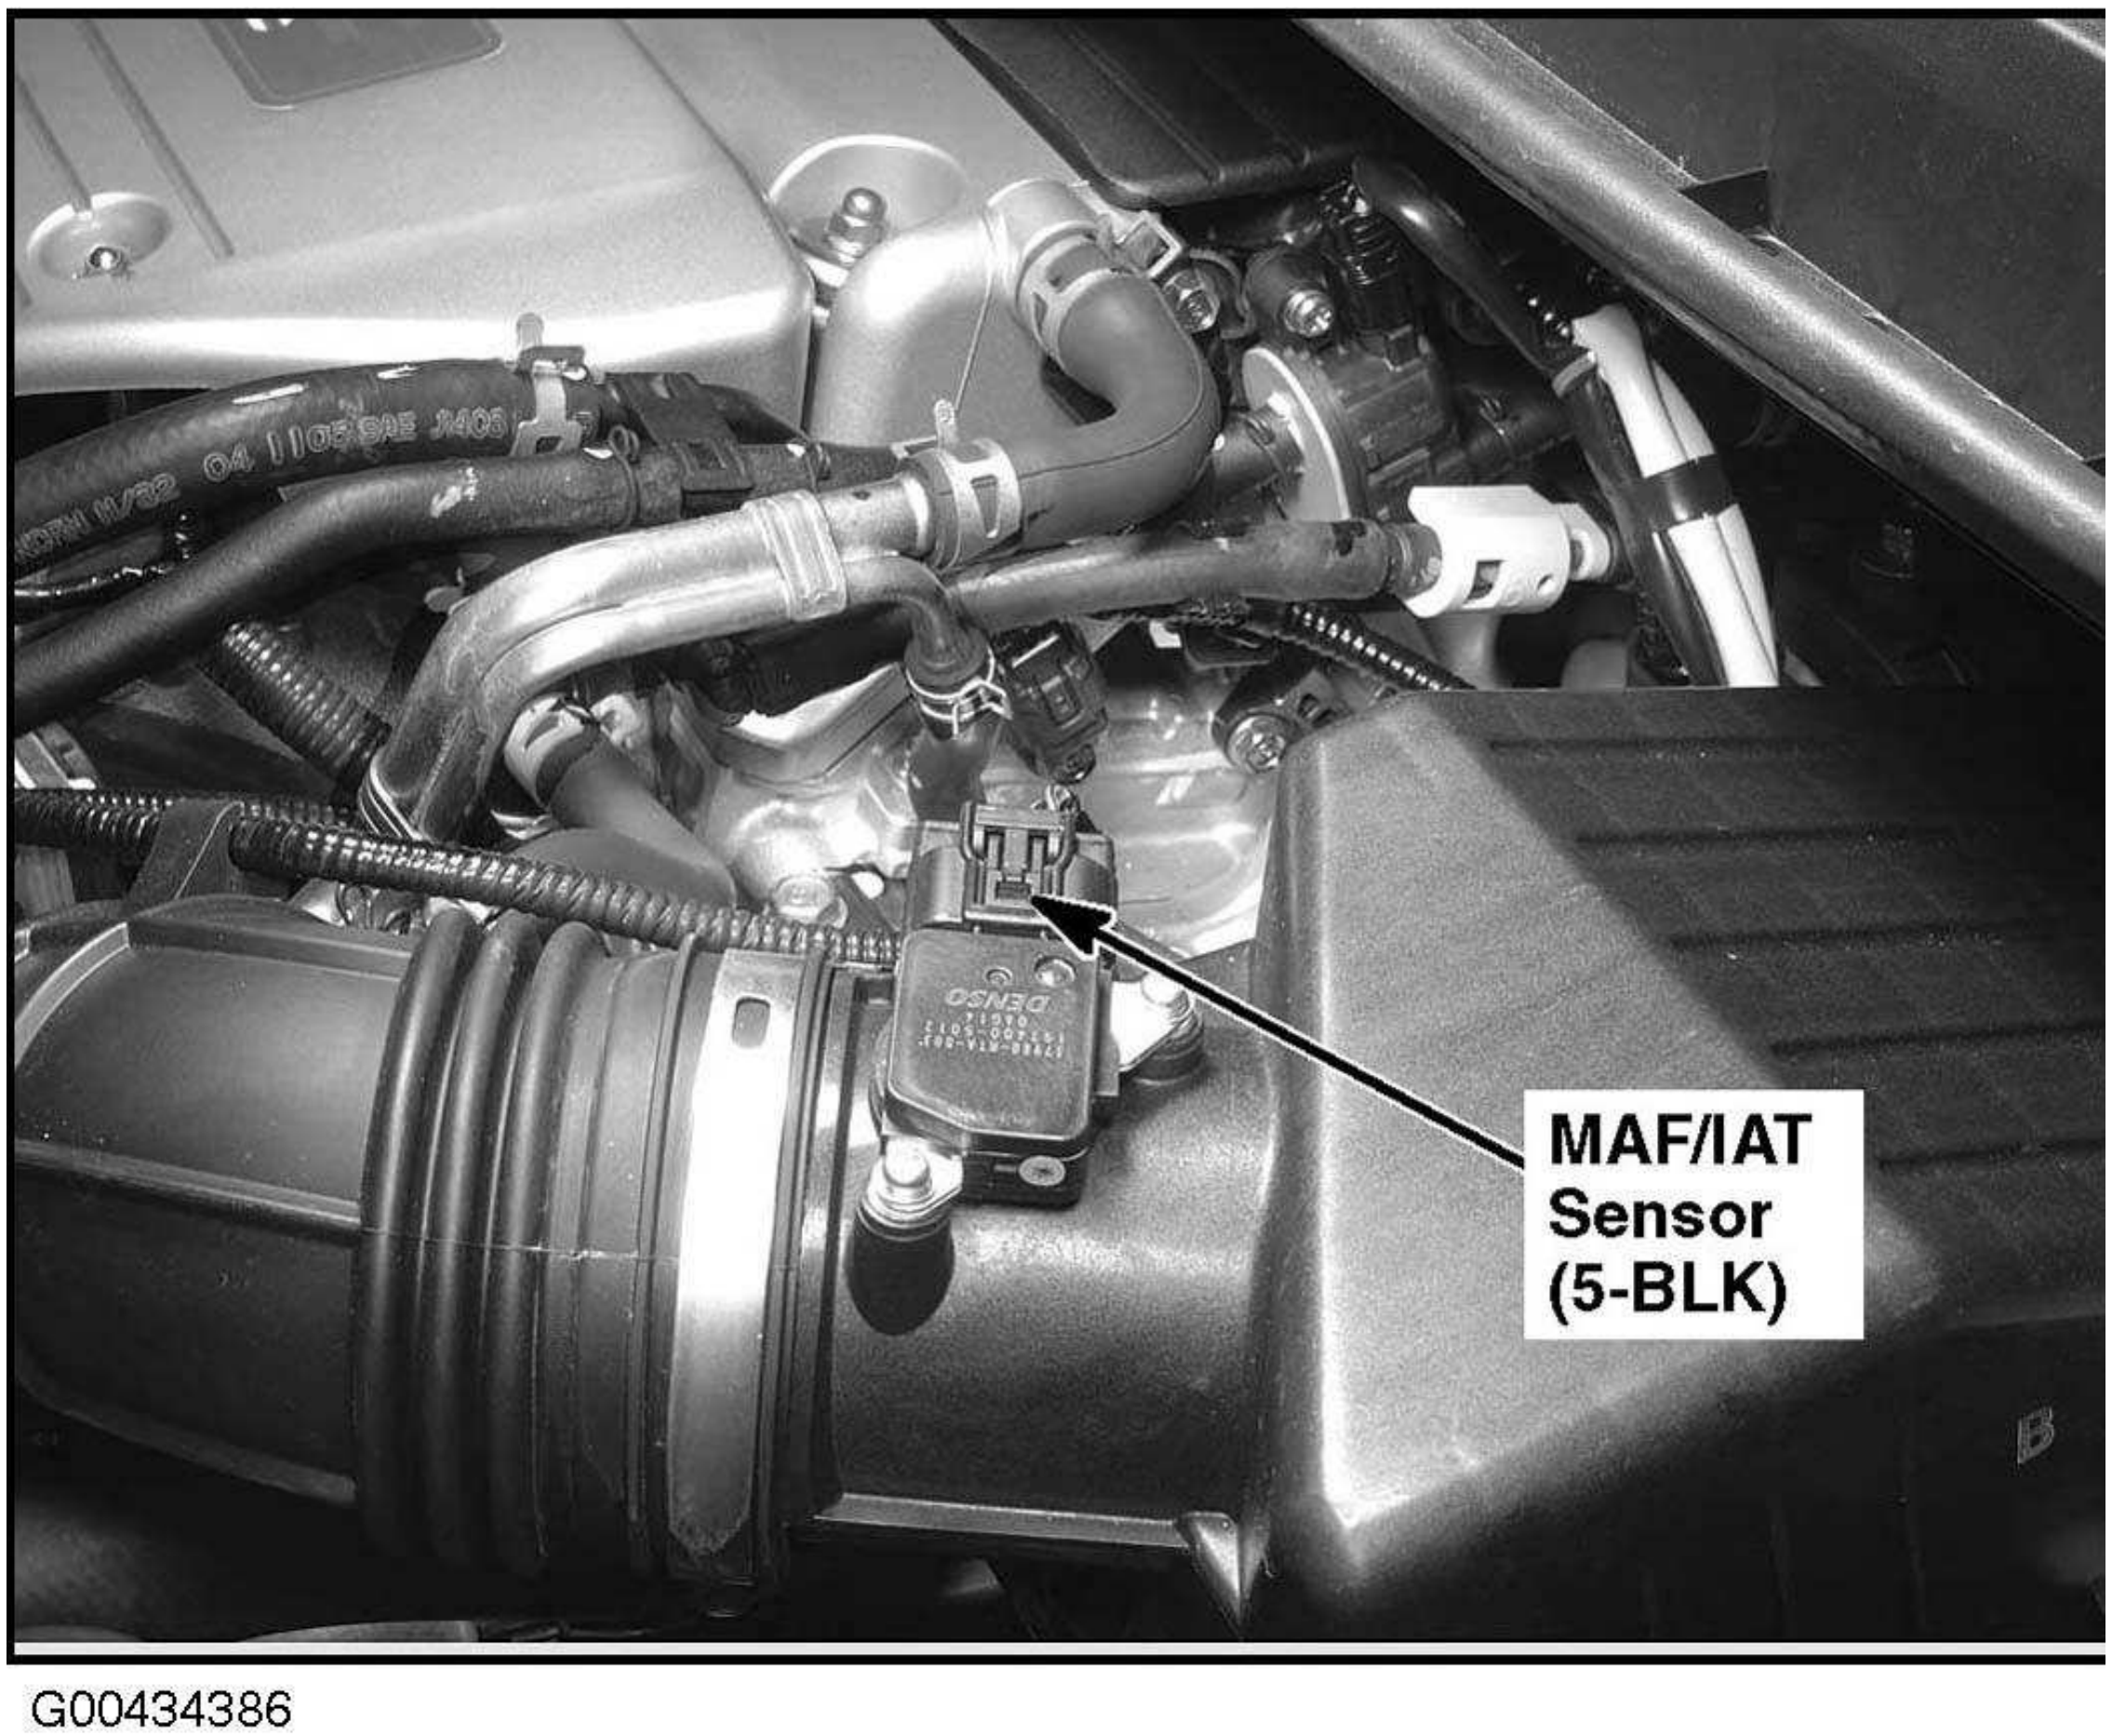

MAF/IAT Sensor (5-BLK)
G00434386

Fig. 47: Left Side Of Engine Compartment (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

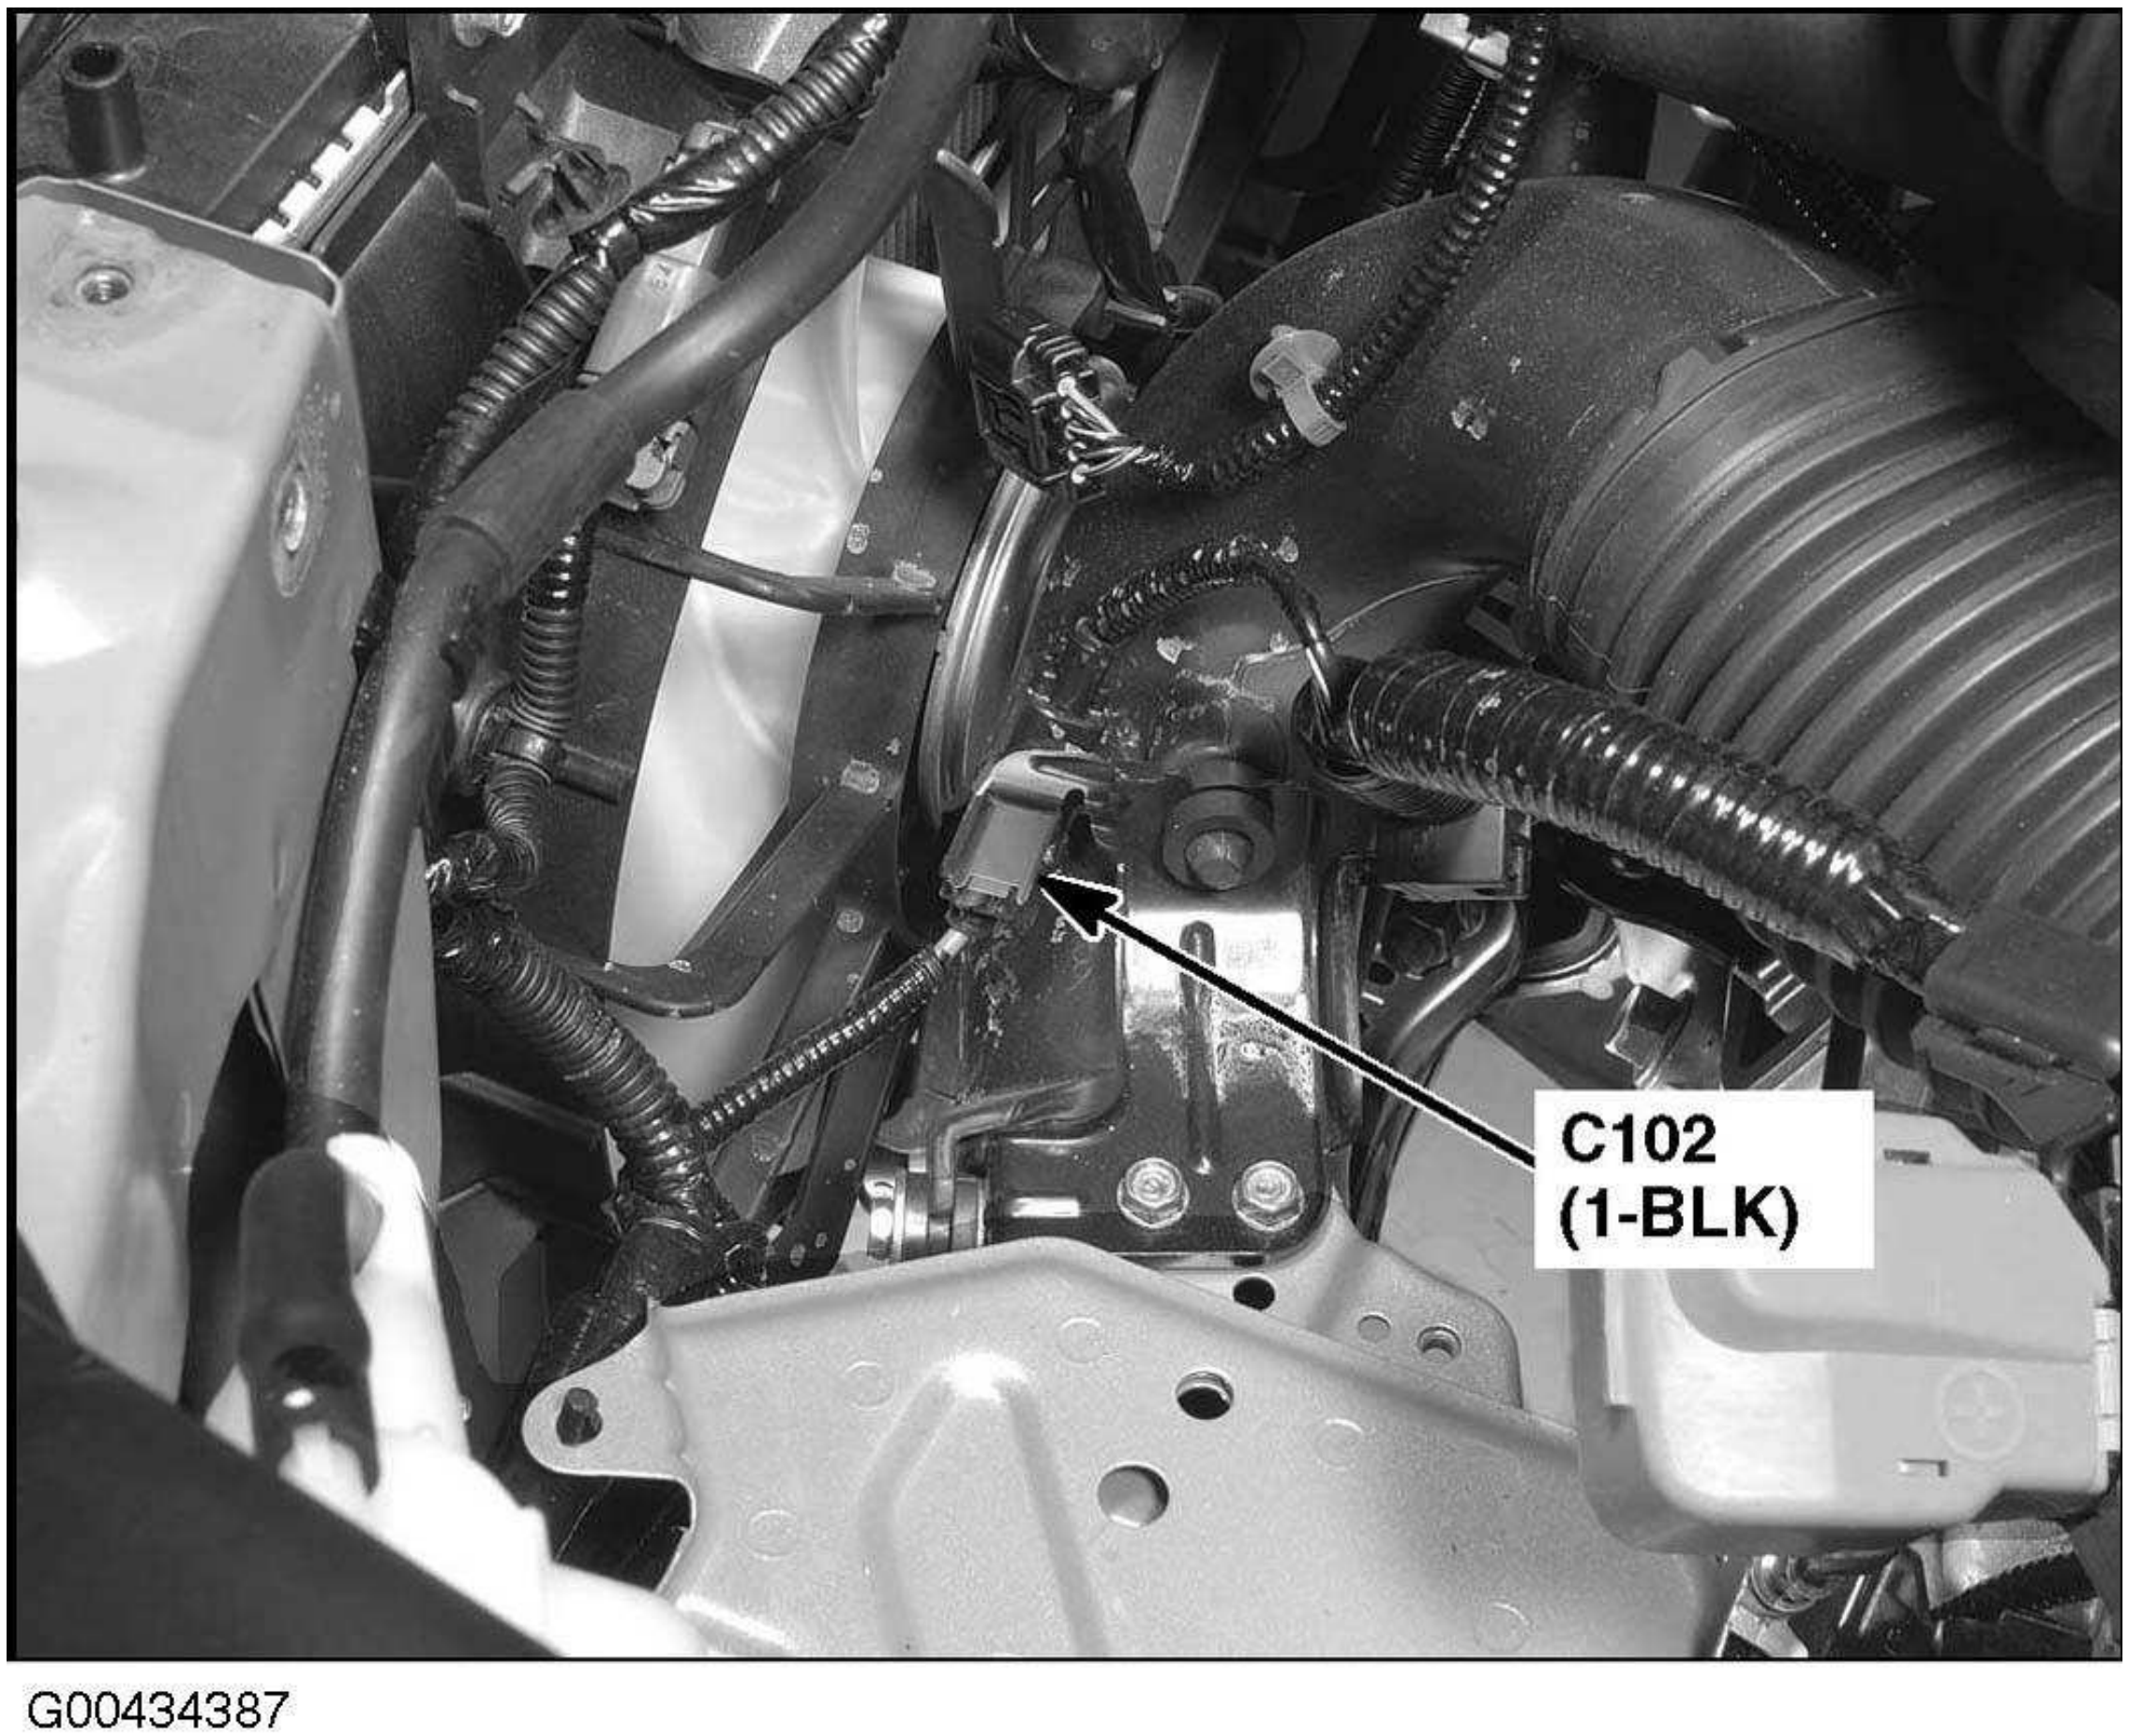
C102
(1-BLK)
G00434387

Fig. 48: Left Front Of Engine Compartment (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

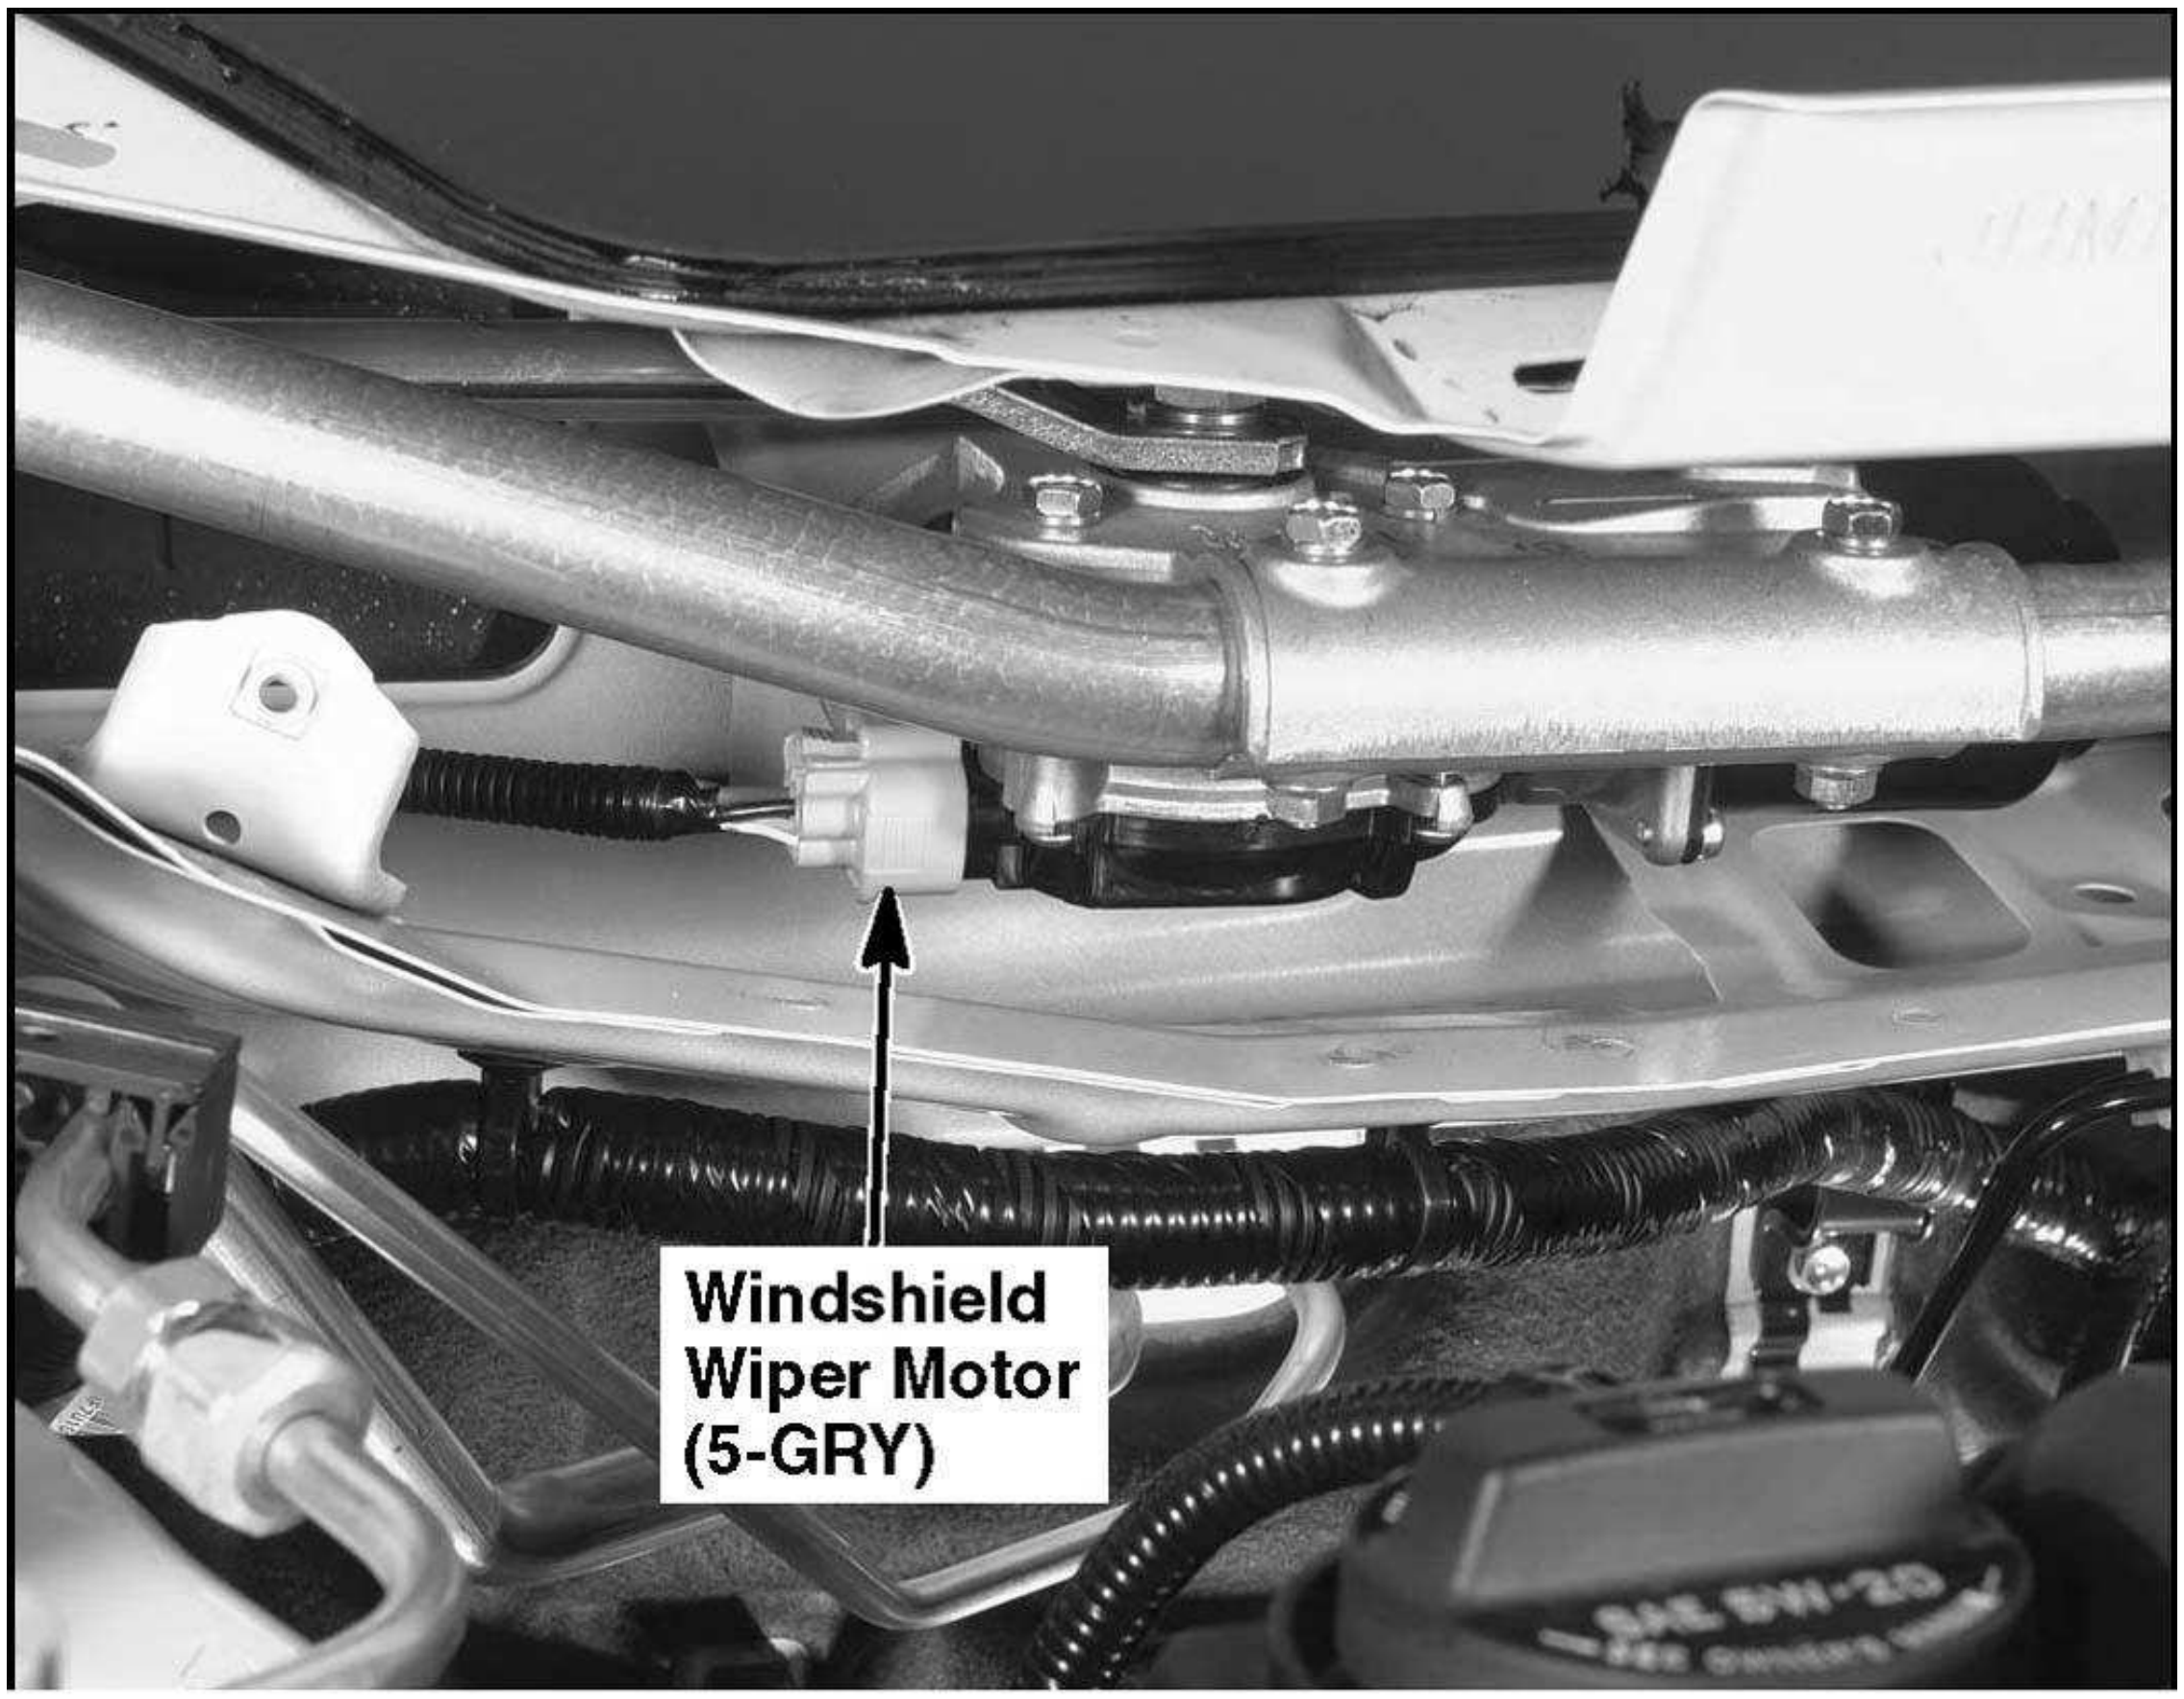
Windshield
Wiper Motor
(5-GRY)
SAE 5W-20
G00434388

Fig. 49: Under Right Side Of Windshield
Courtesy of AMERICAN HONDA MOTOR CO., INC.

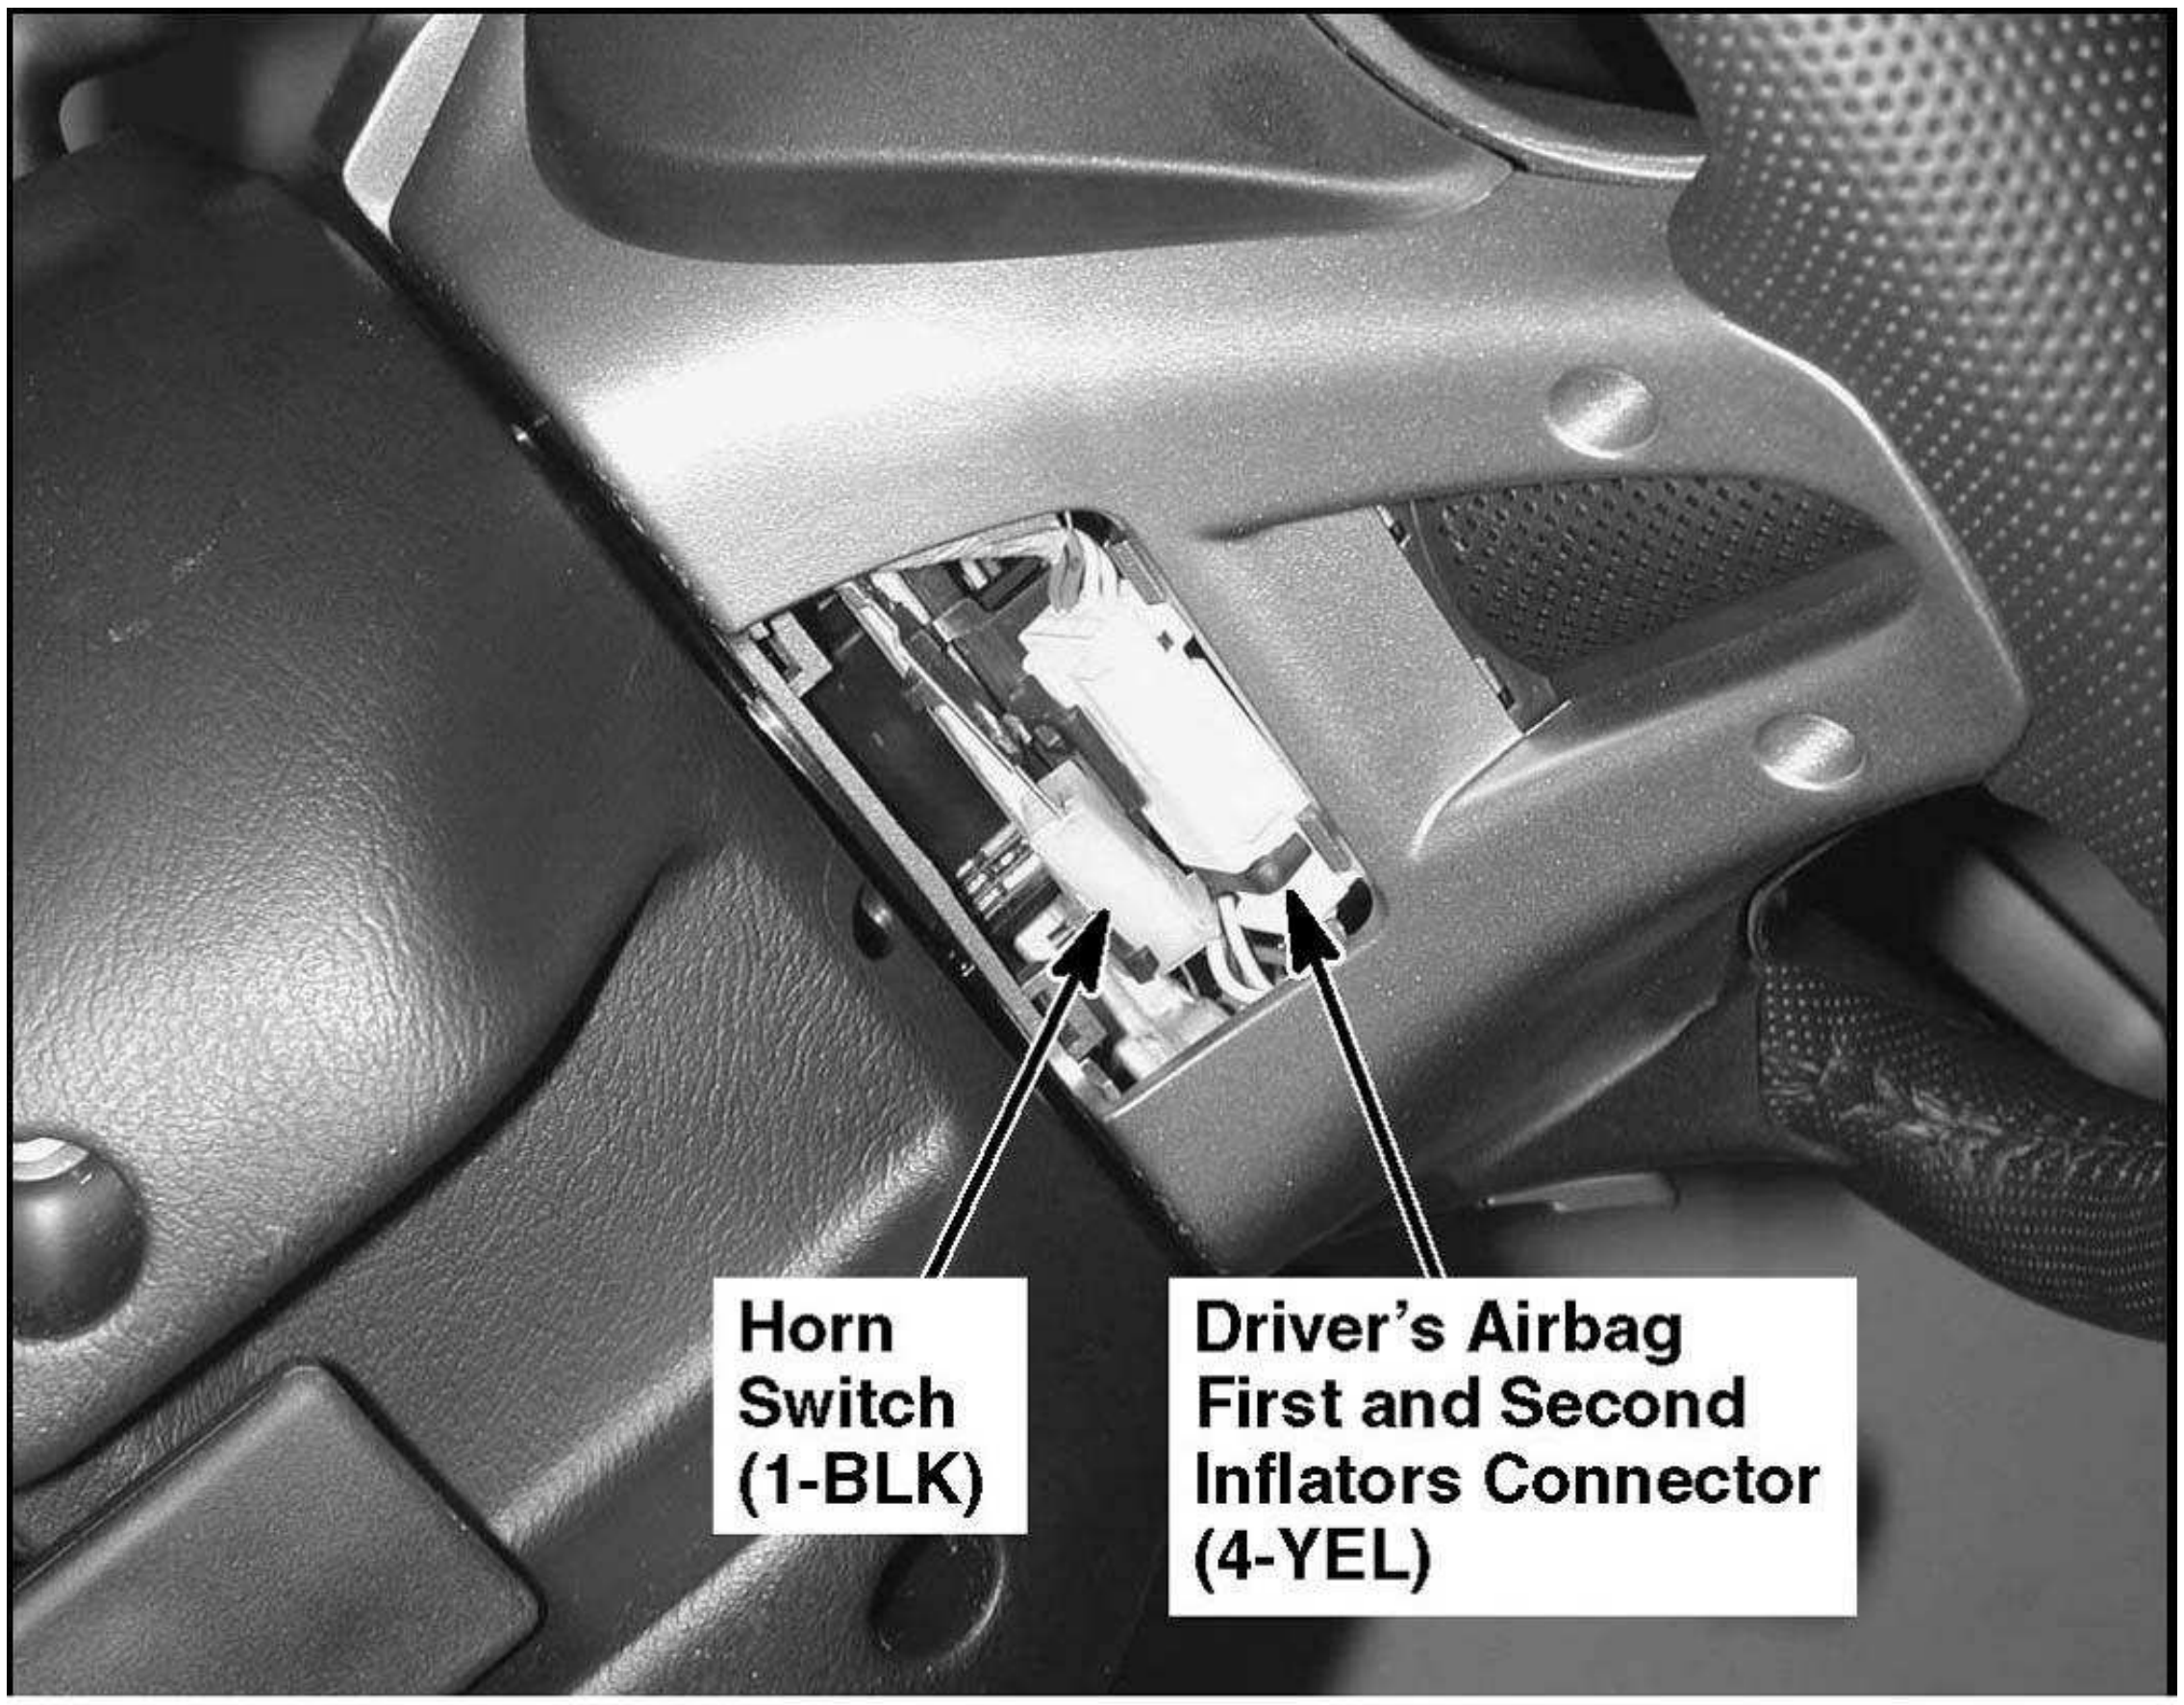
Horn Switch (1-BLK)
Driver's Airbag First and Second Inflators Connector (4-YEL)
G00434389

Fig. 50: Steering Wheel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

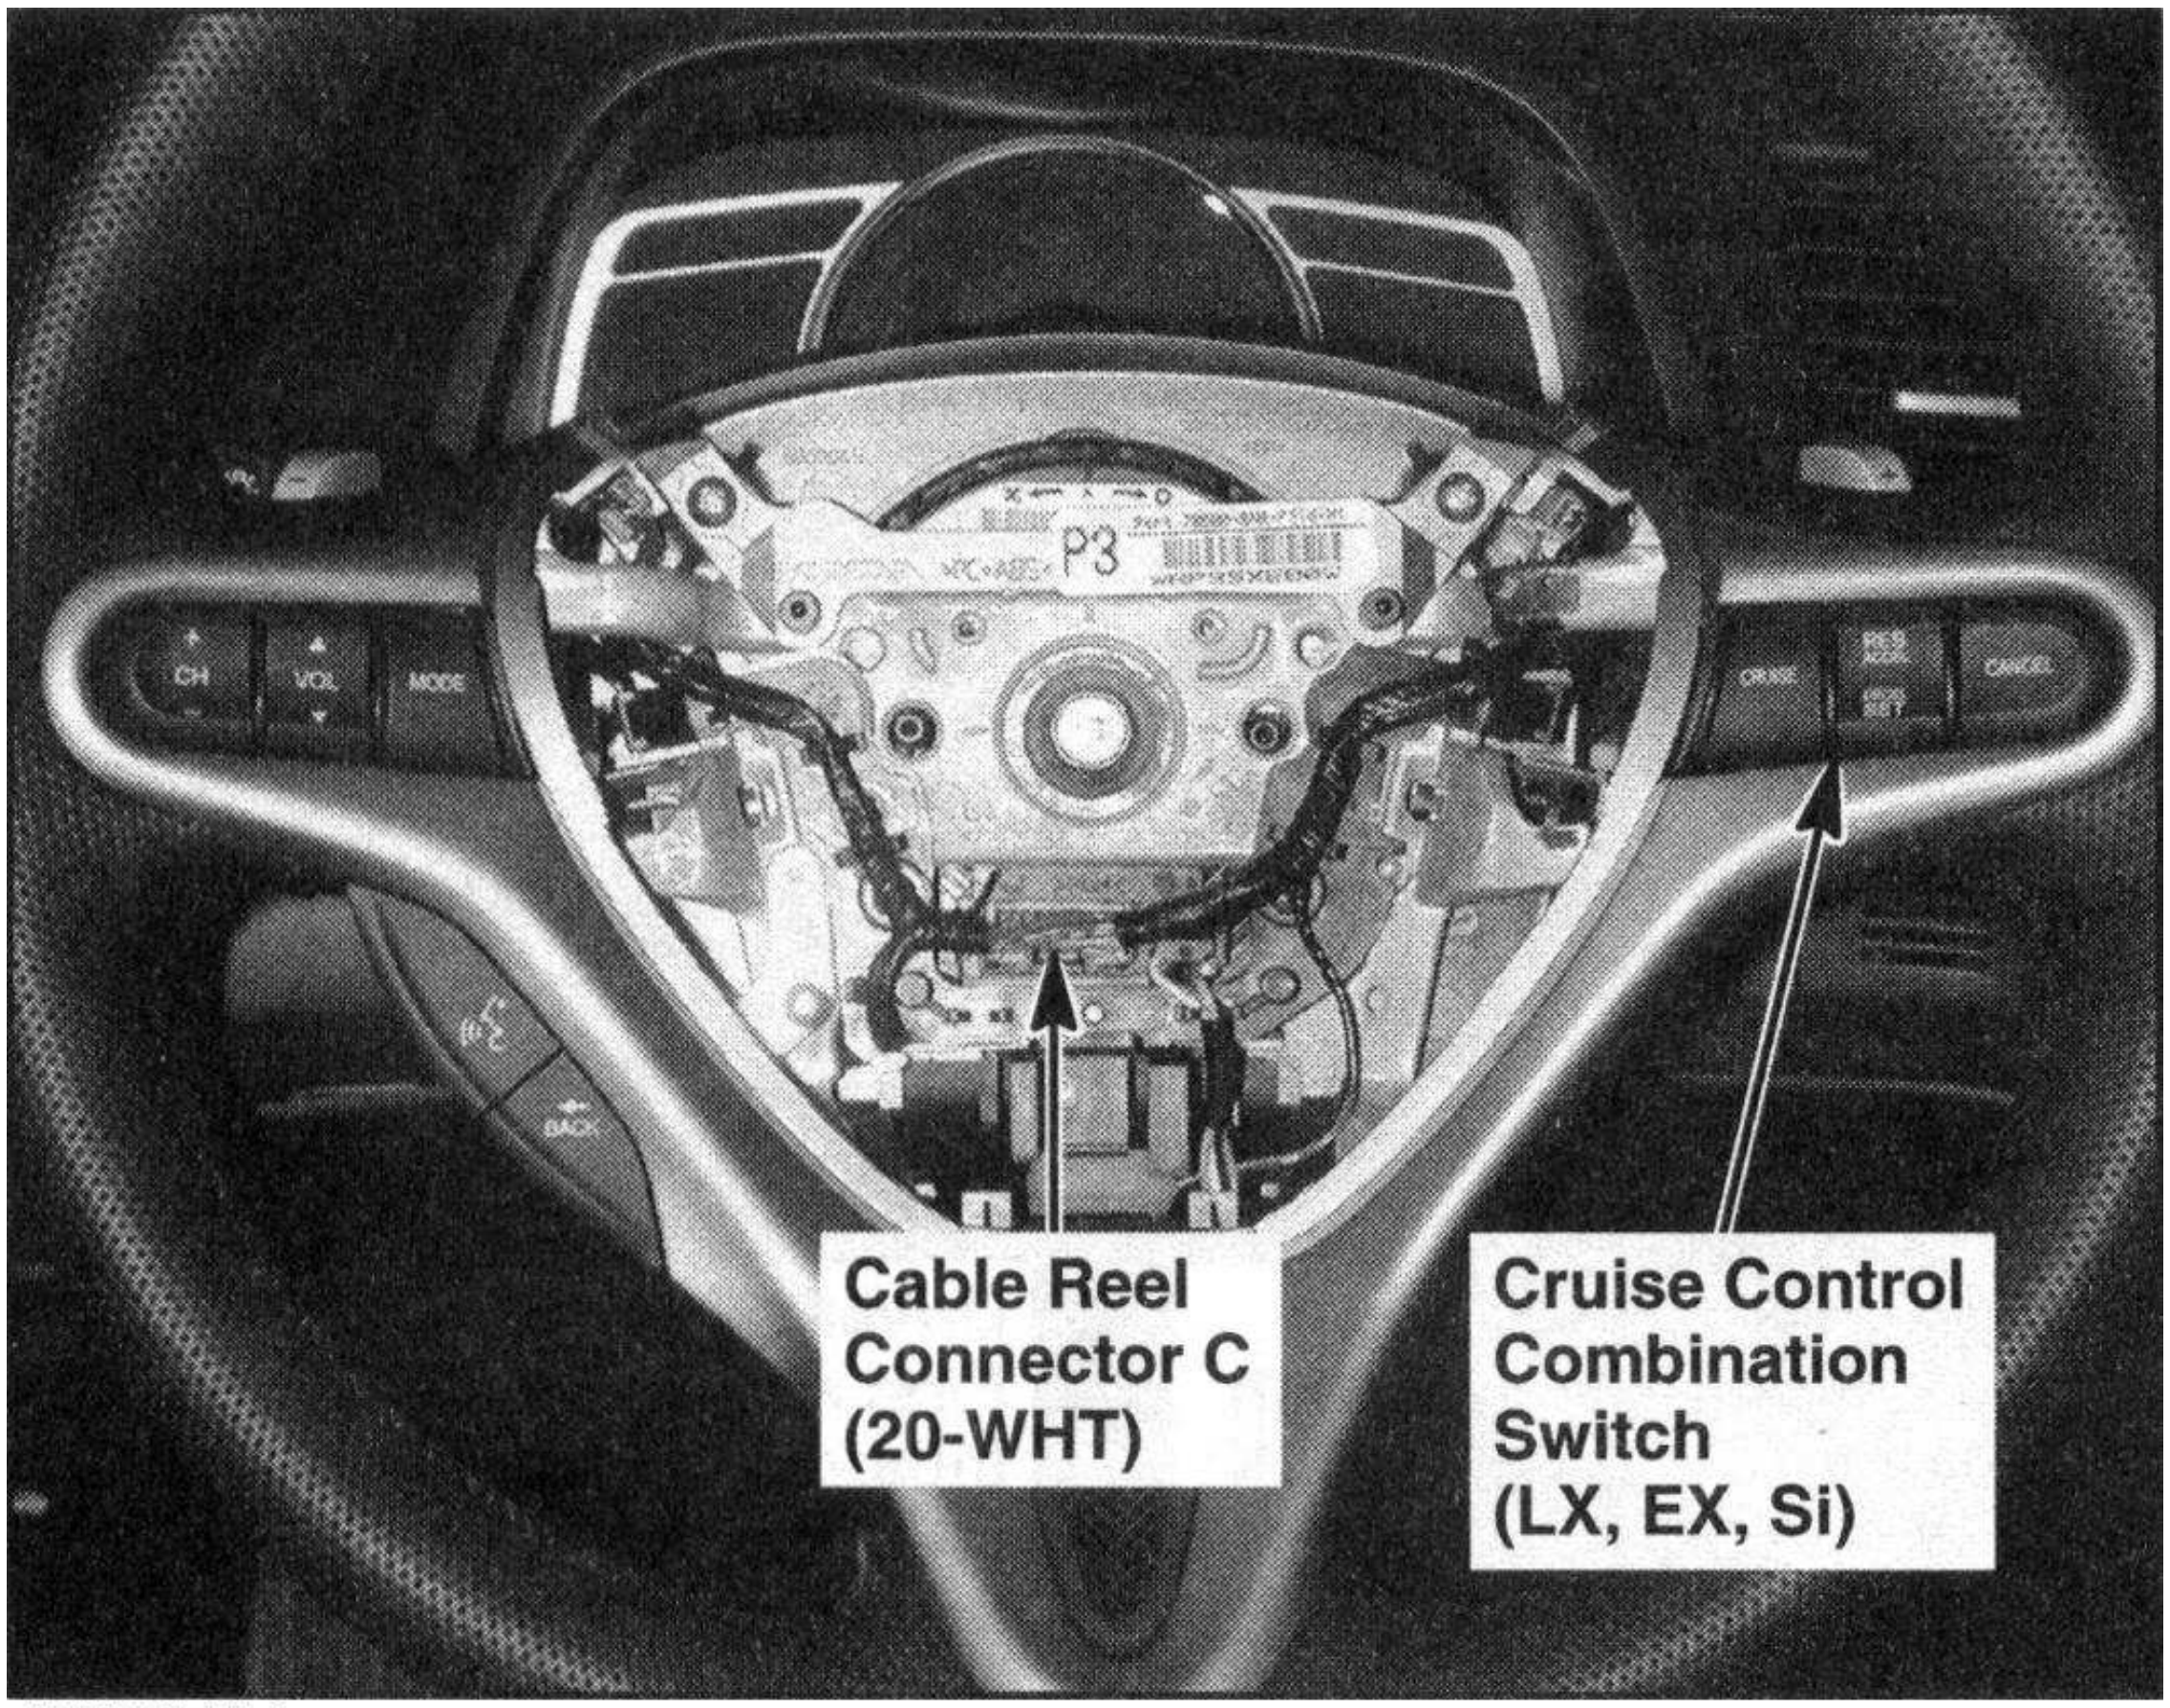
CH
VOL
MODE
CRUISE
RES ACCEL
DECEL SET
CANCEL
BACK
P3
Cable Reel Connector C (20-WHT)
Cruise Control Combination Switch (LX, EX, Si)

G00447702

Fig. 51: Steering Wheel

Courtesy of AMERICAN HONDA MOTOR CO., INC.

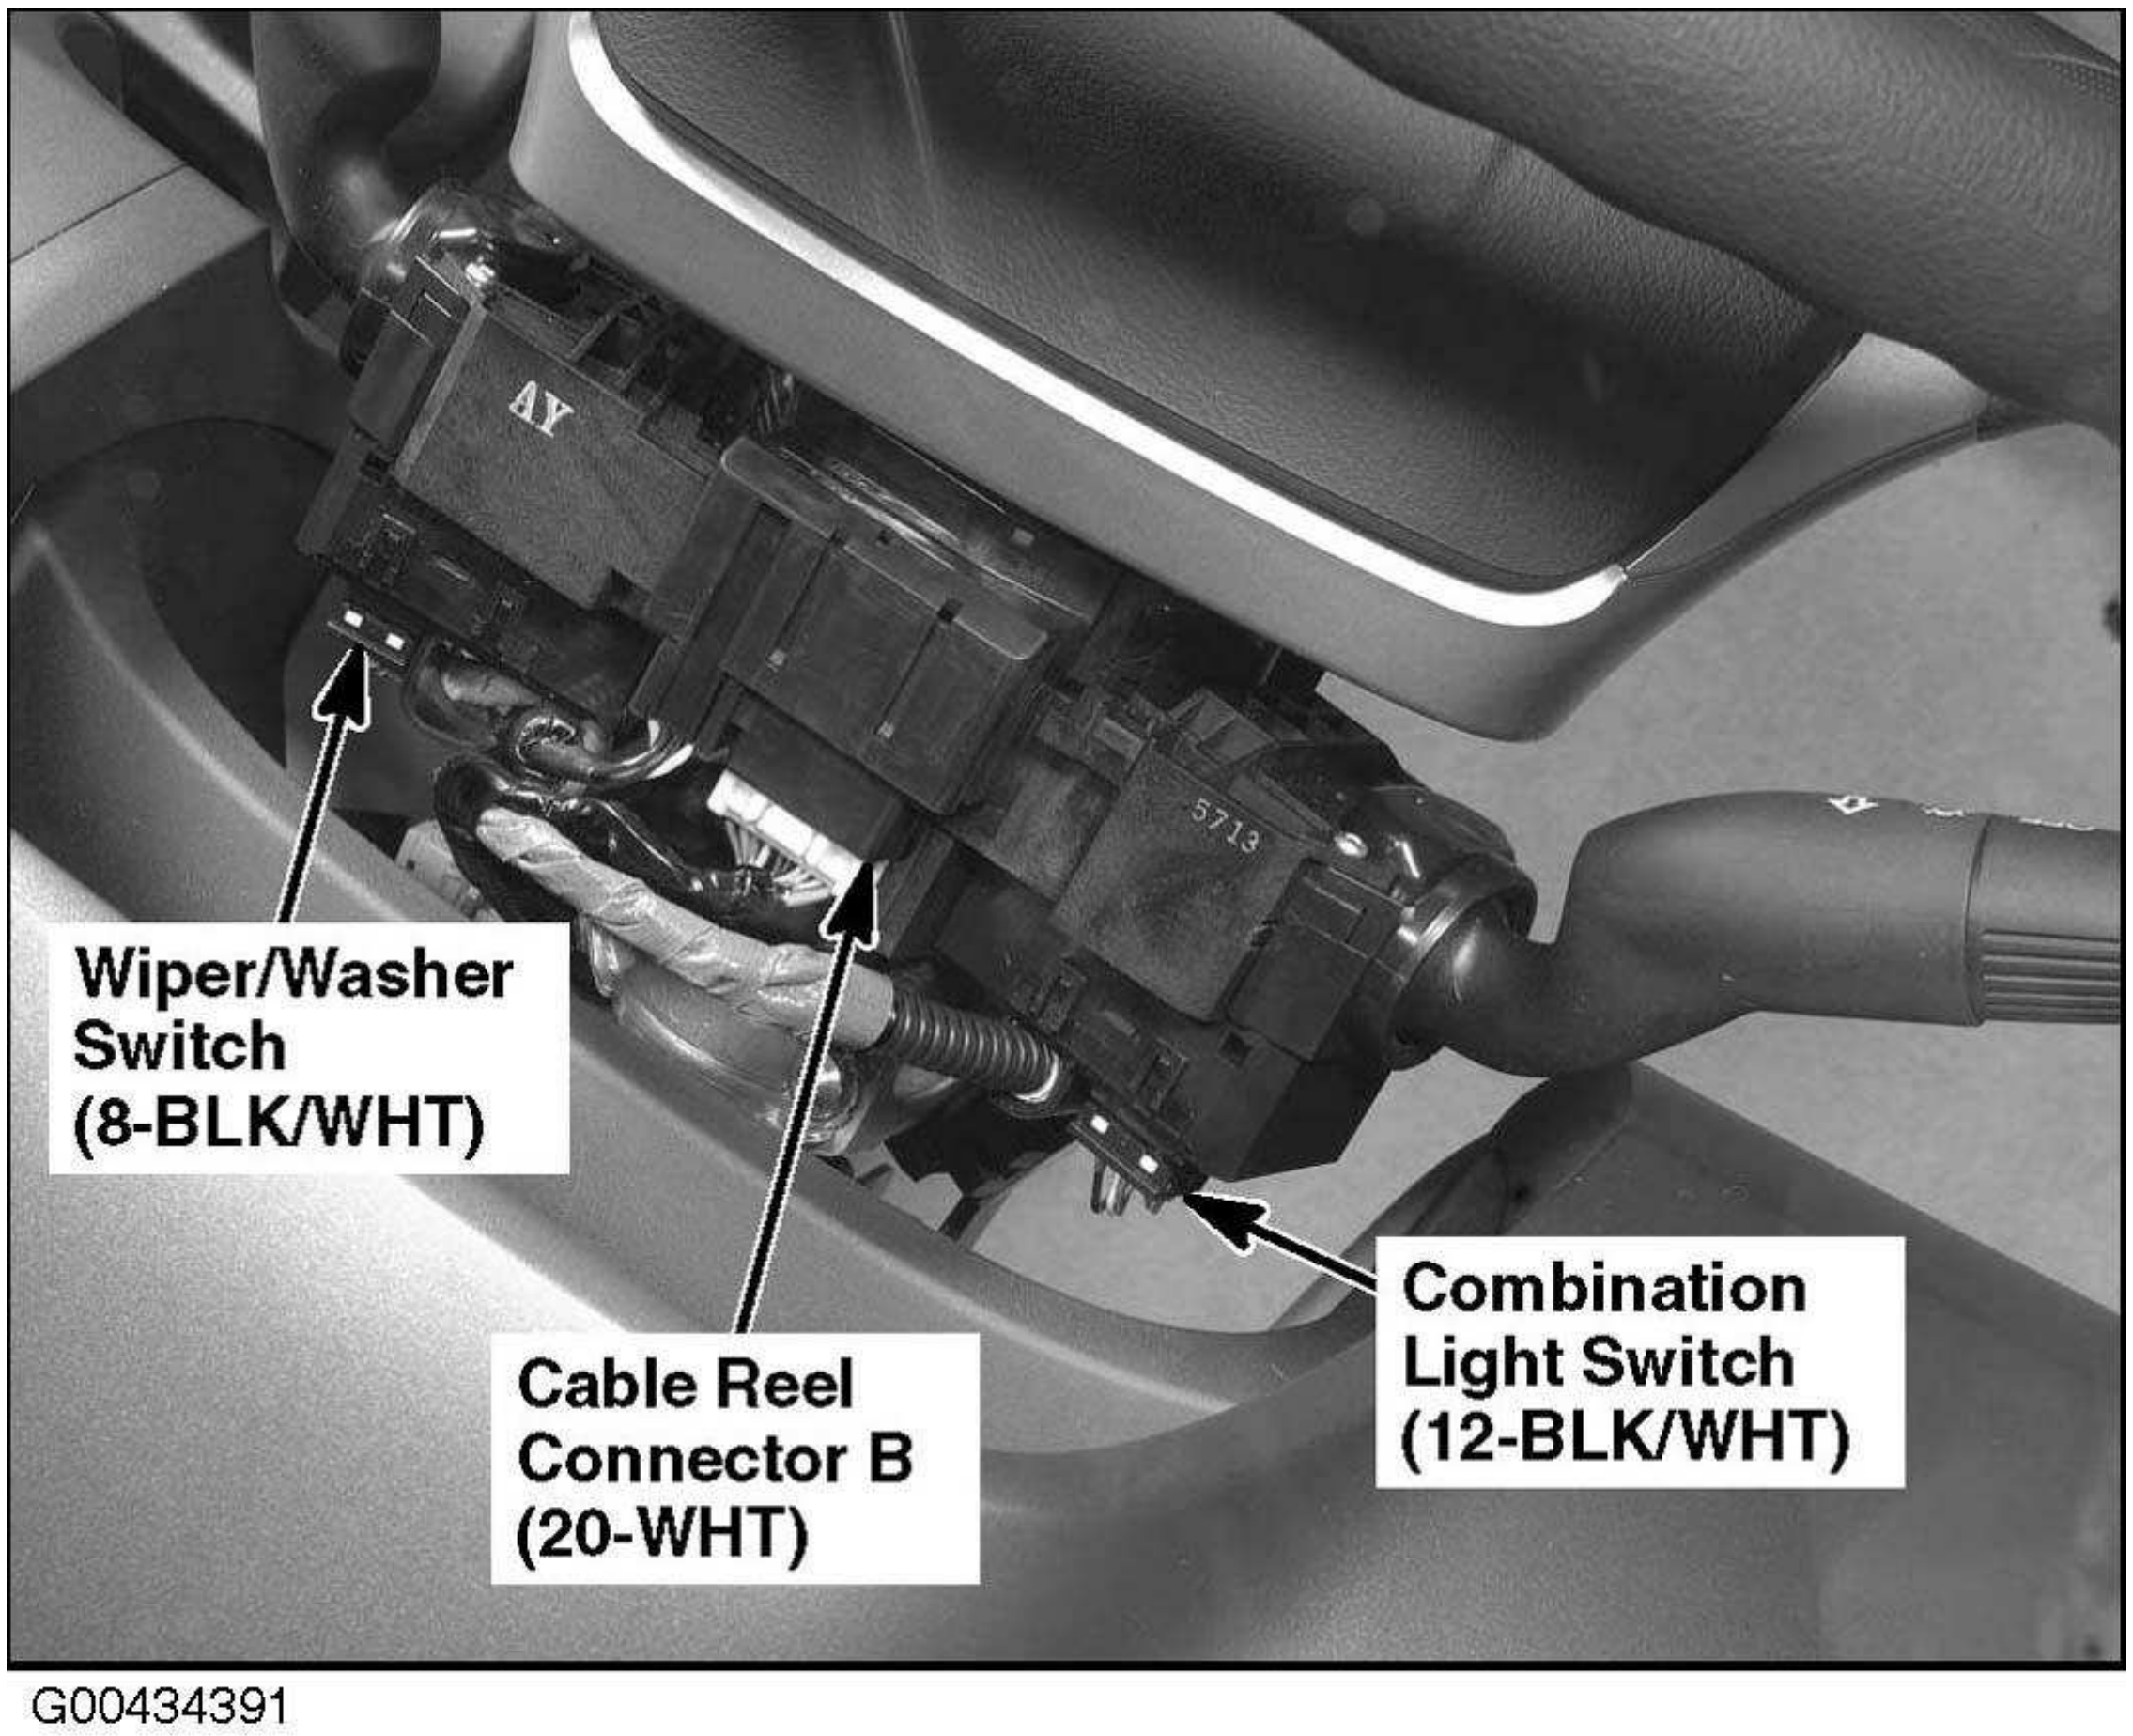
Wiper/Washer Switch (8-BLK/WHT)
Cable Reel Connector B (20-WHT)
Combination Light Switch (12-BLK/WHT)
G00434391

Fig. 52: Steering Column
Courtesy of AMERICAN HONDA MOTOR CO., INC.

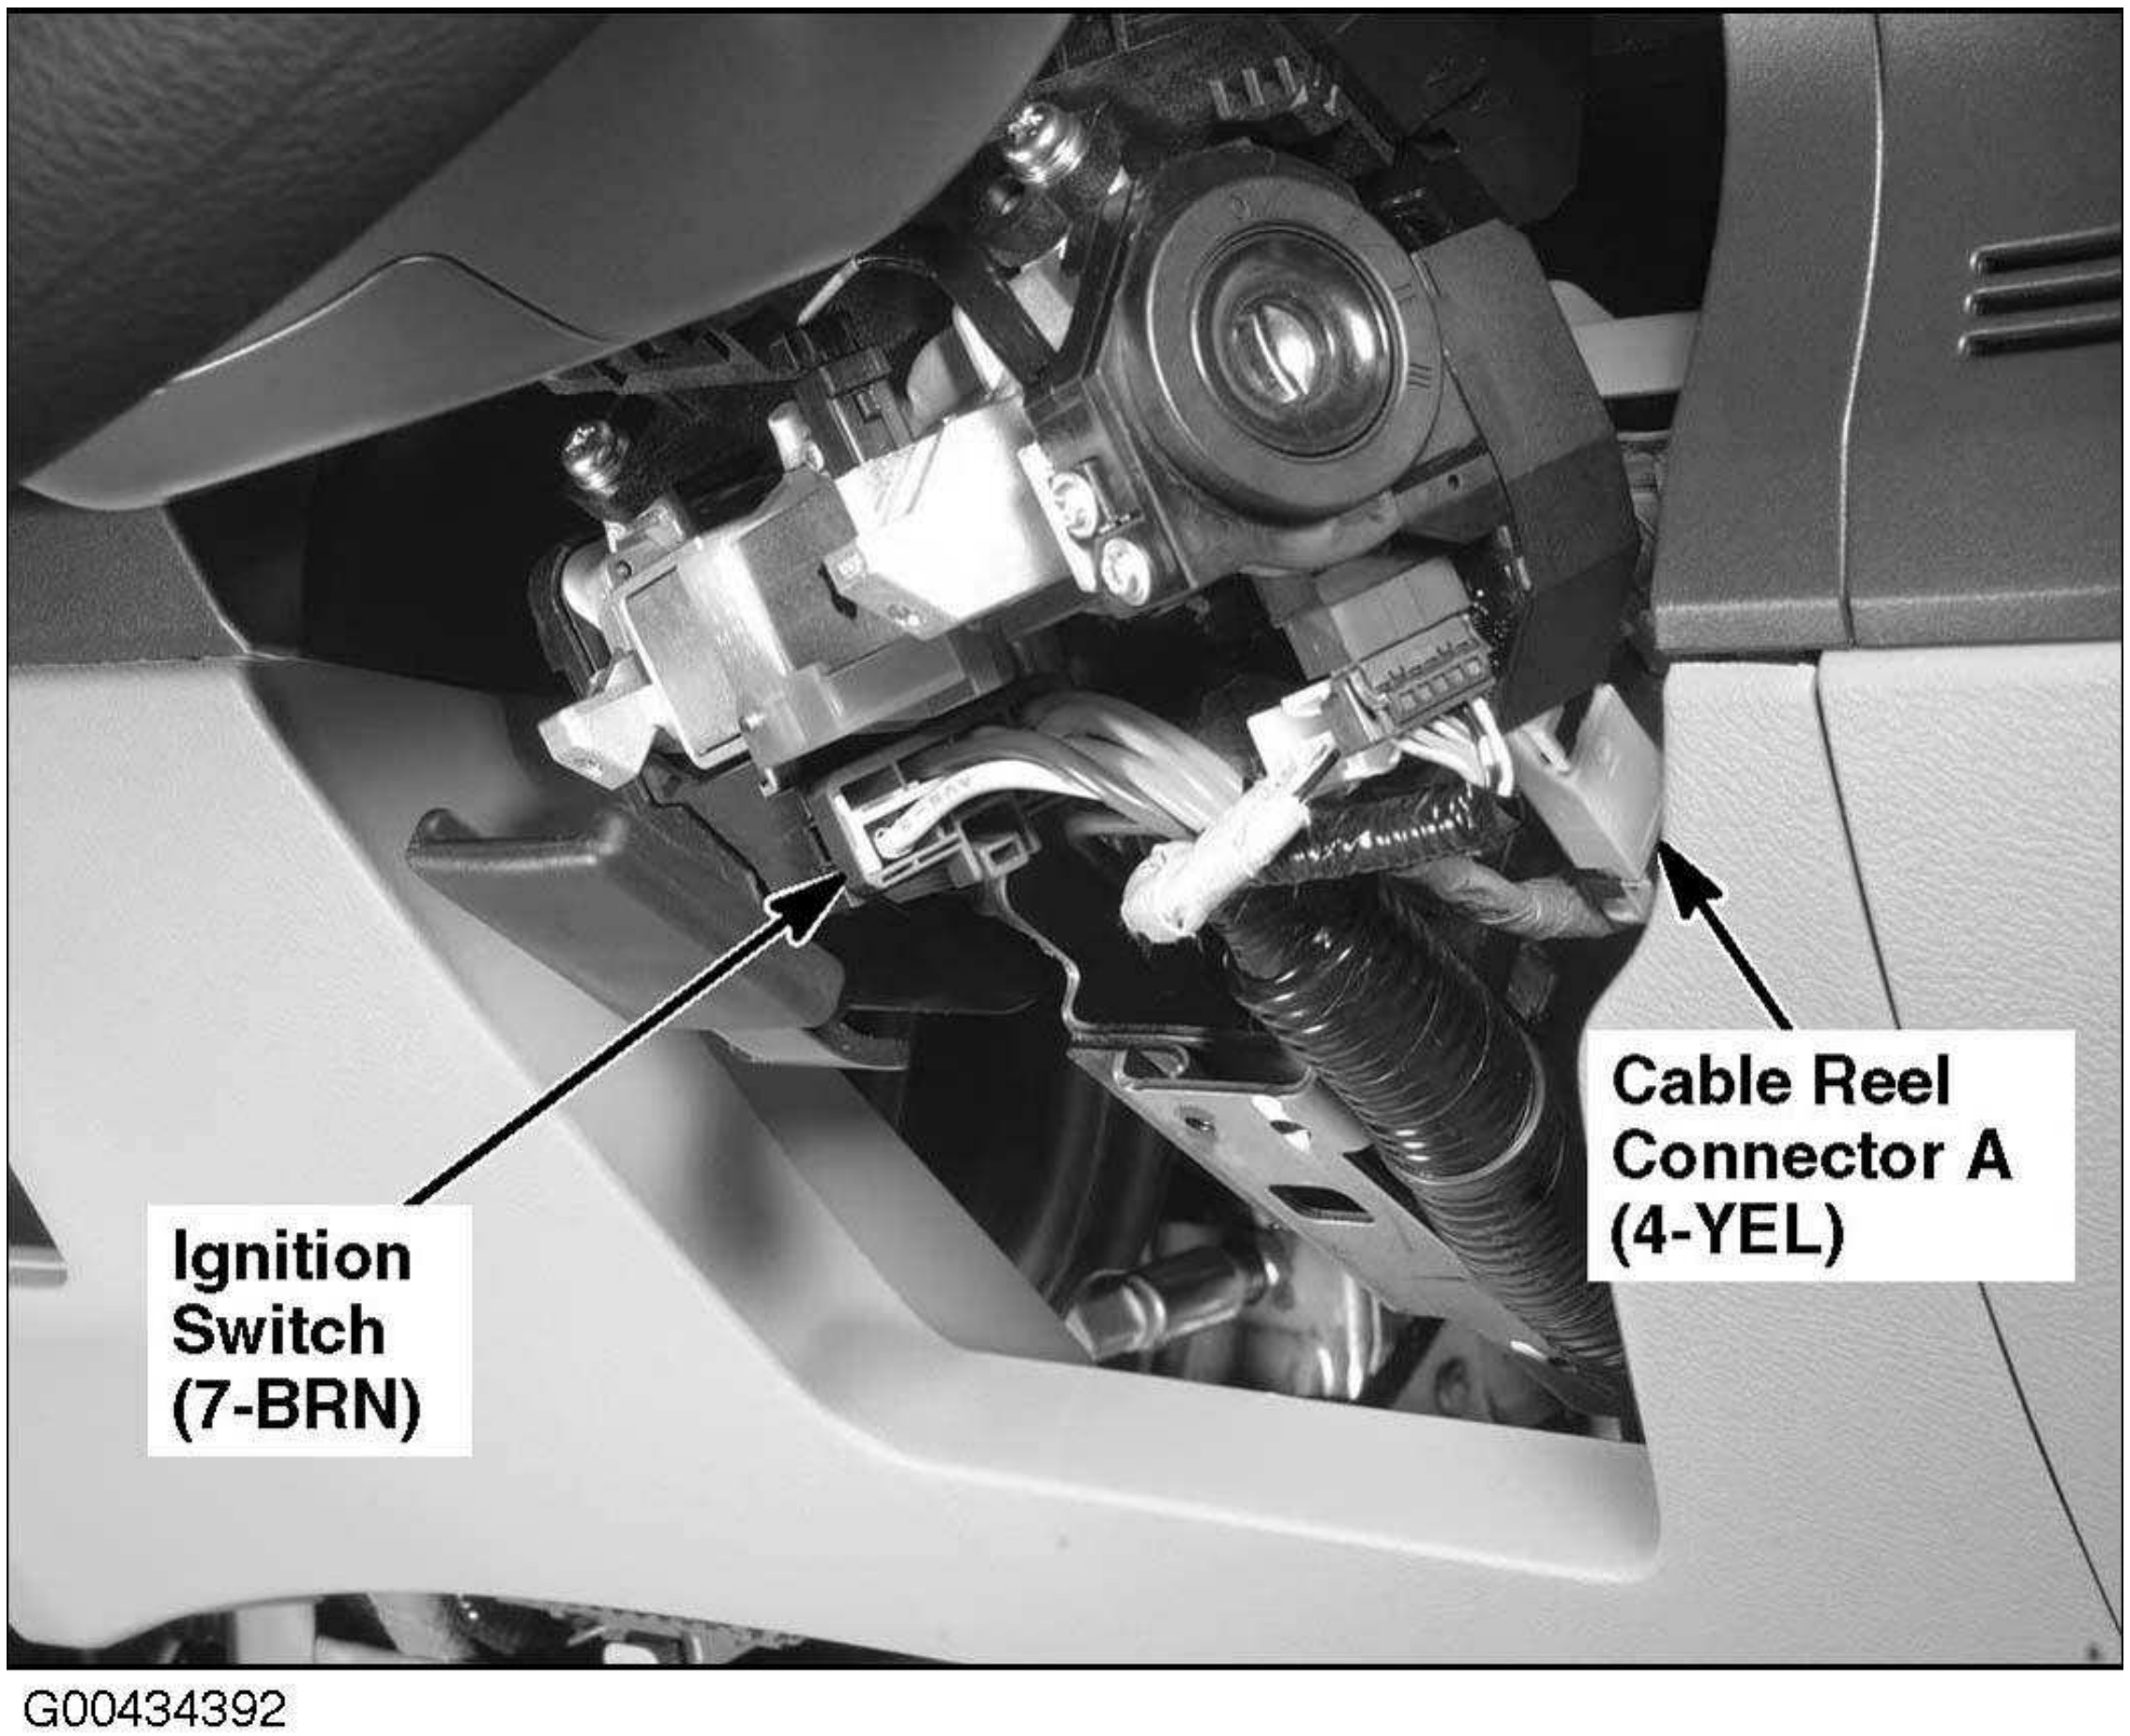
Ignition
Switch
(7-BRN)
Cable Reel
Connector A
(4-YEL)
G00434392

Fig. 53: Steering Column
Courtesy of AMERICAN HONDA MOTOR CO., INC.

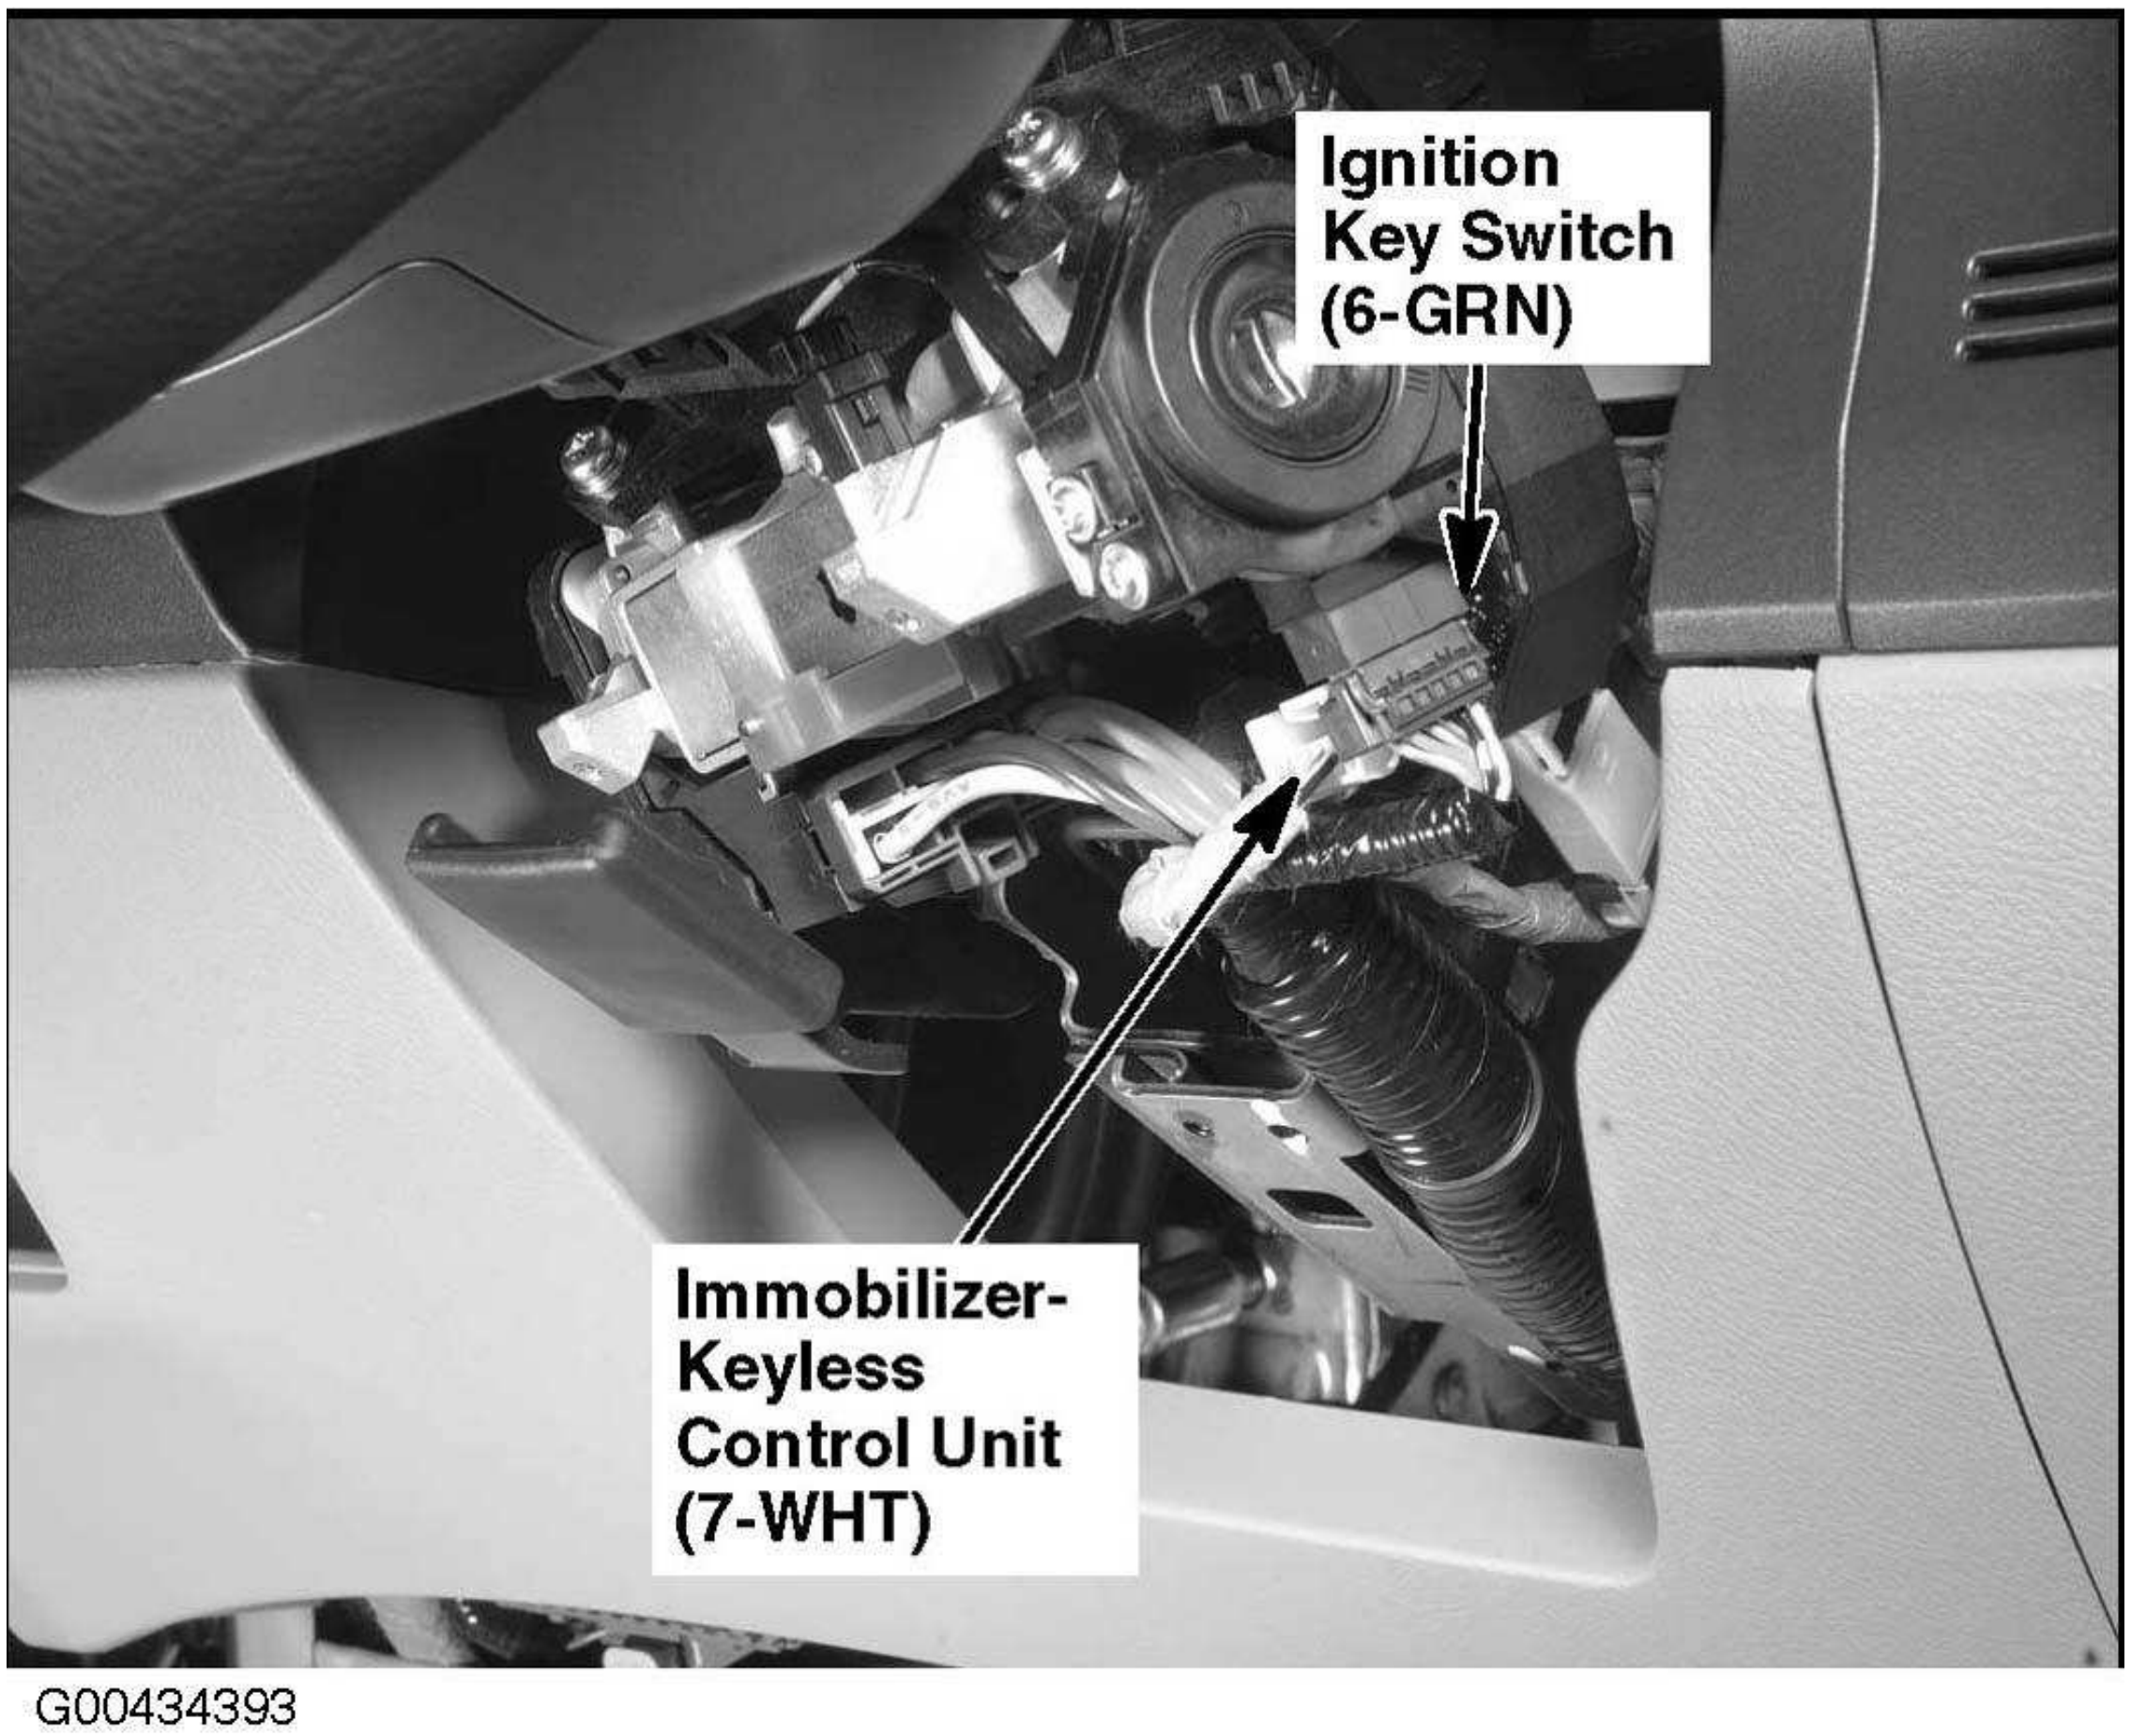
Ignition
Key Switch
(6-GRN)
Immobilizer-
Keyless
Control Unit
(7-WHT)
G00434393

Fig. 54: Steering Column
Courtesy of AMERICAN HONDA MOTOR CO., INC.

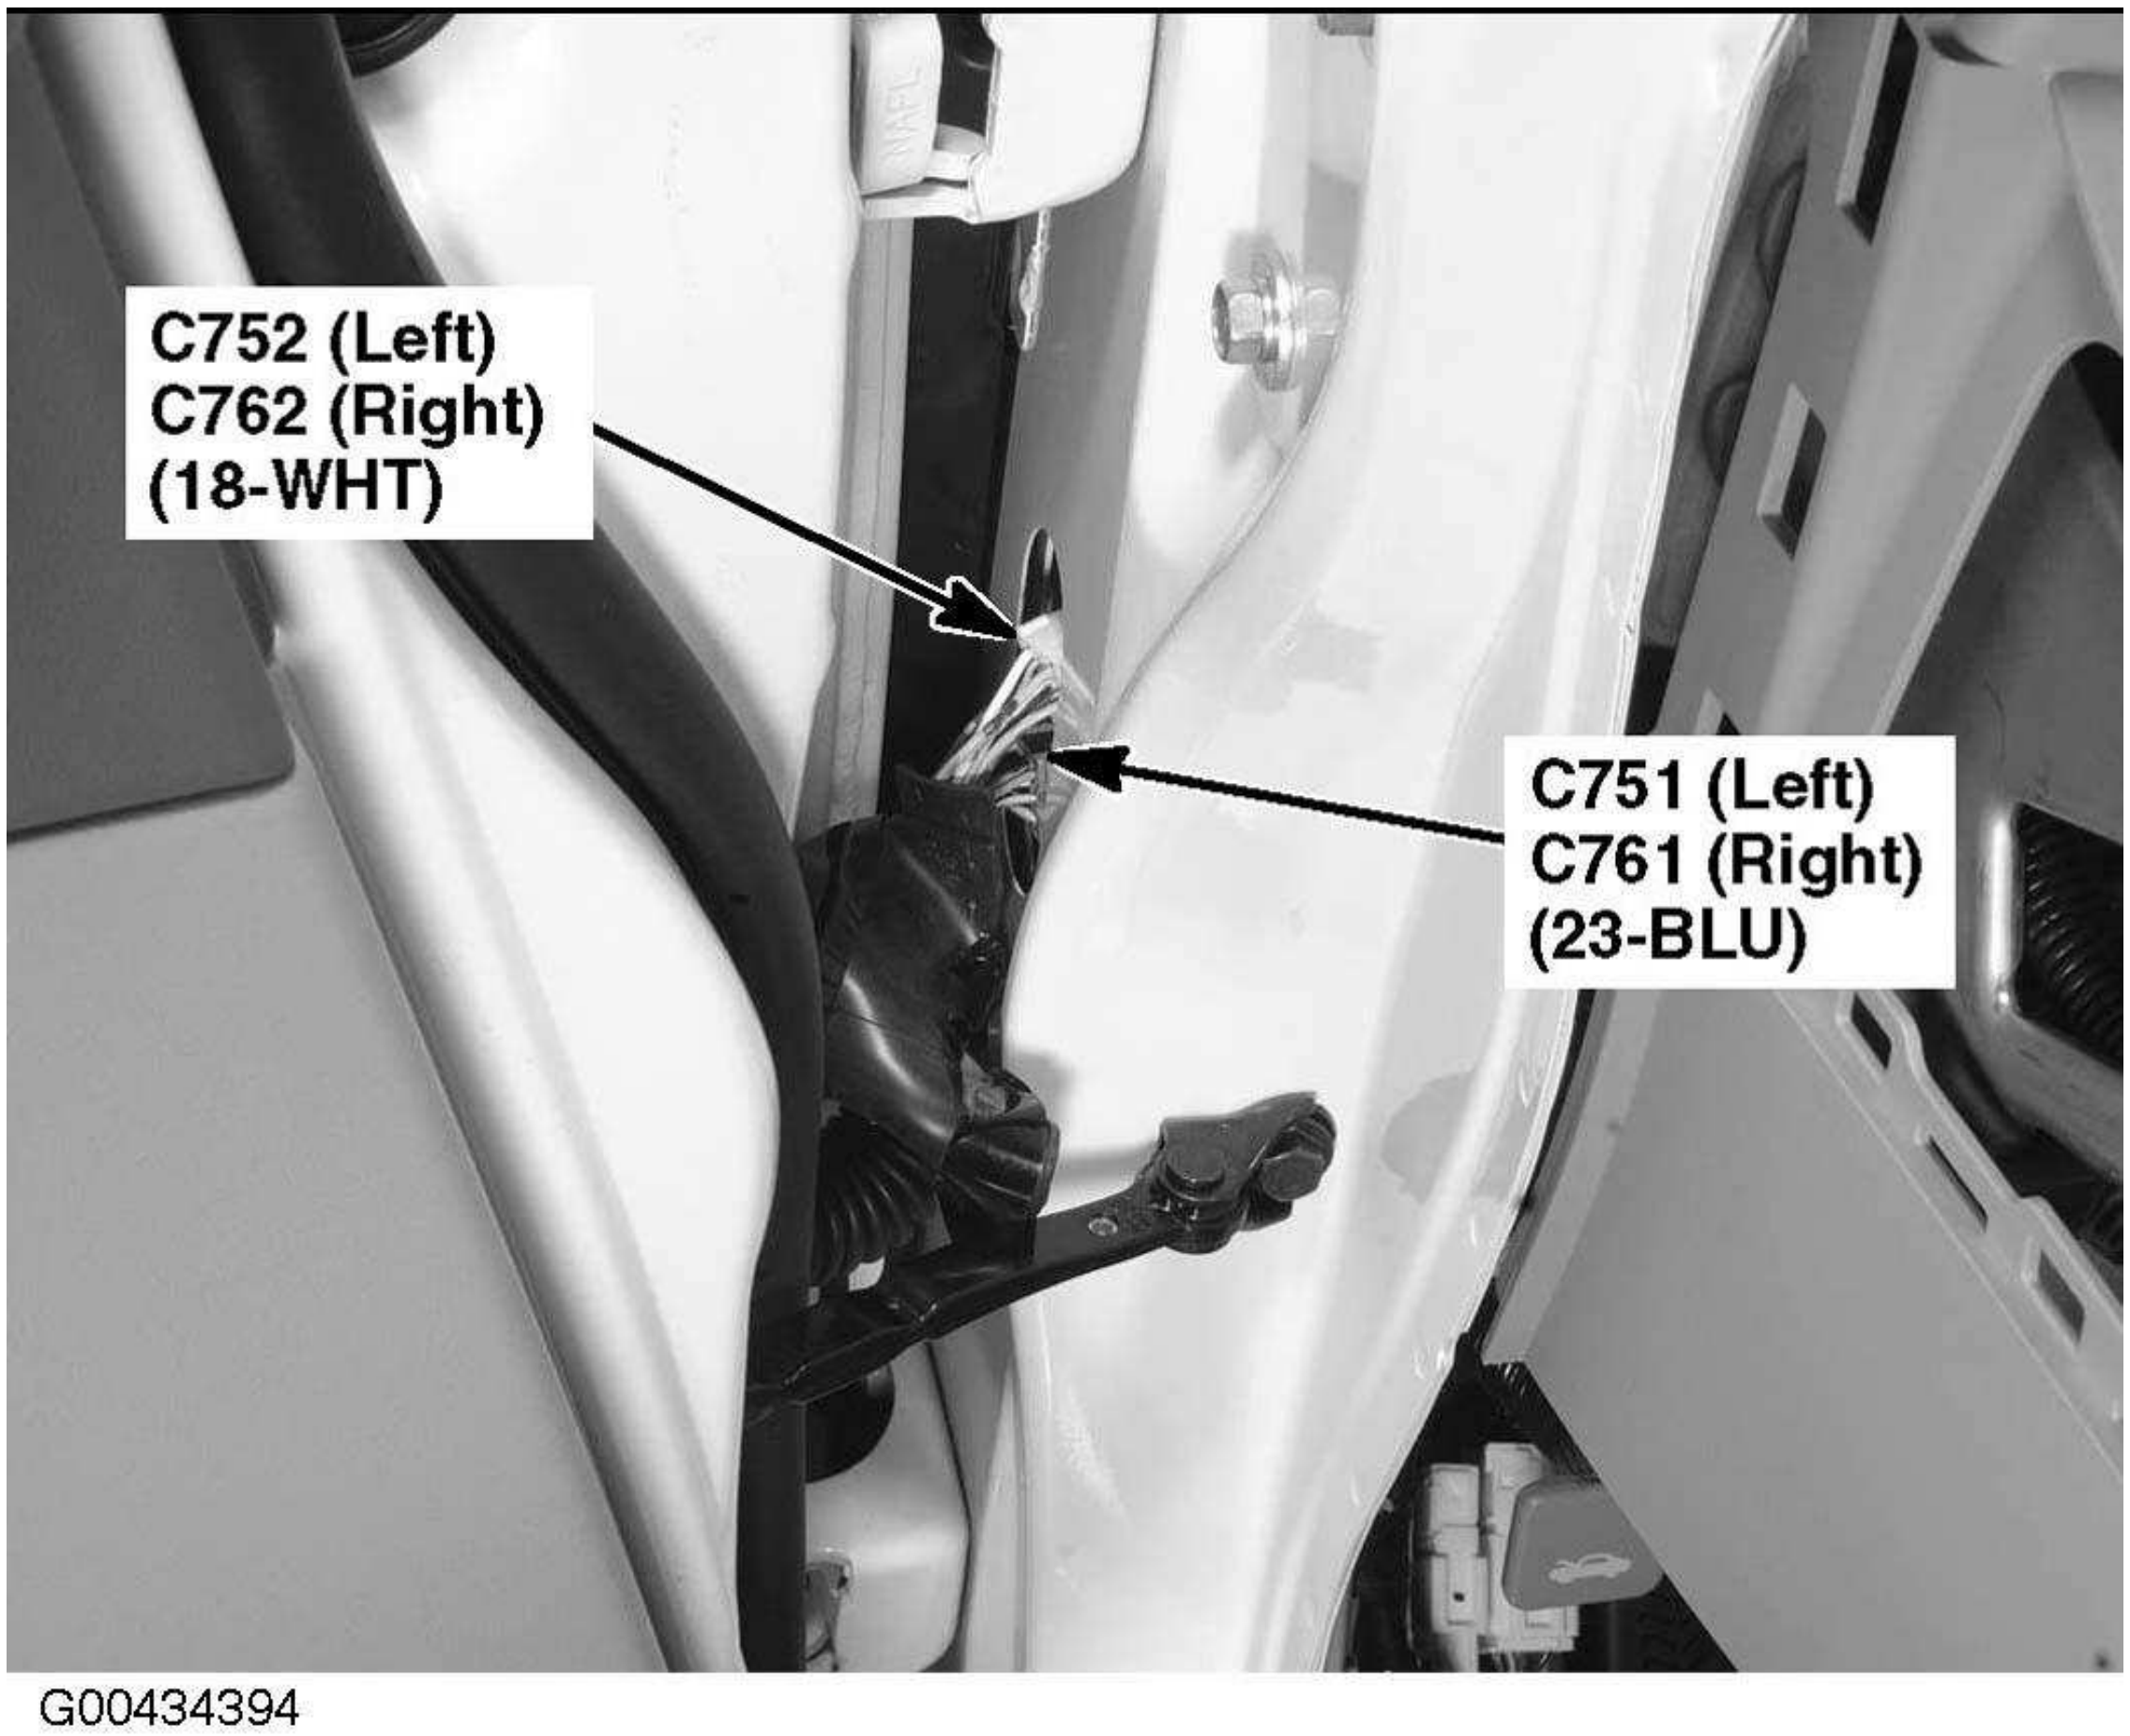
C752 (Left)
C762 (Right)
(18-WHT)
C751 (Left)
C761 (Right)
(23-BLU)
G00434394

Fig. 55: Under Left End Of Dash (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

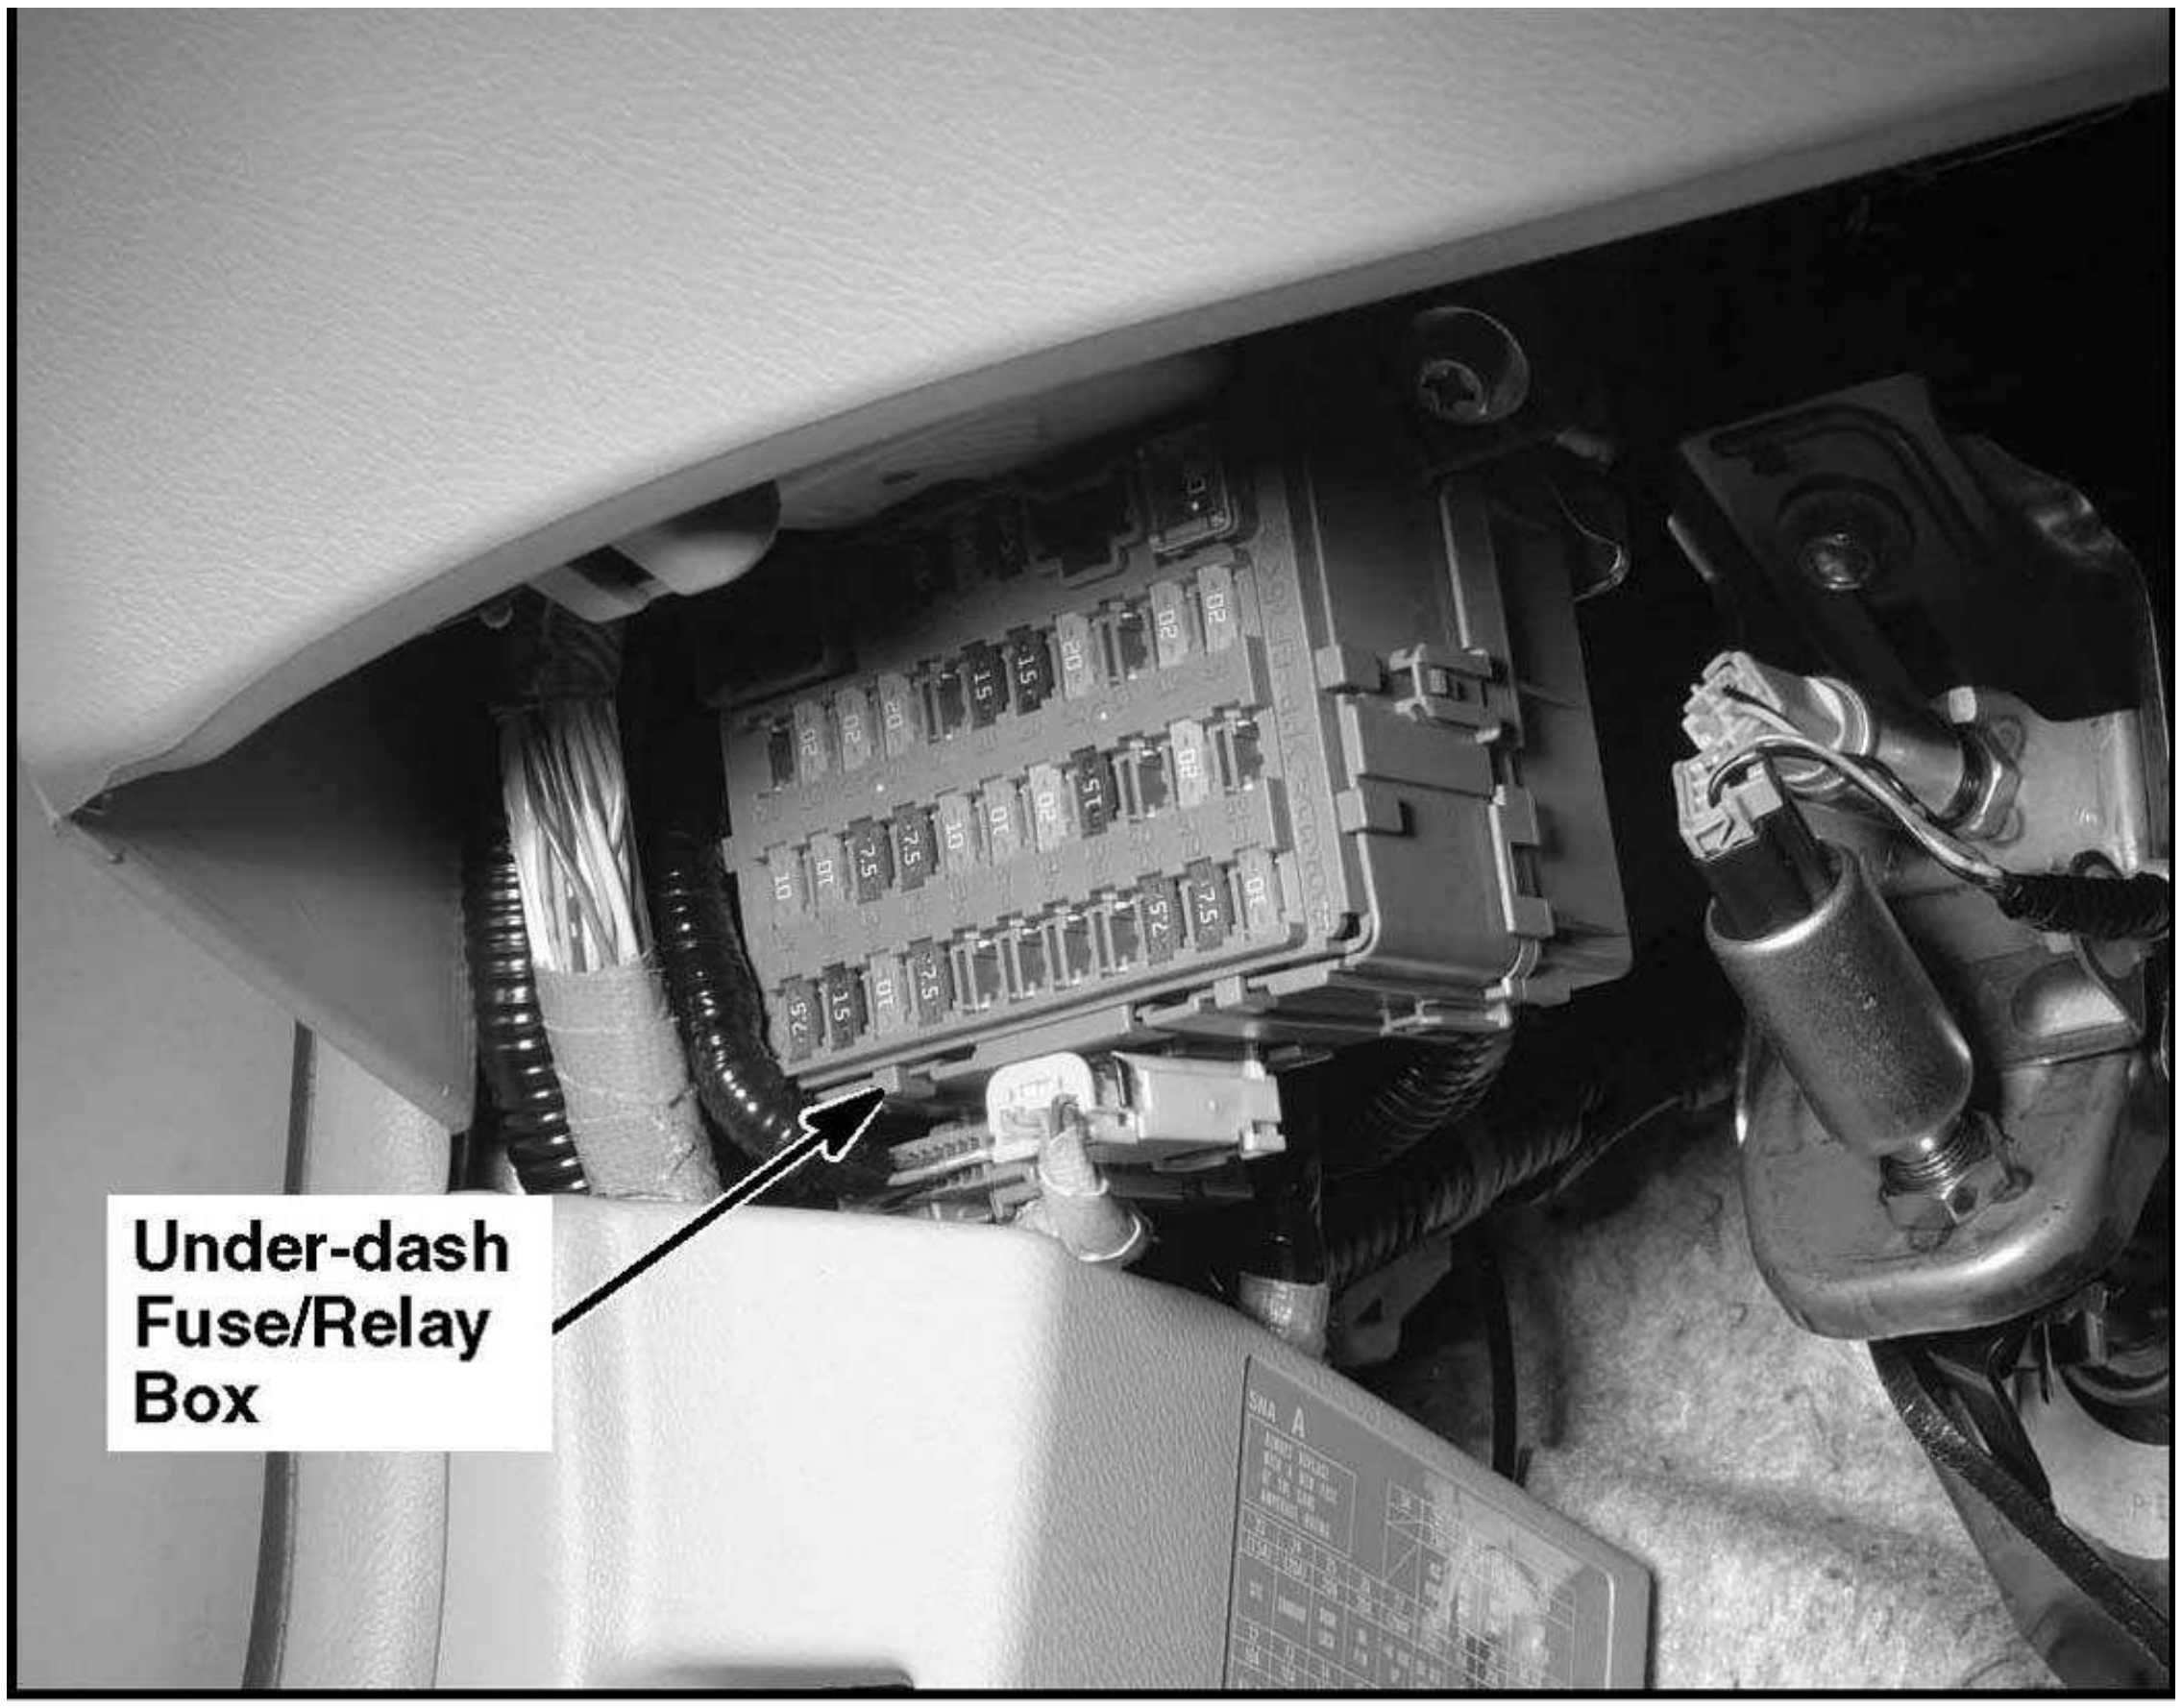
Under-dash
Fuse/Relay
Box
G00434395

Fig. 56: Under Left End Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

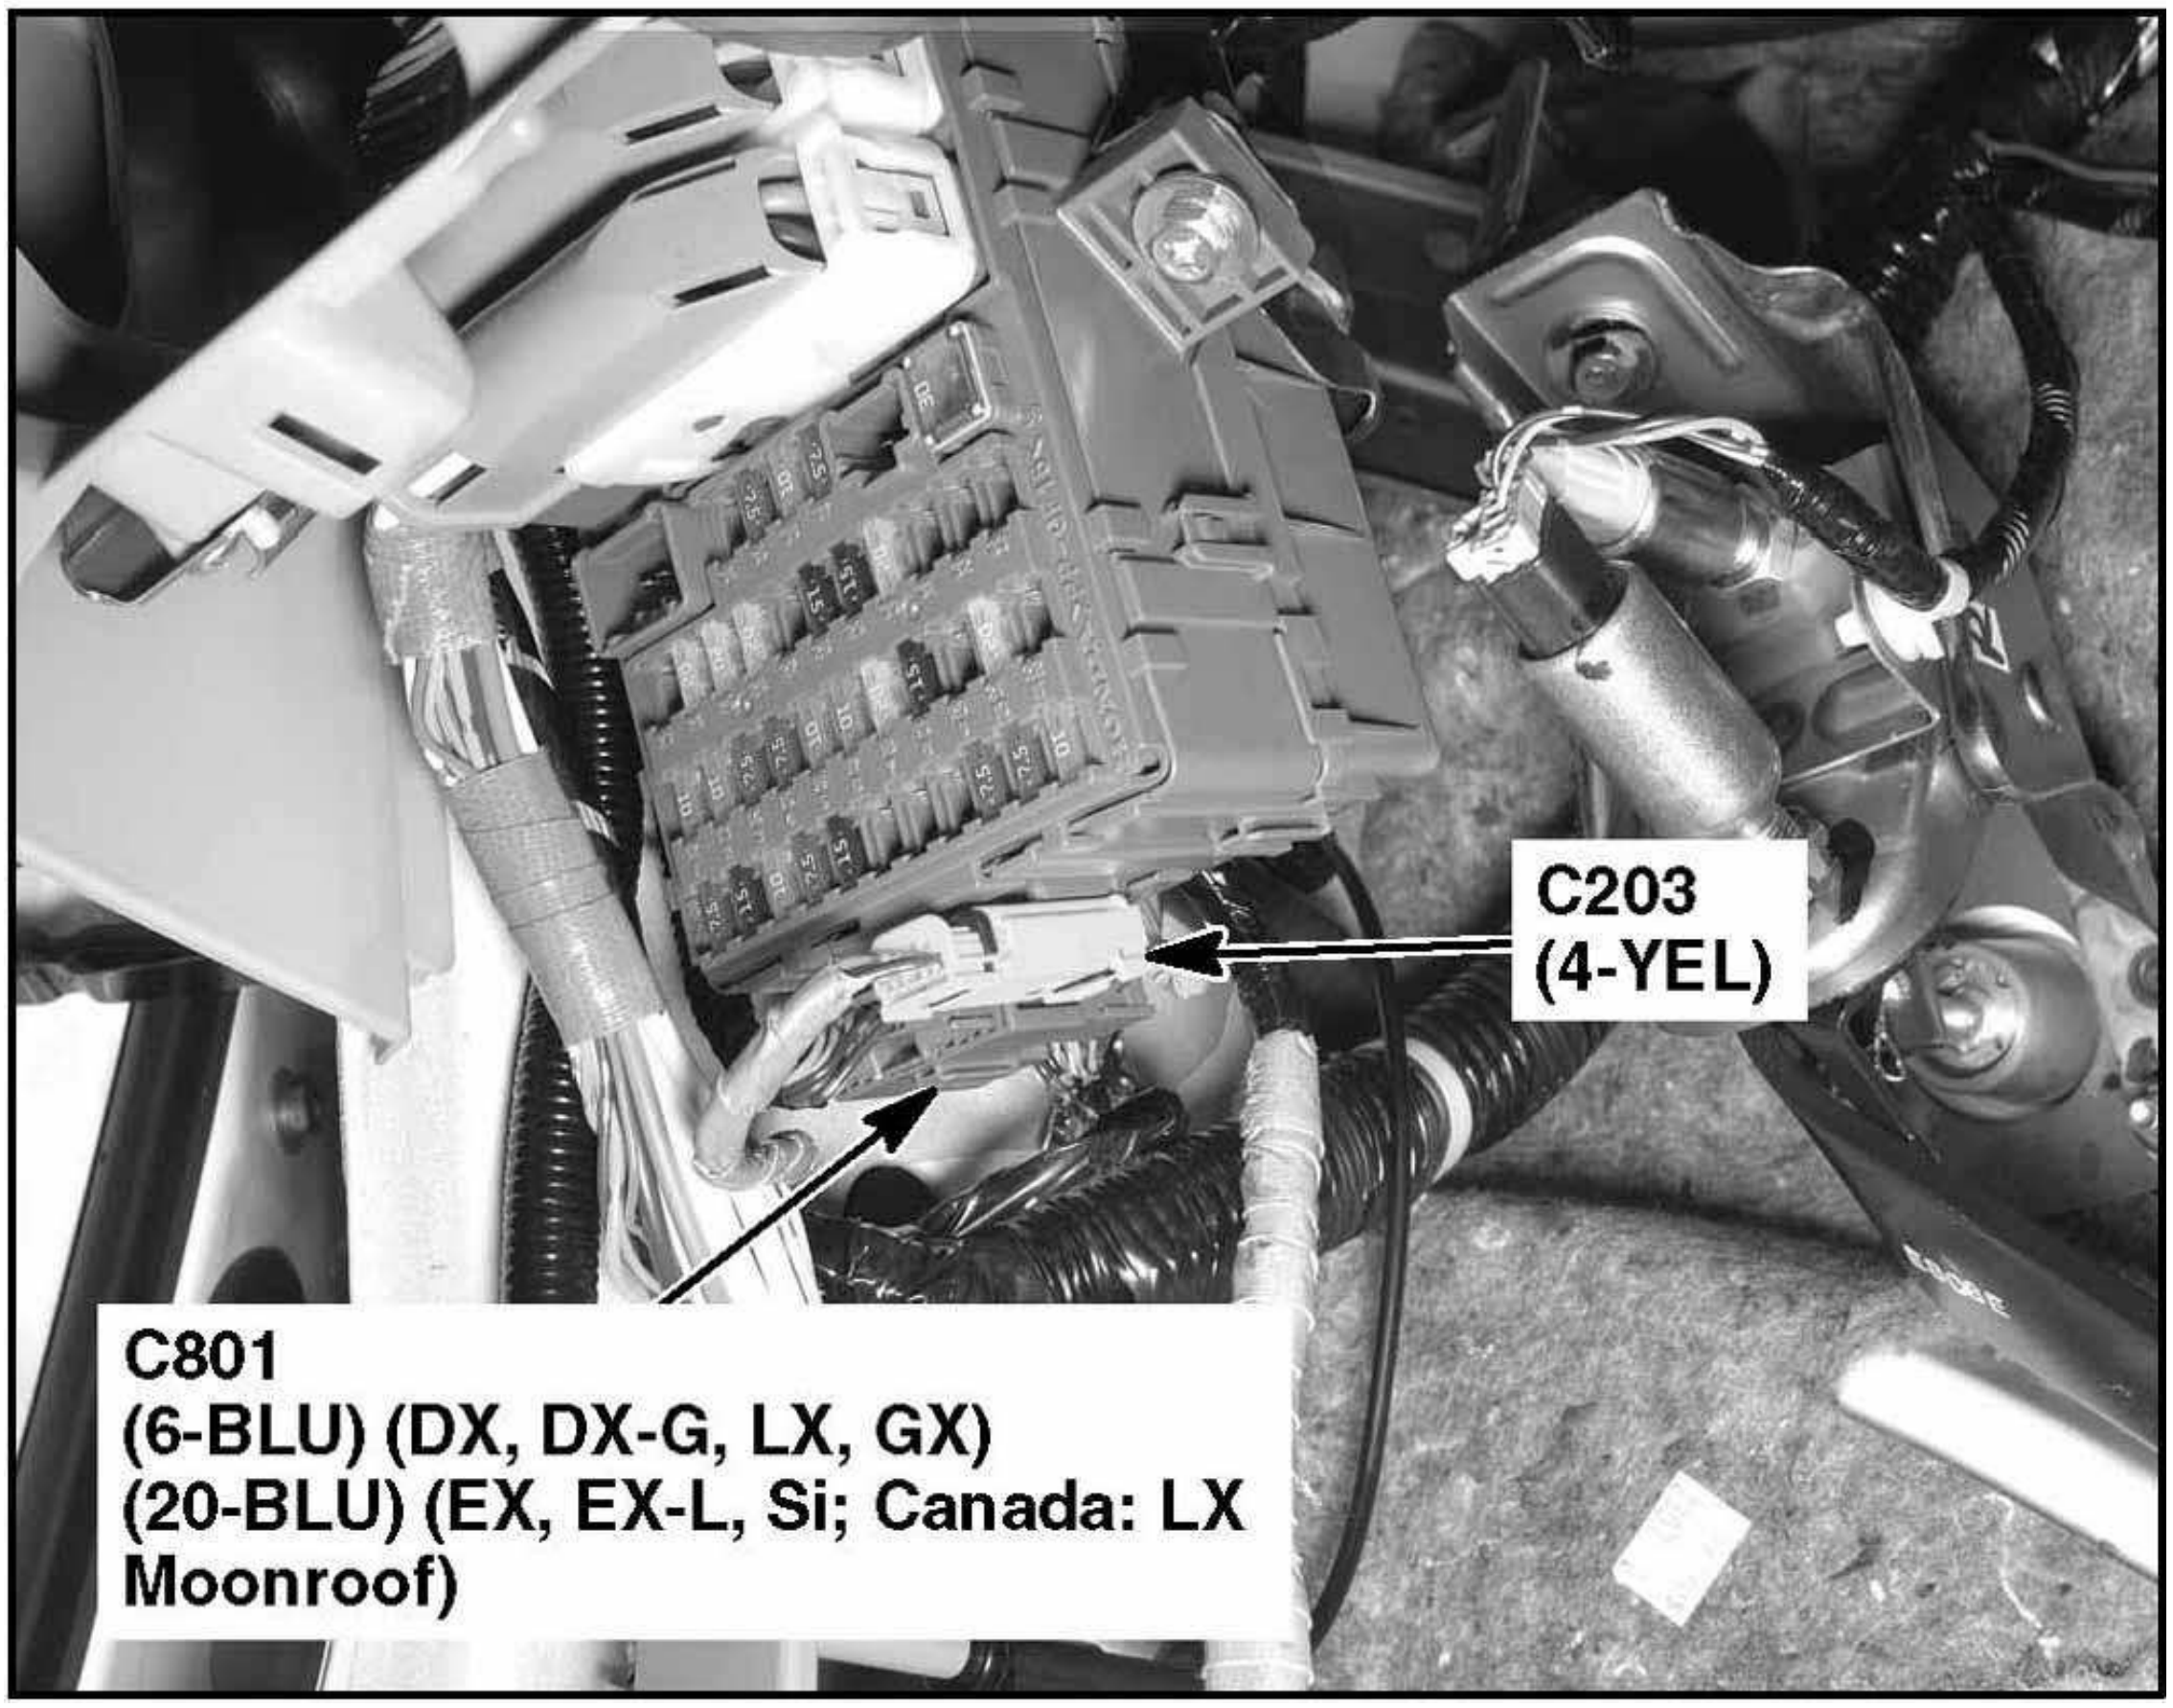
C203
(4-YEL)
C801
(6-BLU) (DX, DX-G, LX, GX)
(20-BLU) (EX, EX-L, Si; Canada: LX Moonroof)

Fig. 57: Under Left End Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

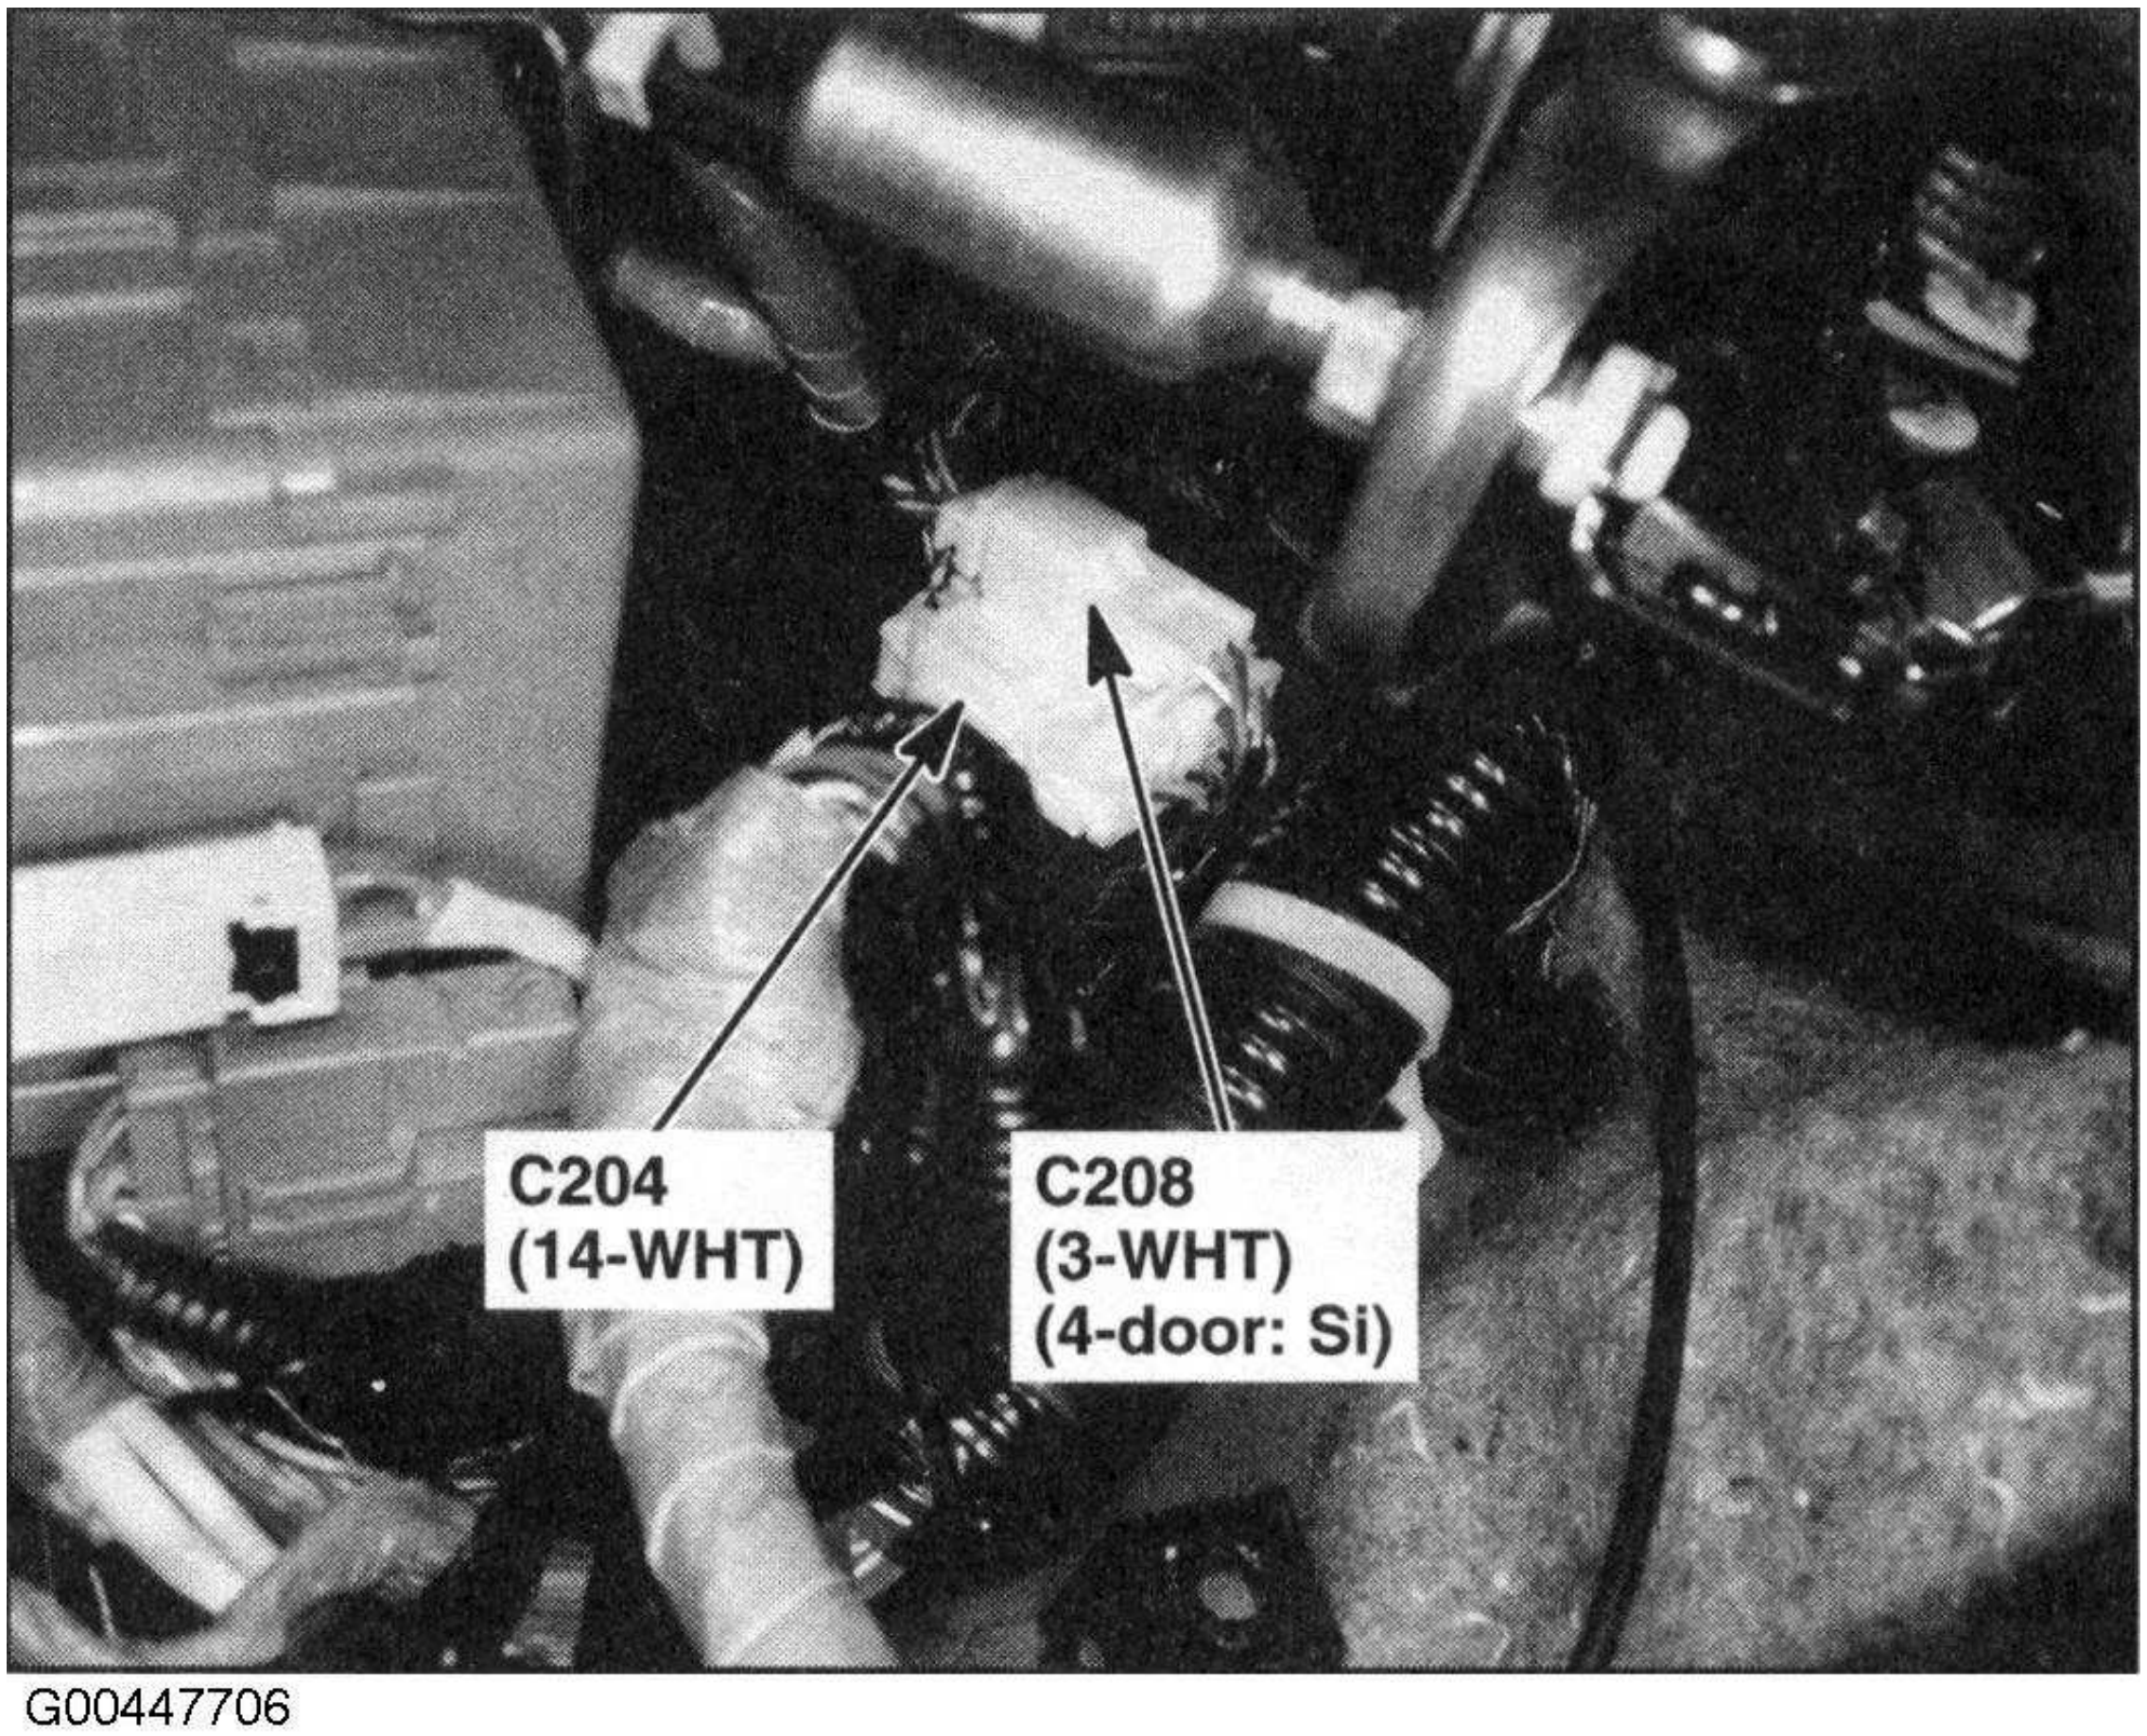
C204
(14-WHT)
C208
(3-WHT)
(4-door: Si)
G00447706

Fig. 58: Behind Left Kick Panel (4-Door)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

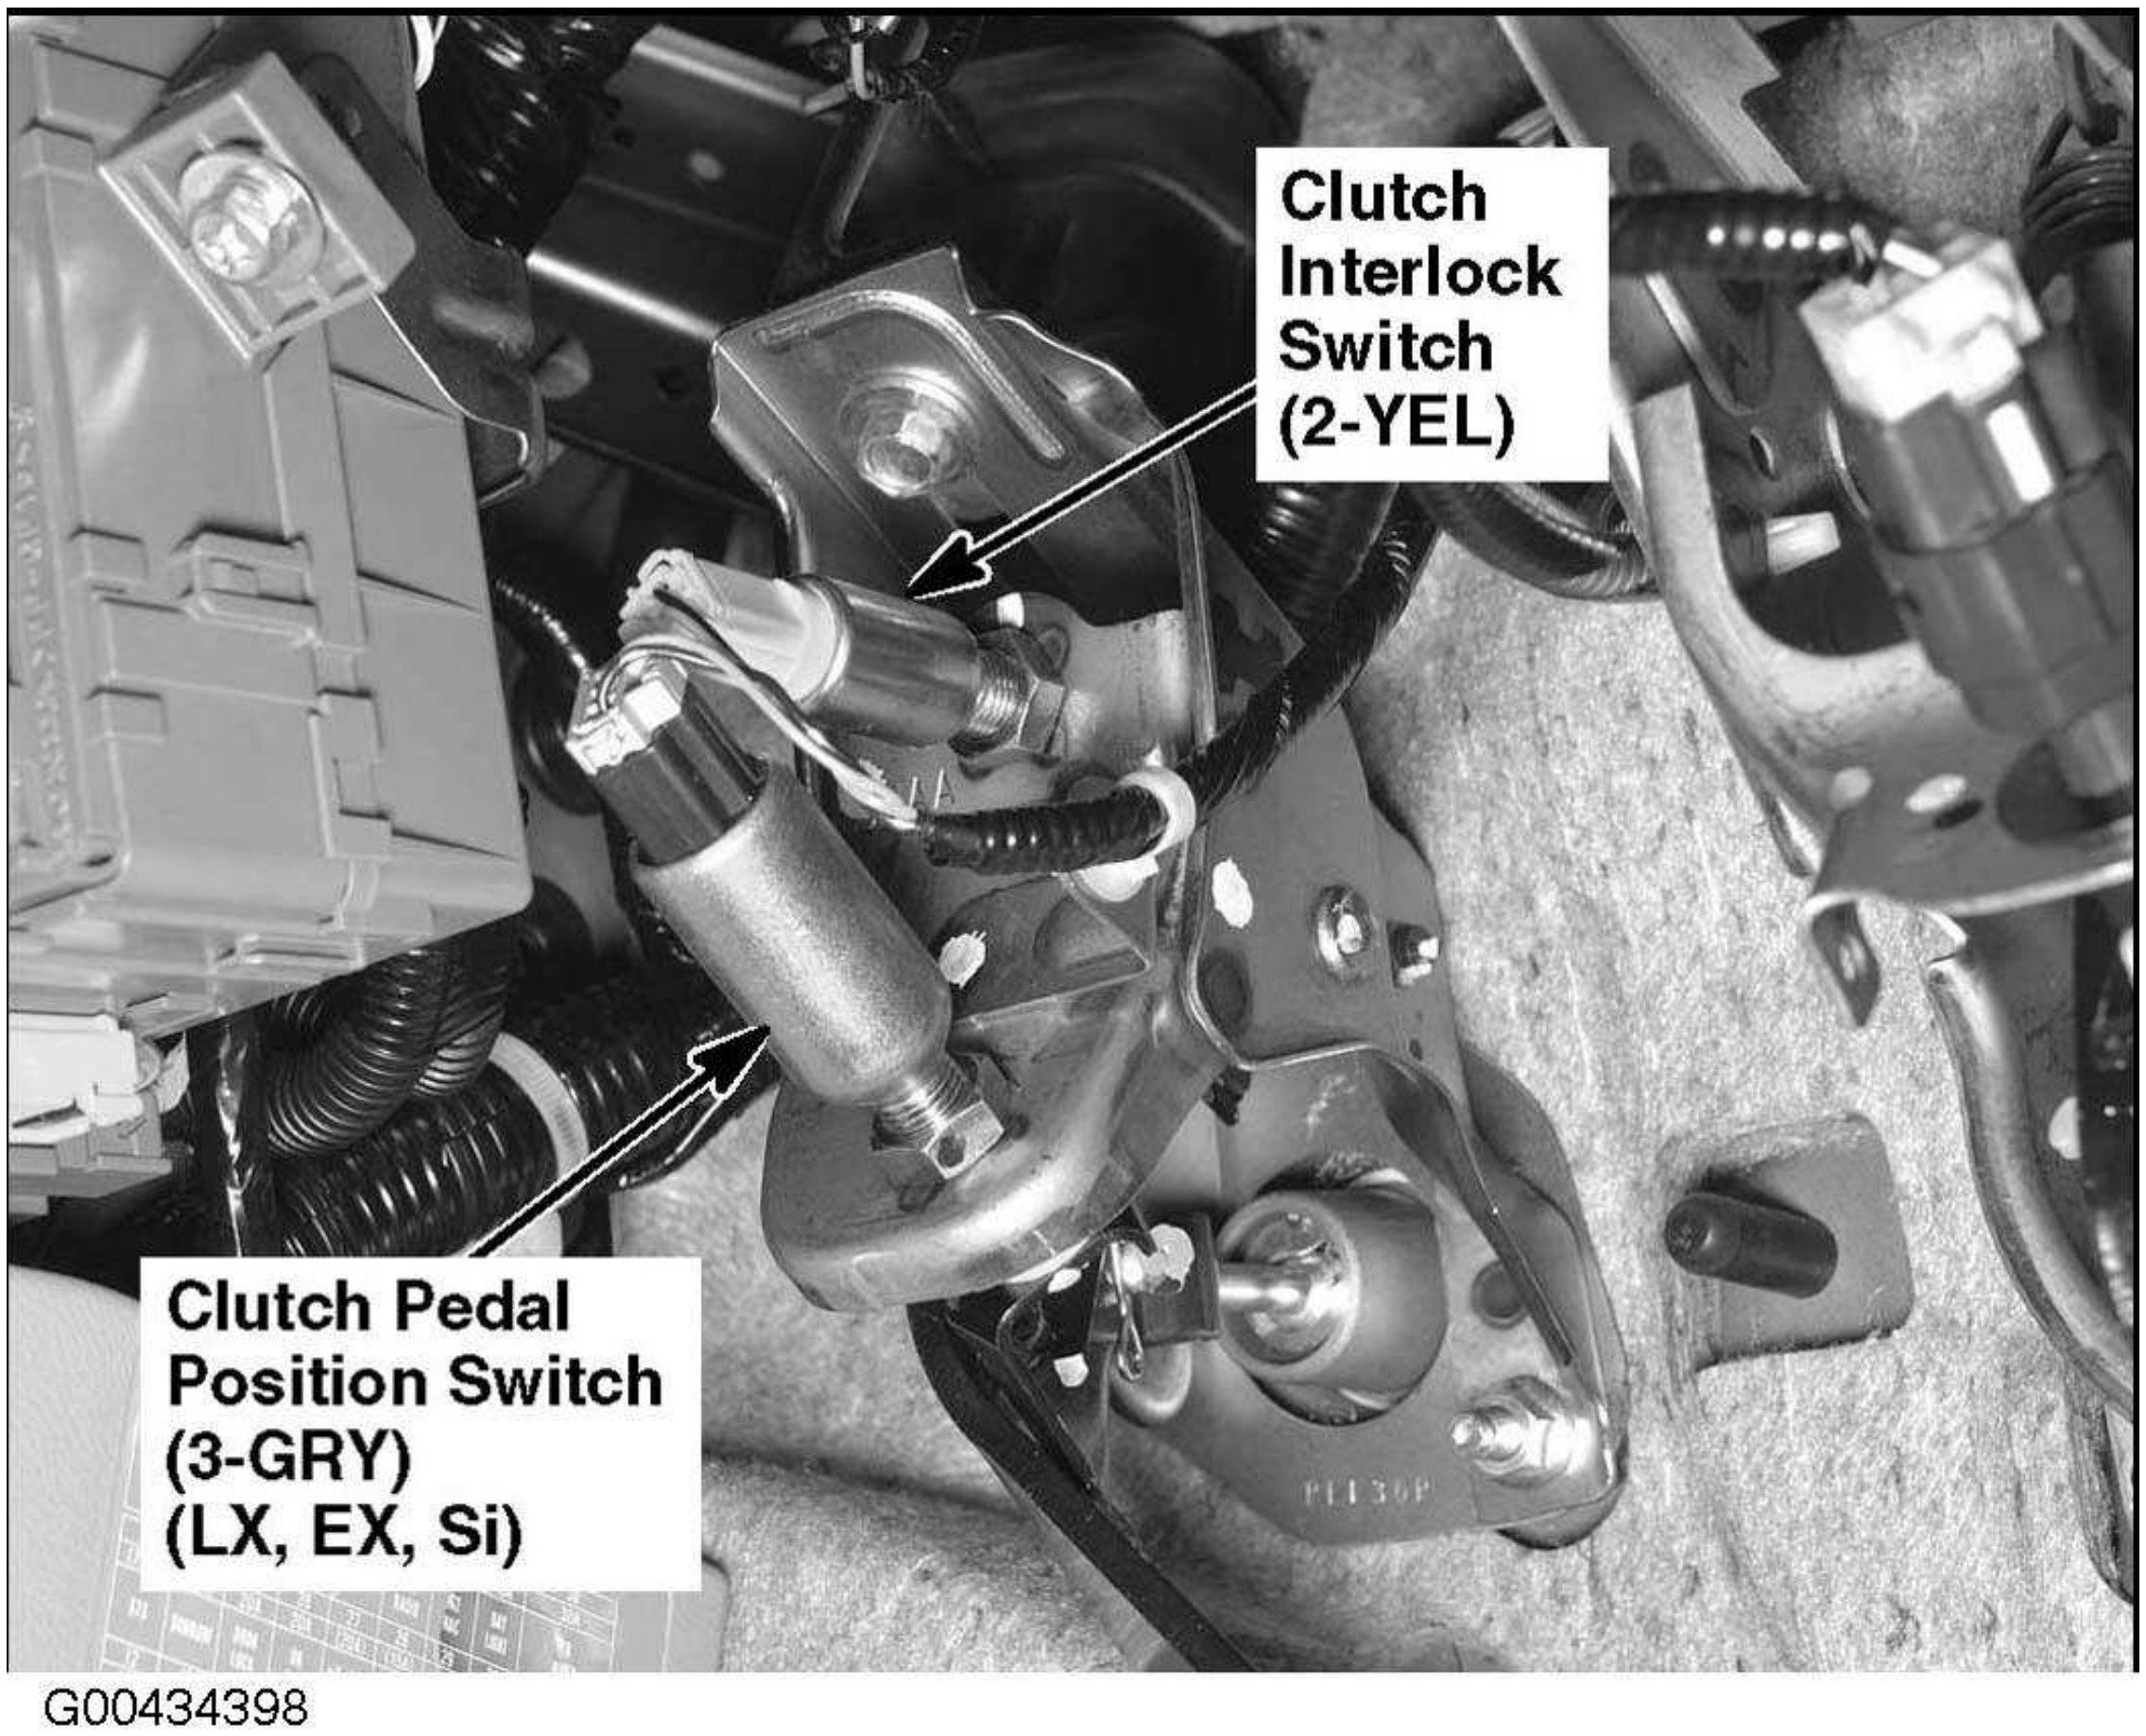

Clutch Interlock Switch (2-YEL)
Clutch Pedal Position Switch (3-GRY) (LX, EX, Si)
G00434398

Fig. 59: Under Left Side Of Dash

Courtesy of AMERICAN HONDA MOTOR CO., INC.

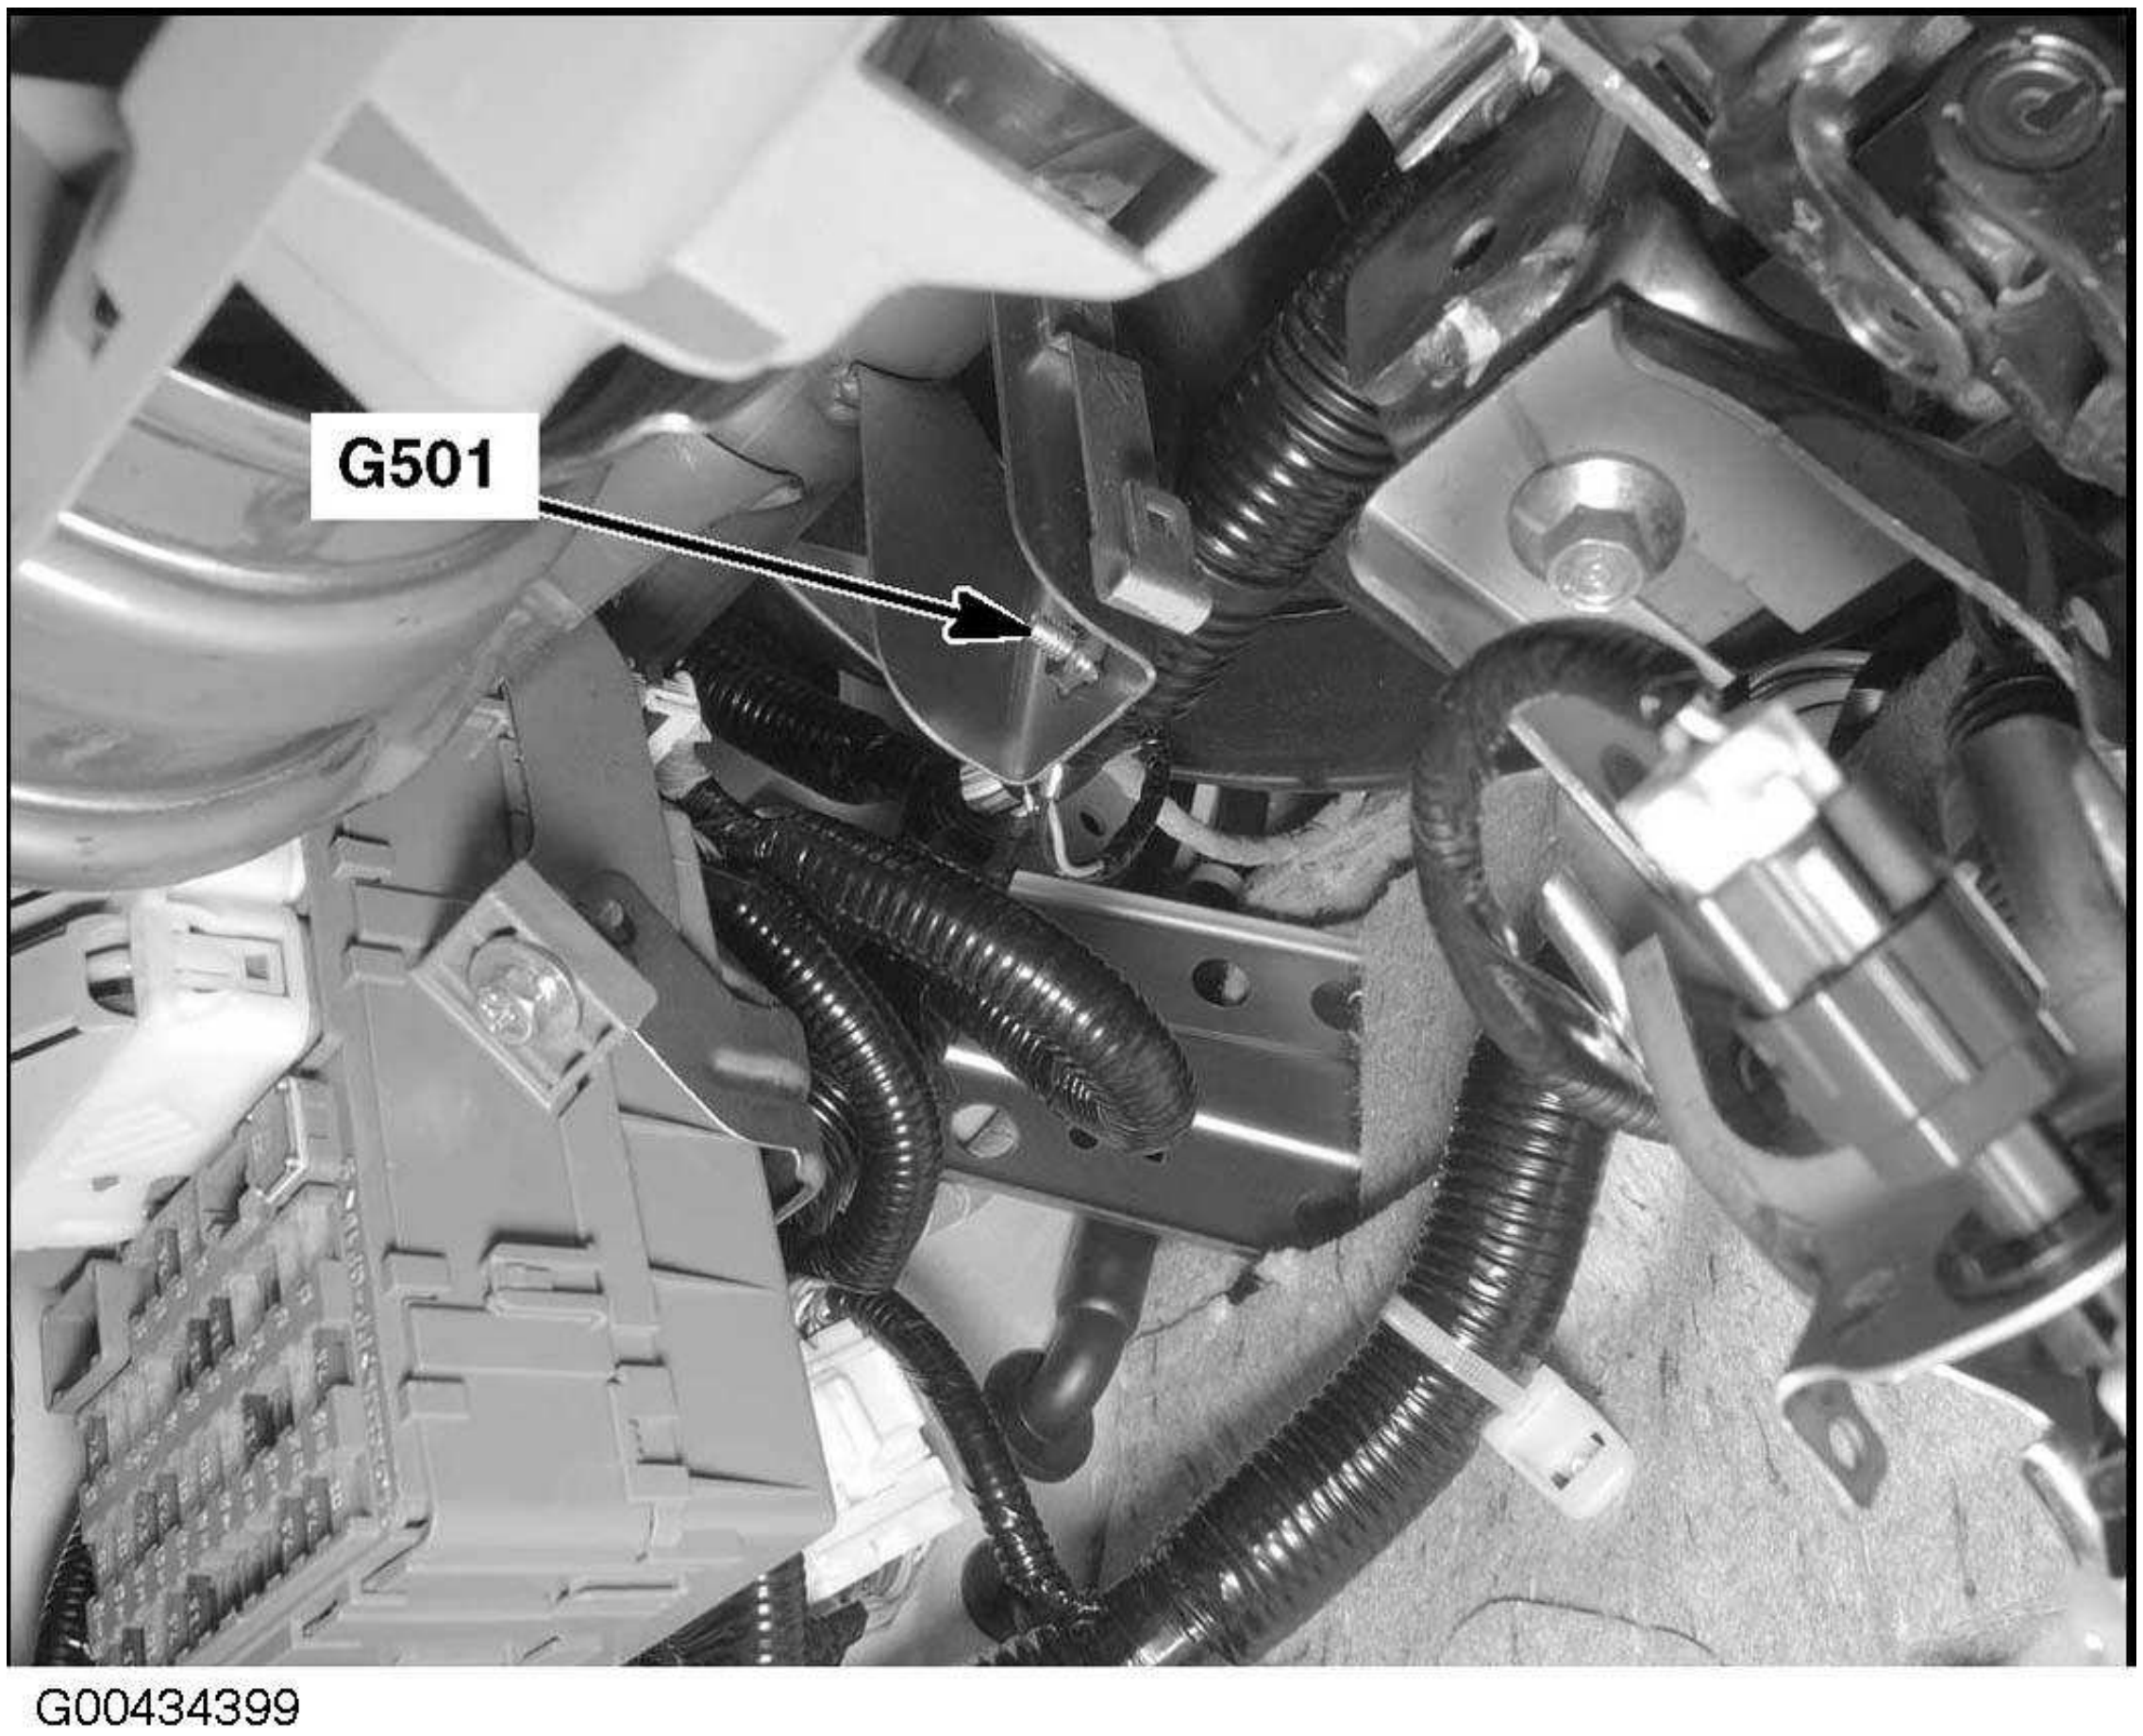
G501
G00434399

Fig. 60: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

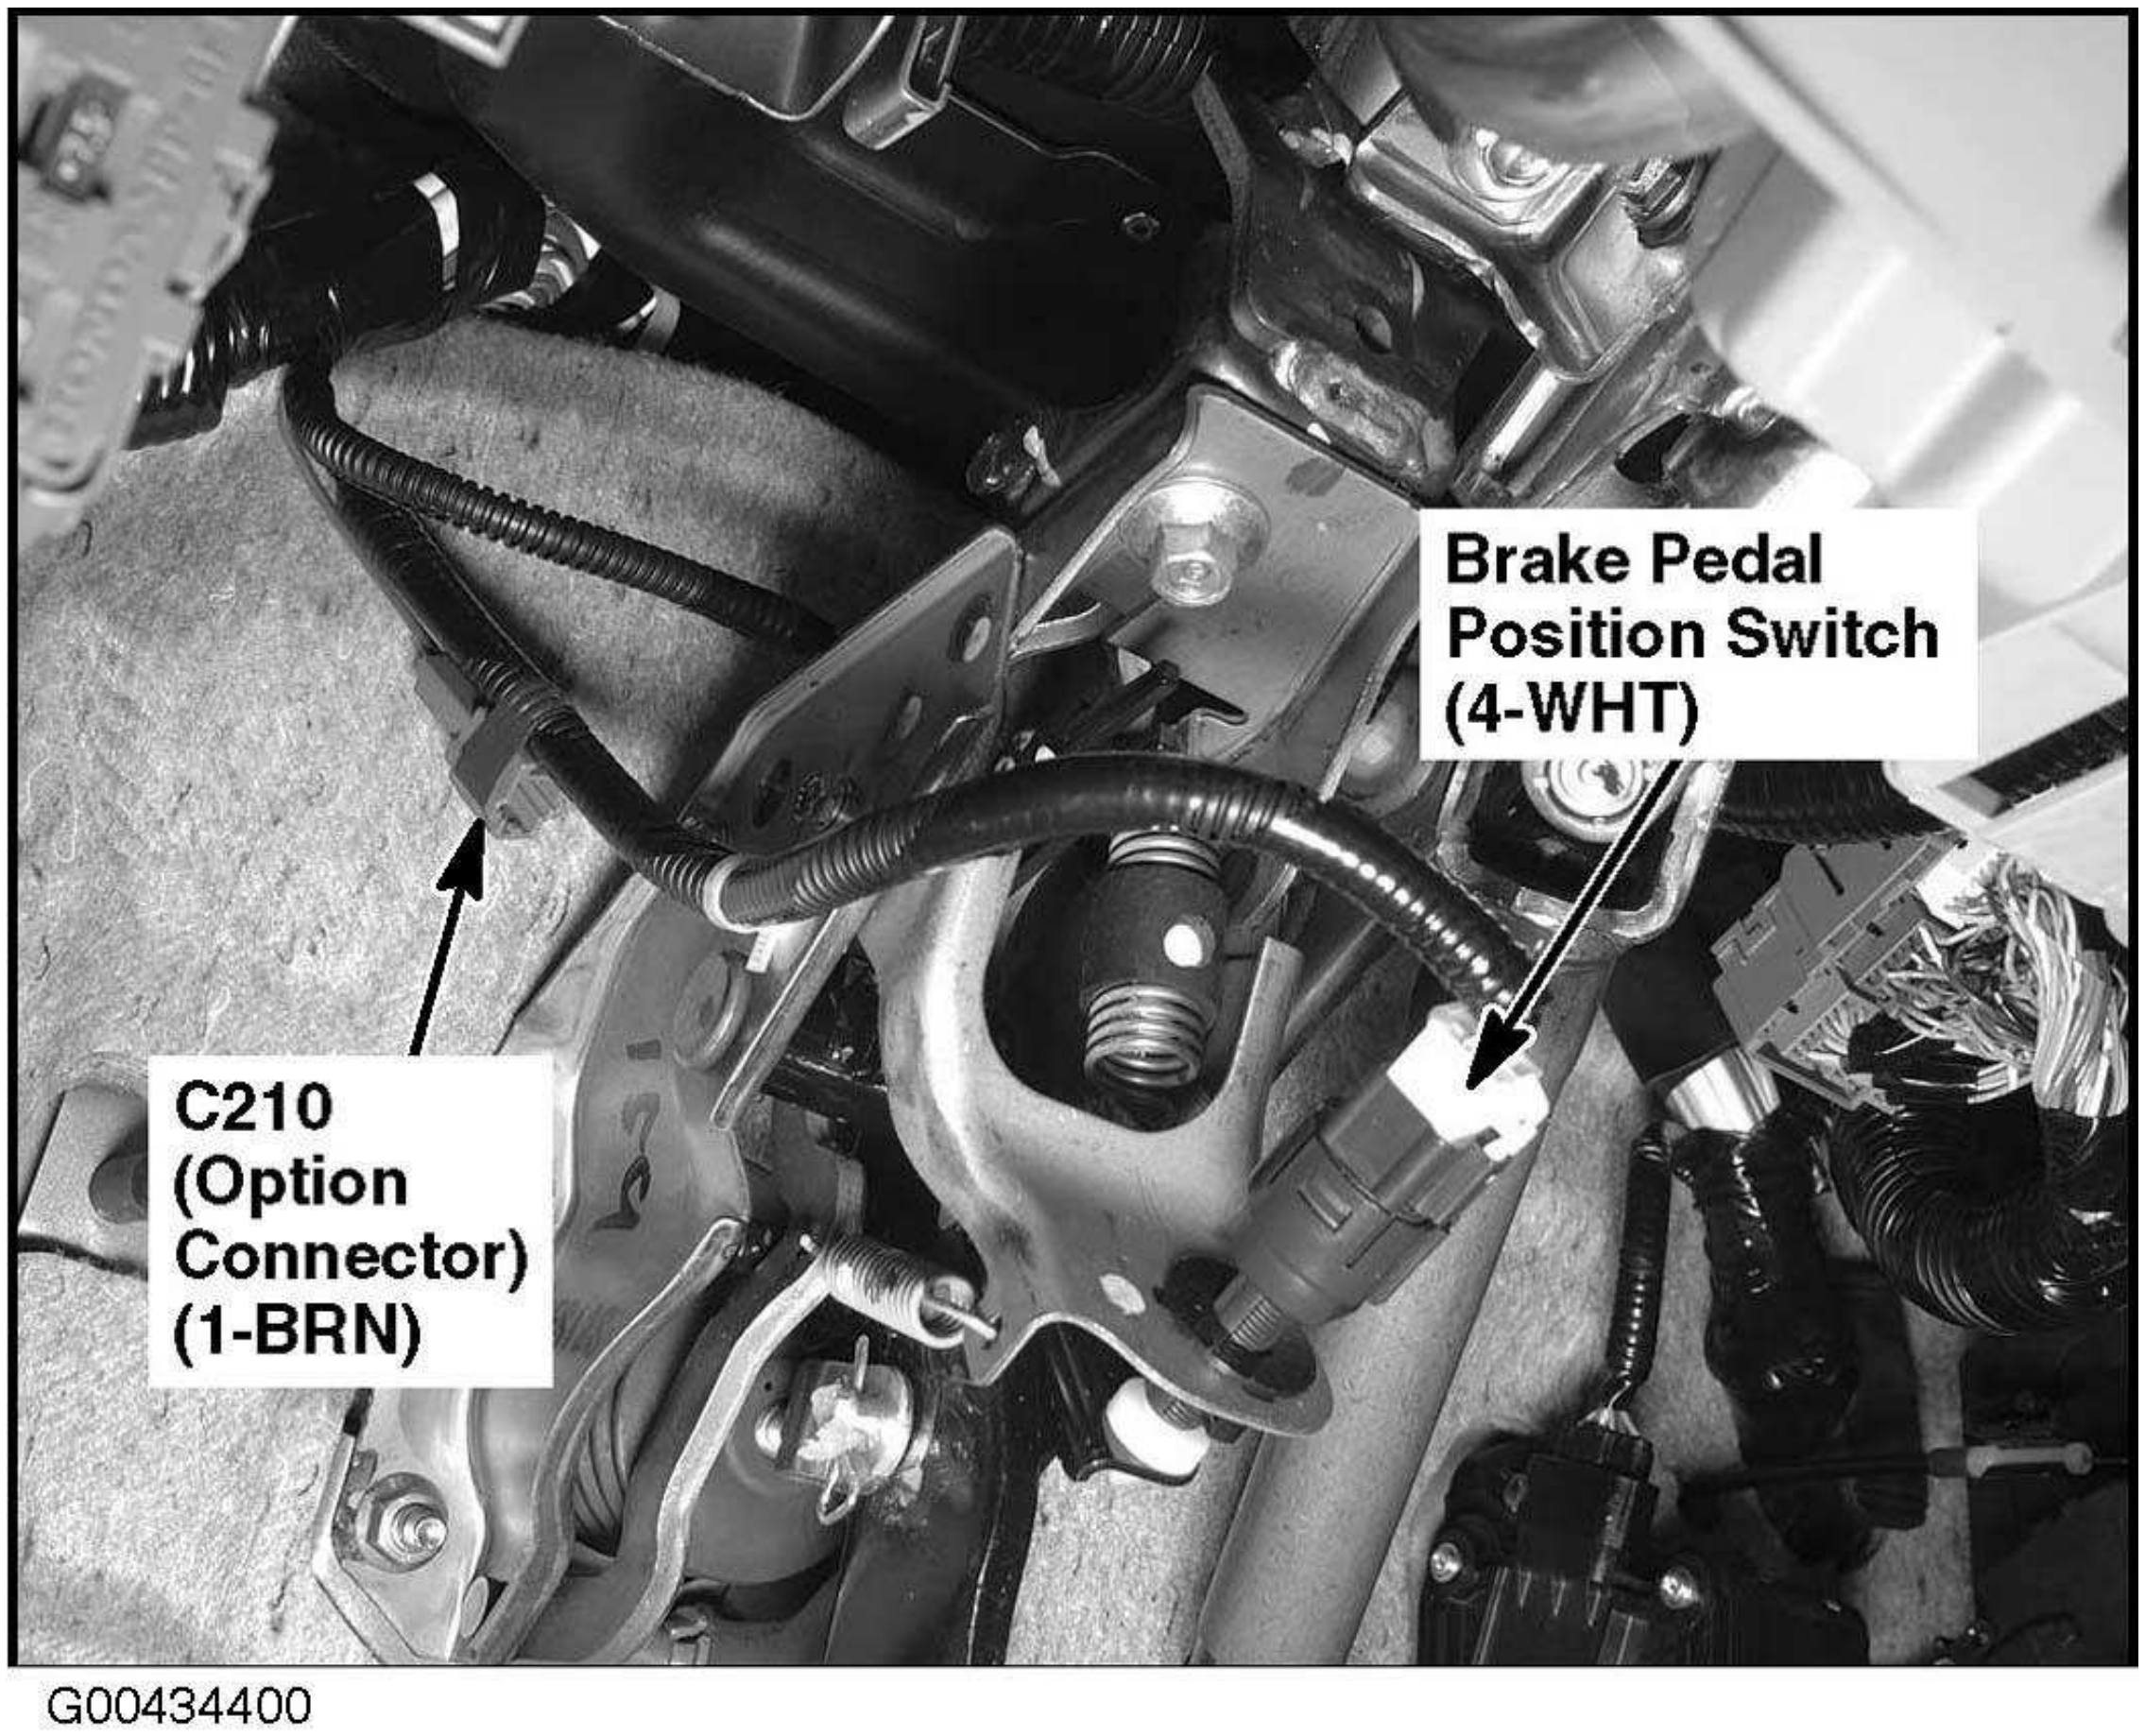
Brake Pedal Position Switch (4-WHT)
C210 (Option Connector) (1-BRN)
G00434400

Fig. 61: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

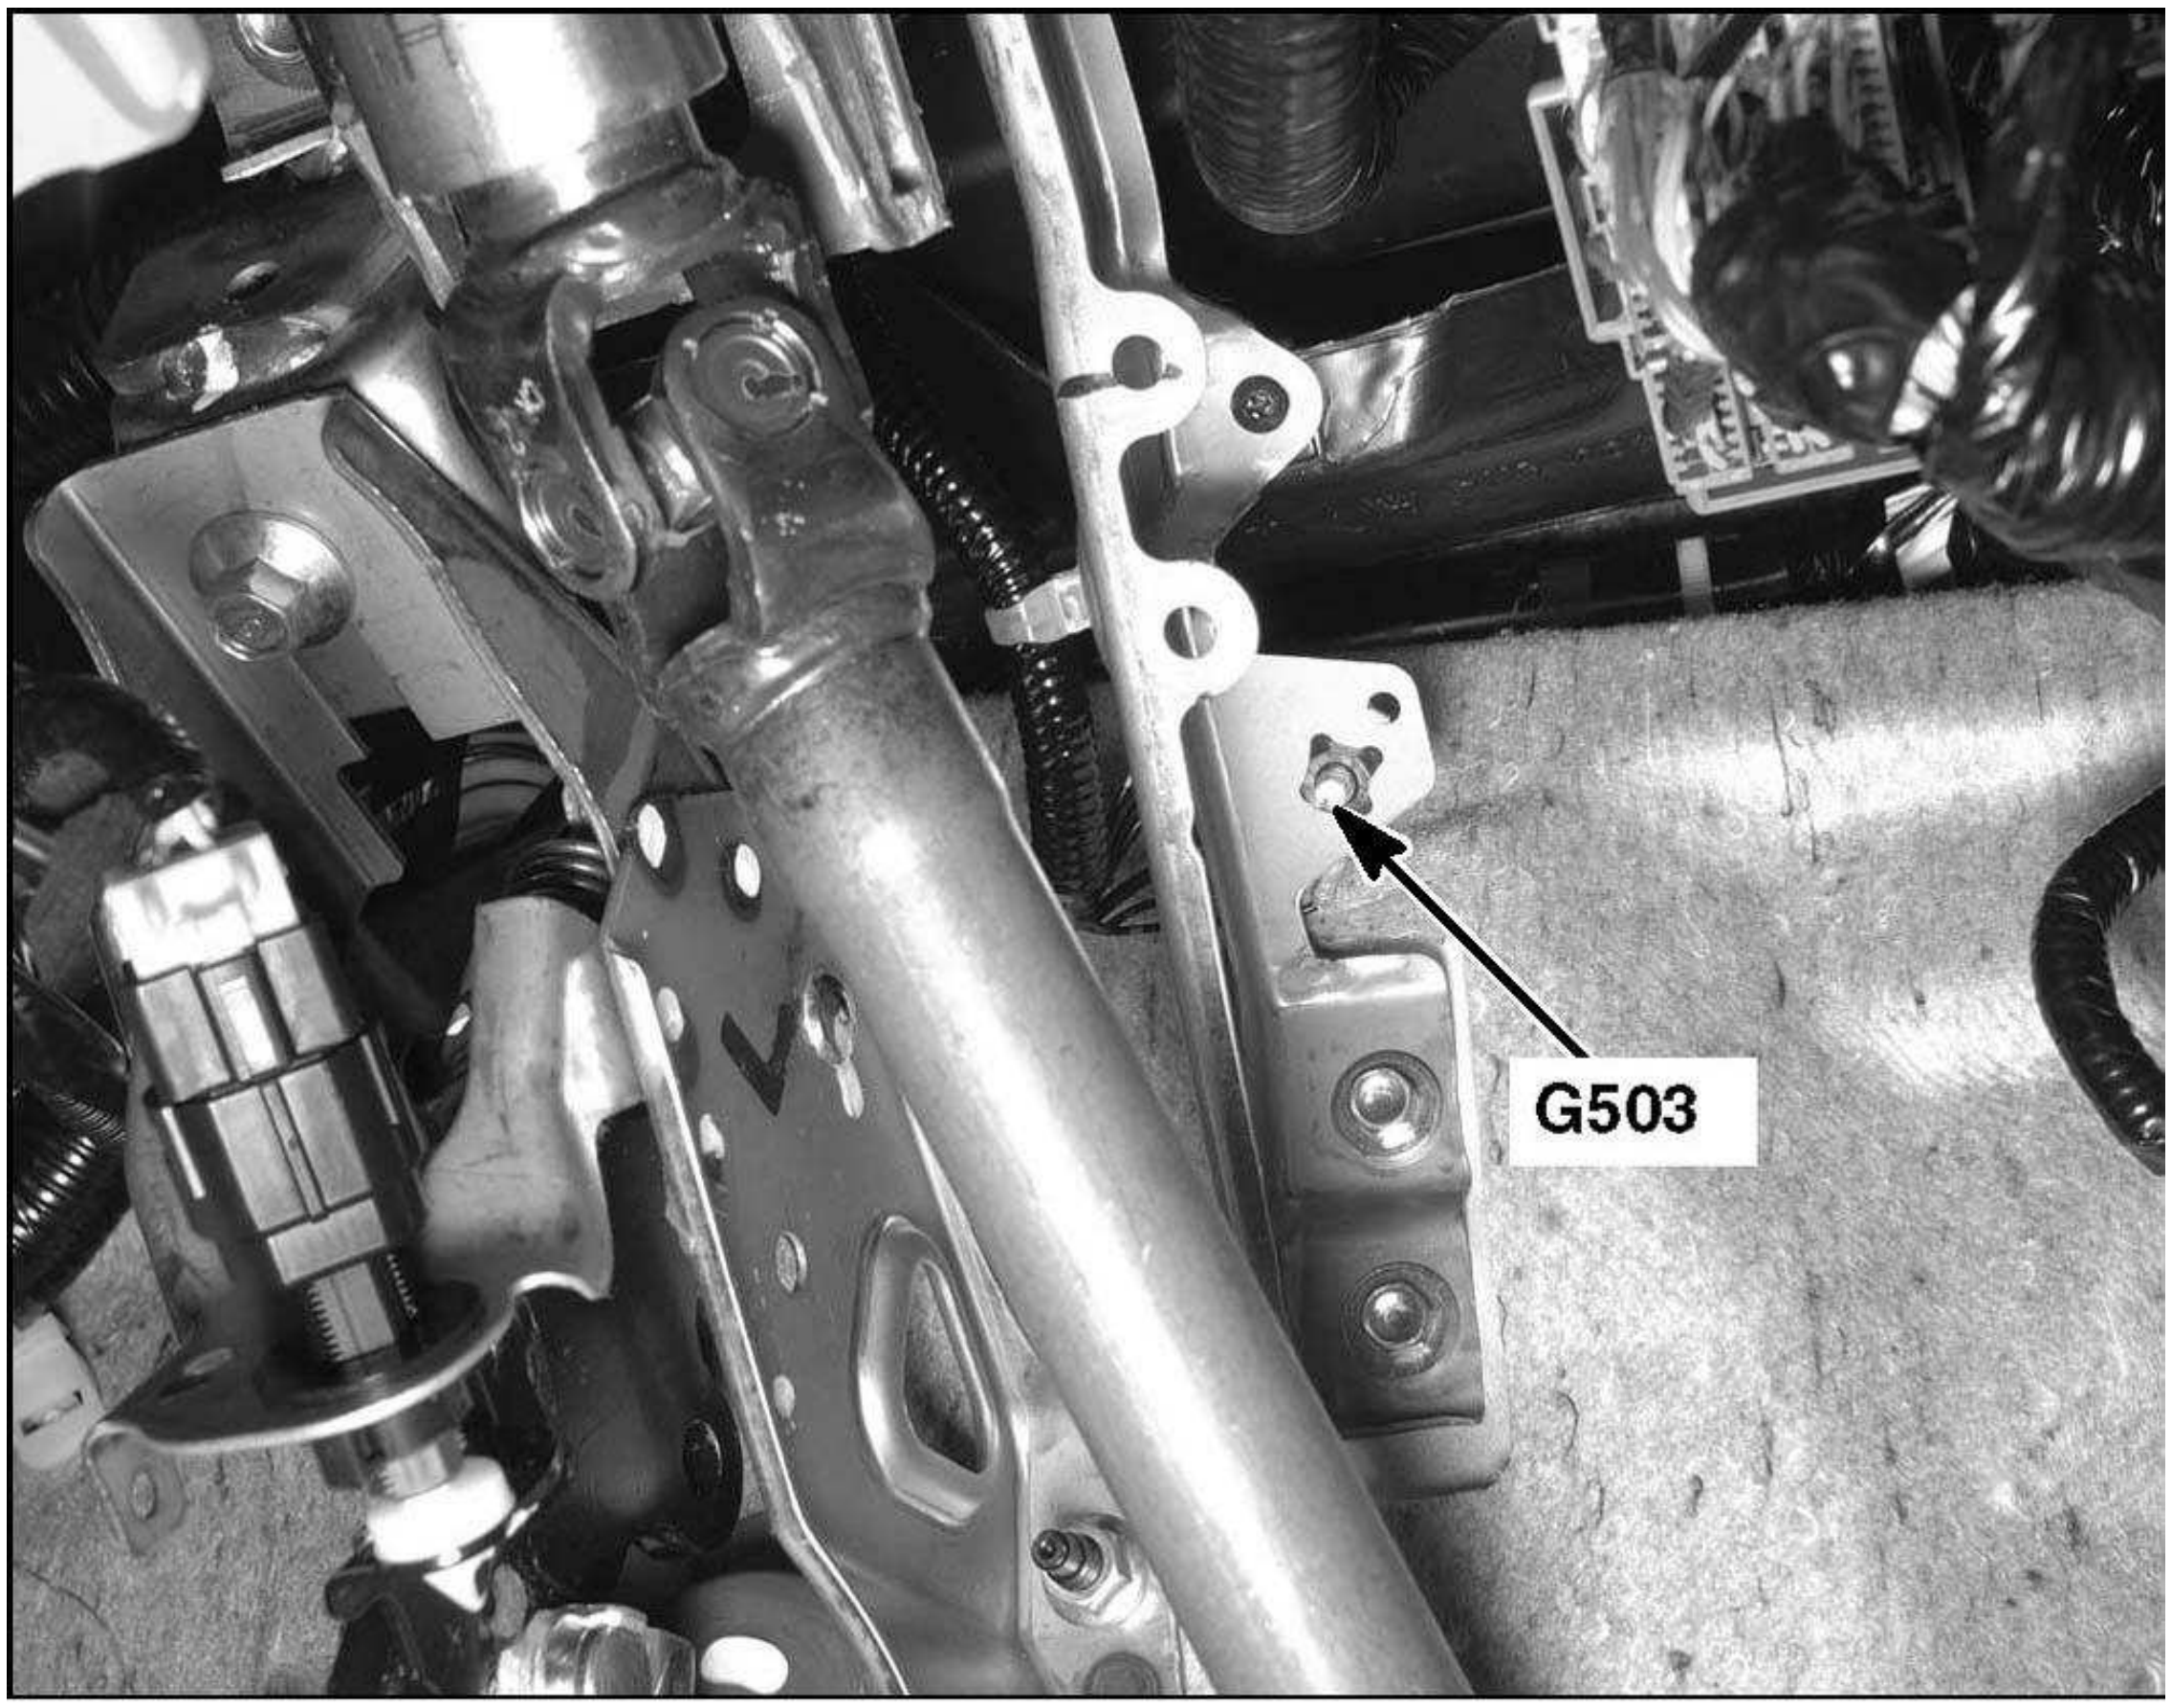
G503
G00434401

Fig. 62: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

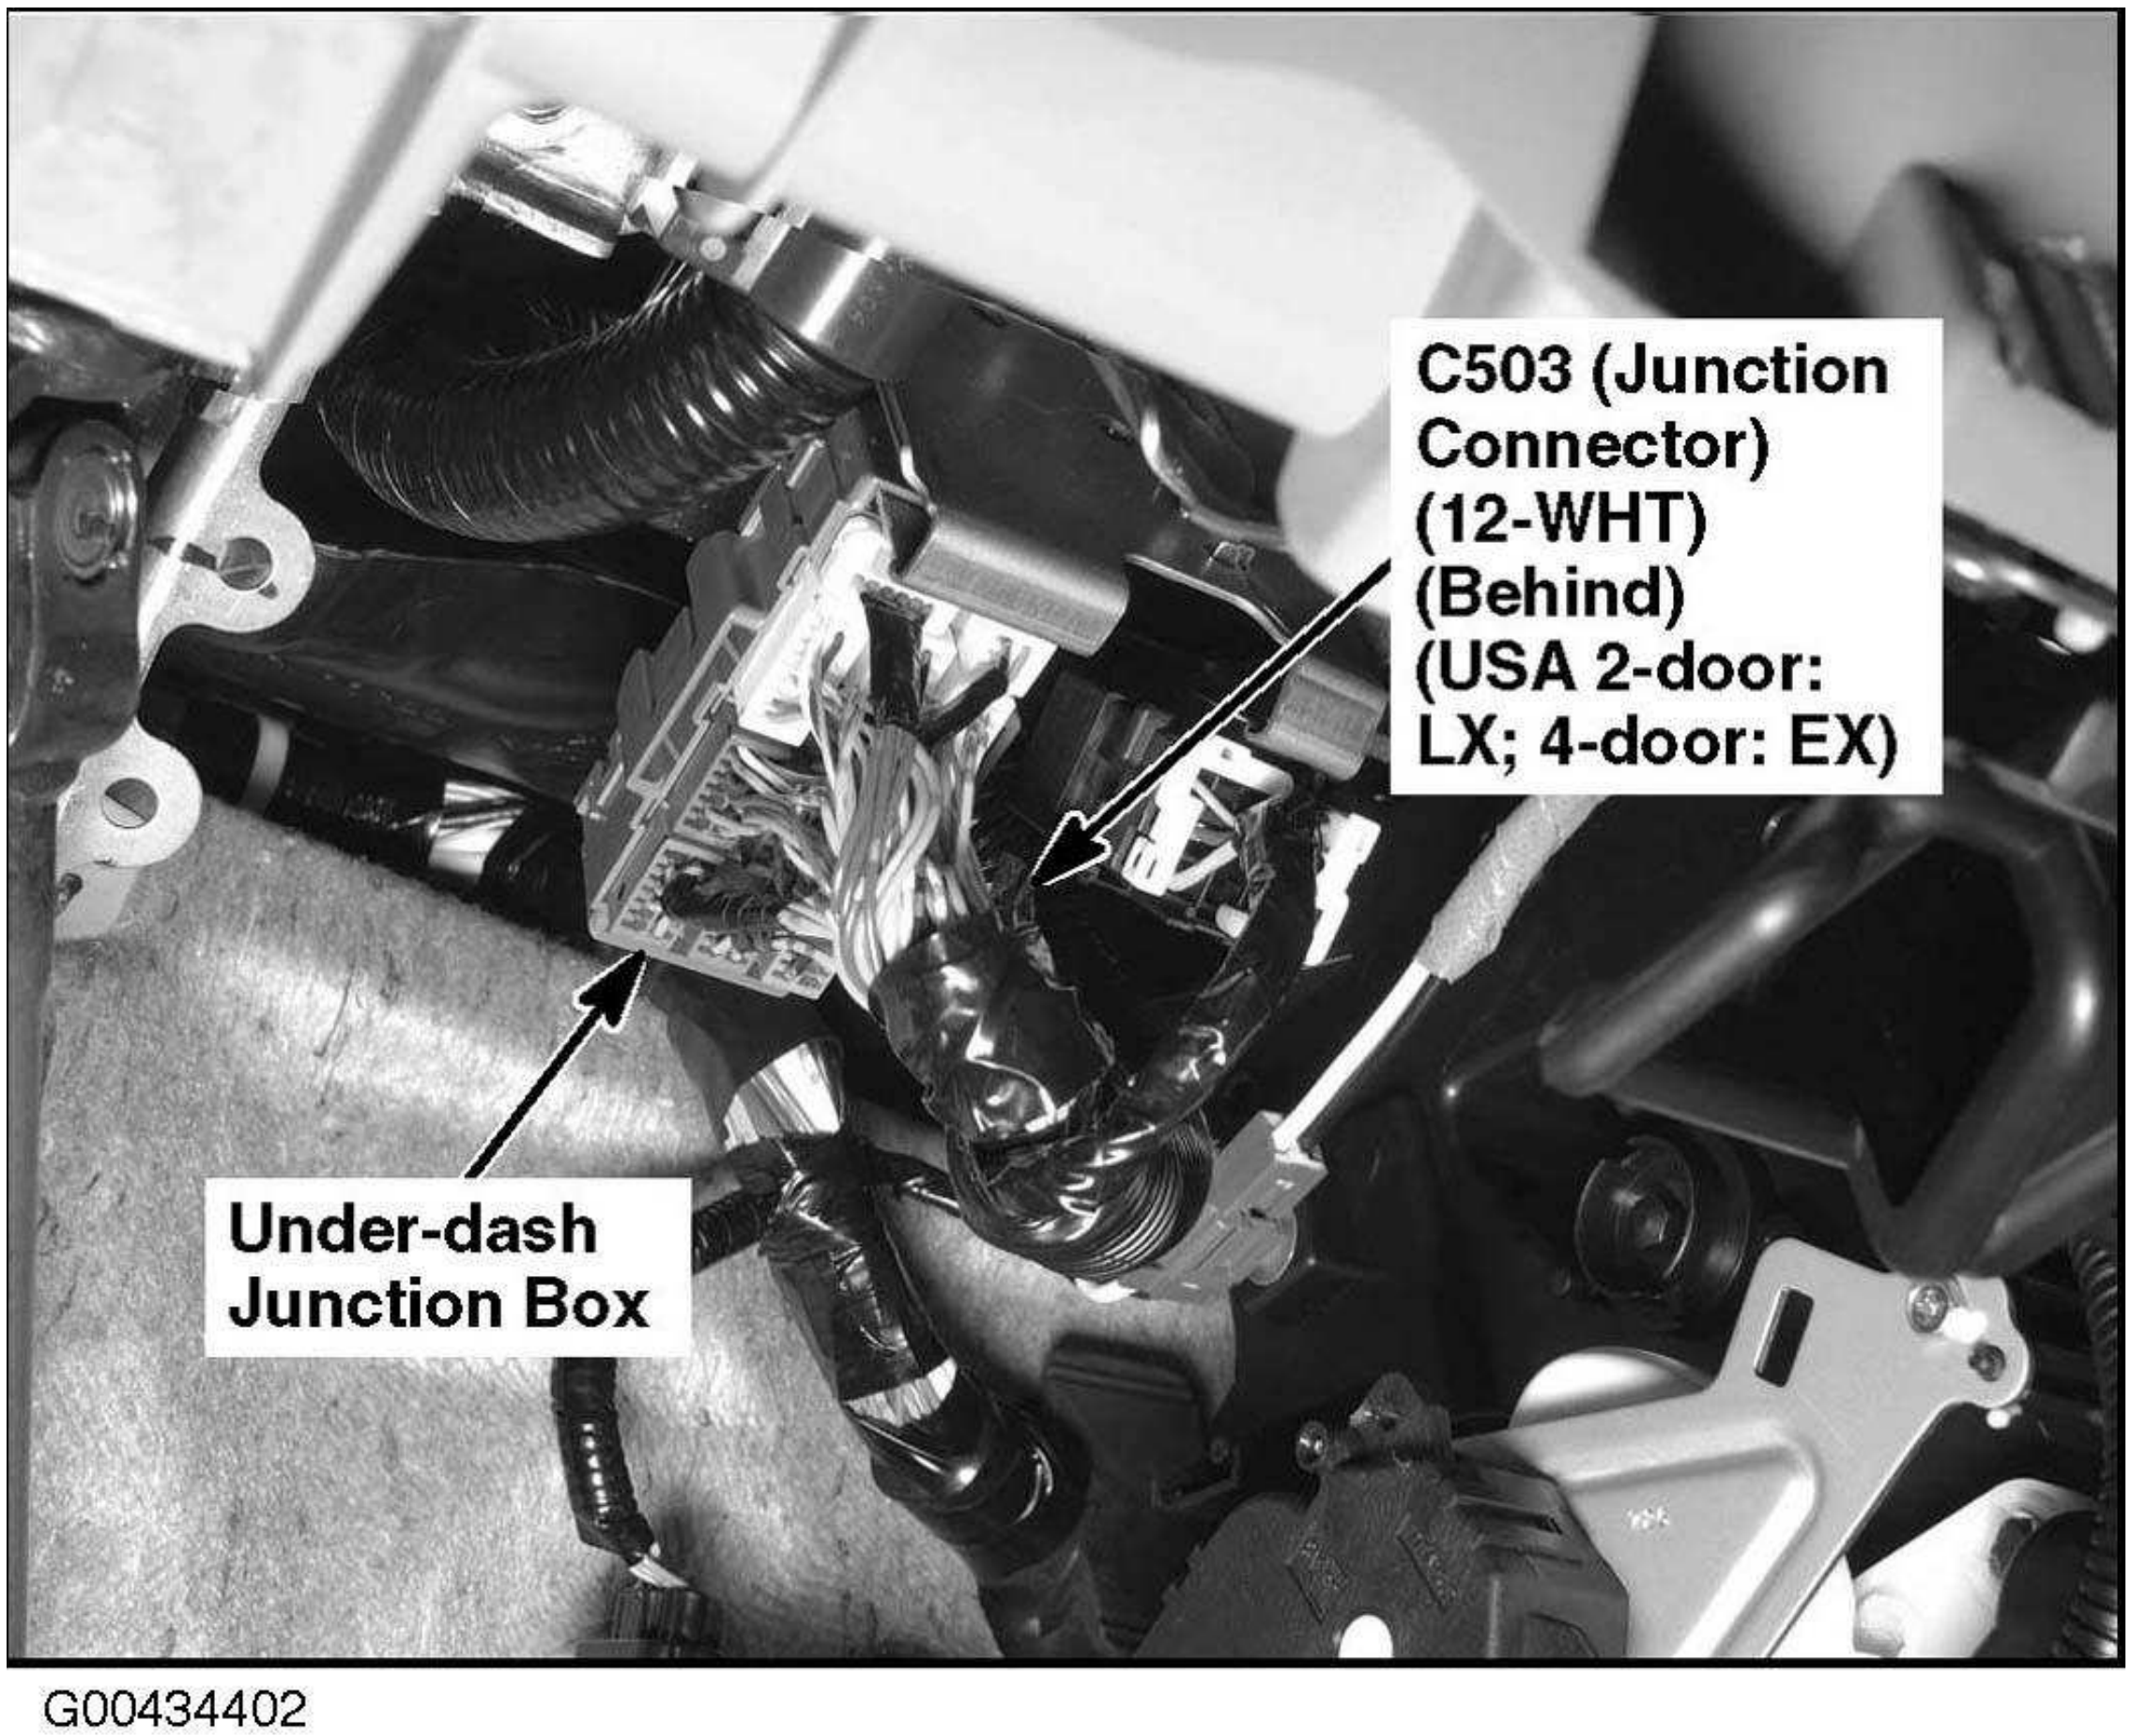
C503 (Junction Connector) (12-WHT) (Behind) (USA 2-door: LX; 4-door: EX)
Under-dash Junction Box
G00434402

Fig. 63: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

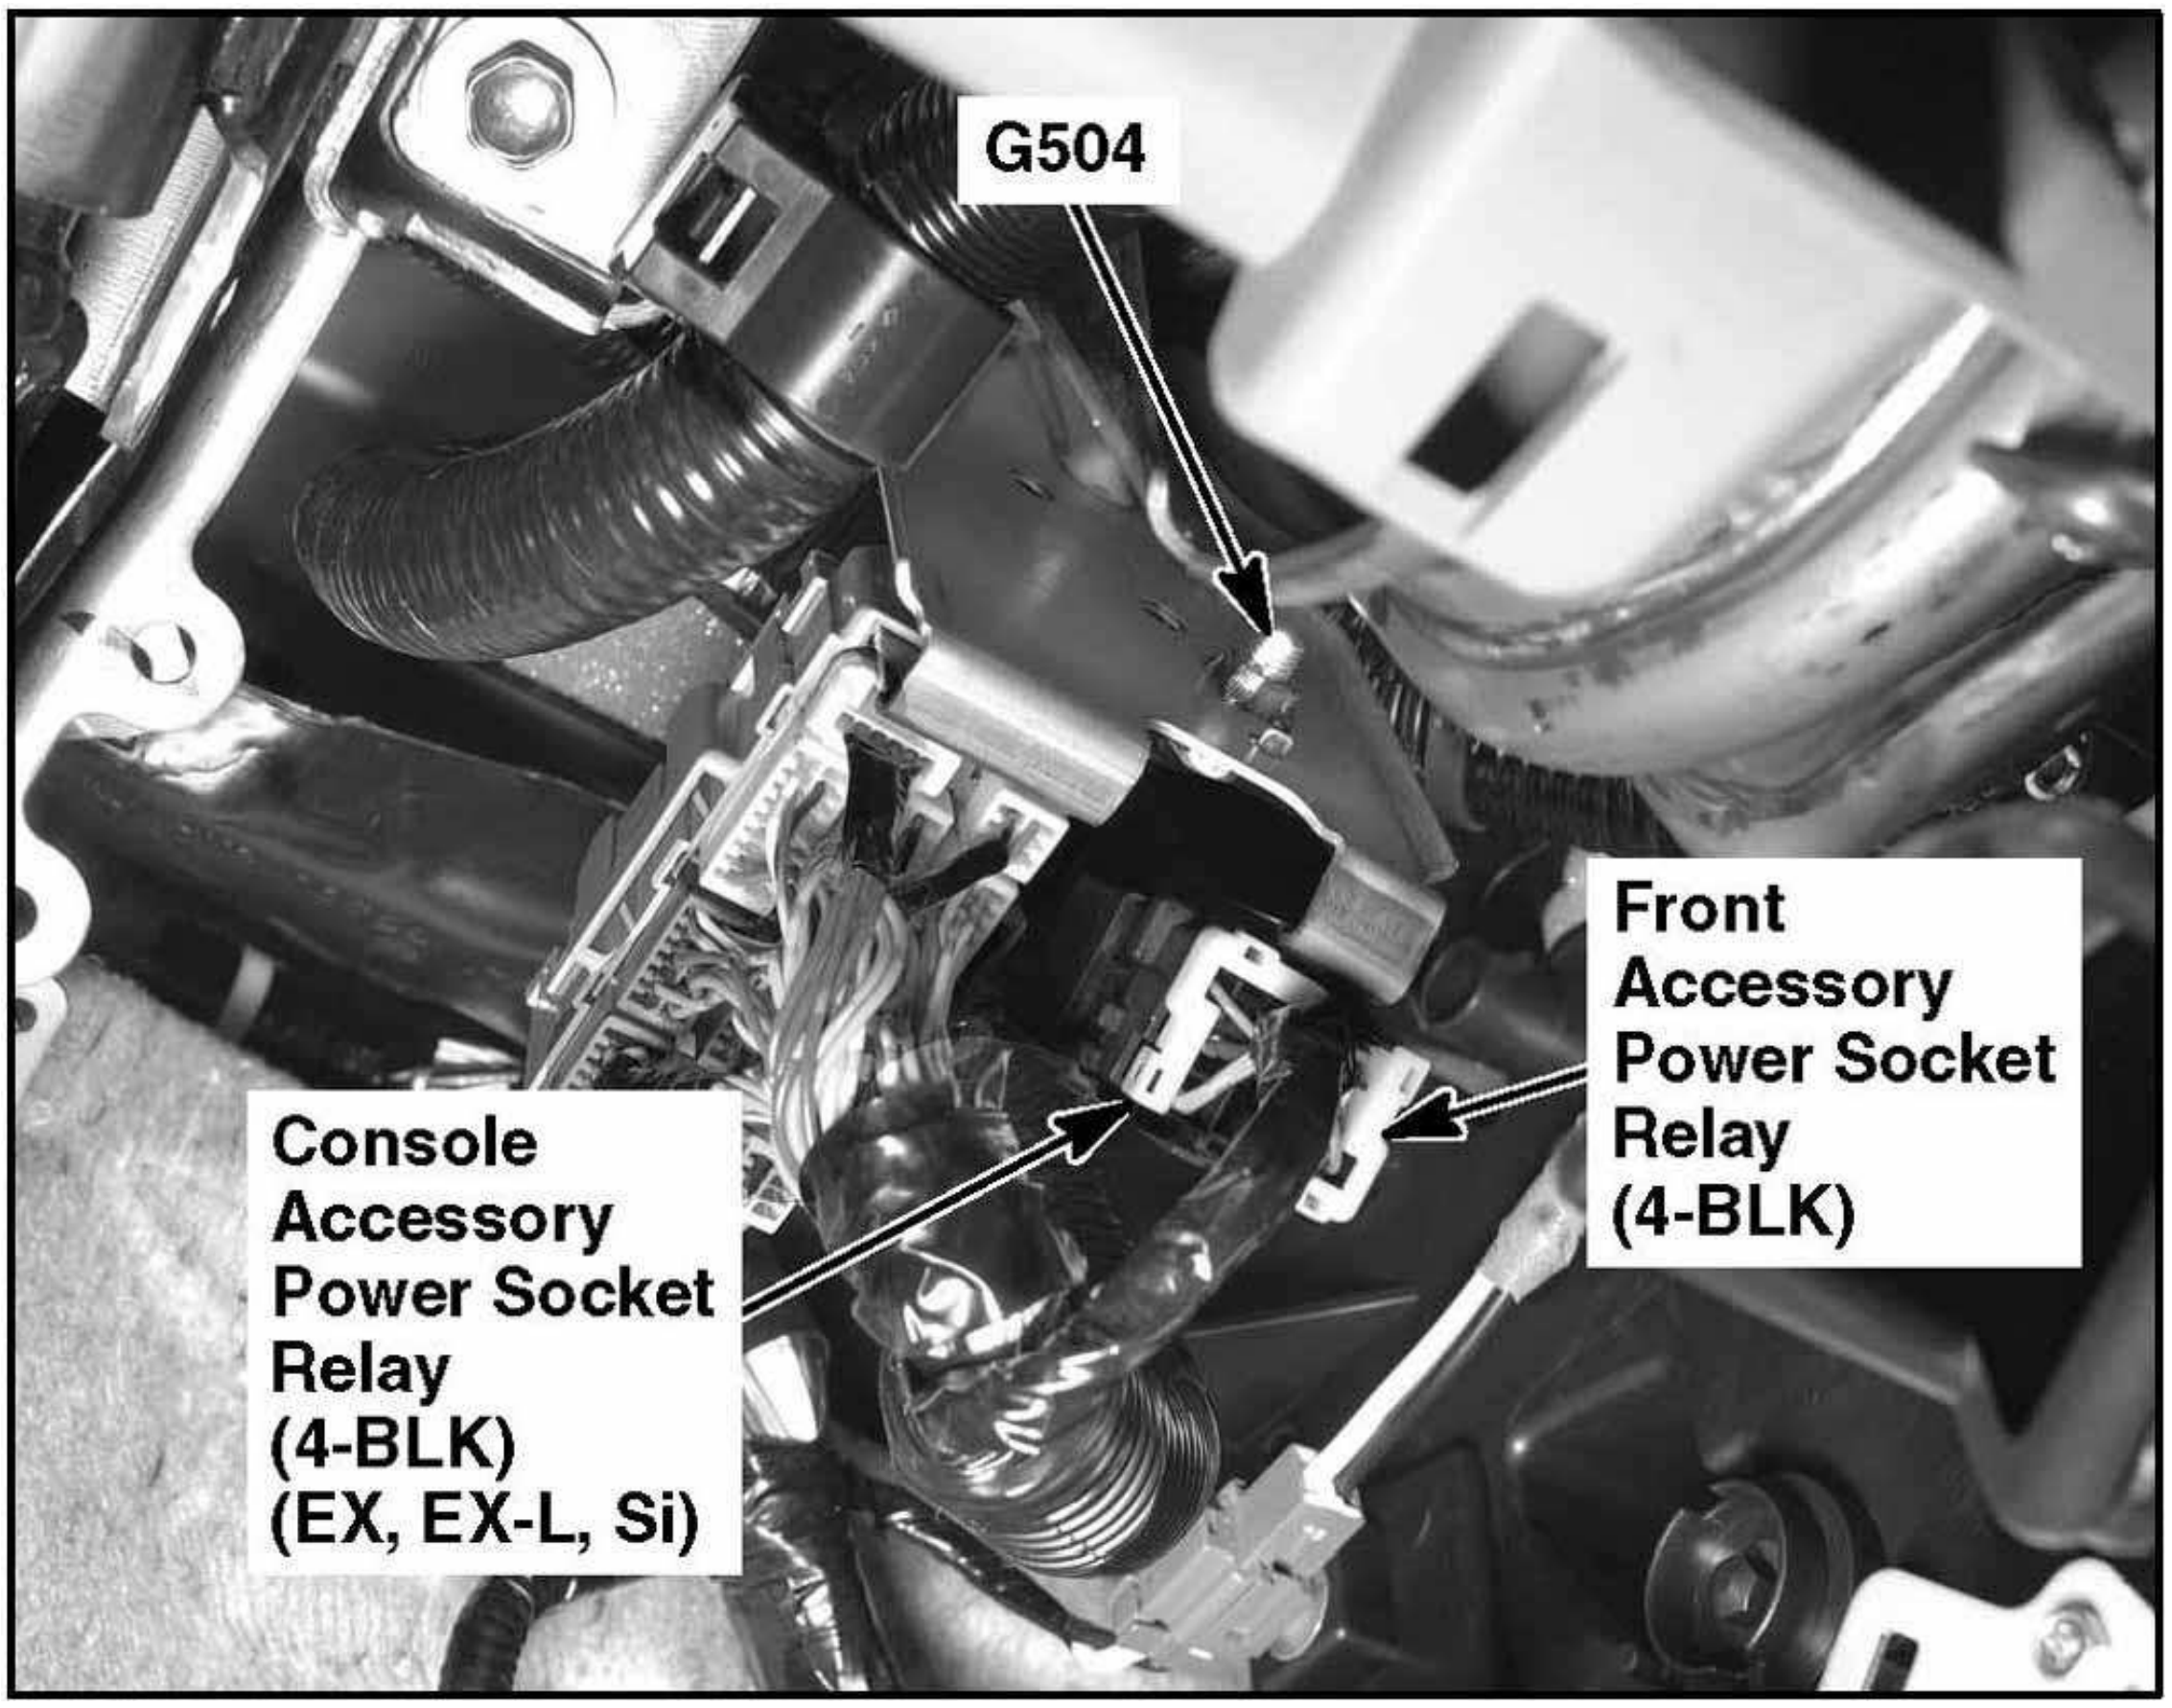
G504
Front Accessory Power Socket Relay (4-BLK)
Console Accessory Power Socket Relay (4-BLK) (EX, EX-L, Si)

Fig. 64: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

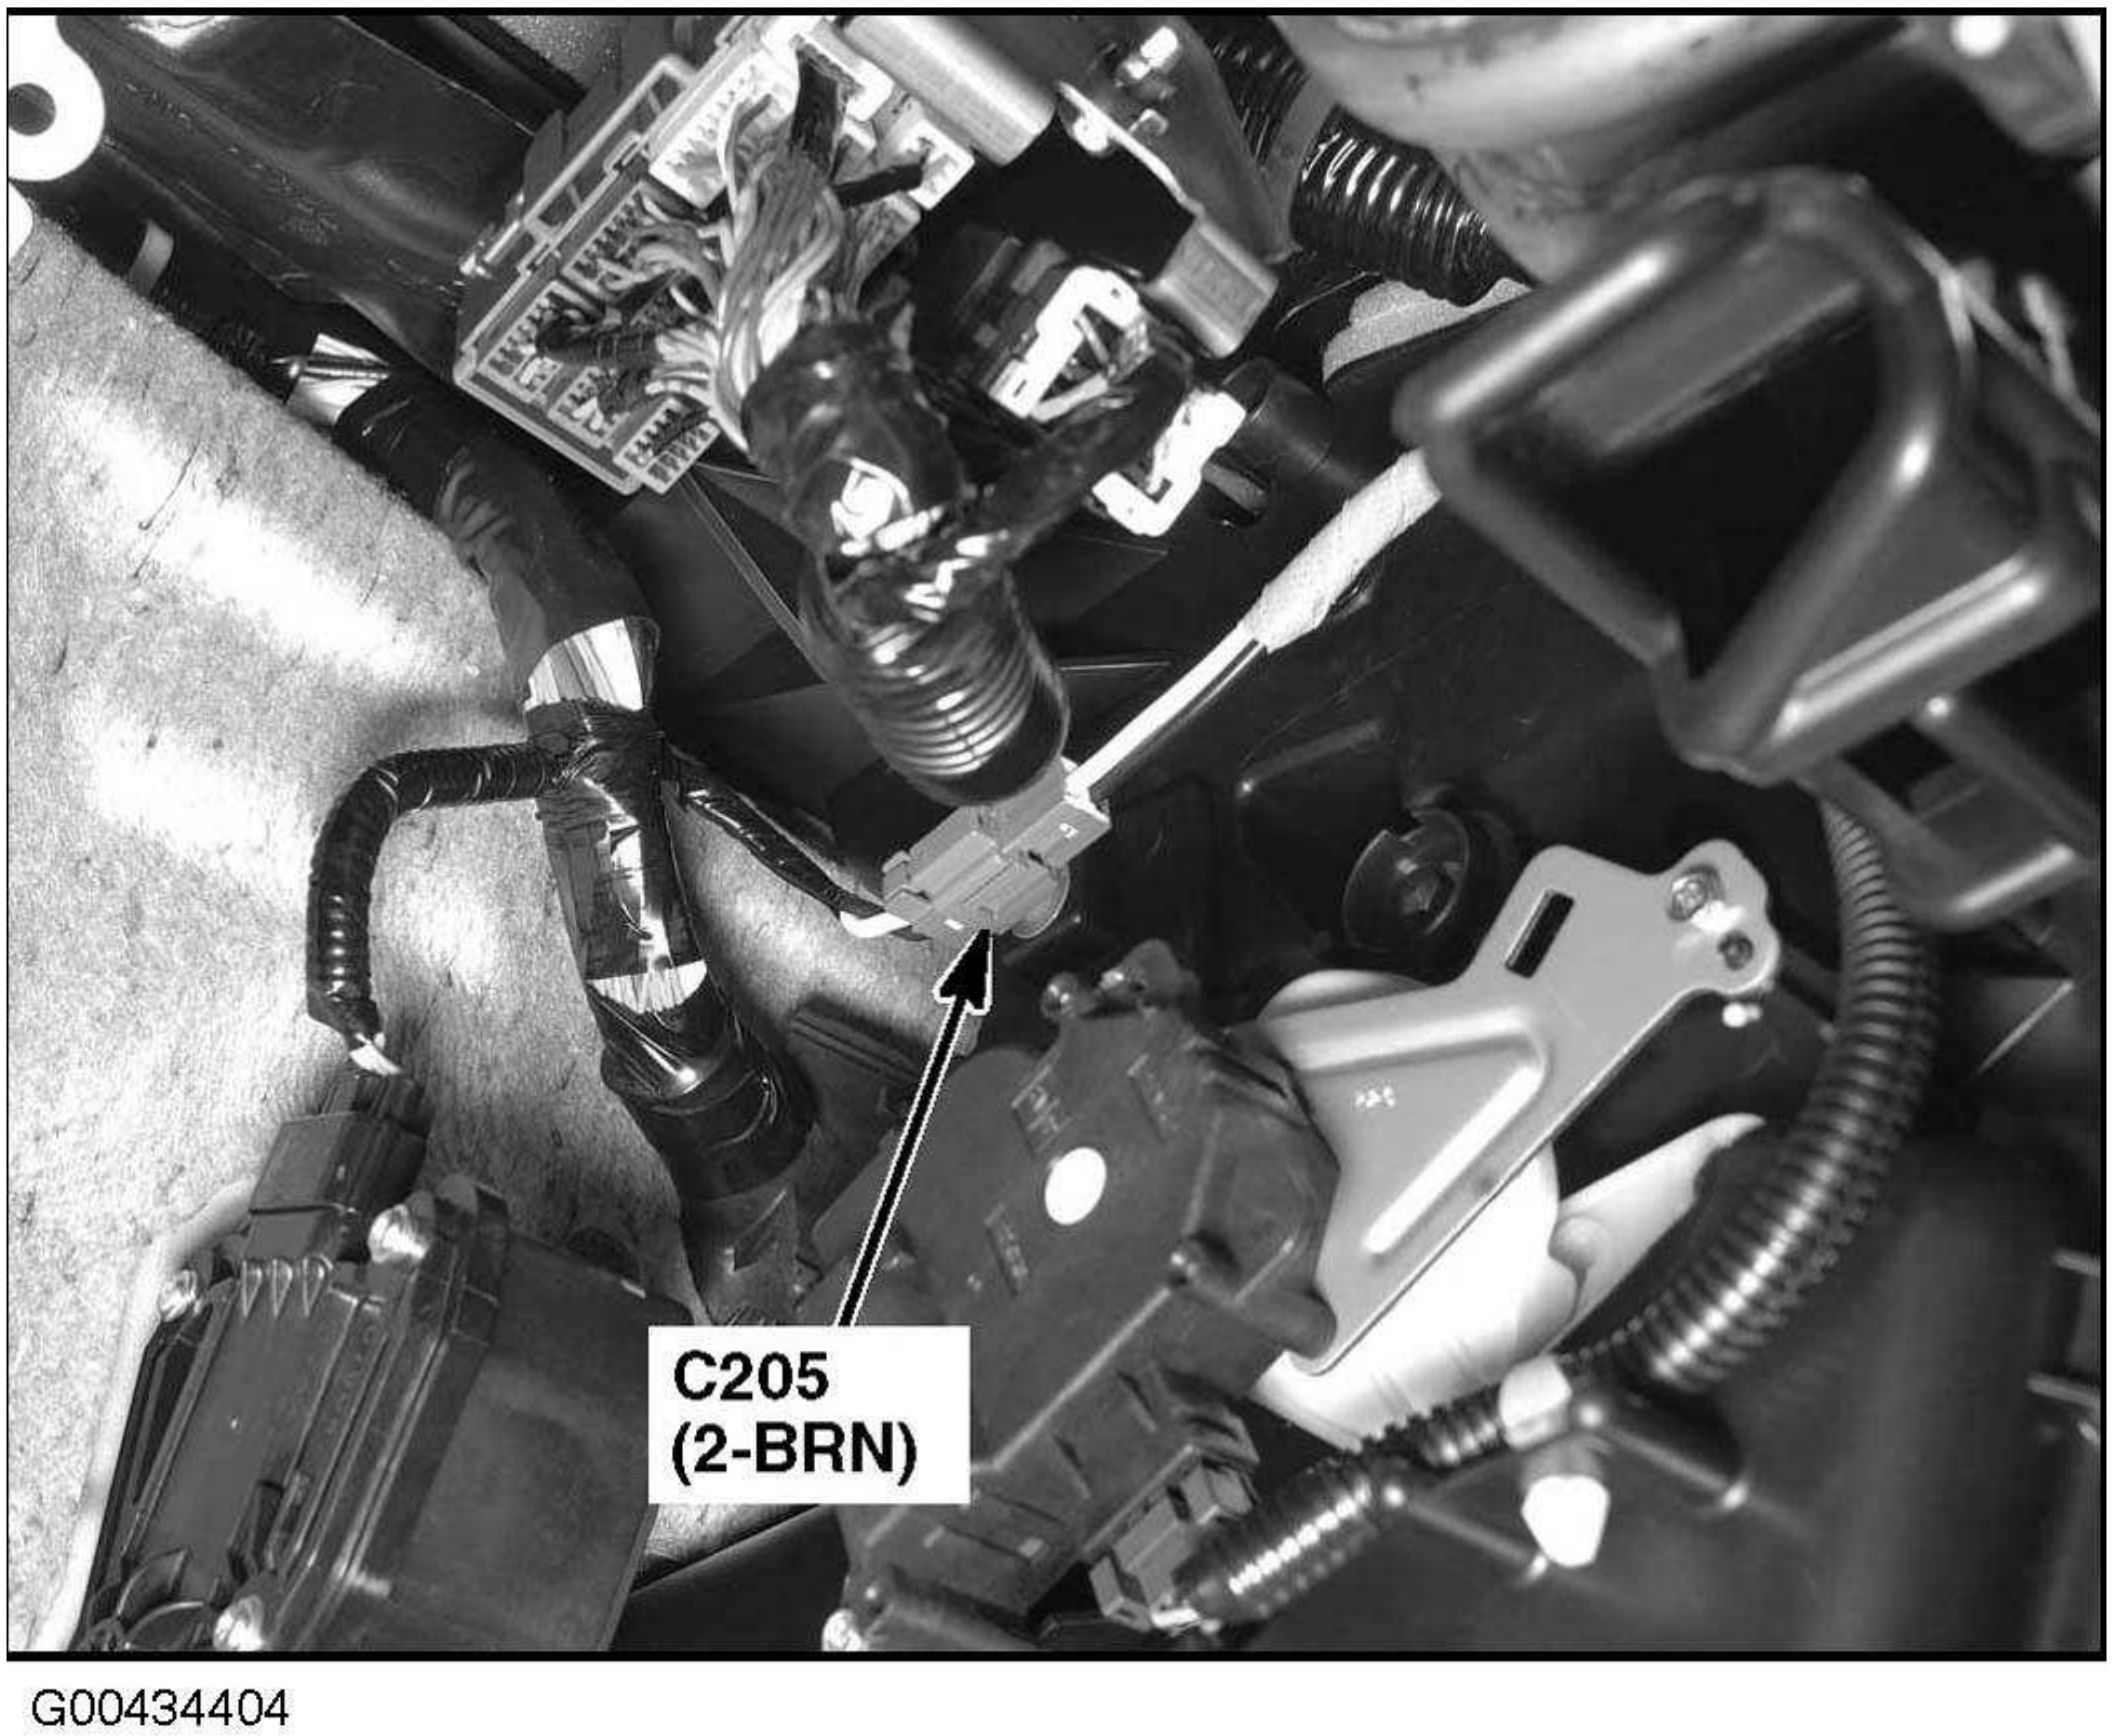
C205
(2-BRN)
G00434404

Fig. 65: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

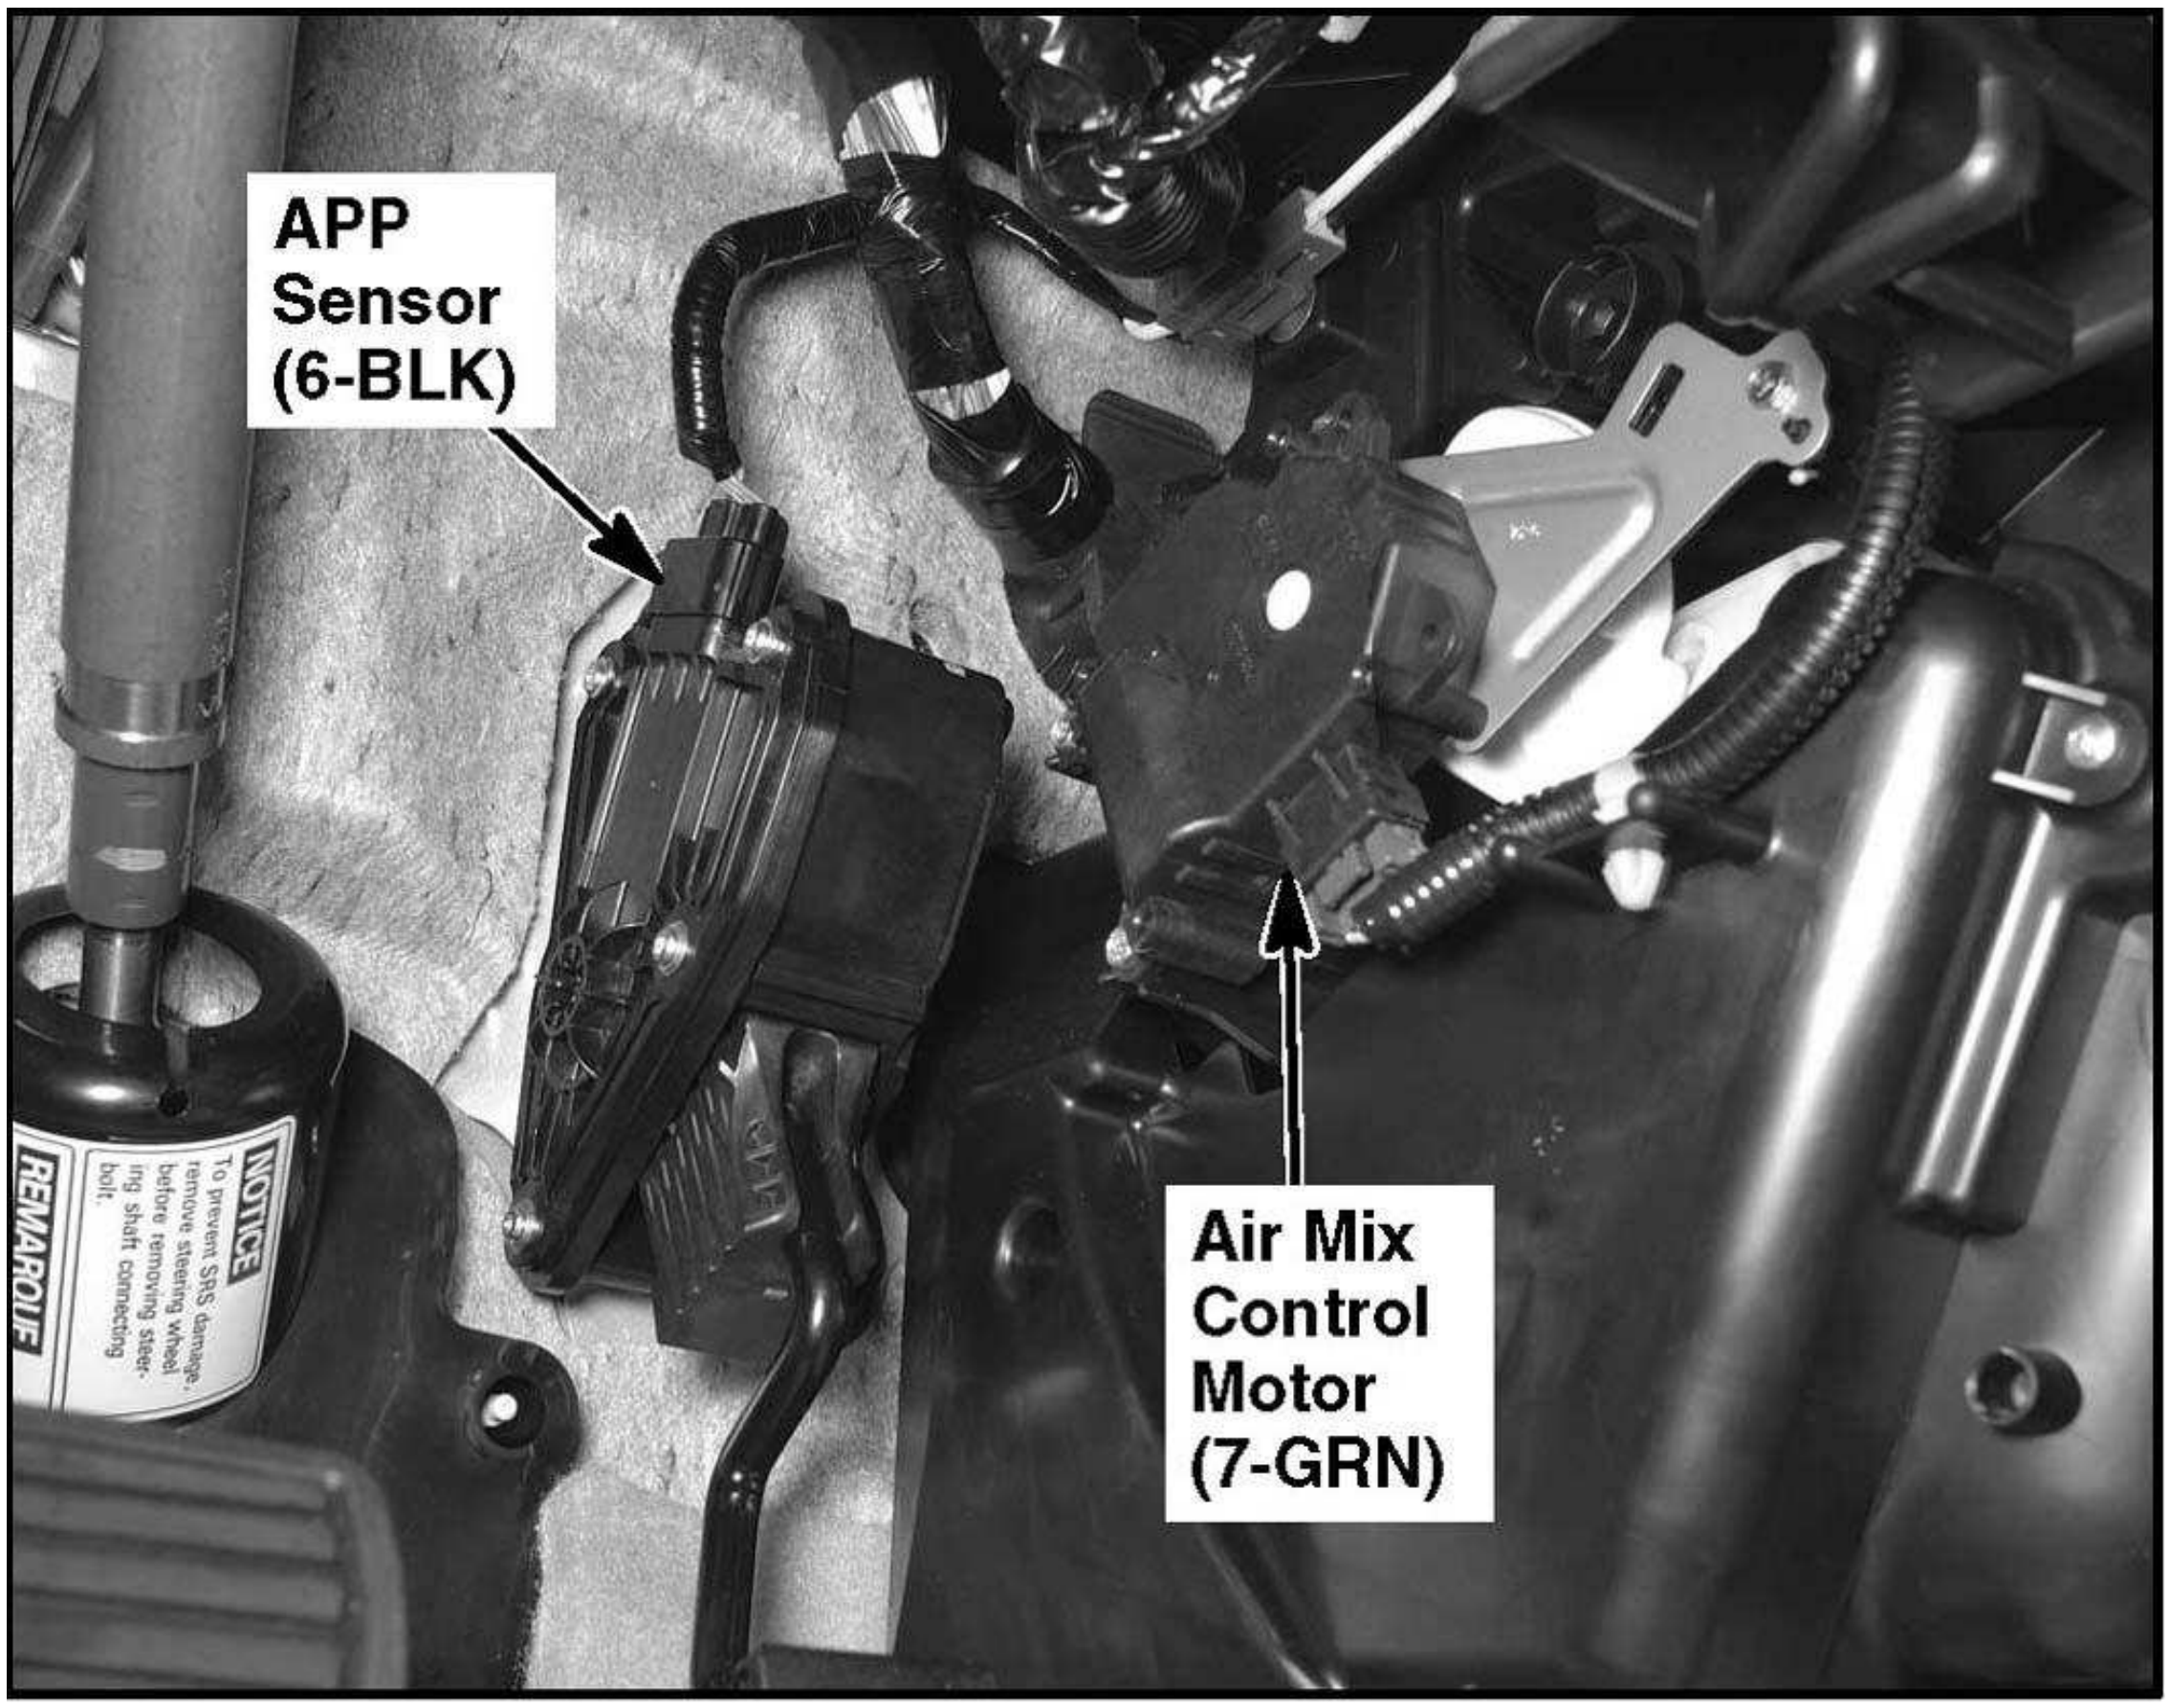
APP Sensor (6-BLK)
Air Mix Control Motor (7-GRN)
NOTICE
To prevent SRS damage, remove steering wheel before removing steering shaft connecting bolt.
REMARQUE

G00434405

Fig. 66: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

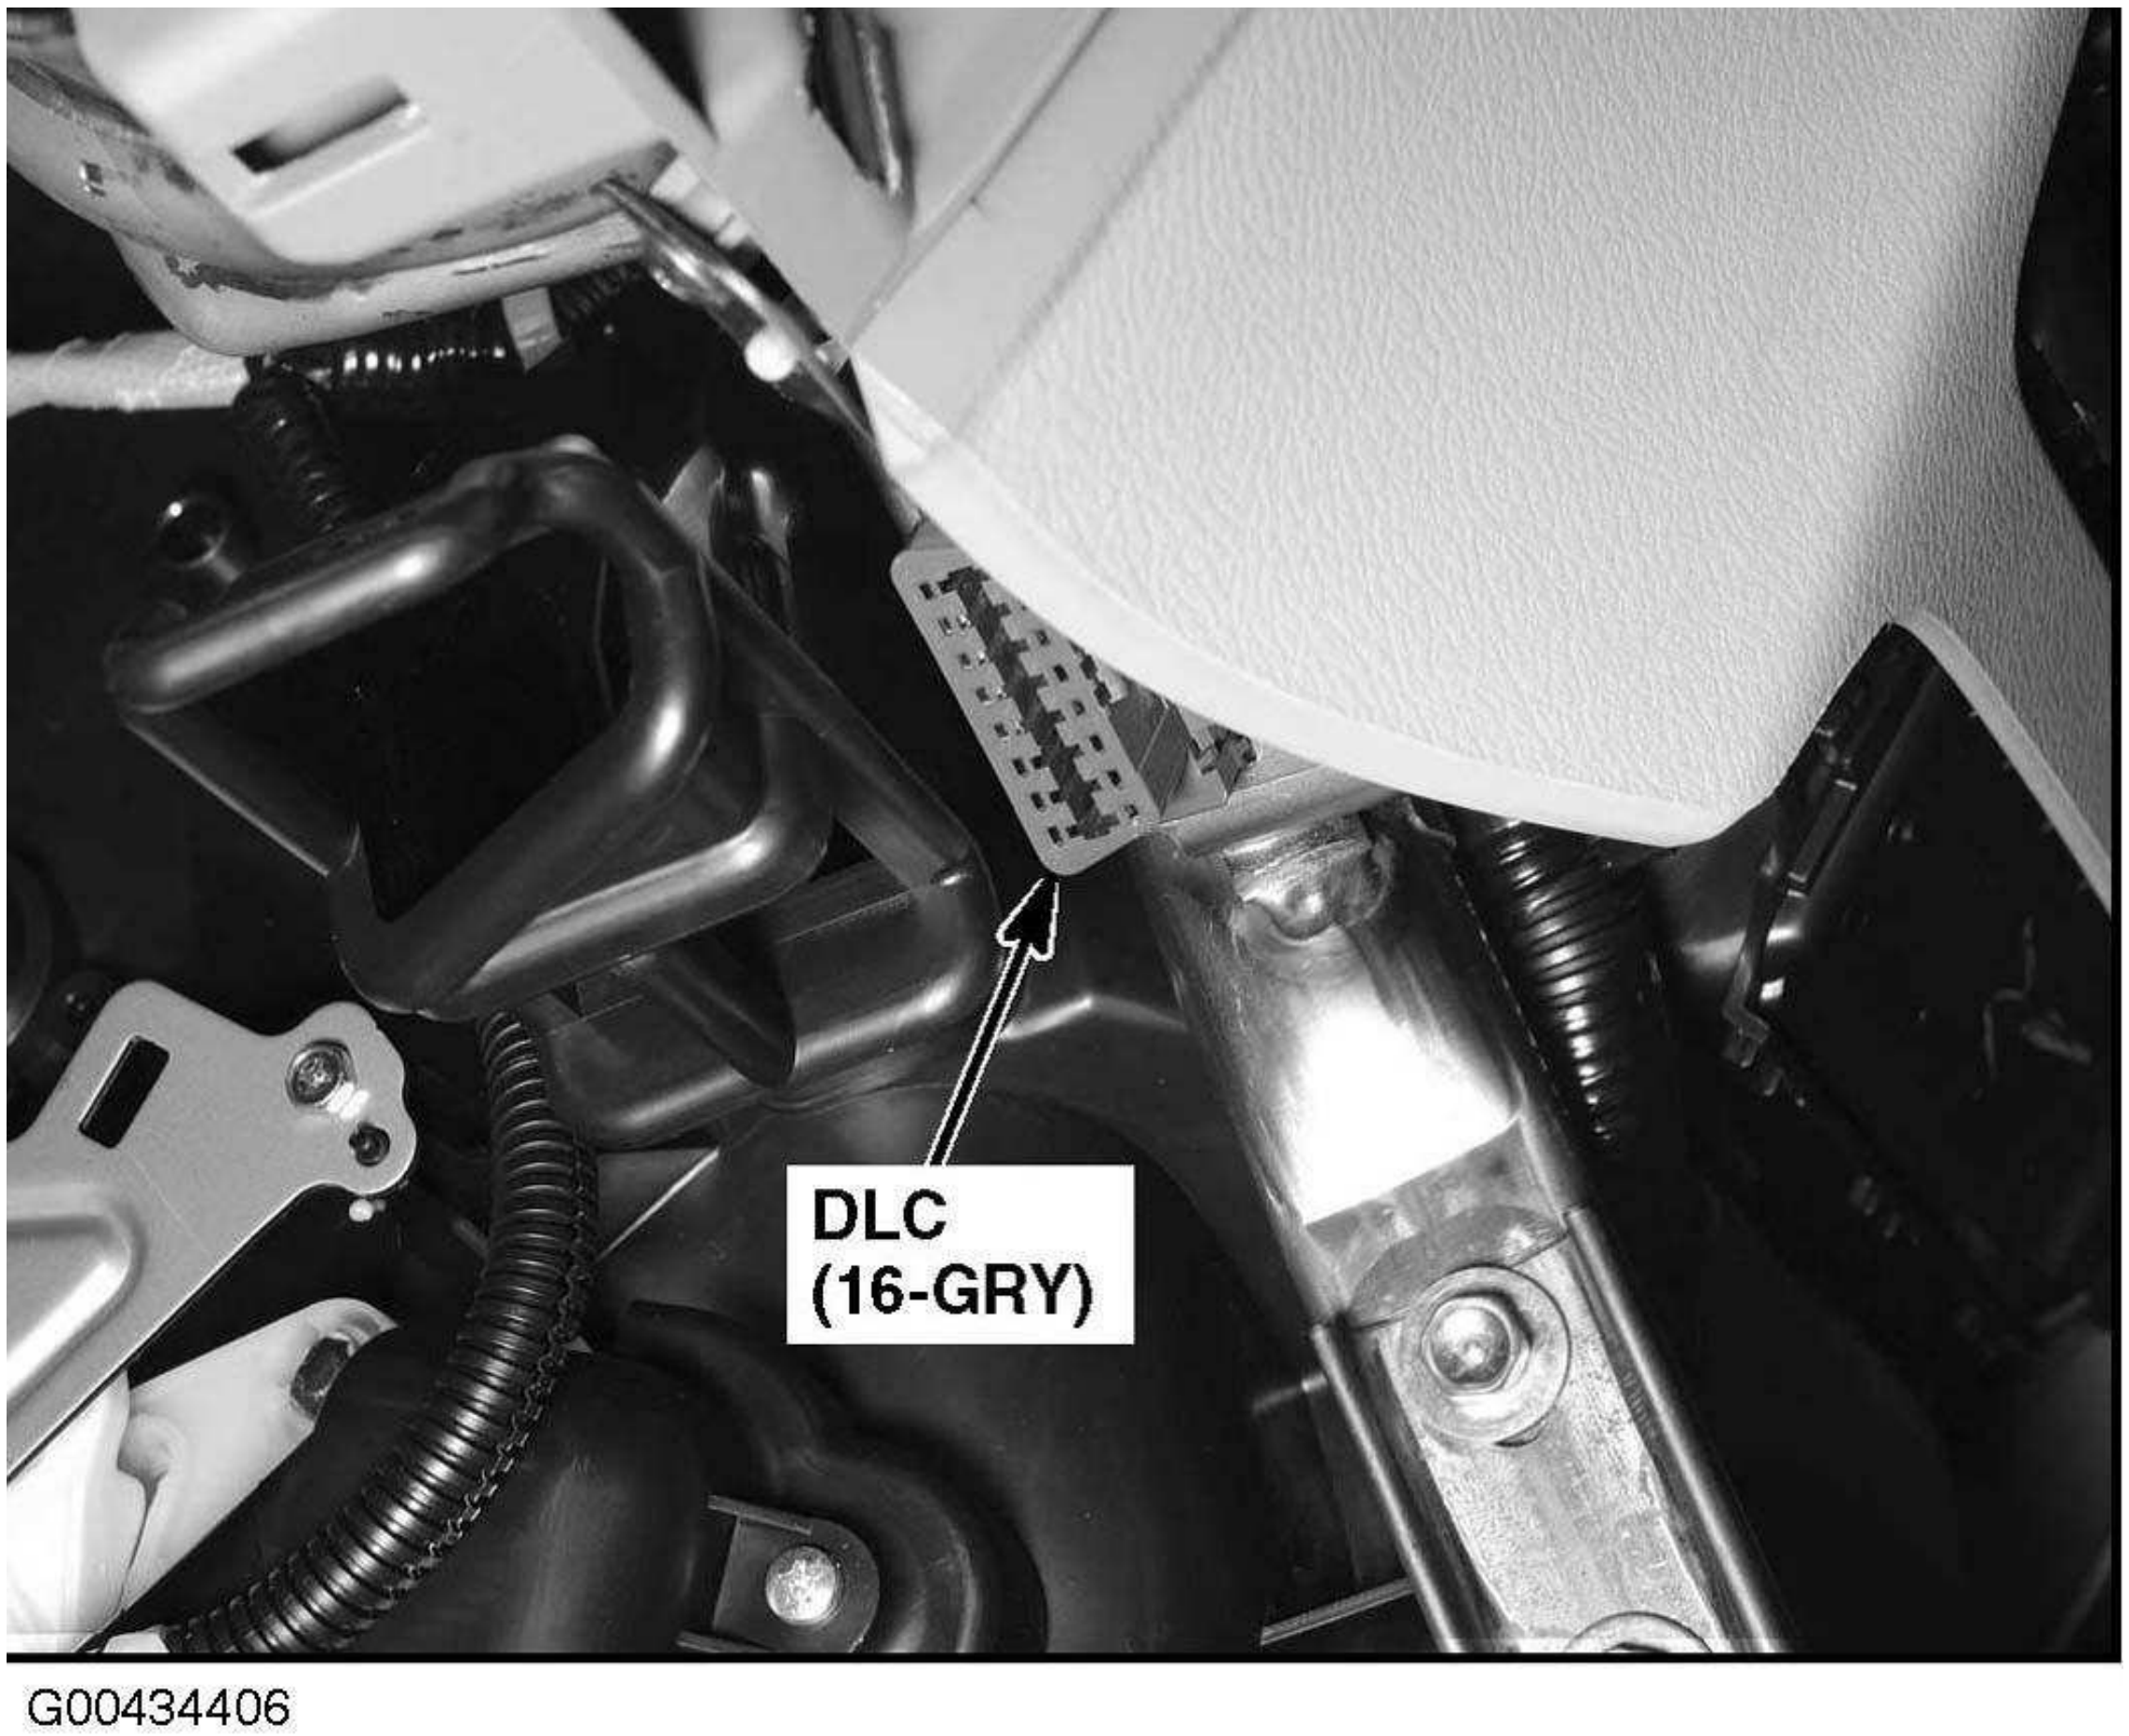

DLC
(16-GRY)
G00434406

Fig. 67: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

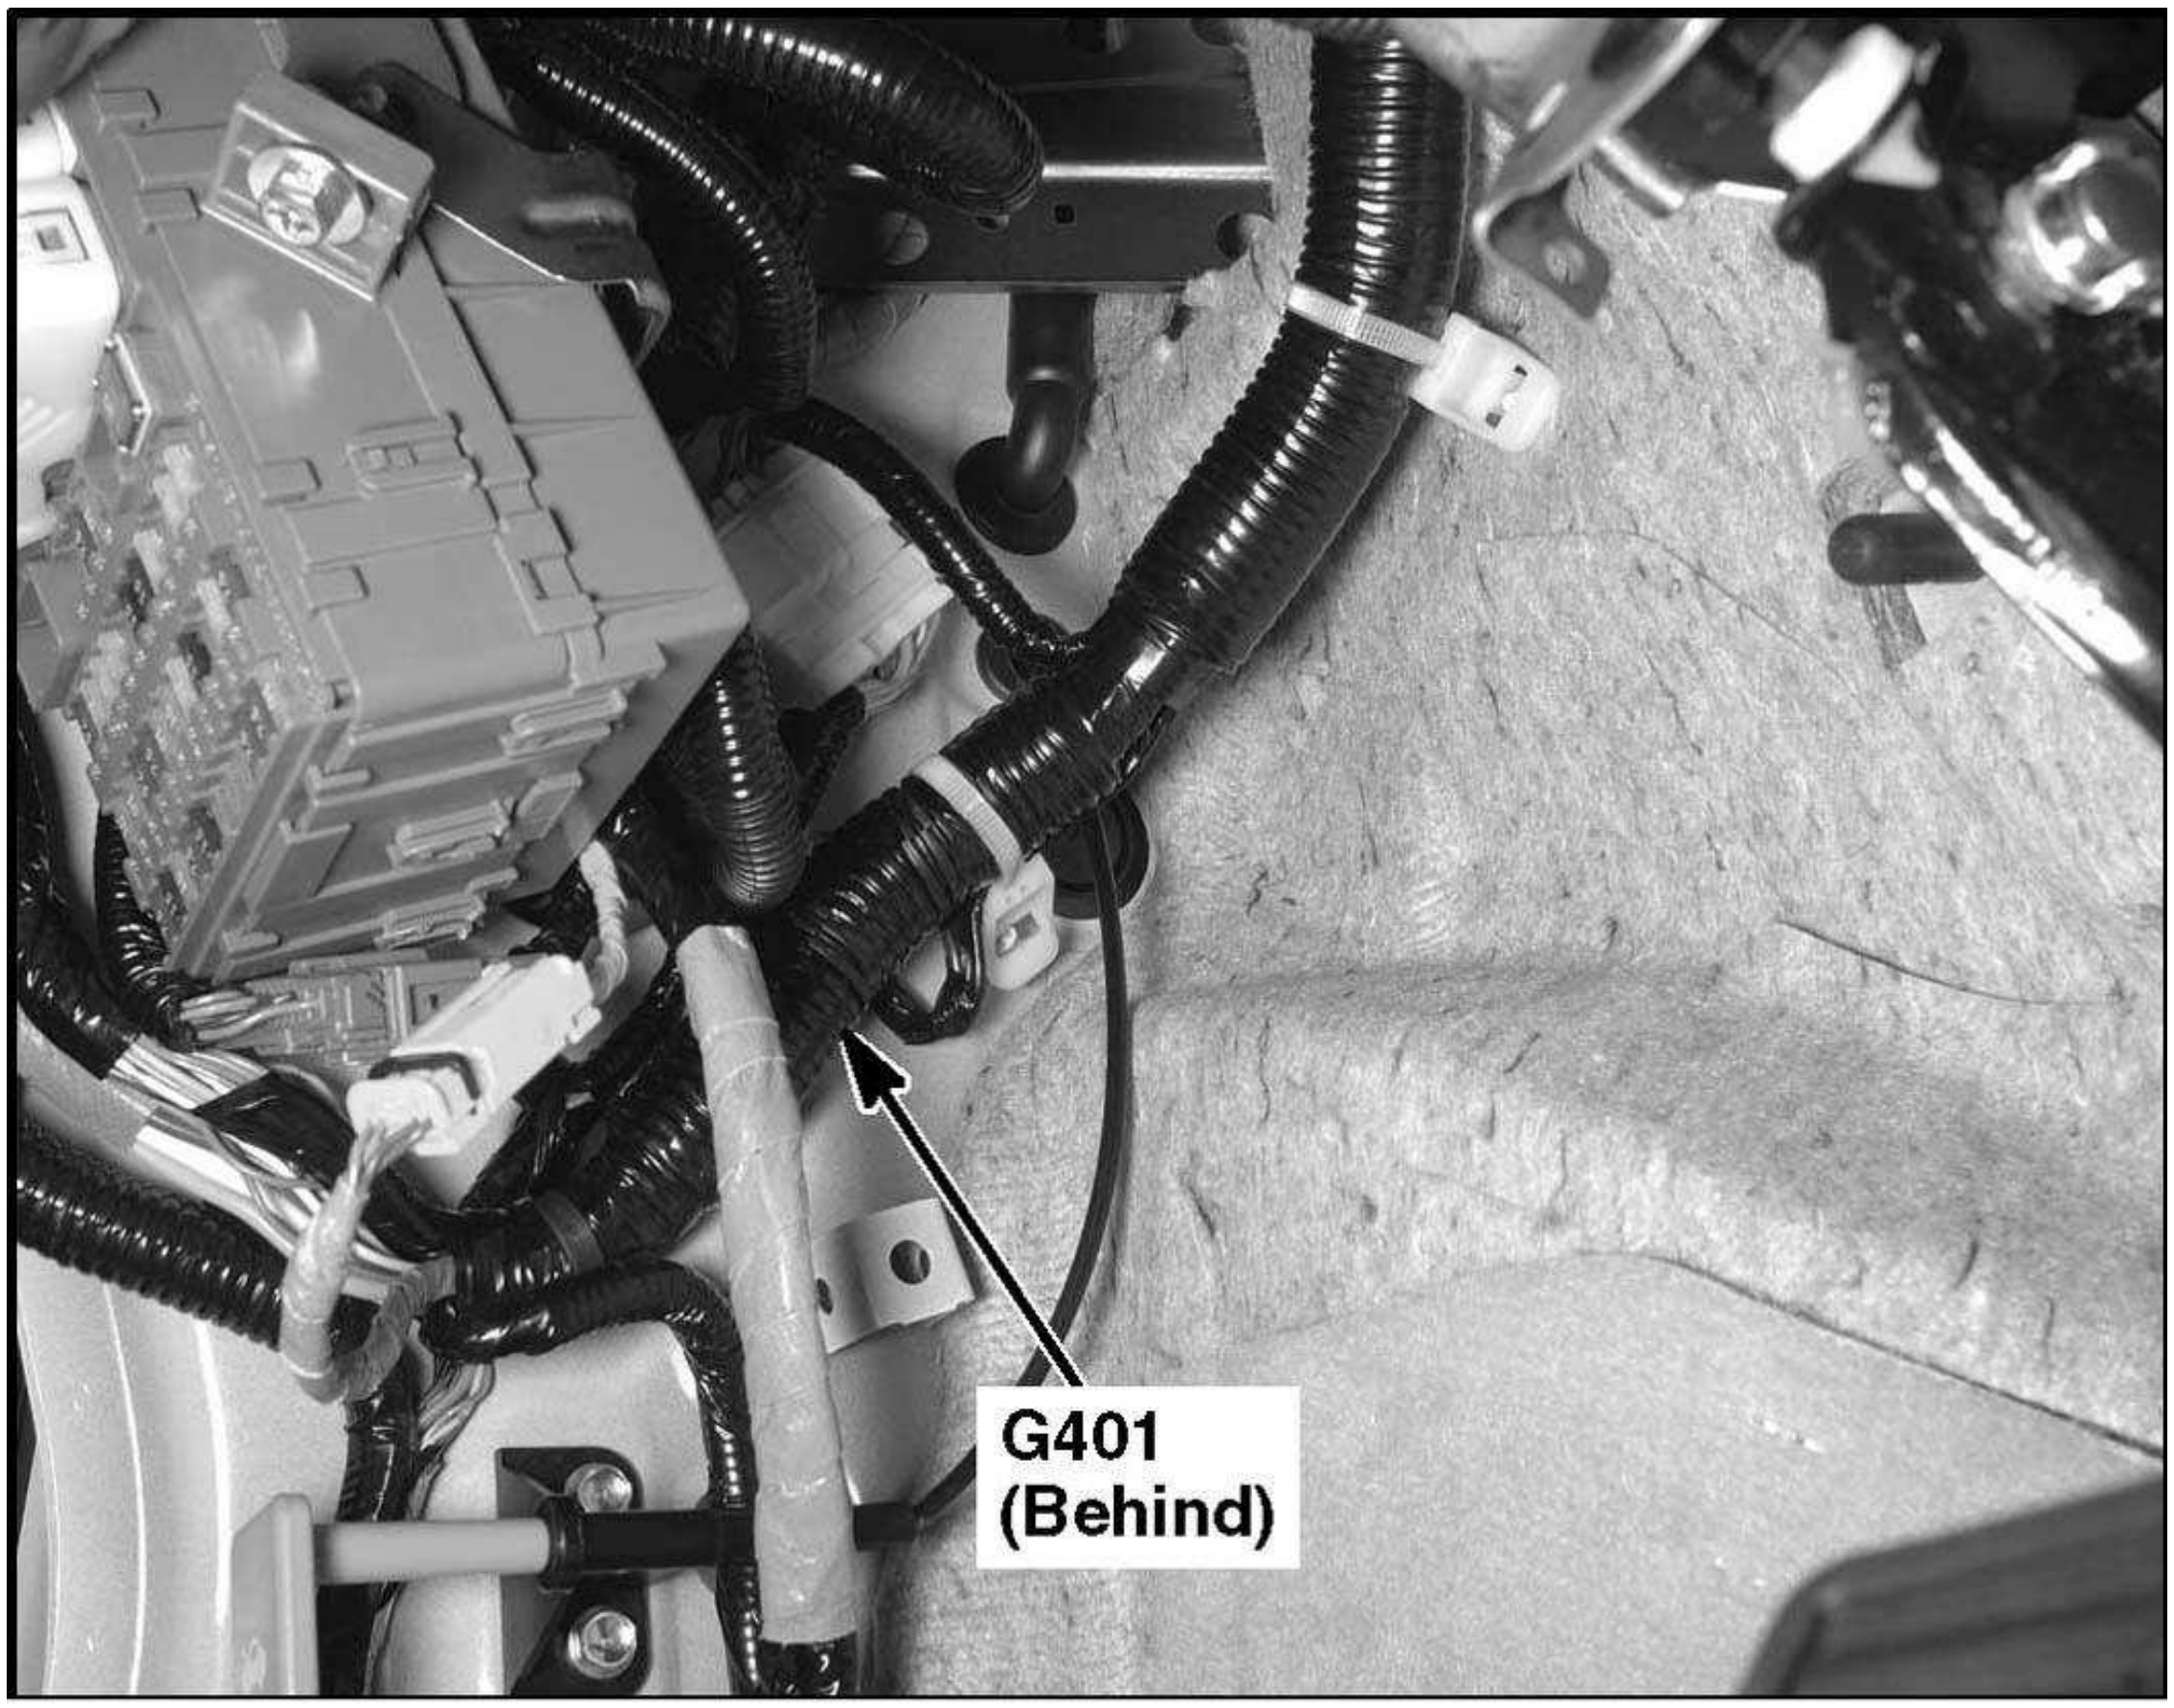
G401
(Behind)
G00434407

Fig. 68: Behind Left Kick Panel
Courtesy of AMERICAN HONDA MOTOR CO., INC.

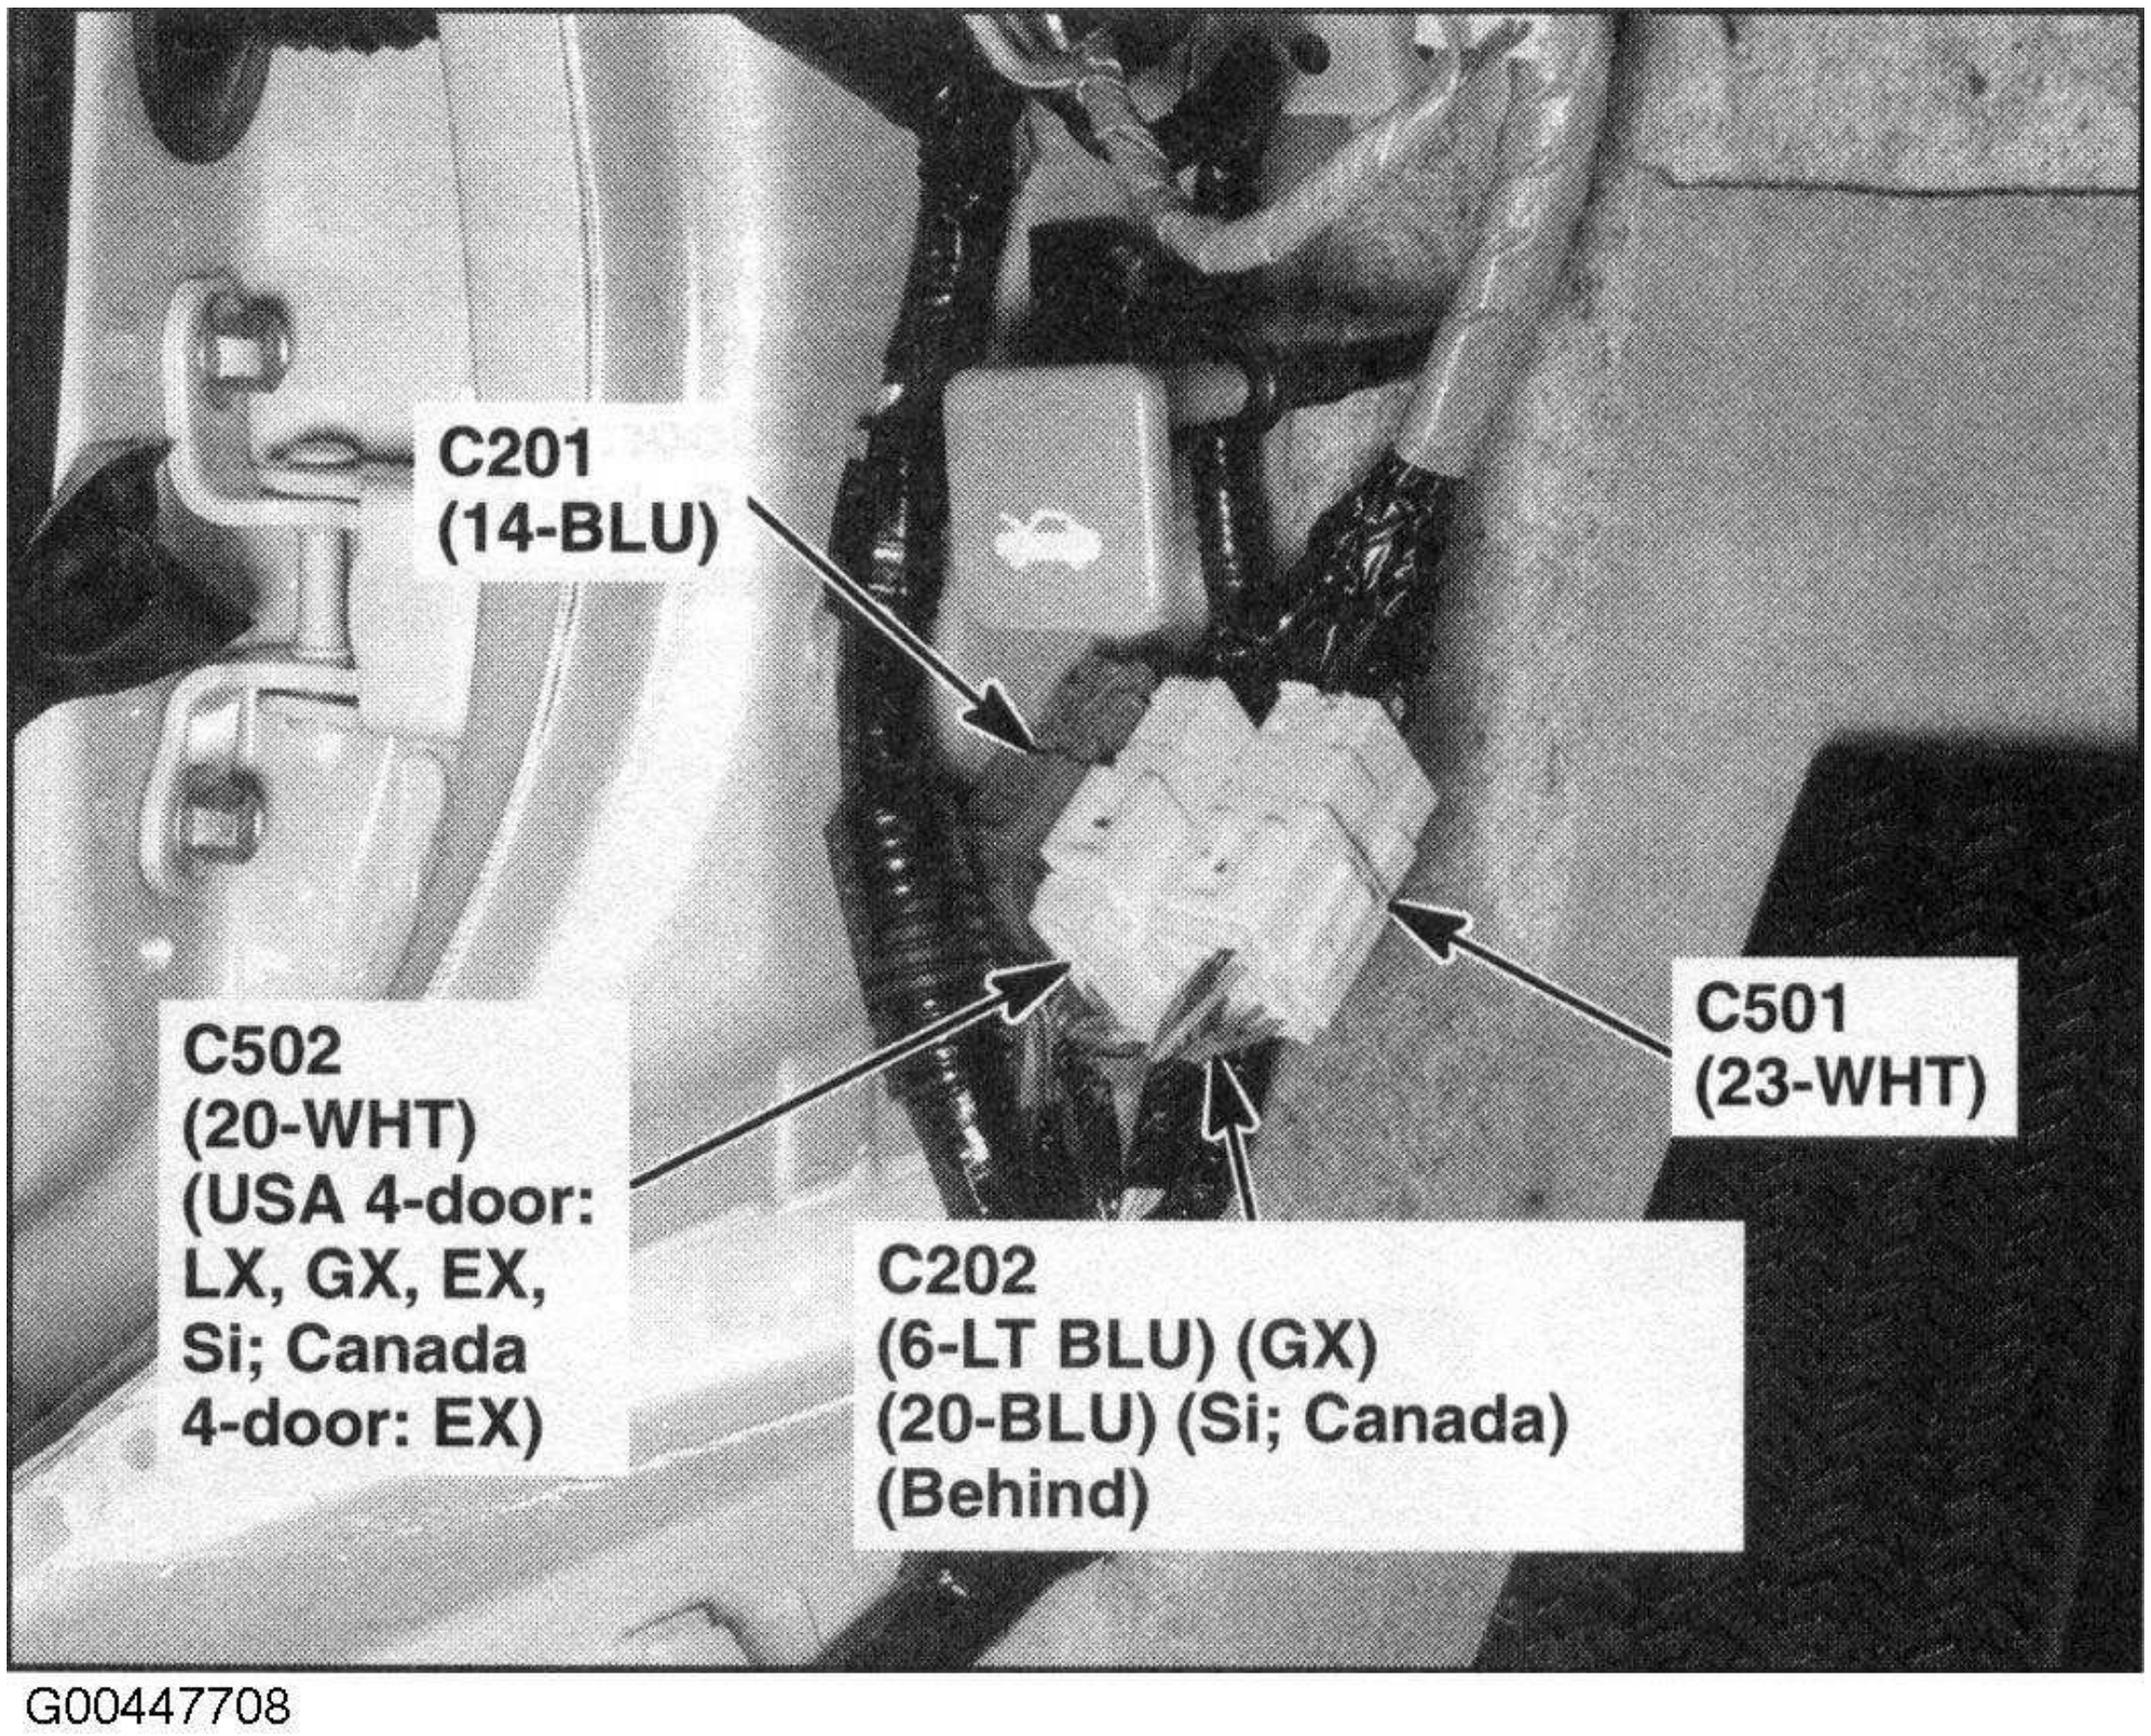

C201
(14-BLU)
C502
(20-WHT)
(USA 4-door:
LX, GX, EX,
Si; Canada
4-door: EX)
C501
(23-WHT)
C202
(6-LT BLU) (GX)
(20-BLU) (Si; Canada)
(Behind)
G00447708

Fig. 69: Behind Left Kick Panel (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

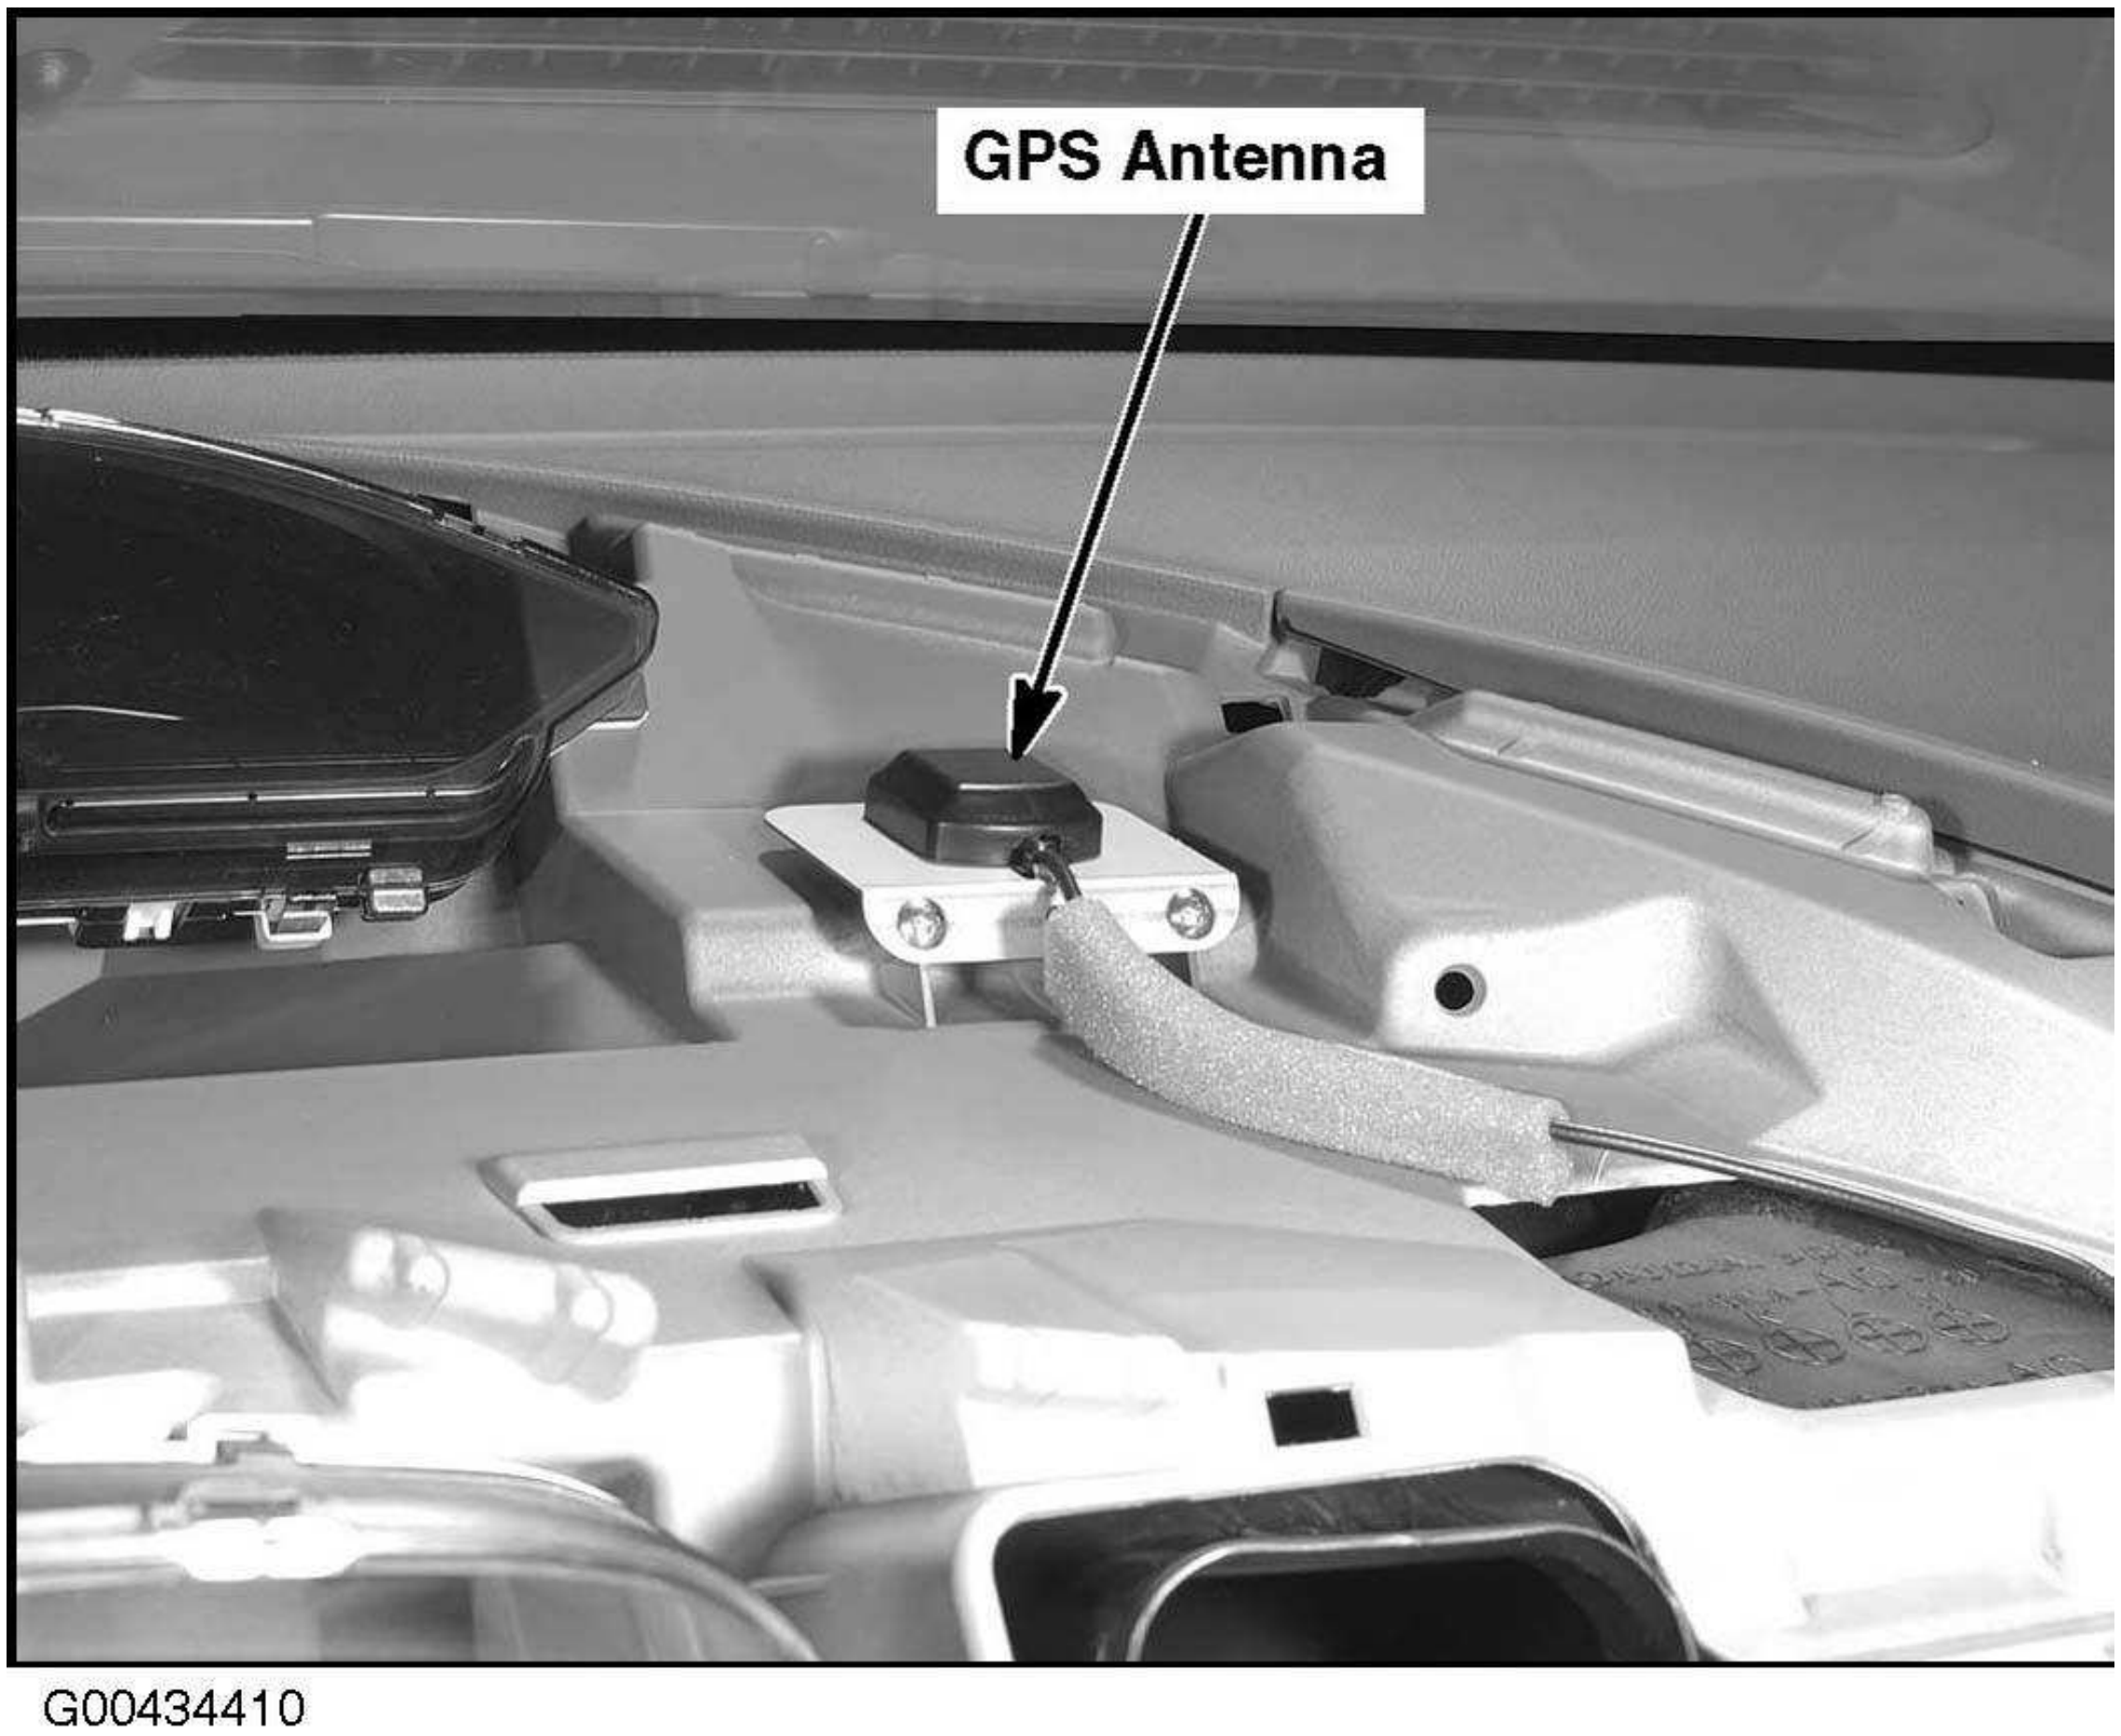
GPS Antenna
G00434410

Fig. 70: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

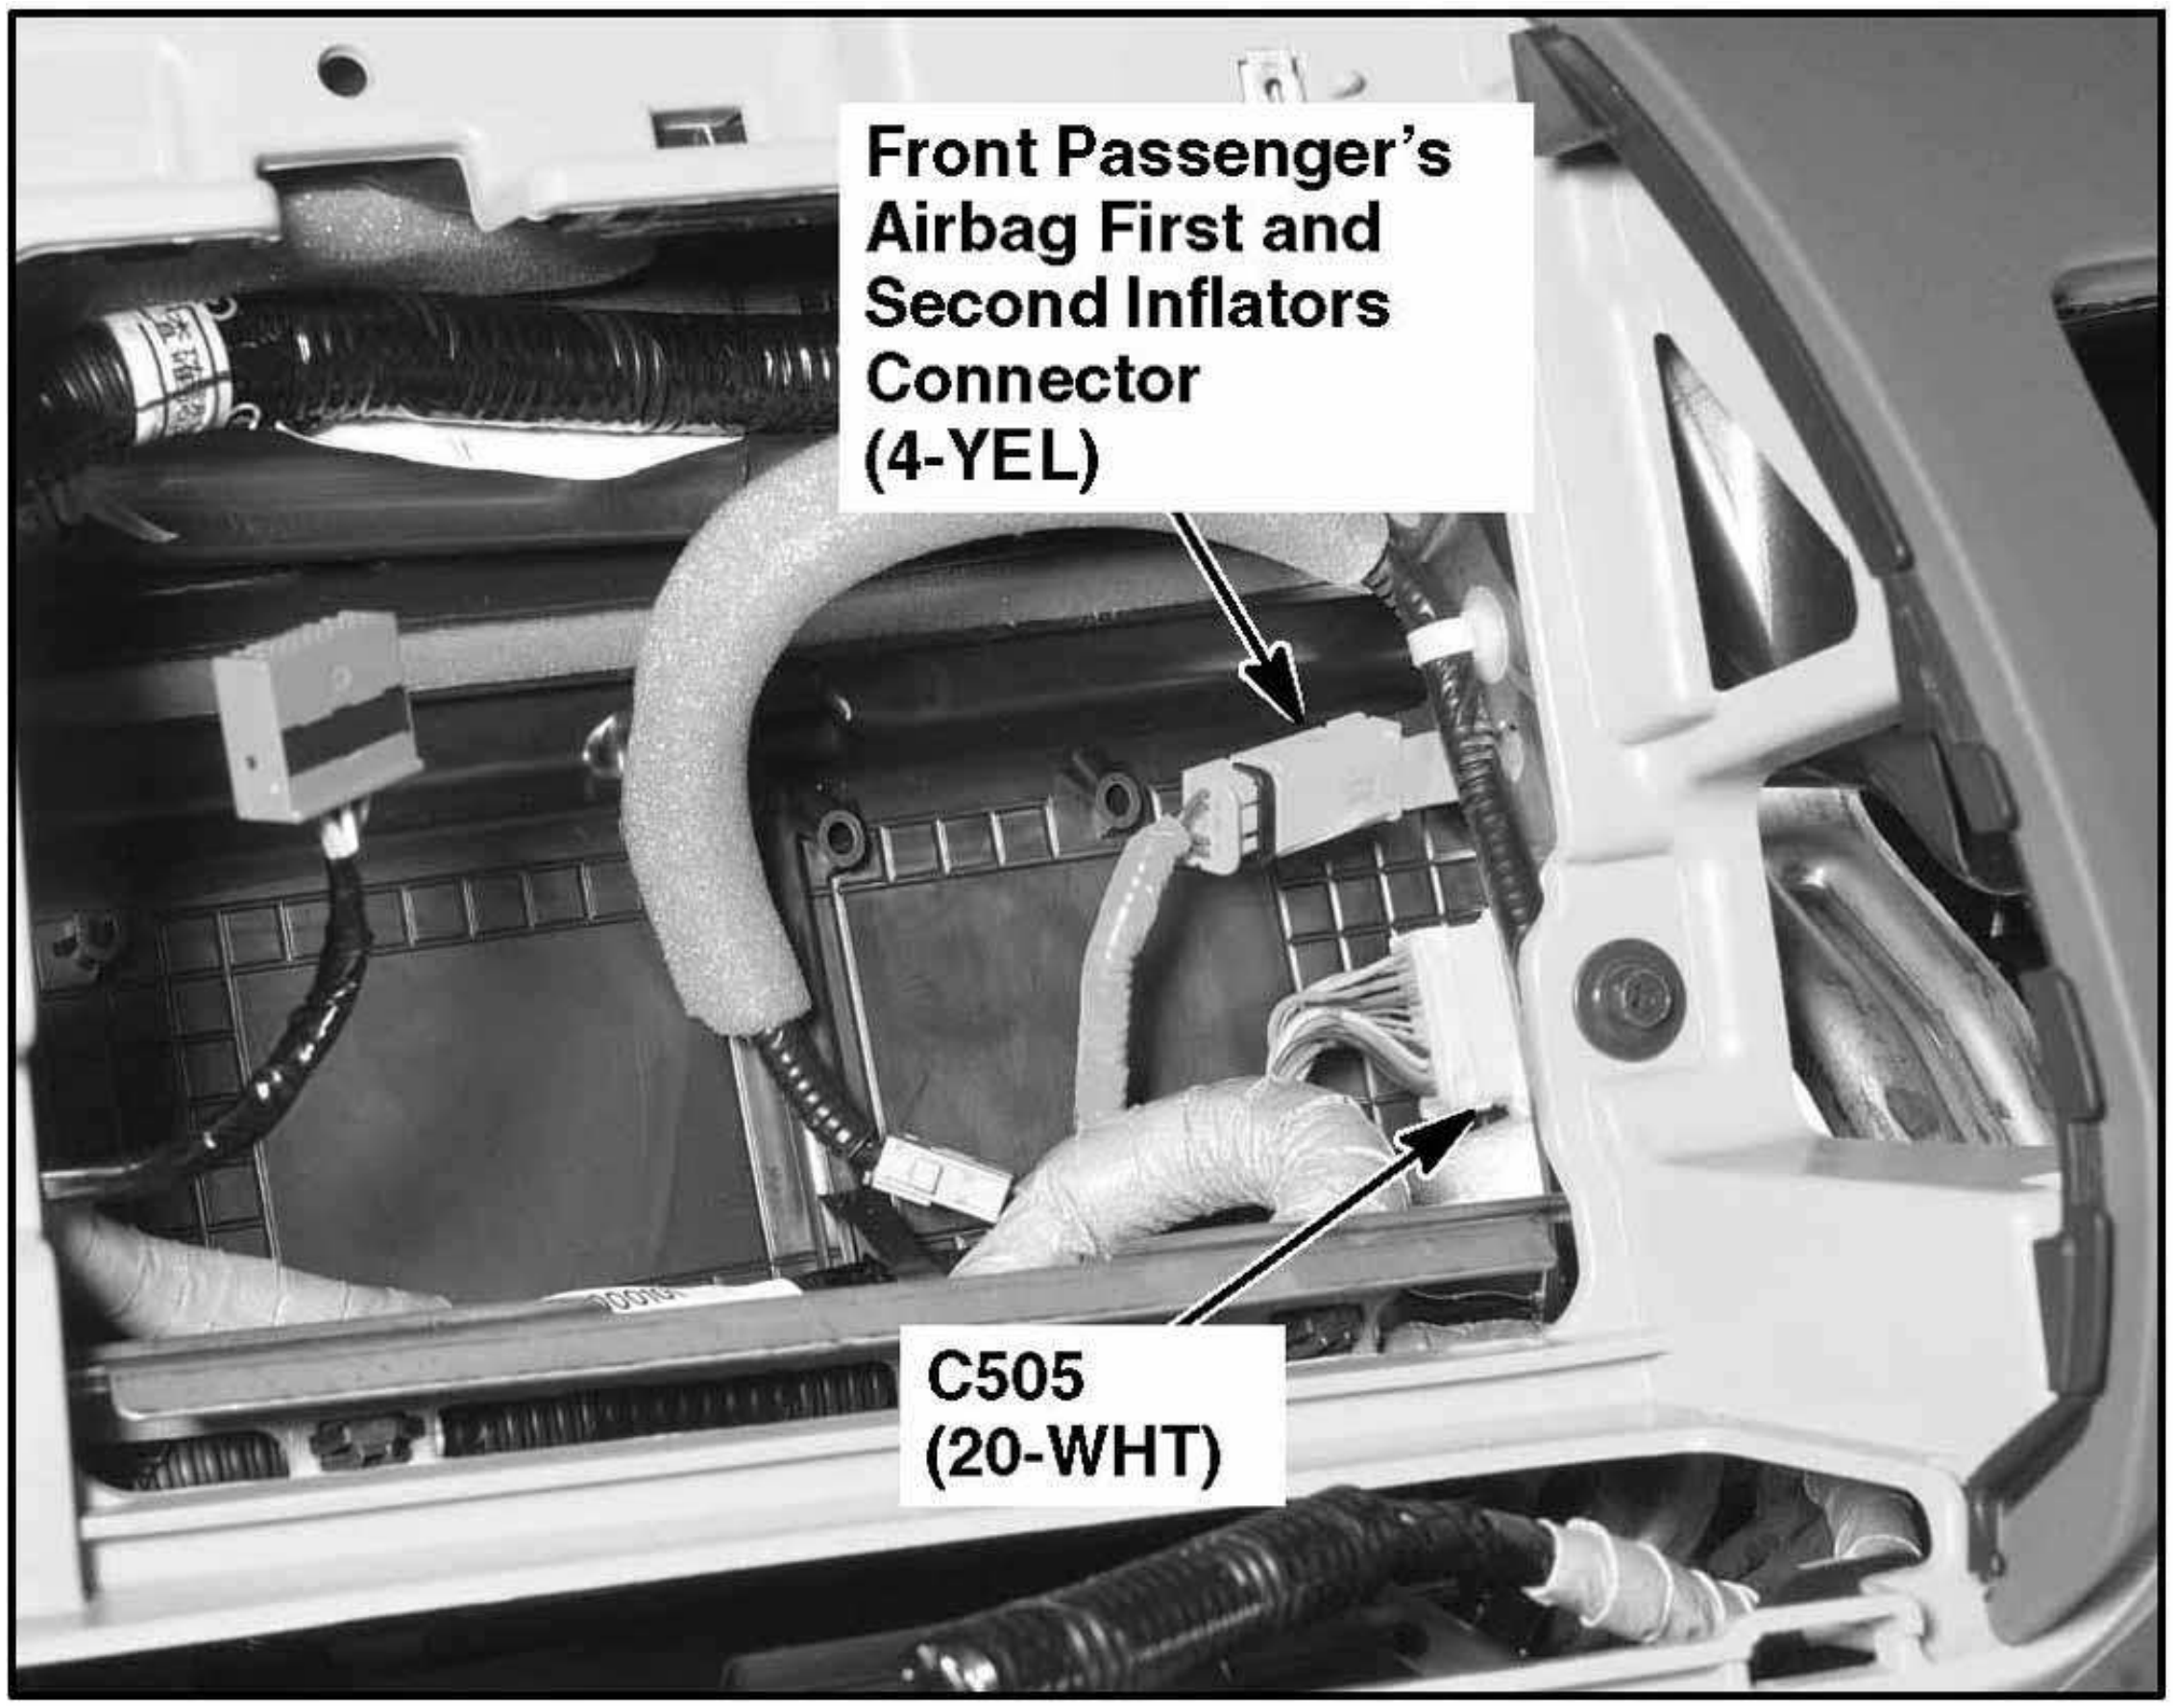
Front Passenger's Airbag First and Second Inflators Connector (4-YEL)
C505 (20-WHT)

Fig. 71: Behind Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

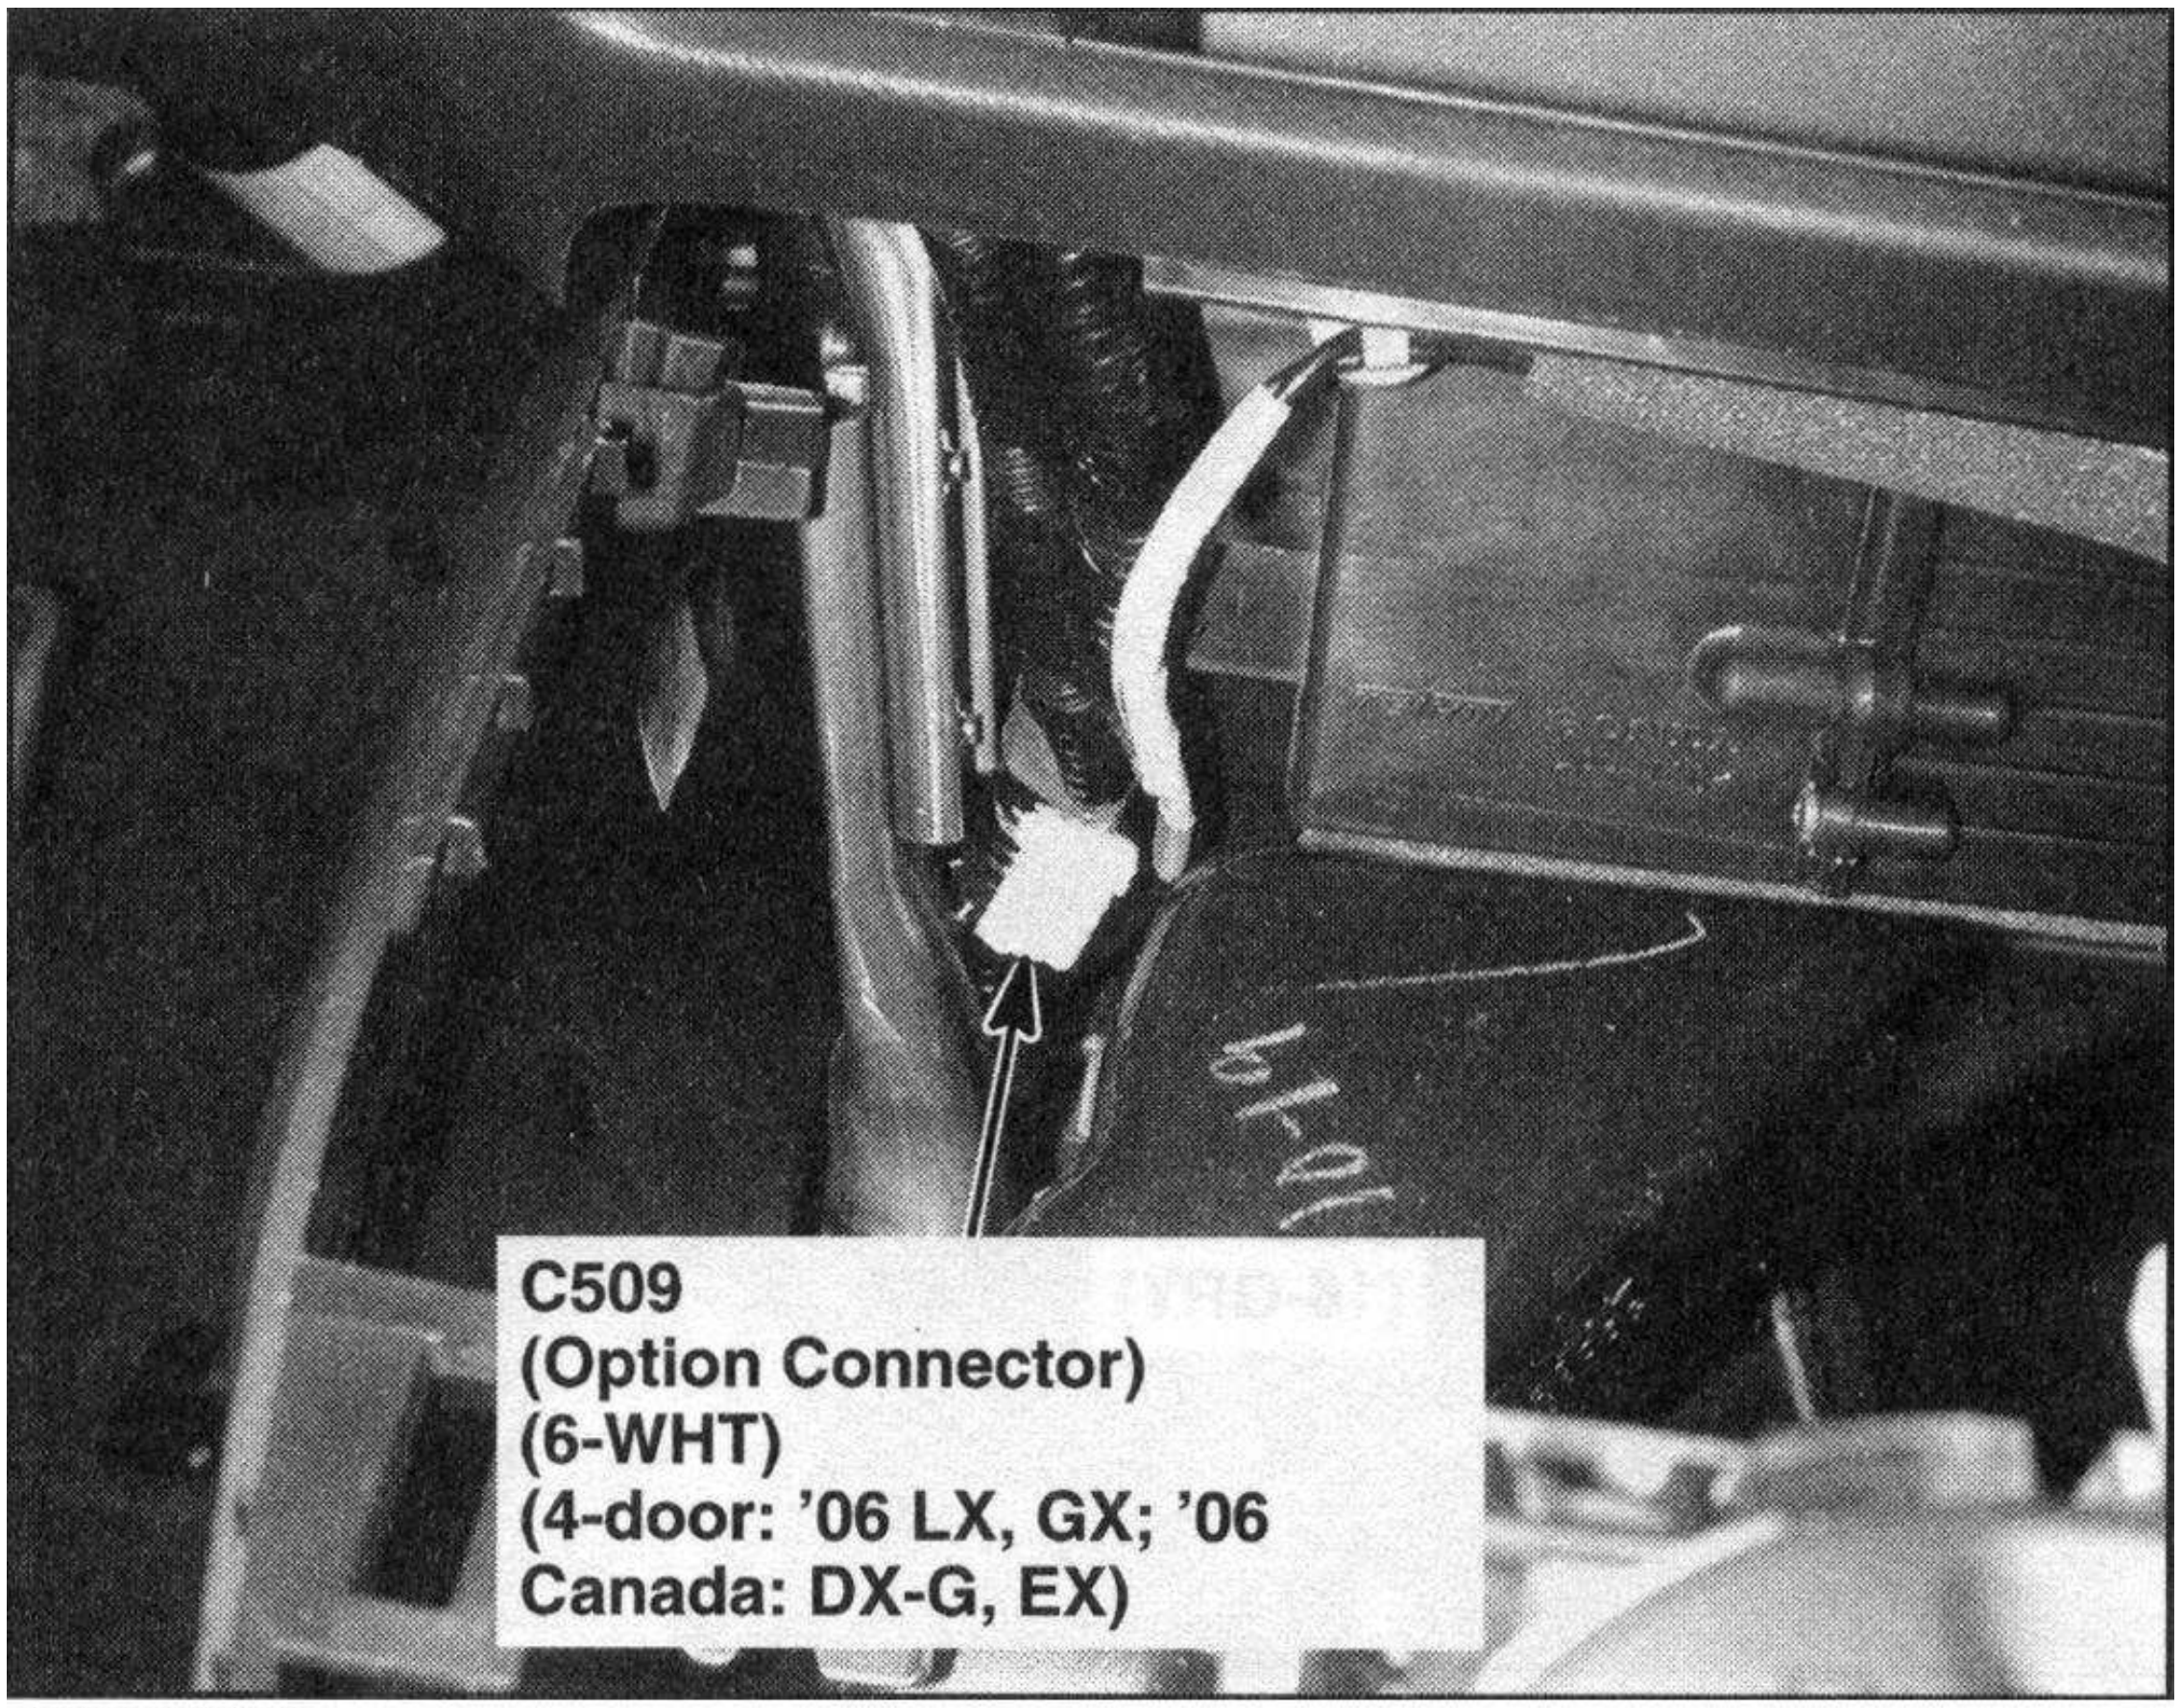
C509
(Option Connector)
(6-WHT)
(4-door: '06 LX, GX; '06
Canada: DX-G, EX)

G00447709

Fig. 72: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

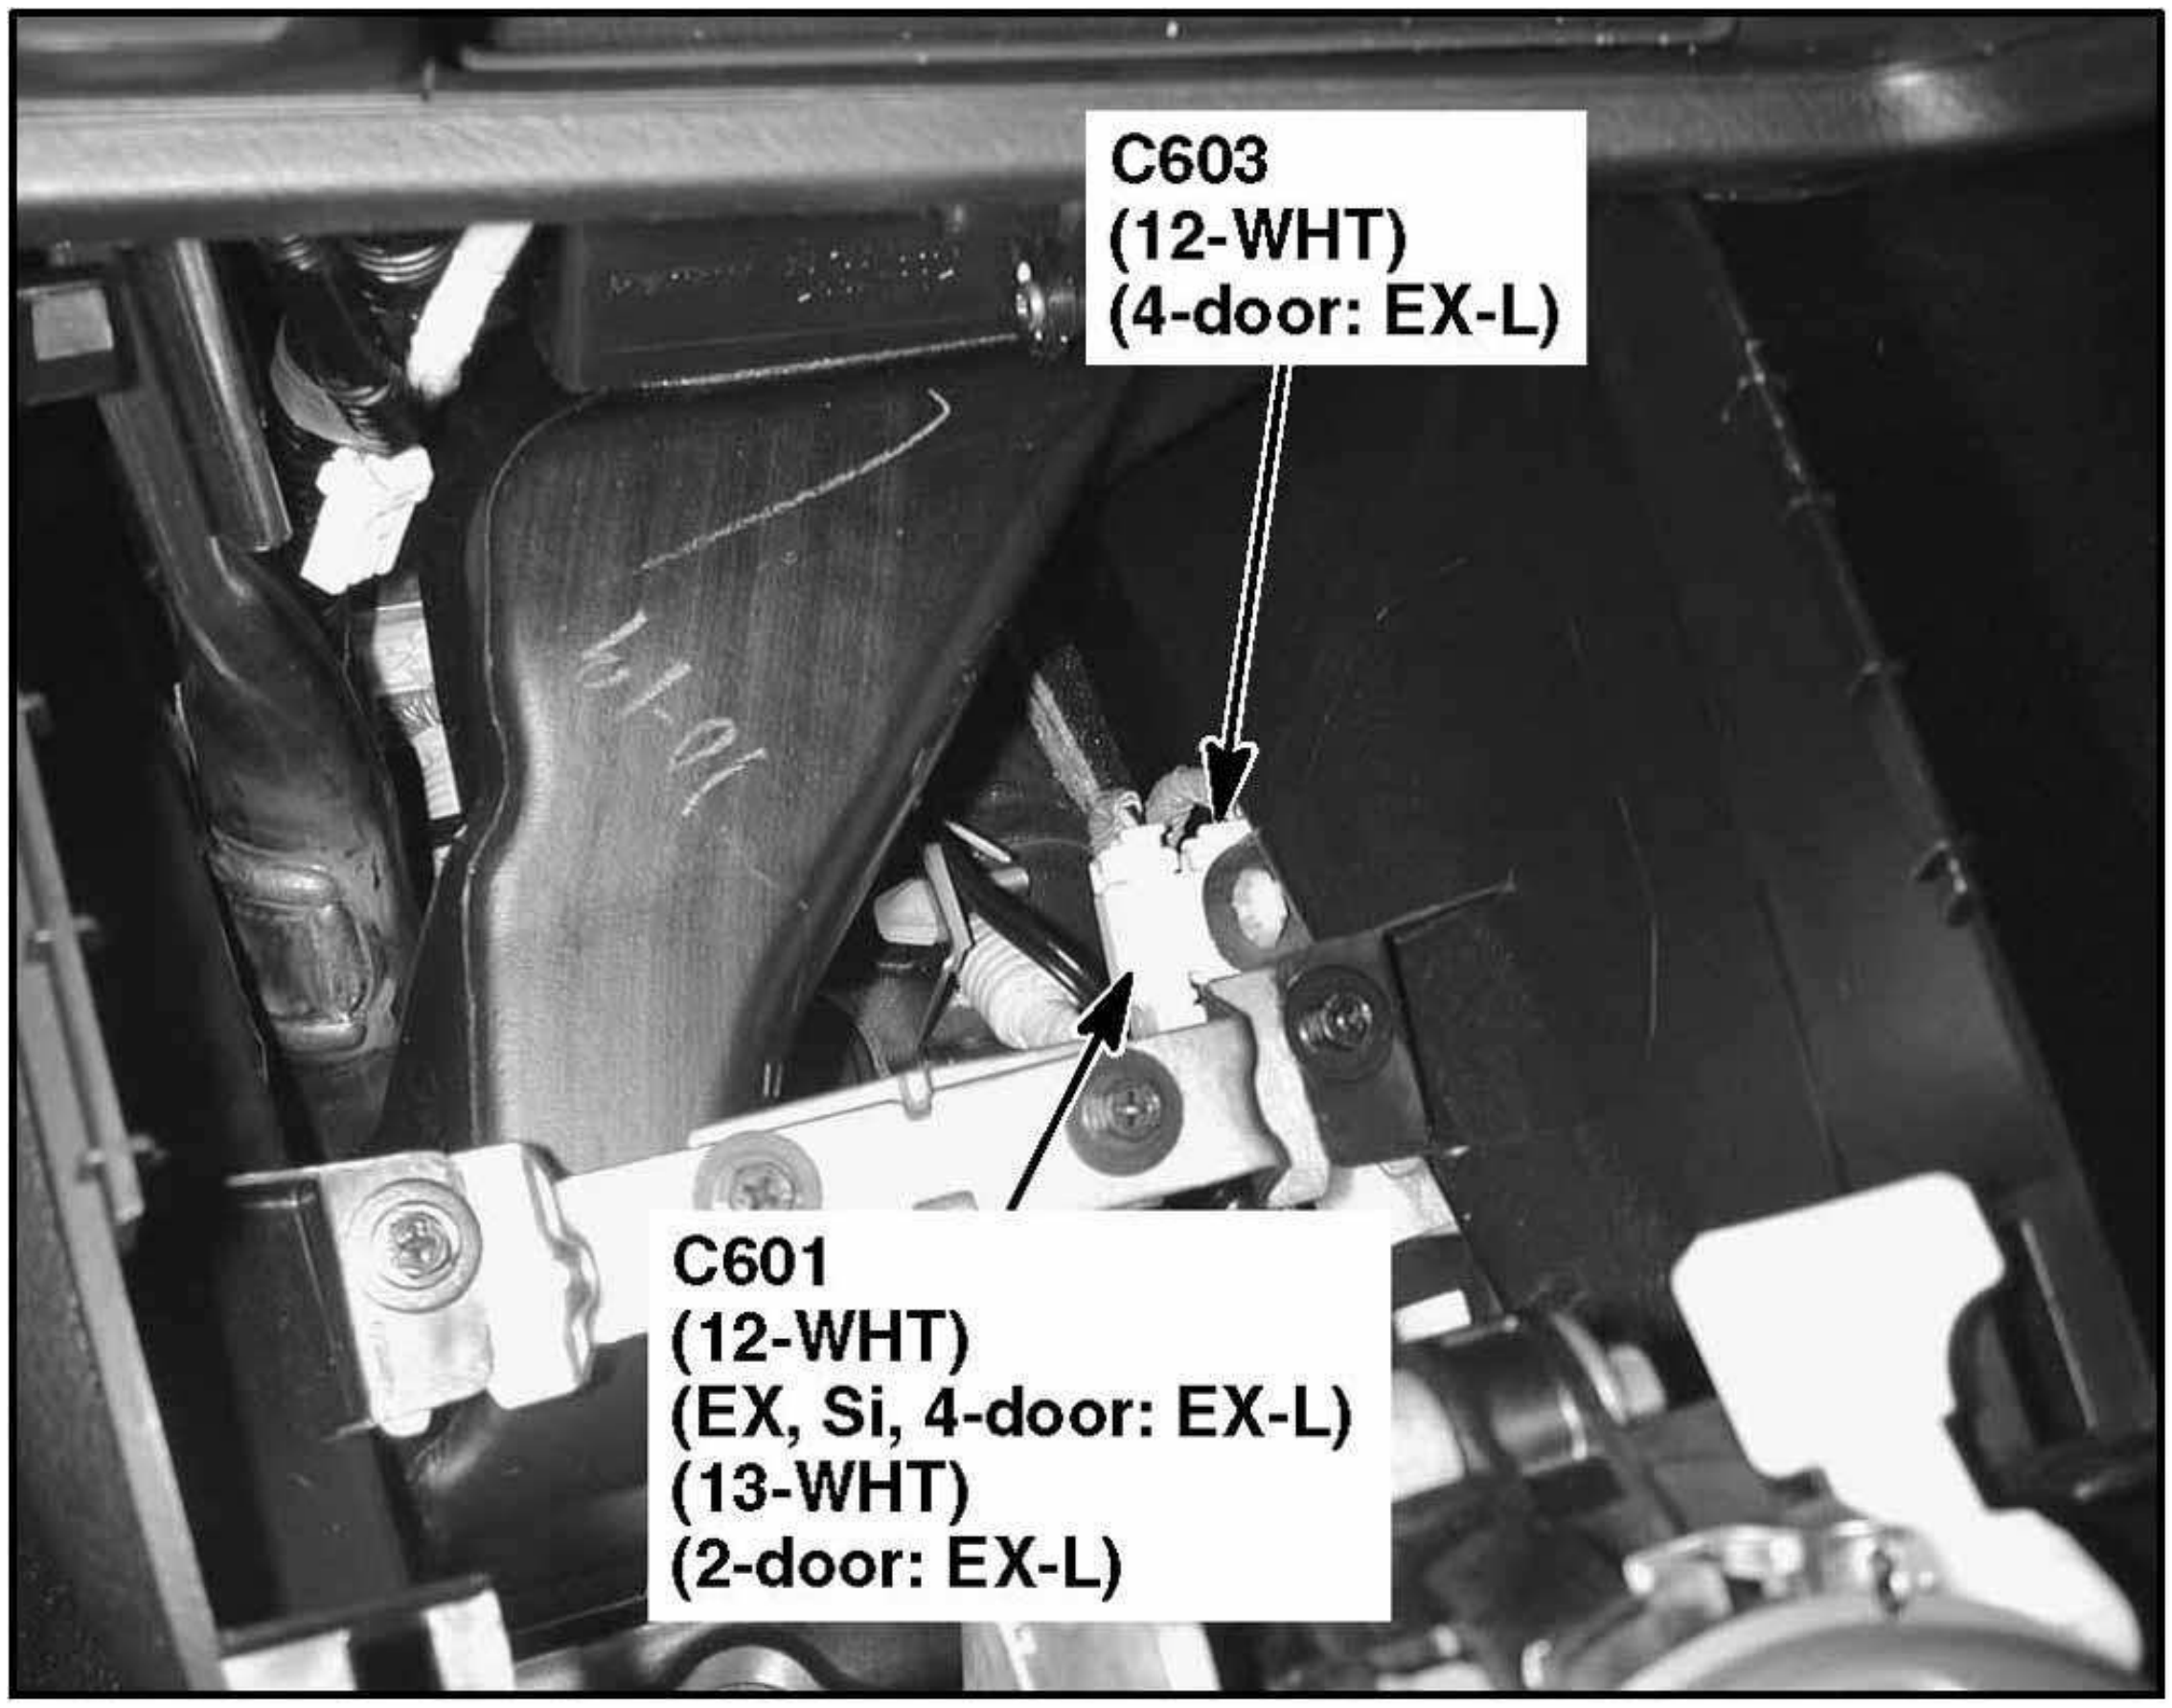
C603
(12-WHT)
(4-door: EX-L)
C601
(12-WHT)
(EX, Si, 4-door: EX-L)
(13-WHT)
(2-door: EX-L)

Fig. 73: Under Front Of Center Console (EX, EX-L & Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

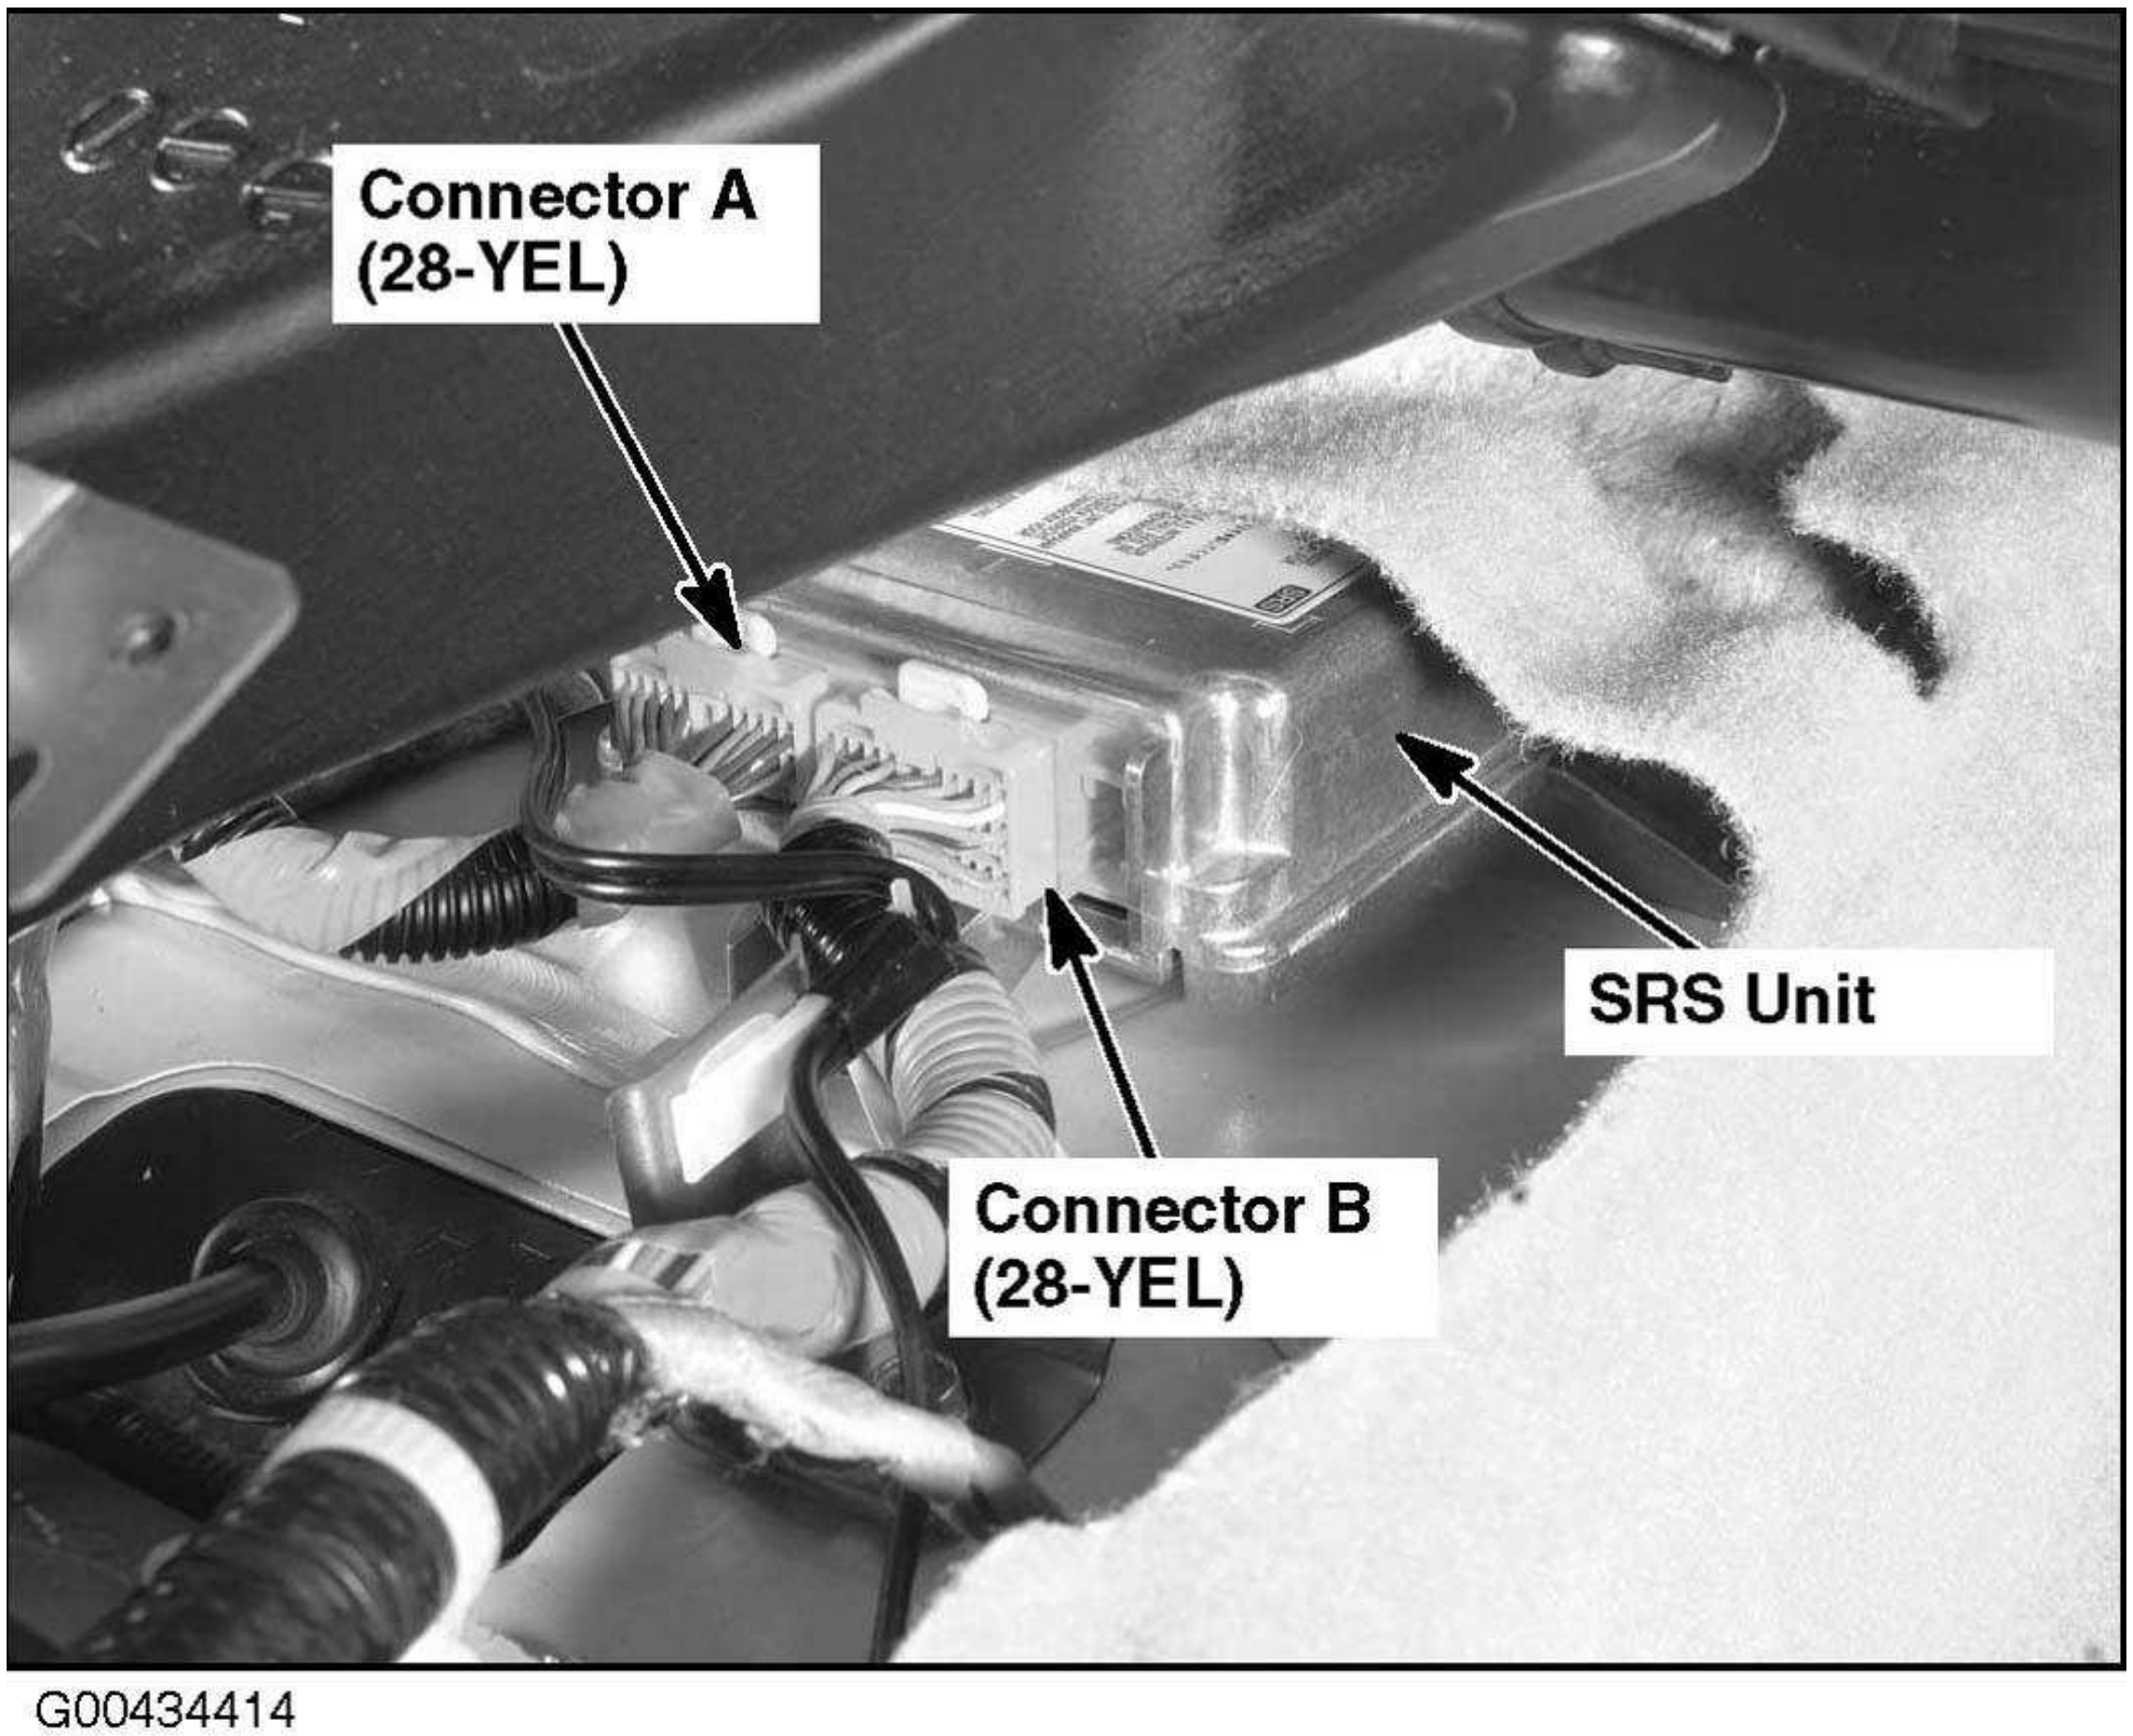
Connector A
(28-YEL)
SRS Unit
Connector B
(28-YEL)
G00434414

Fig. 74: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

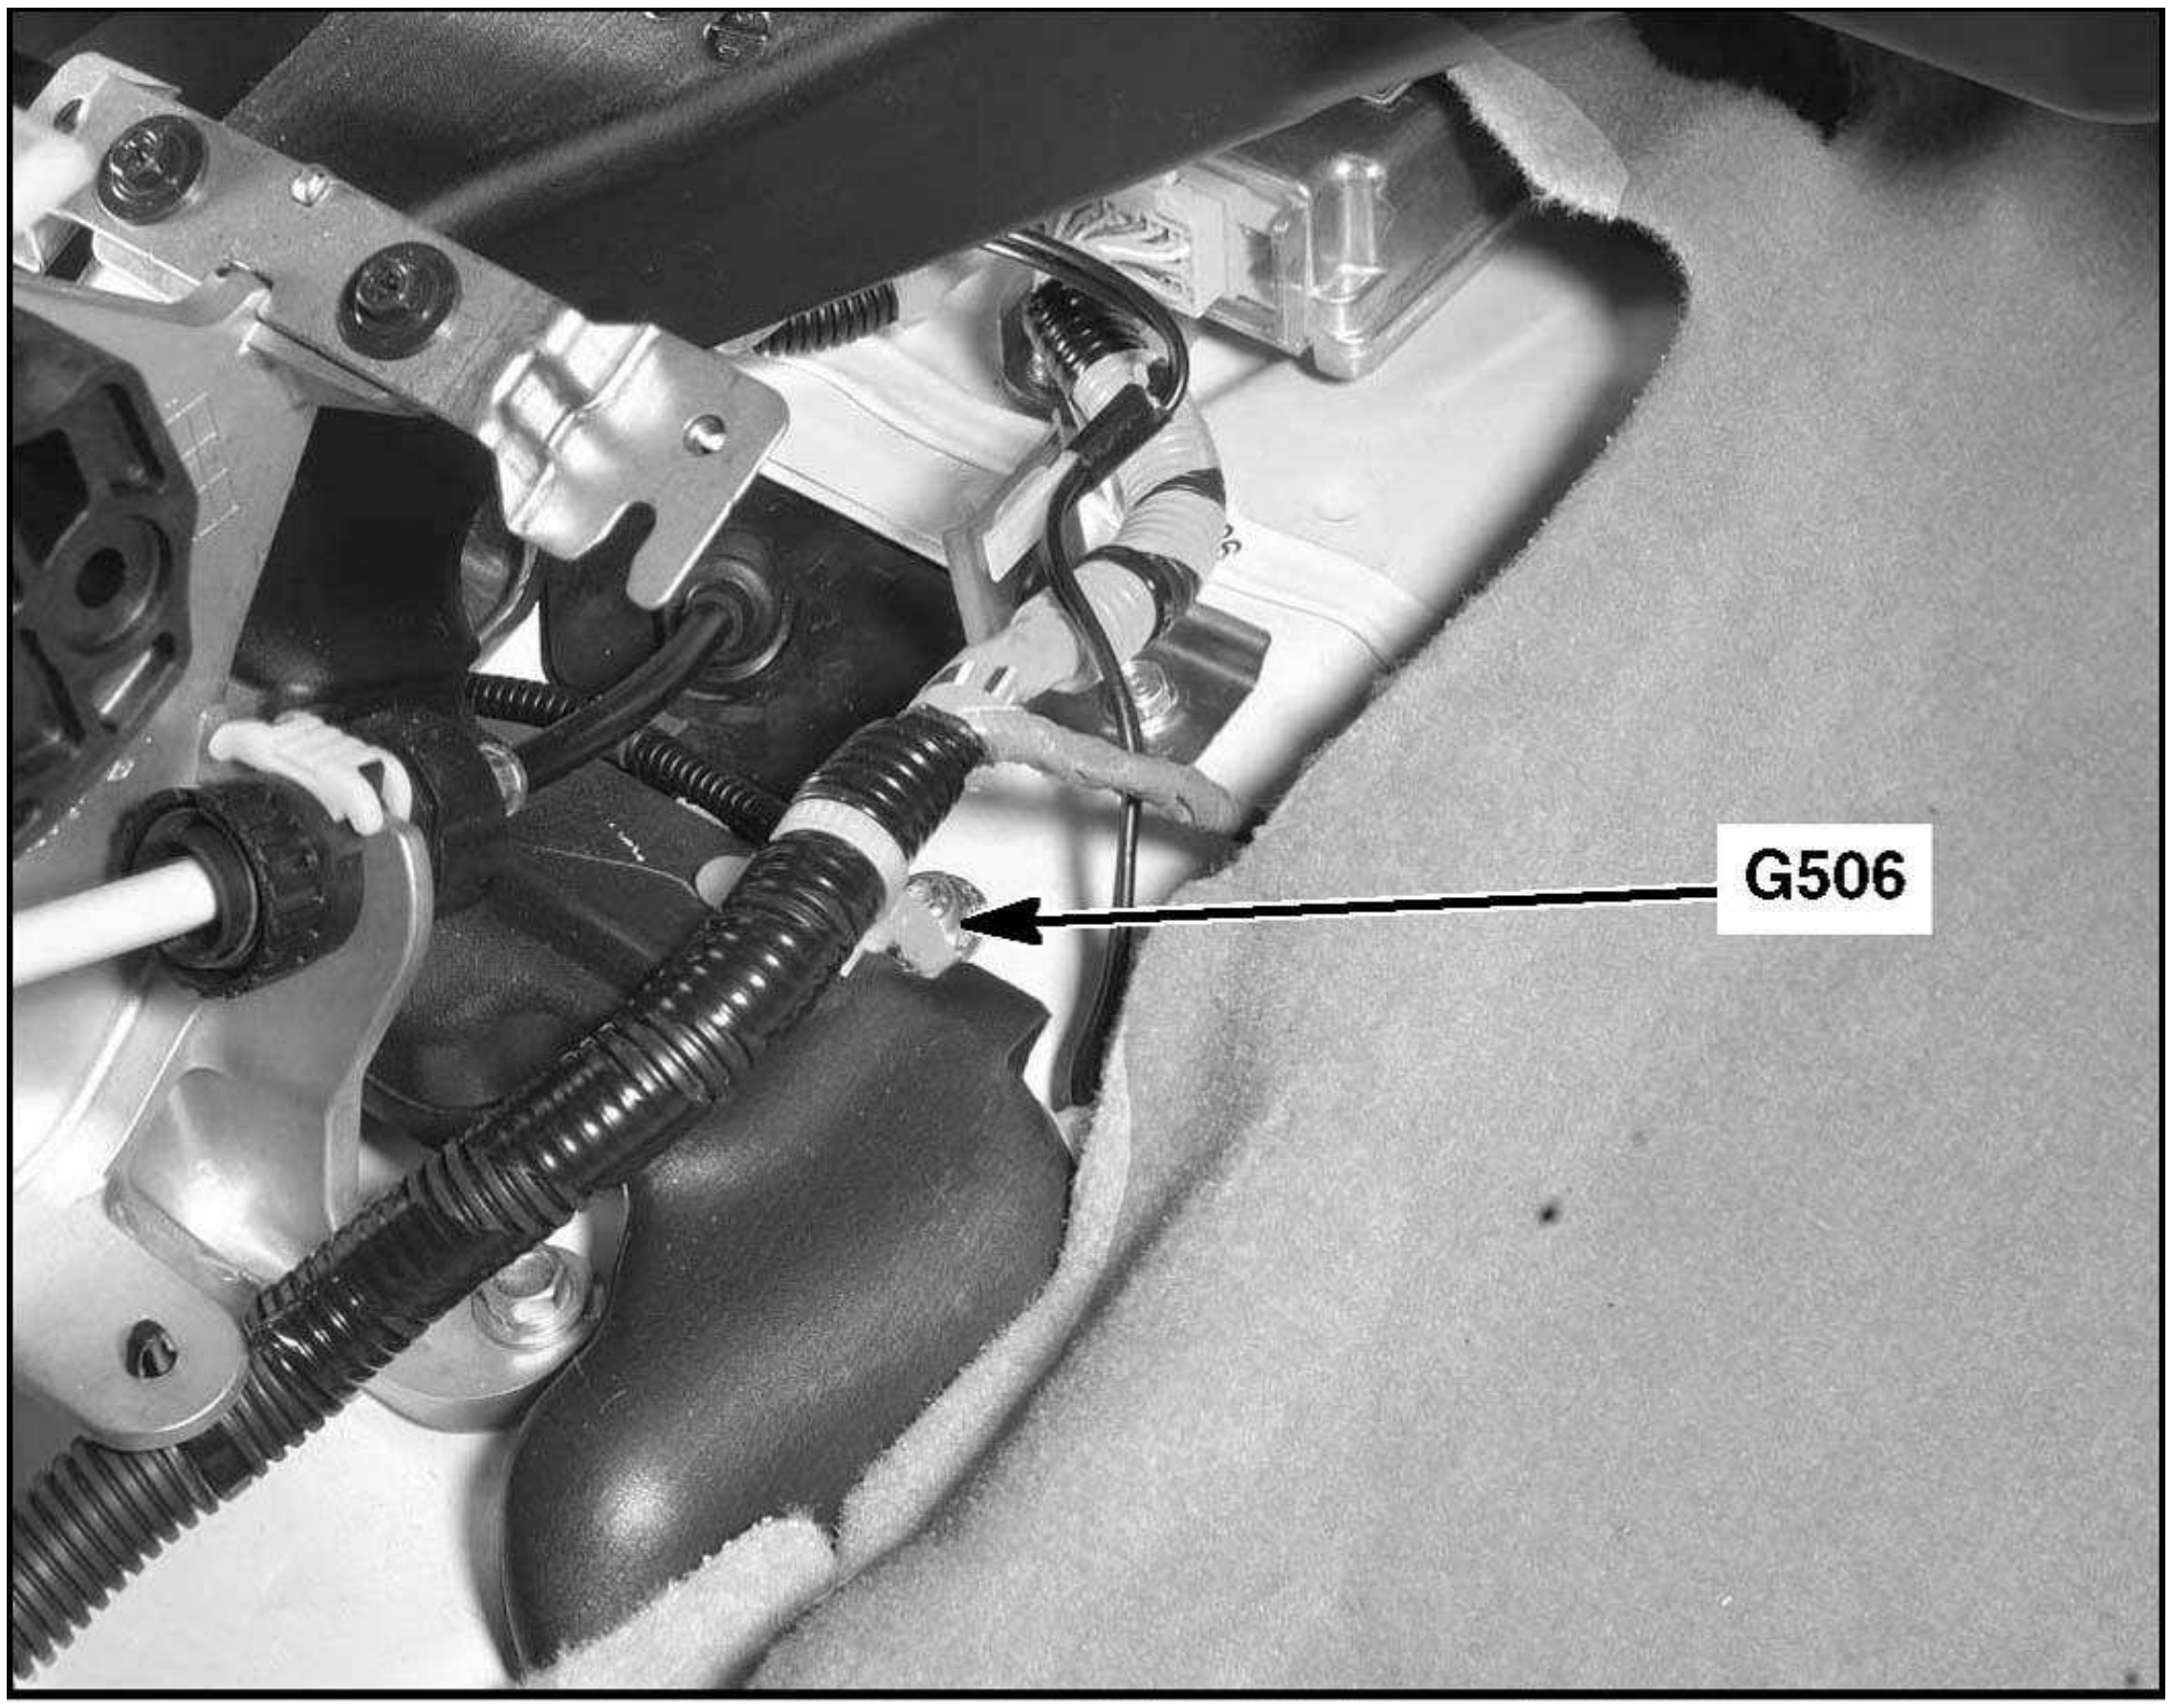
G506
G00434415

Fig. 75: Under Middle Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

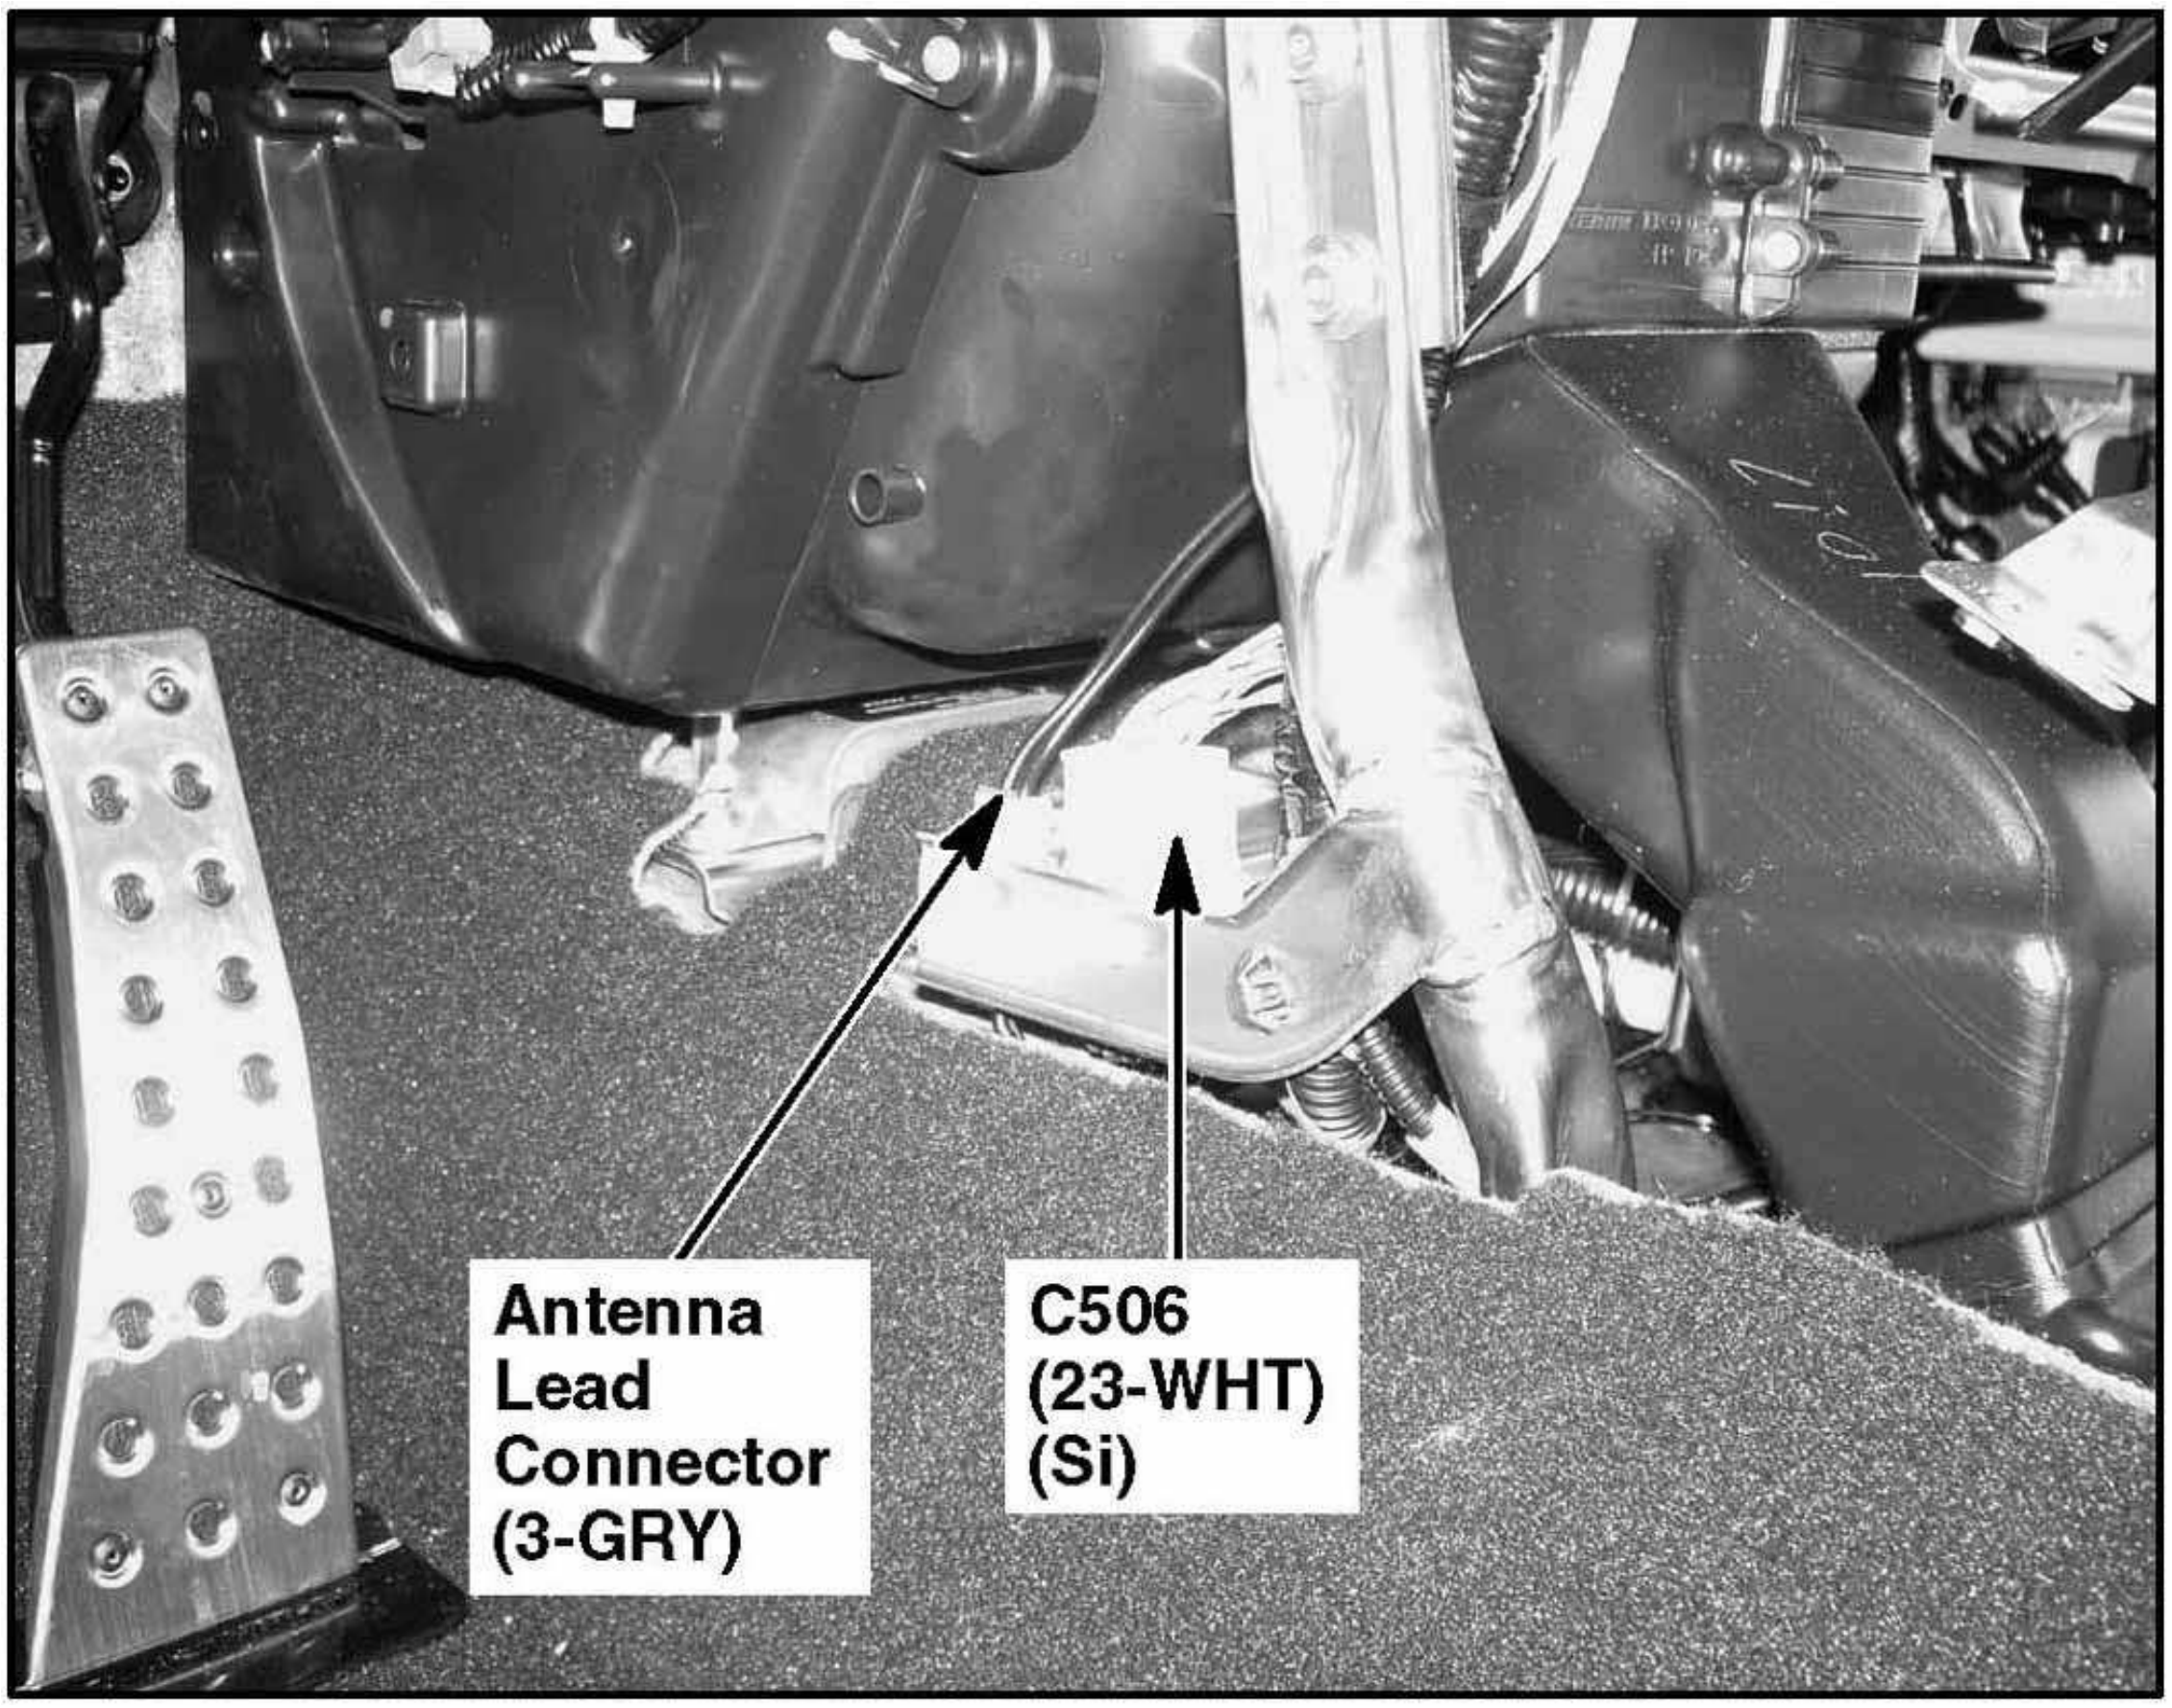
Antenna Lead Connector (3-GRY)
C506 (23-WHT) (Si)

Fig. 76: Under Front Of Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

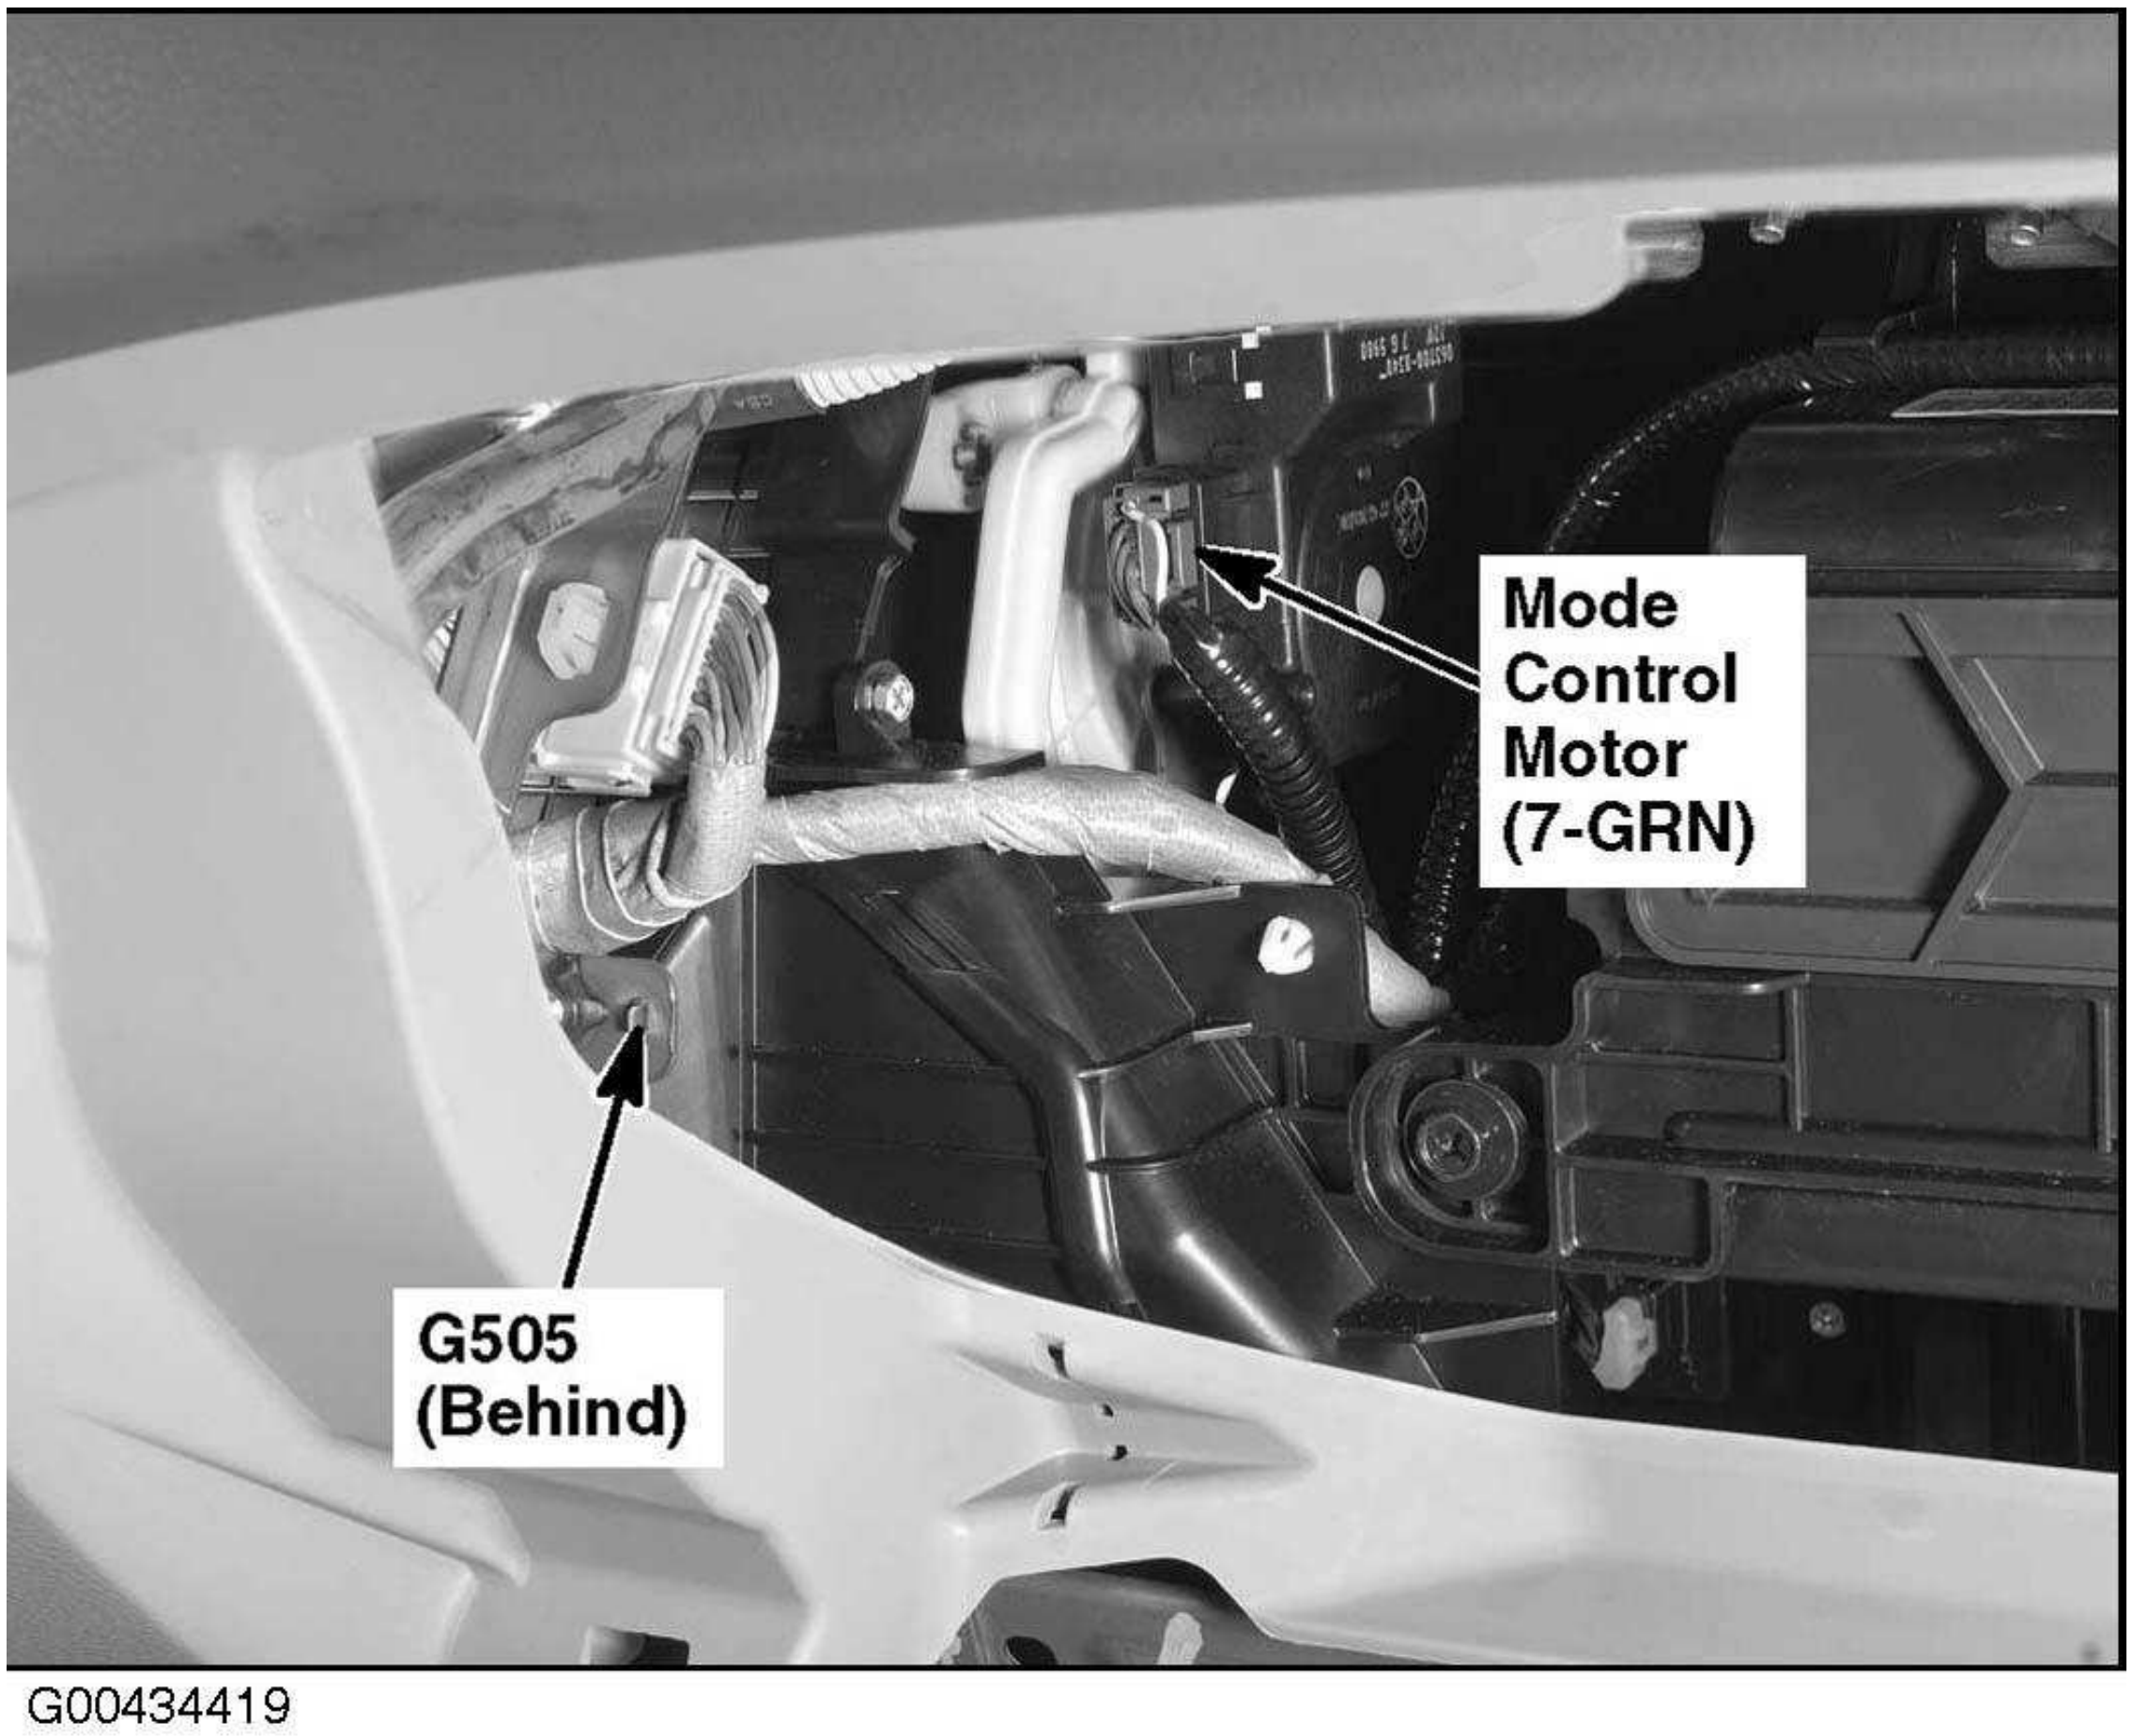
Mode
Control
Motor
(7-GRN)
G505
(Behind)
G00434419

Fig. 77: Behind Glove Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

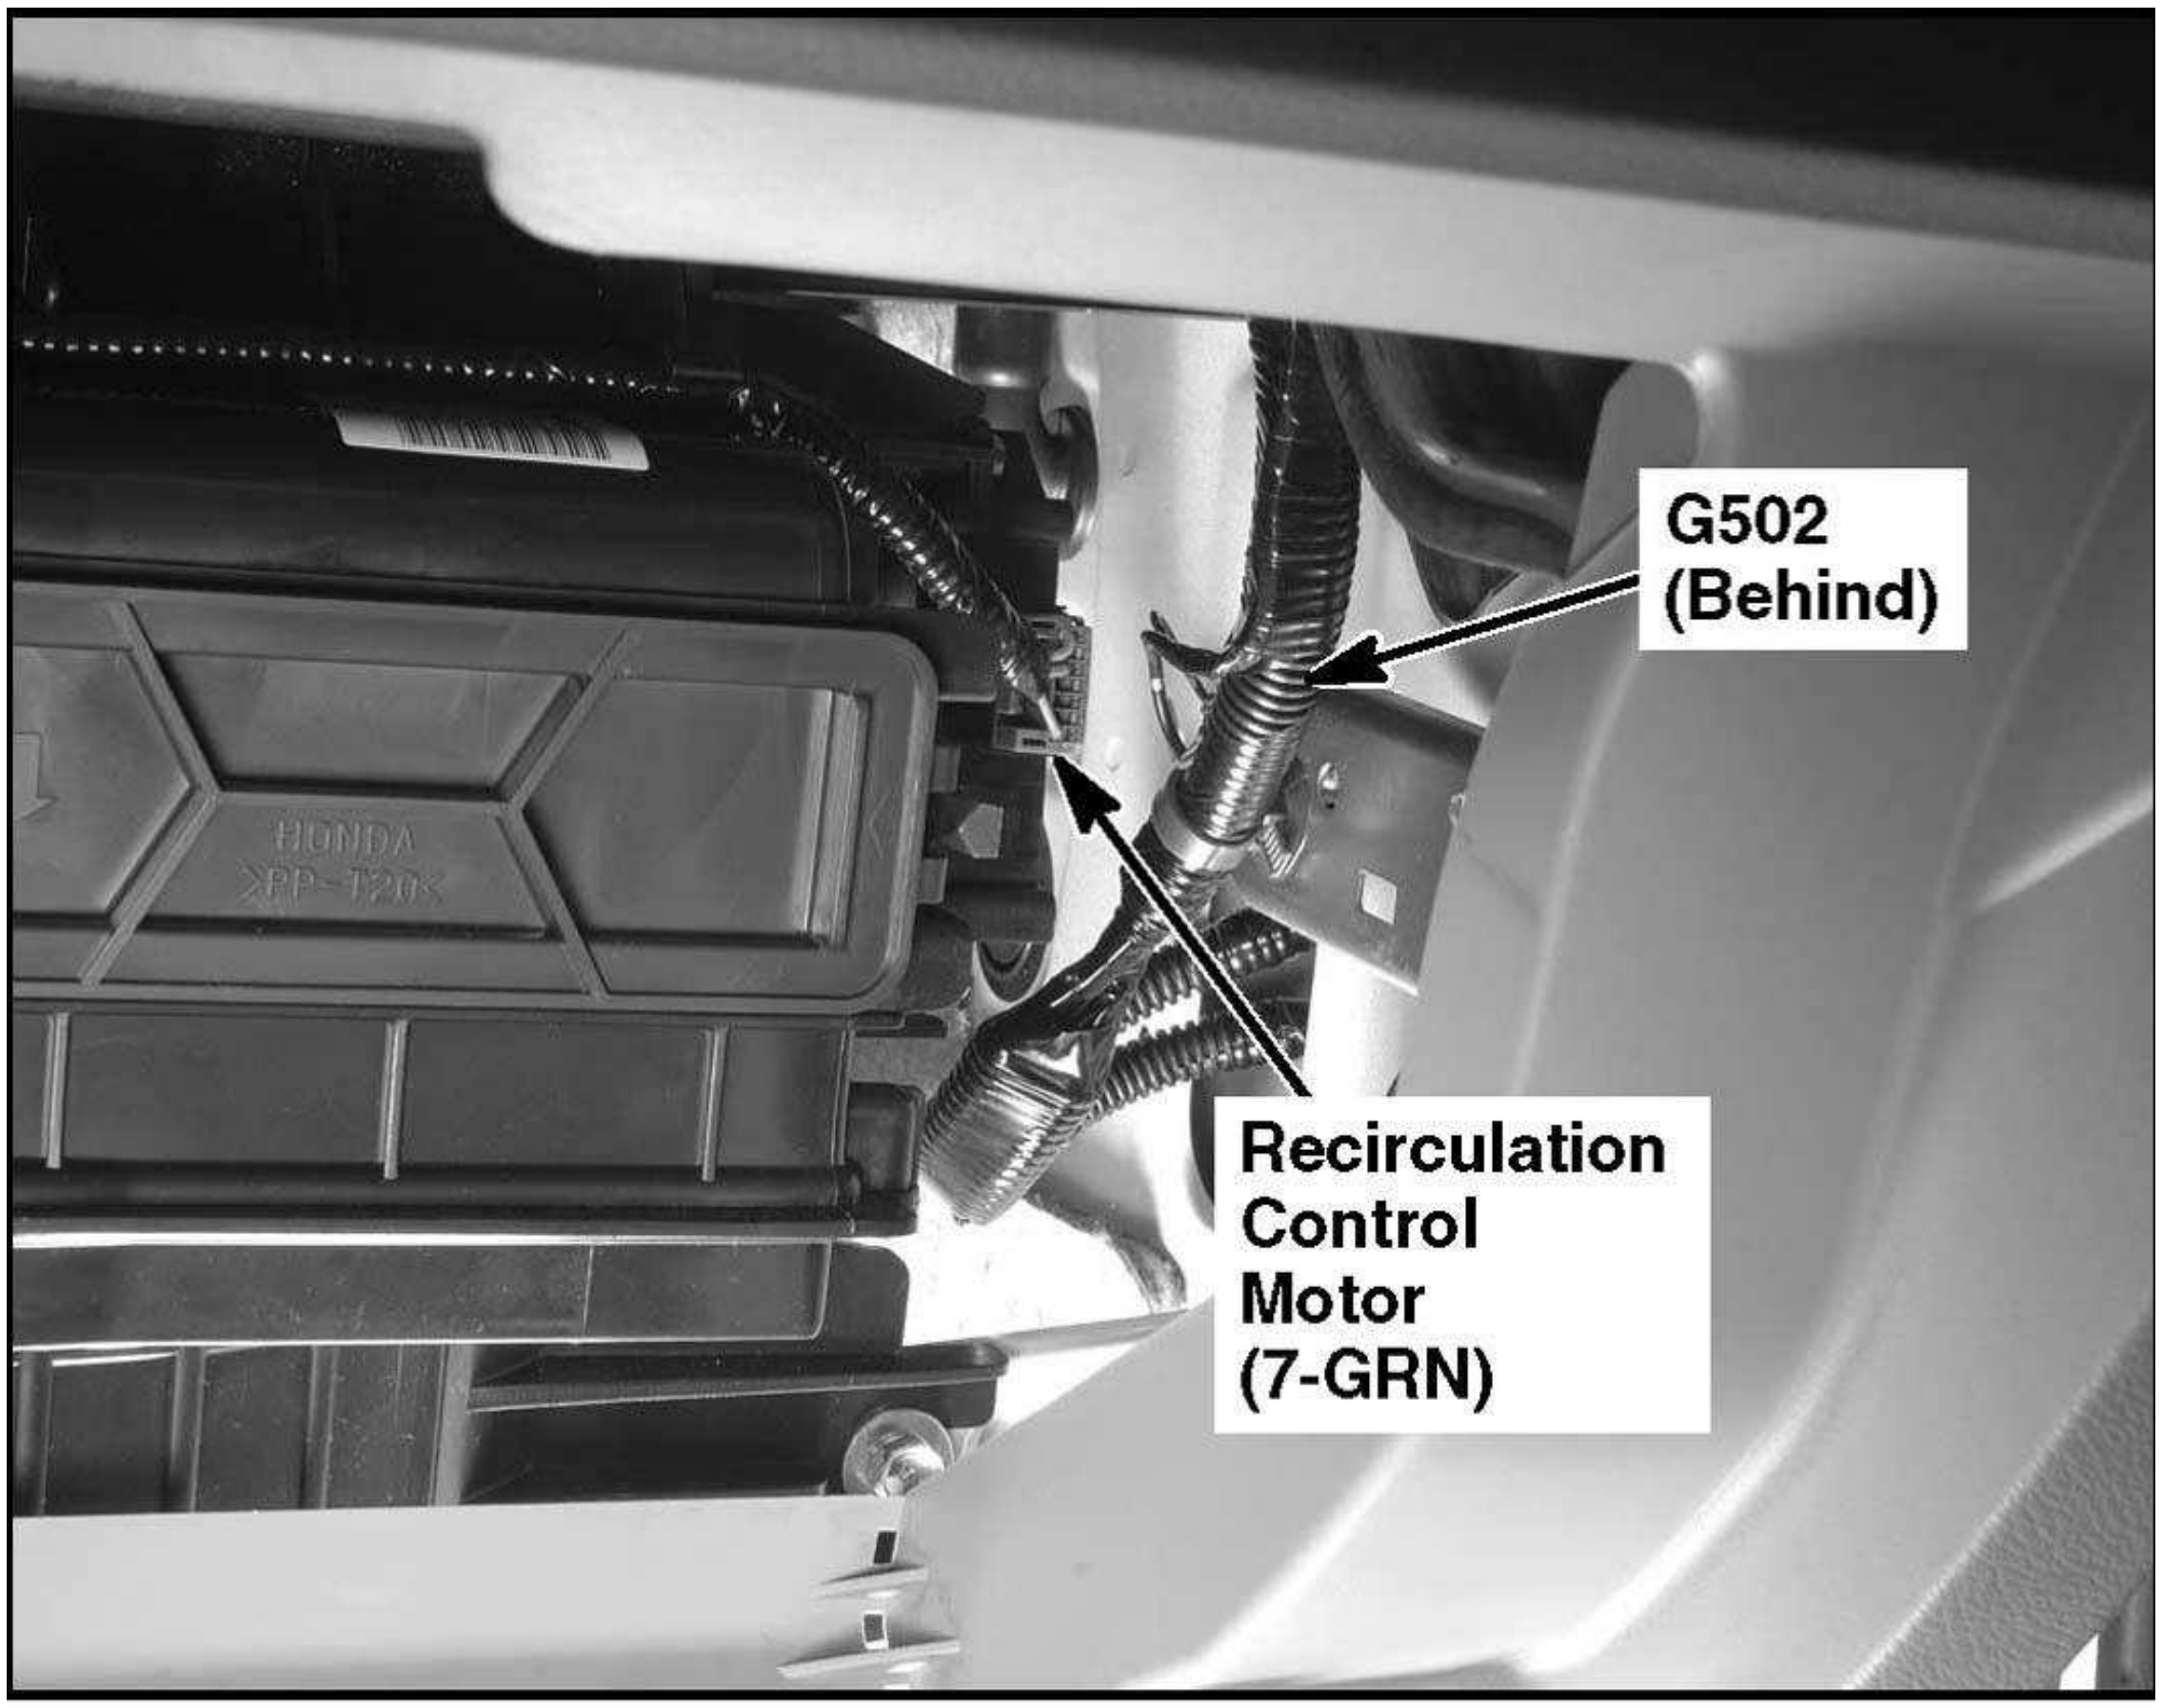
G502
(Behind)
Recirculation
Control
Motor
(7-GRN)
HONDA
PP-T20

G00434420

Fig. 78: Behind Glove Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

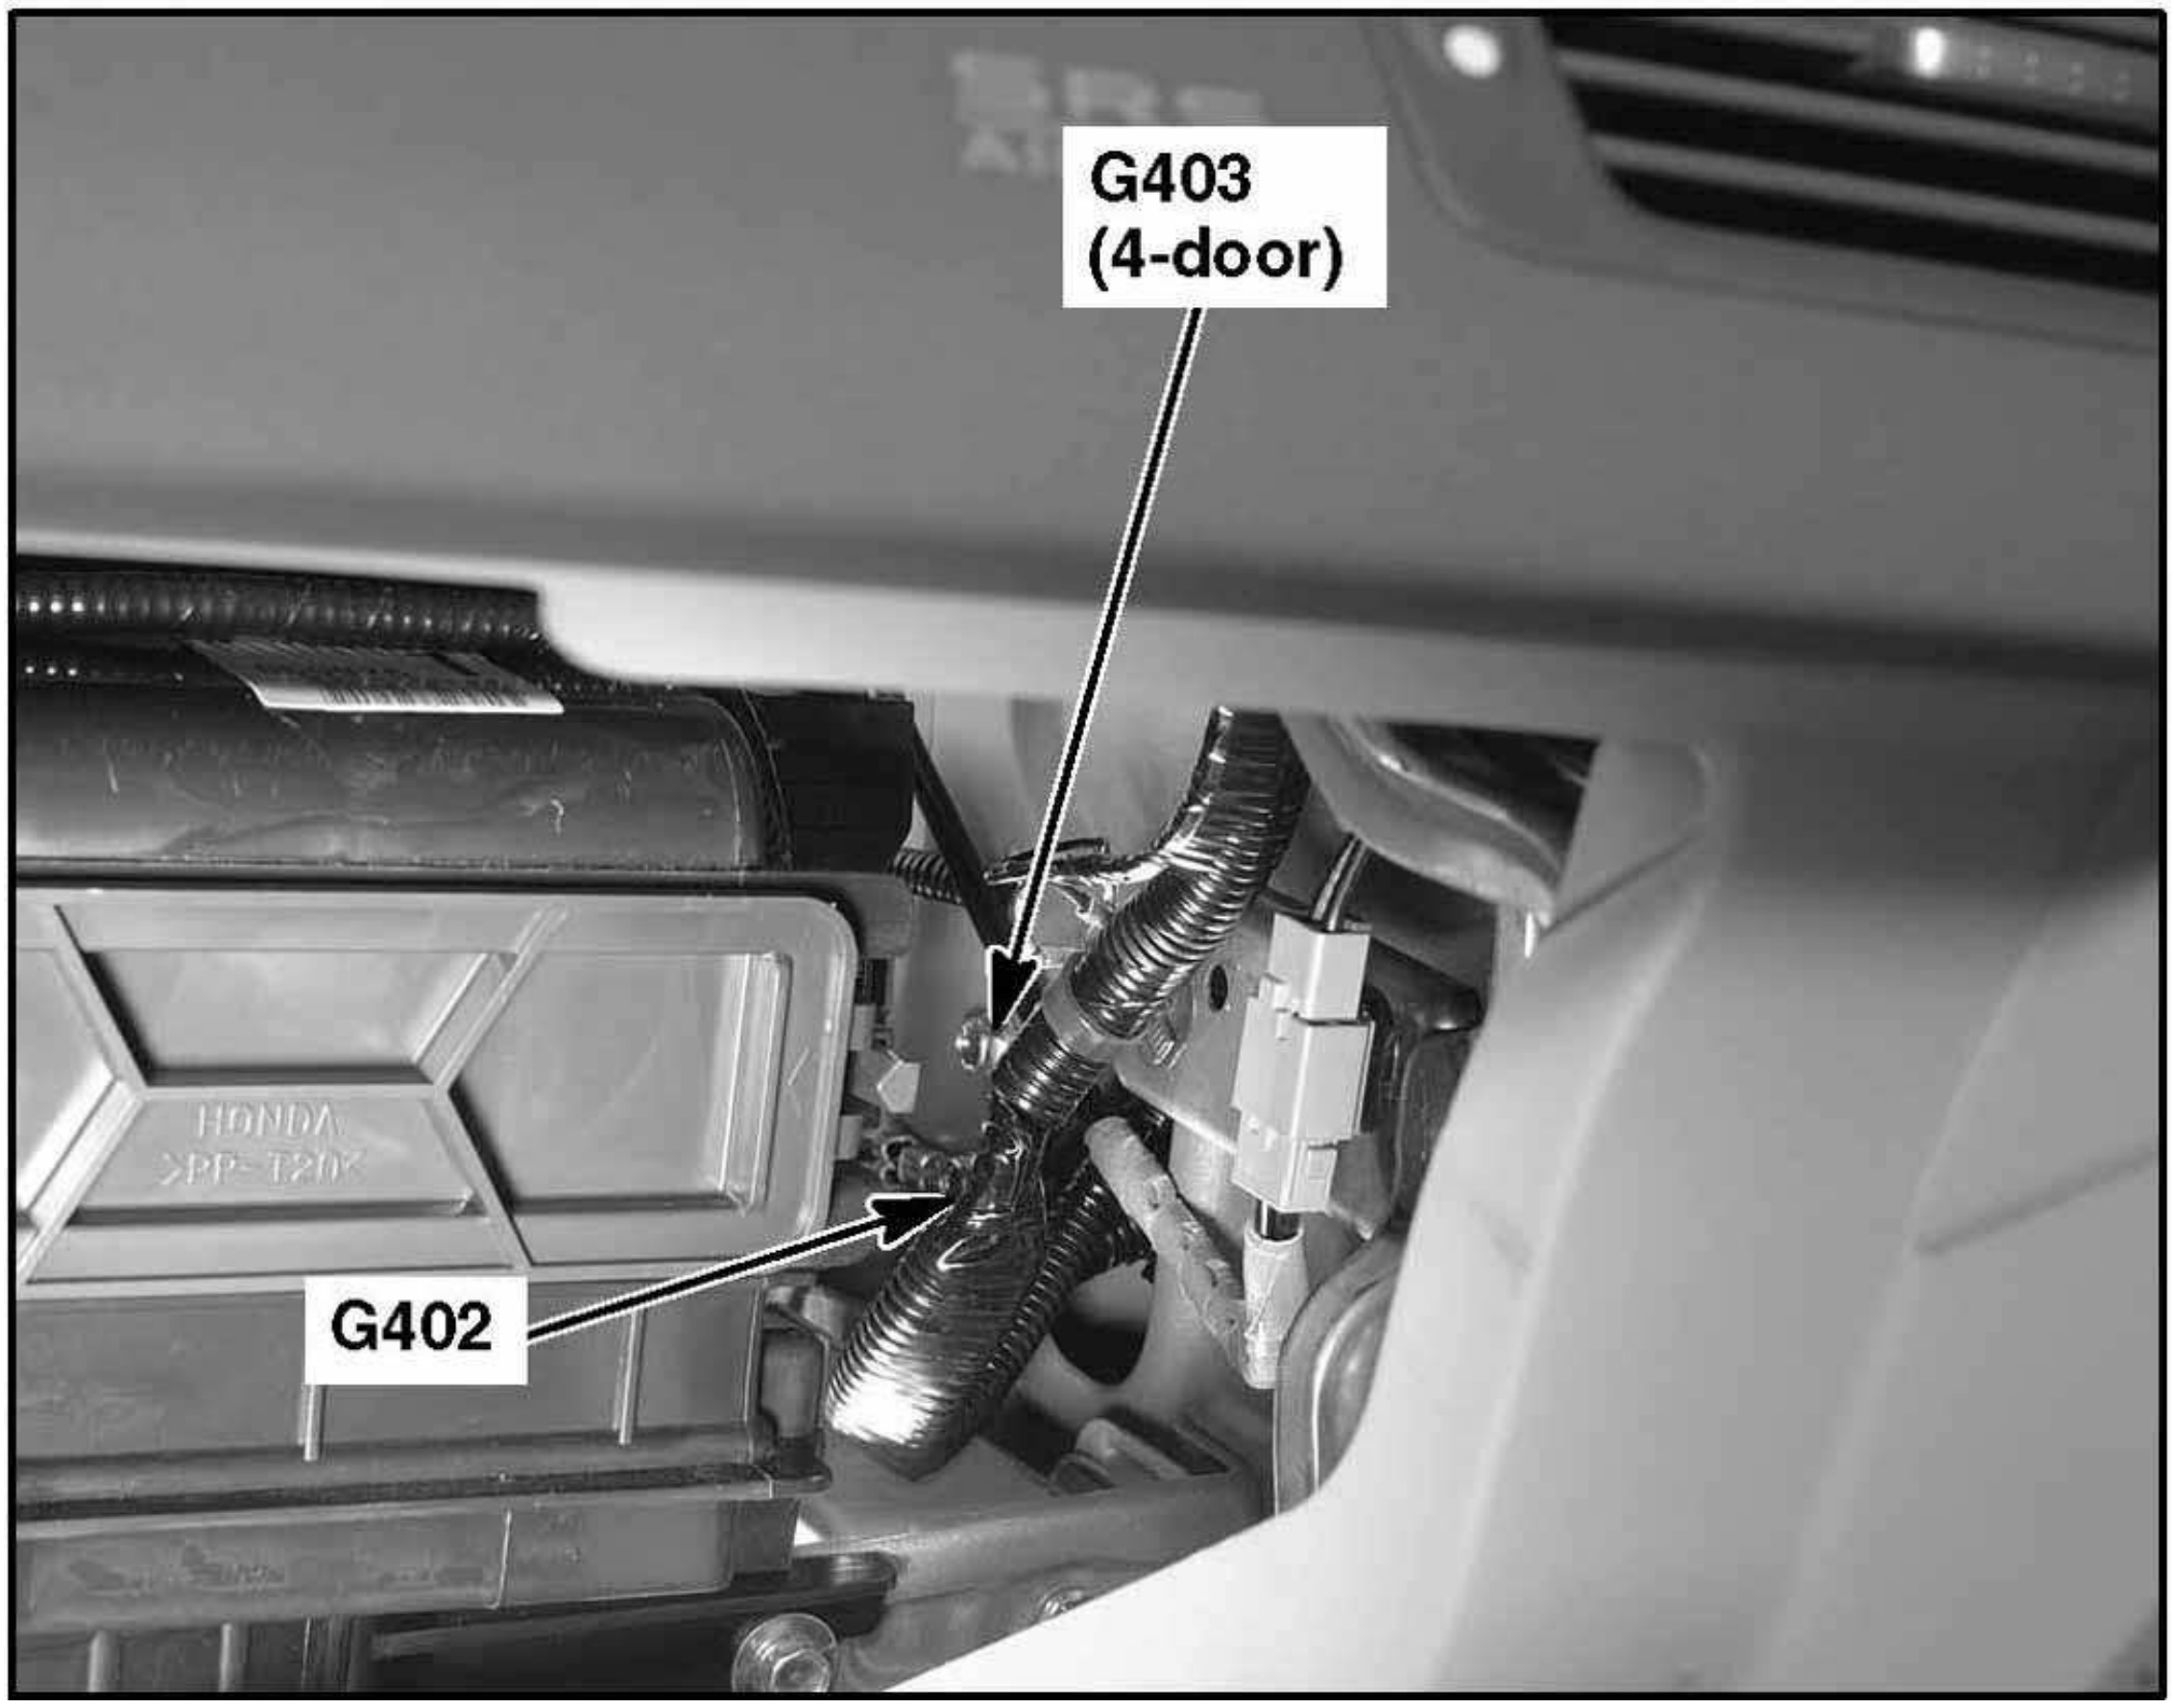
G403
(4-door)
G402

Fig. 79: Behind Glove Box
Courtesy of AMERICAN HONDA MOTOR CO., INC.

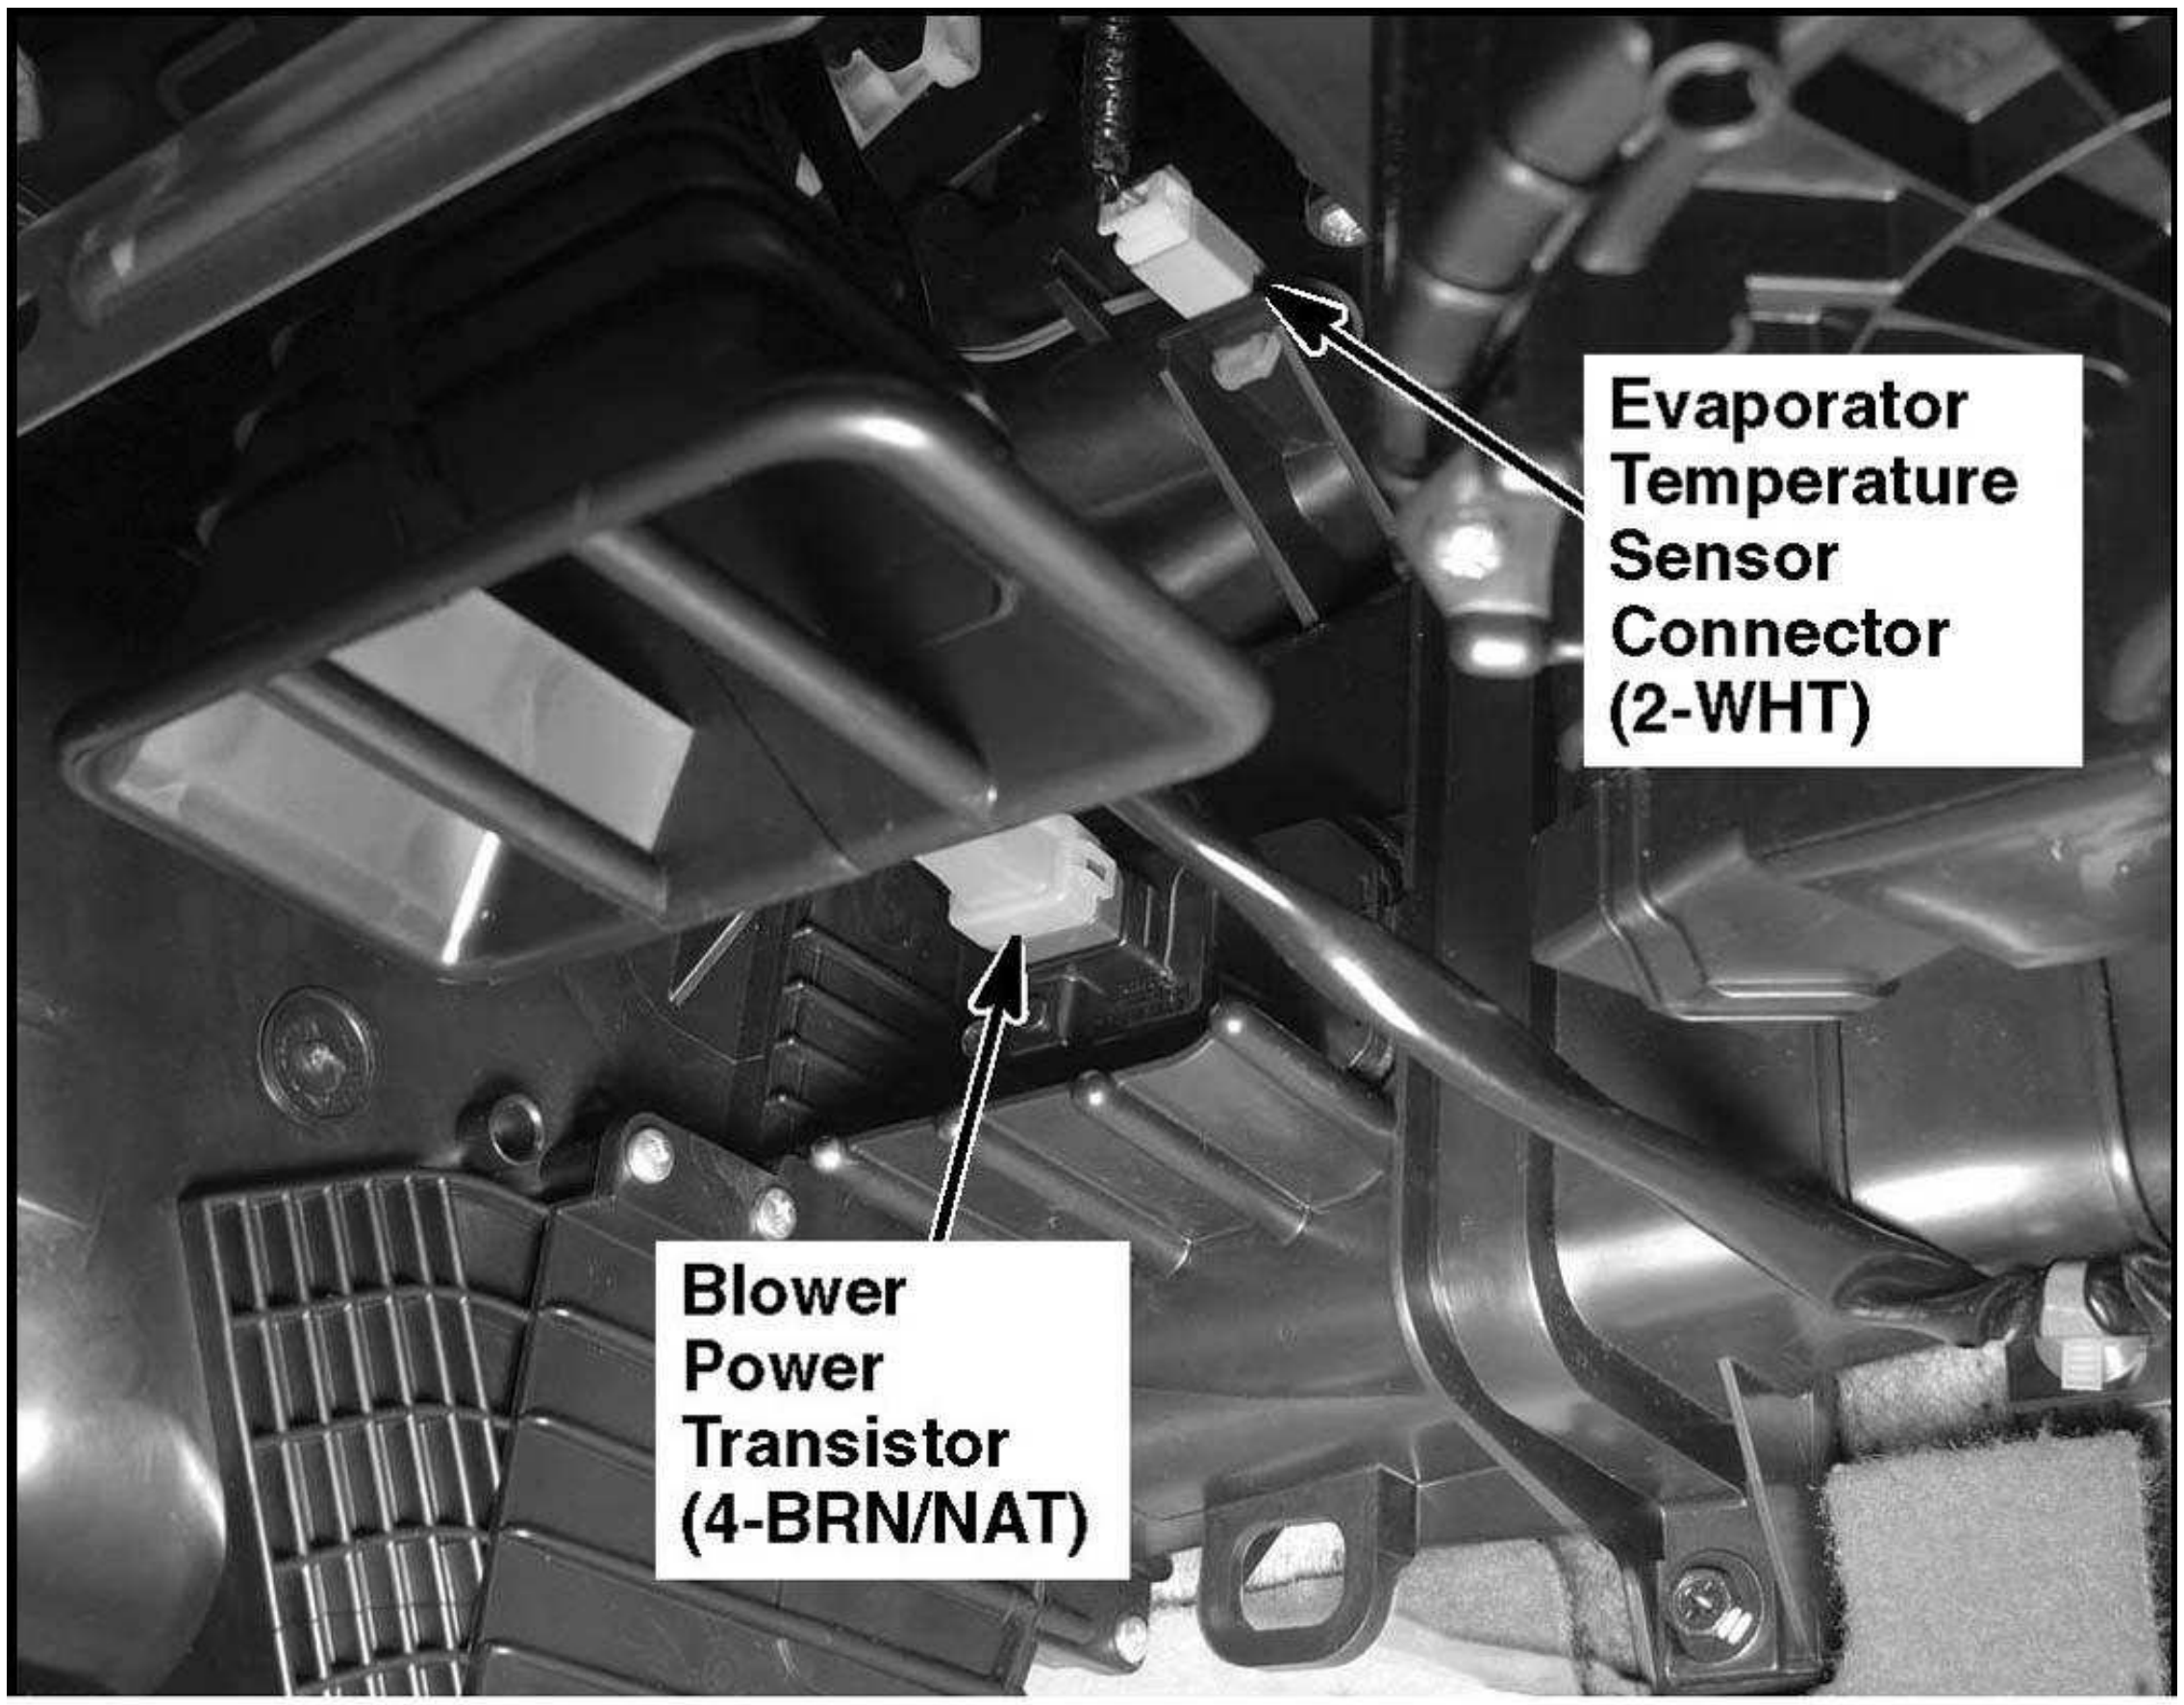
Evaporator Temperature Sensor Connector (2-WHT)
Blower Power Transistor (4-BRN/NAT)
G00434422

Fig. 80: Under Right Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

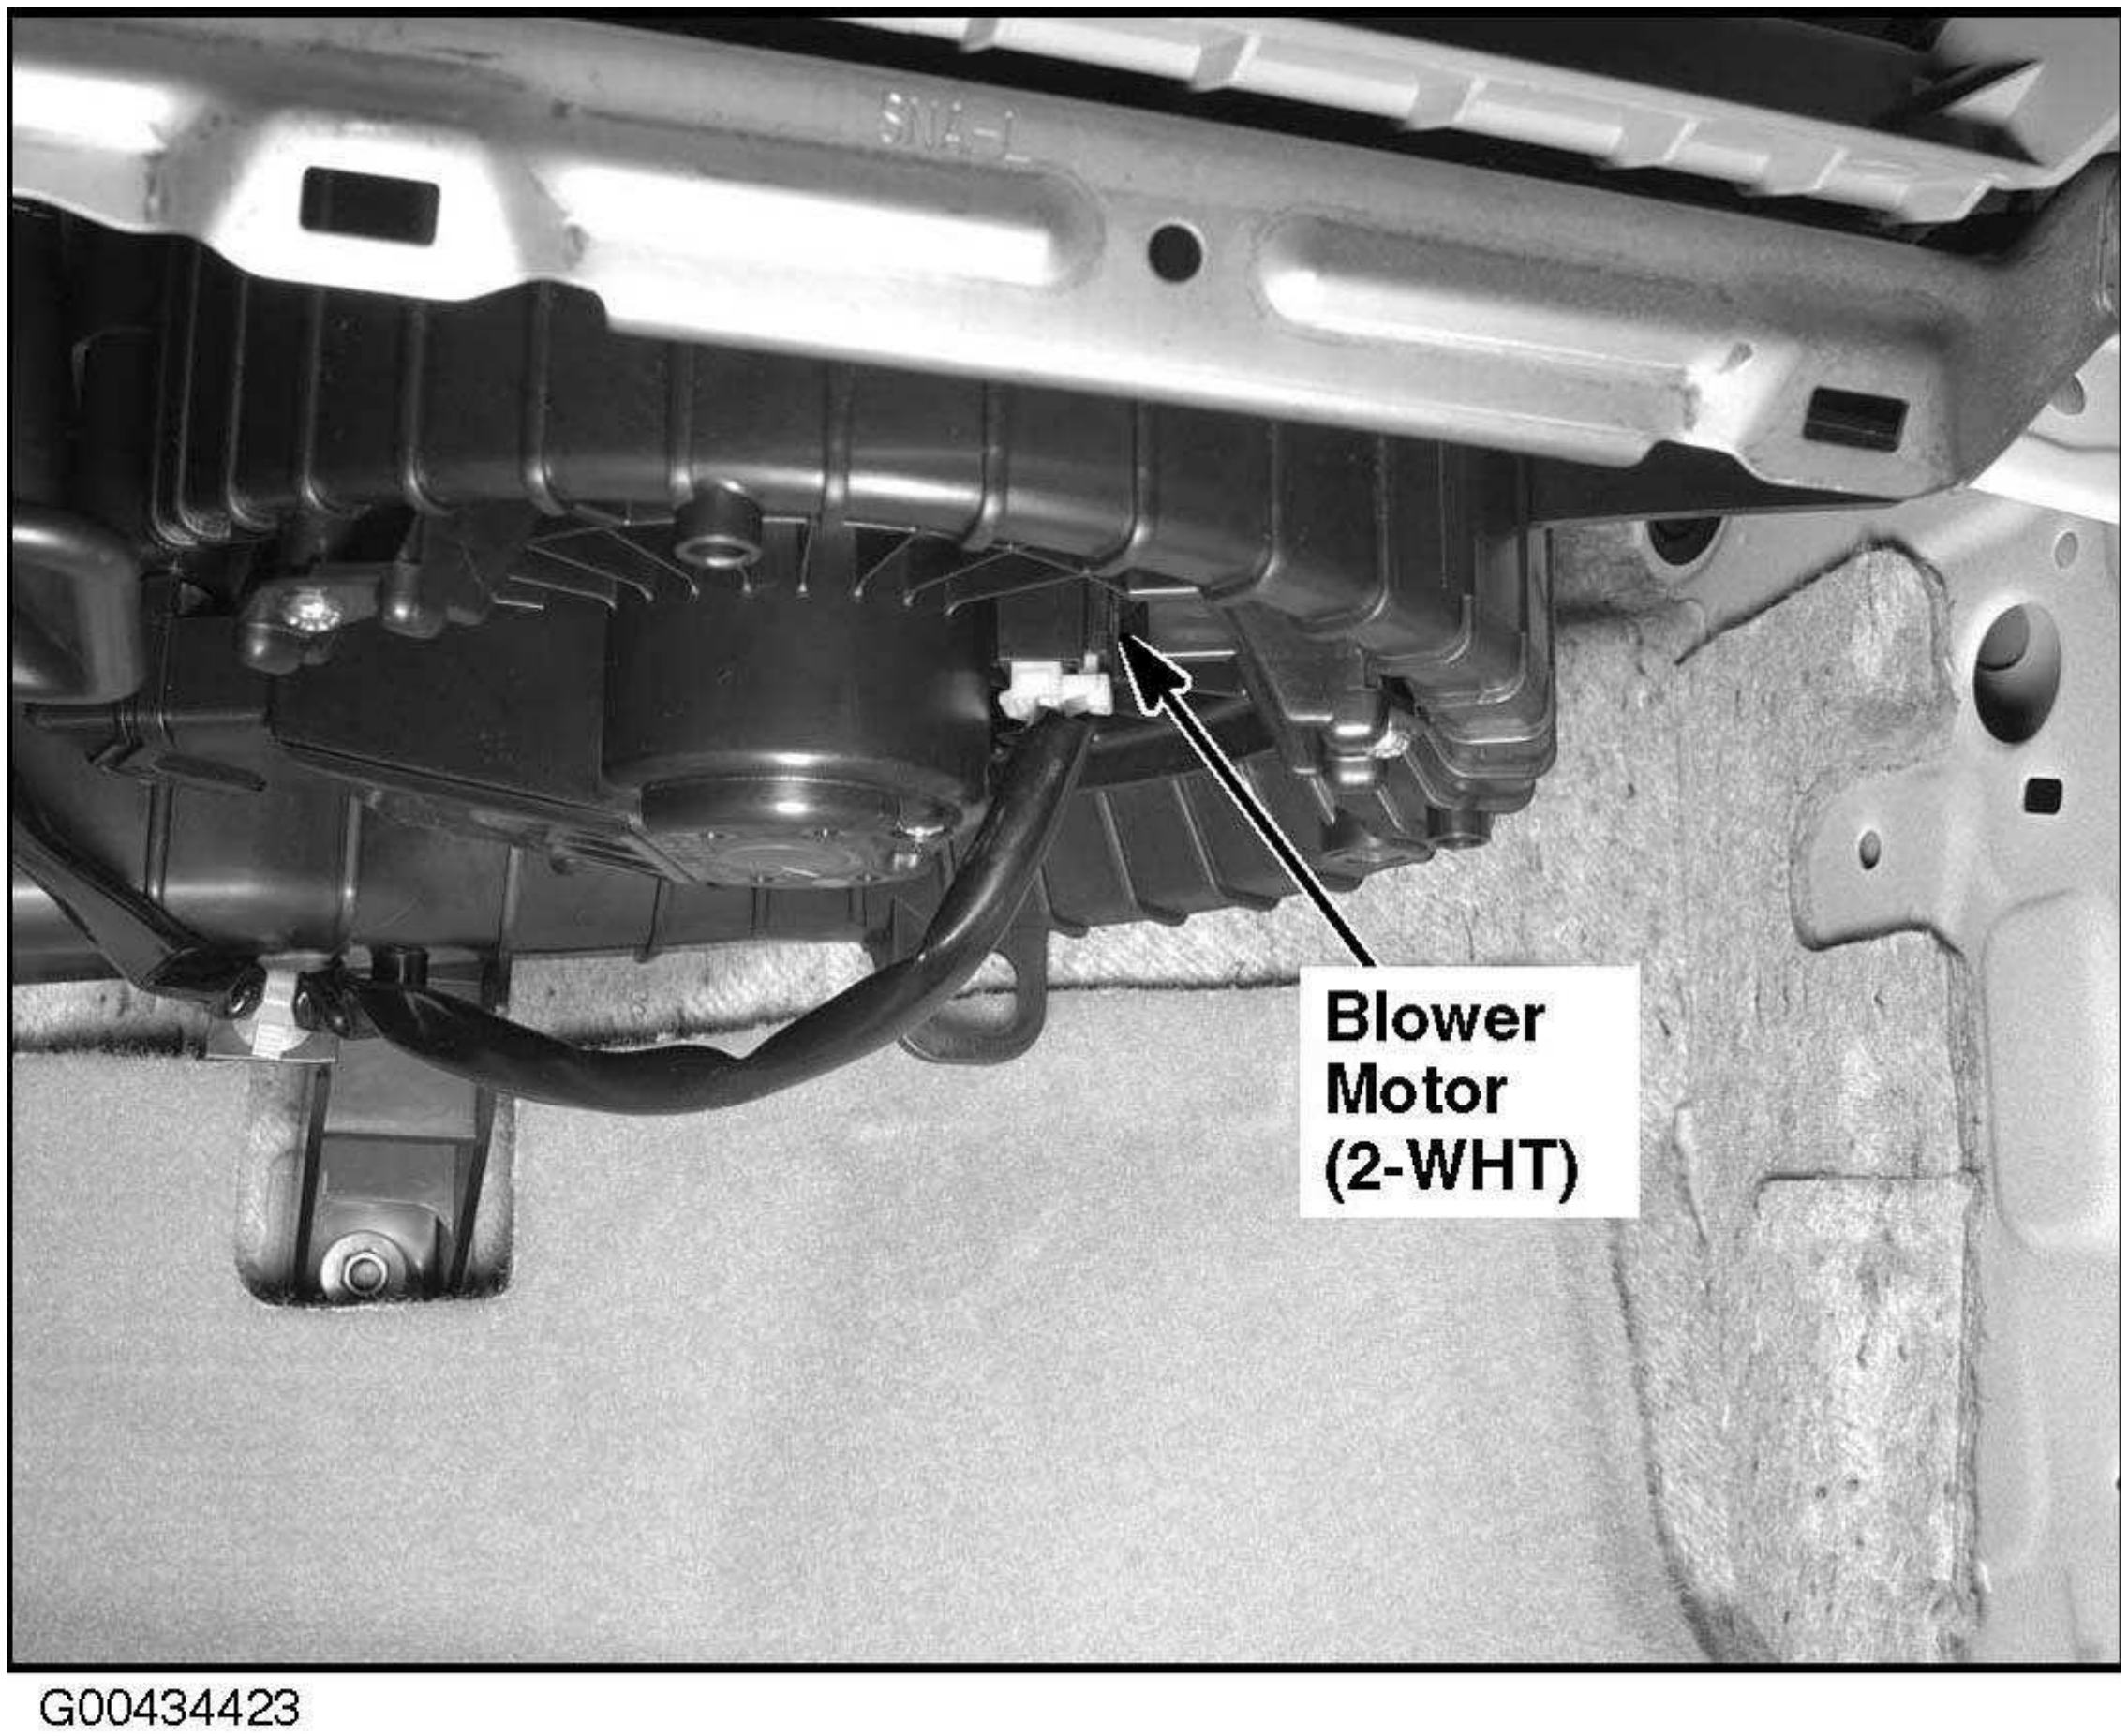
Blower
Motor
(2-WHT)
G00434423

Fig. 81: Under Right Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

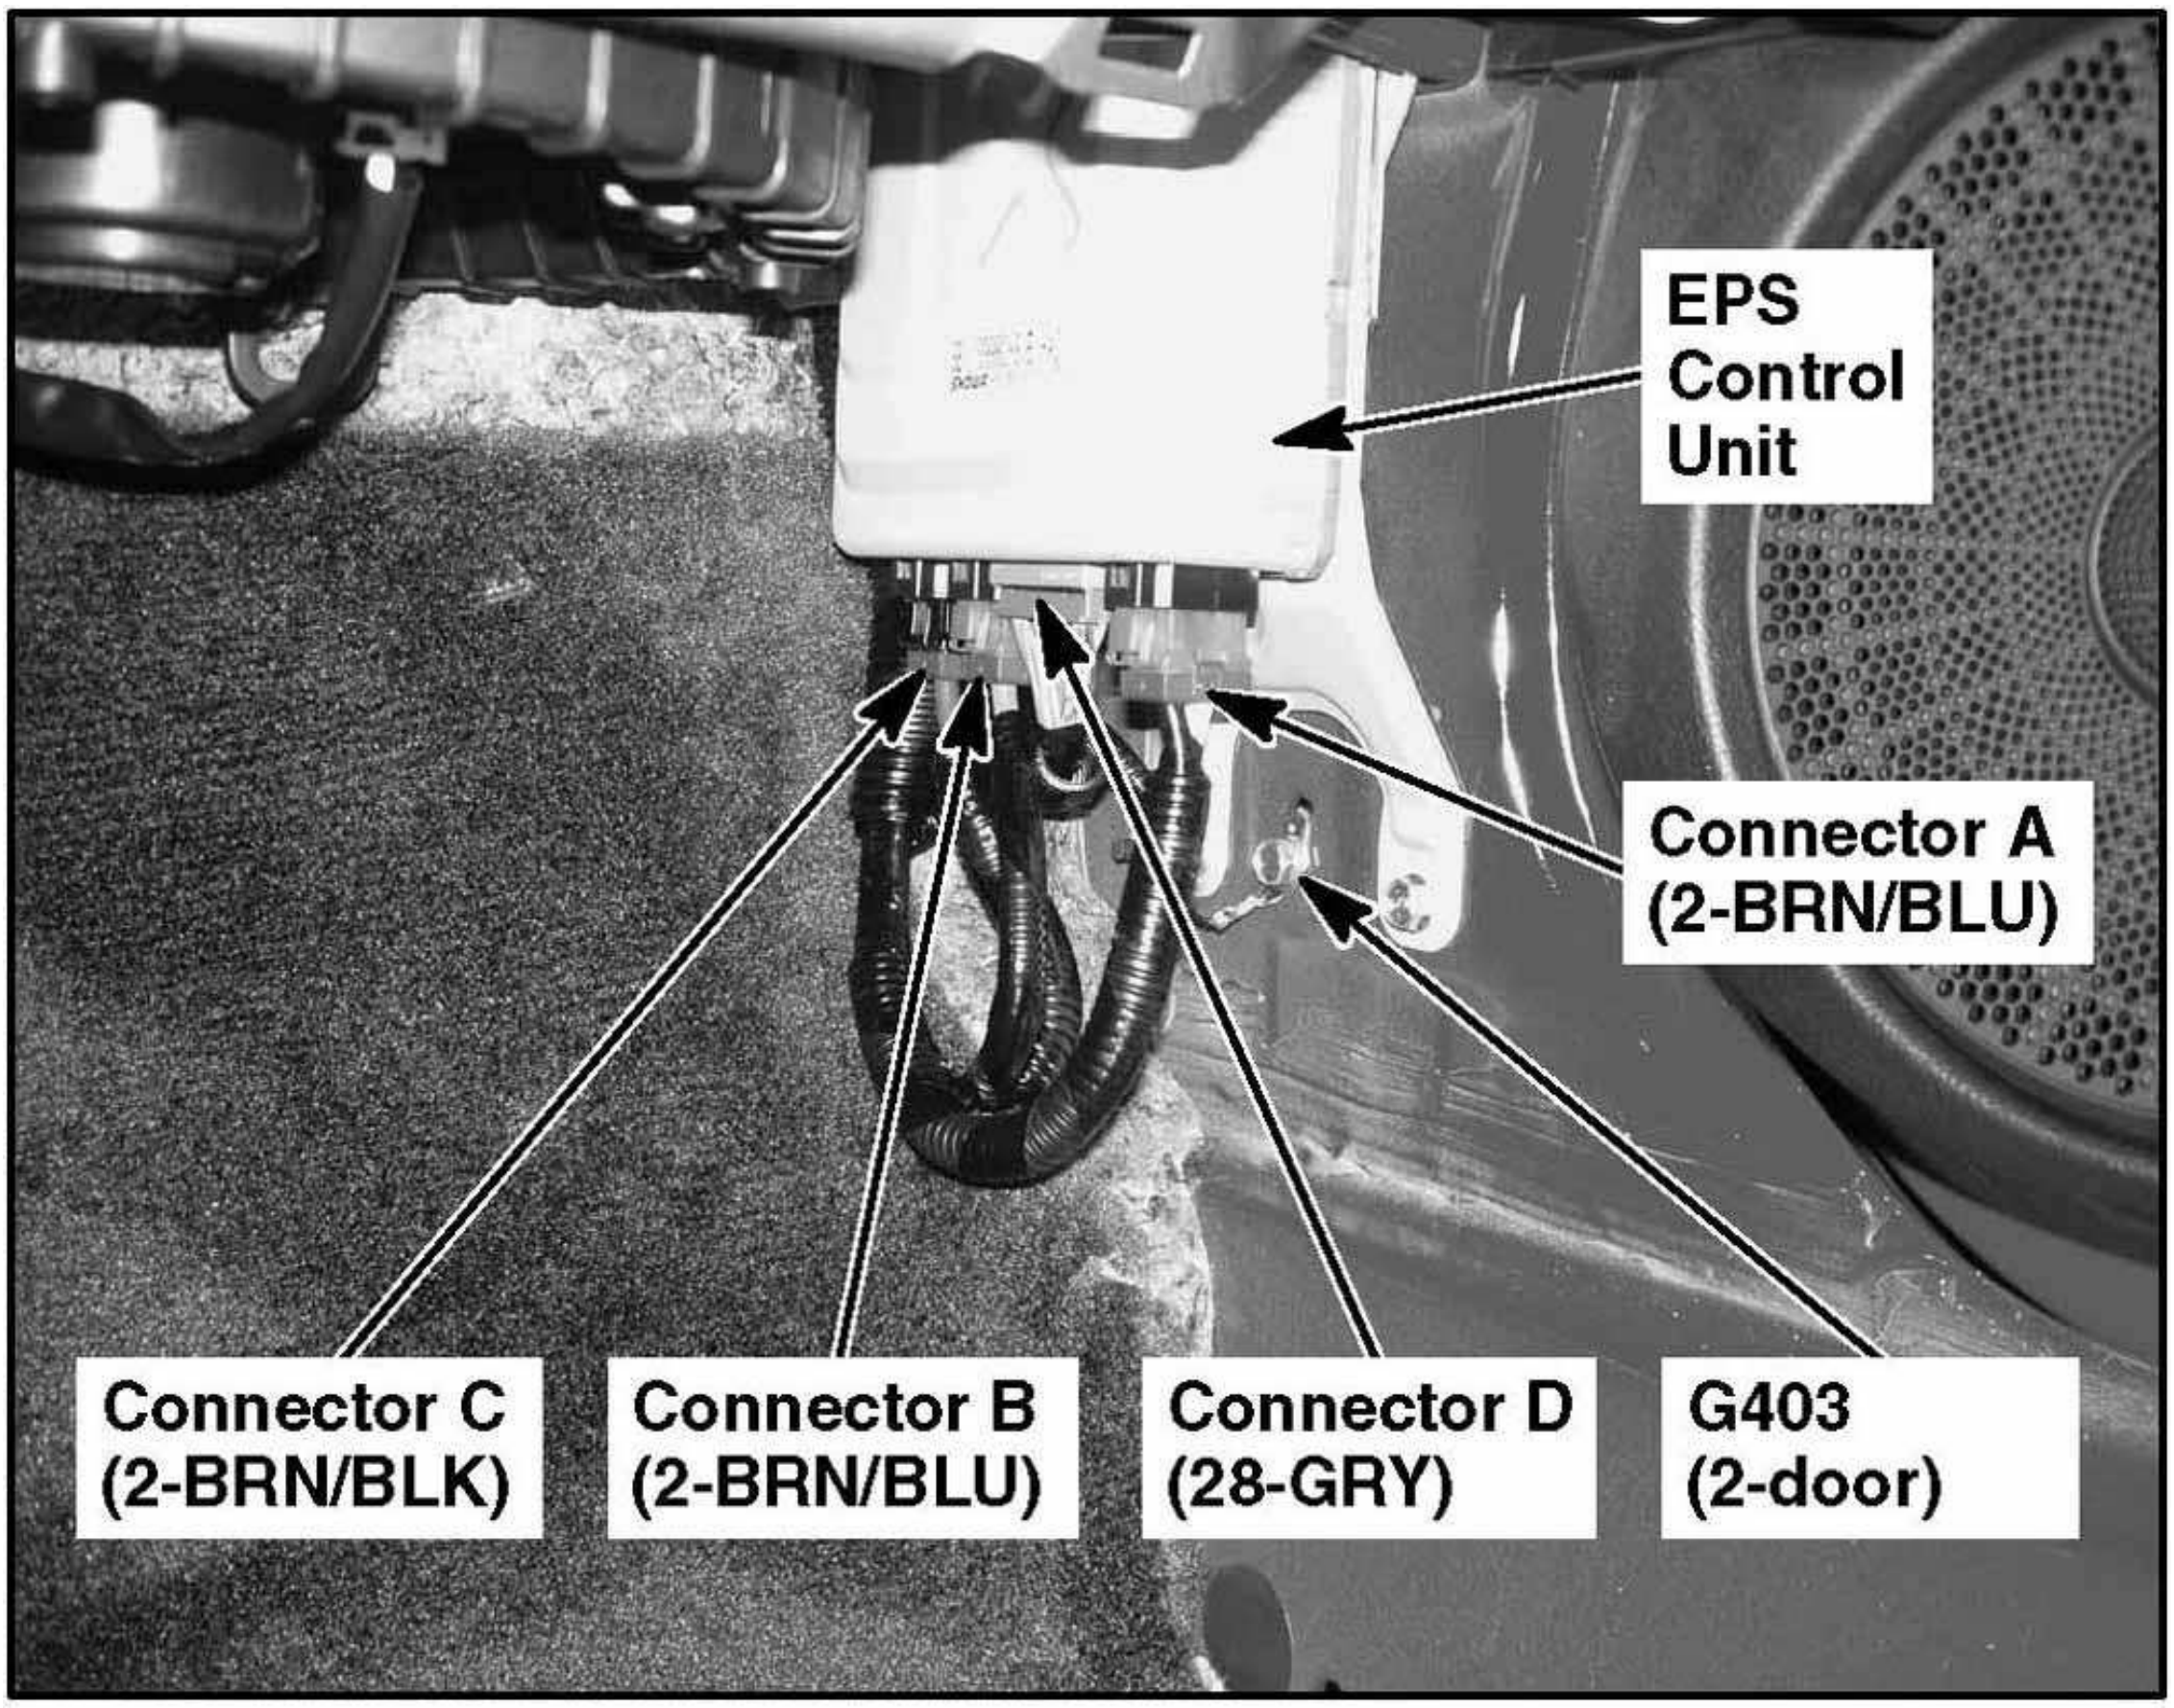
EPS Control Unit
Connector A (2-BRN/BLU)
Connector C (2-BRN/BLK)
Connector B (2-BRN/BLU)
Connector D (28-GRY)
G403 (2-door)

Fig. 82: Behind Right Kick Panel (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

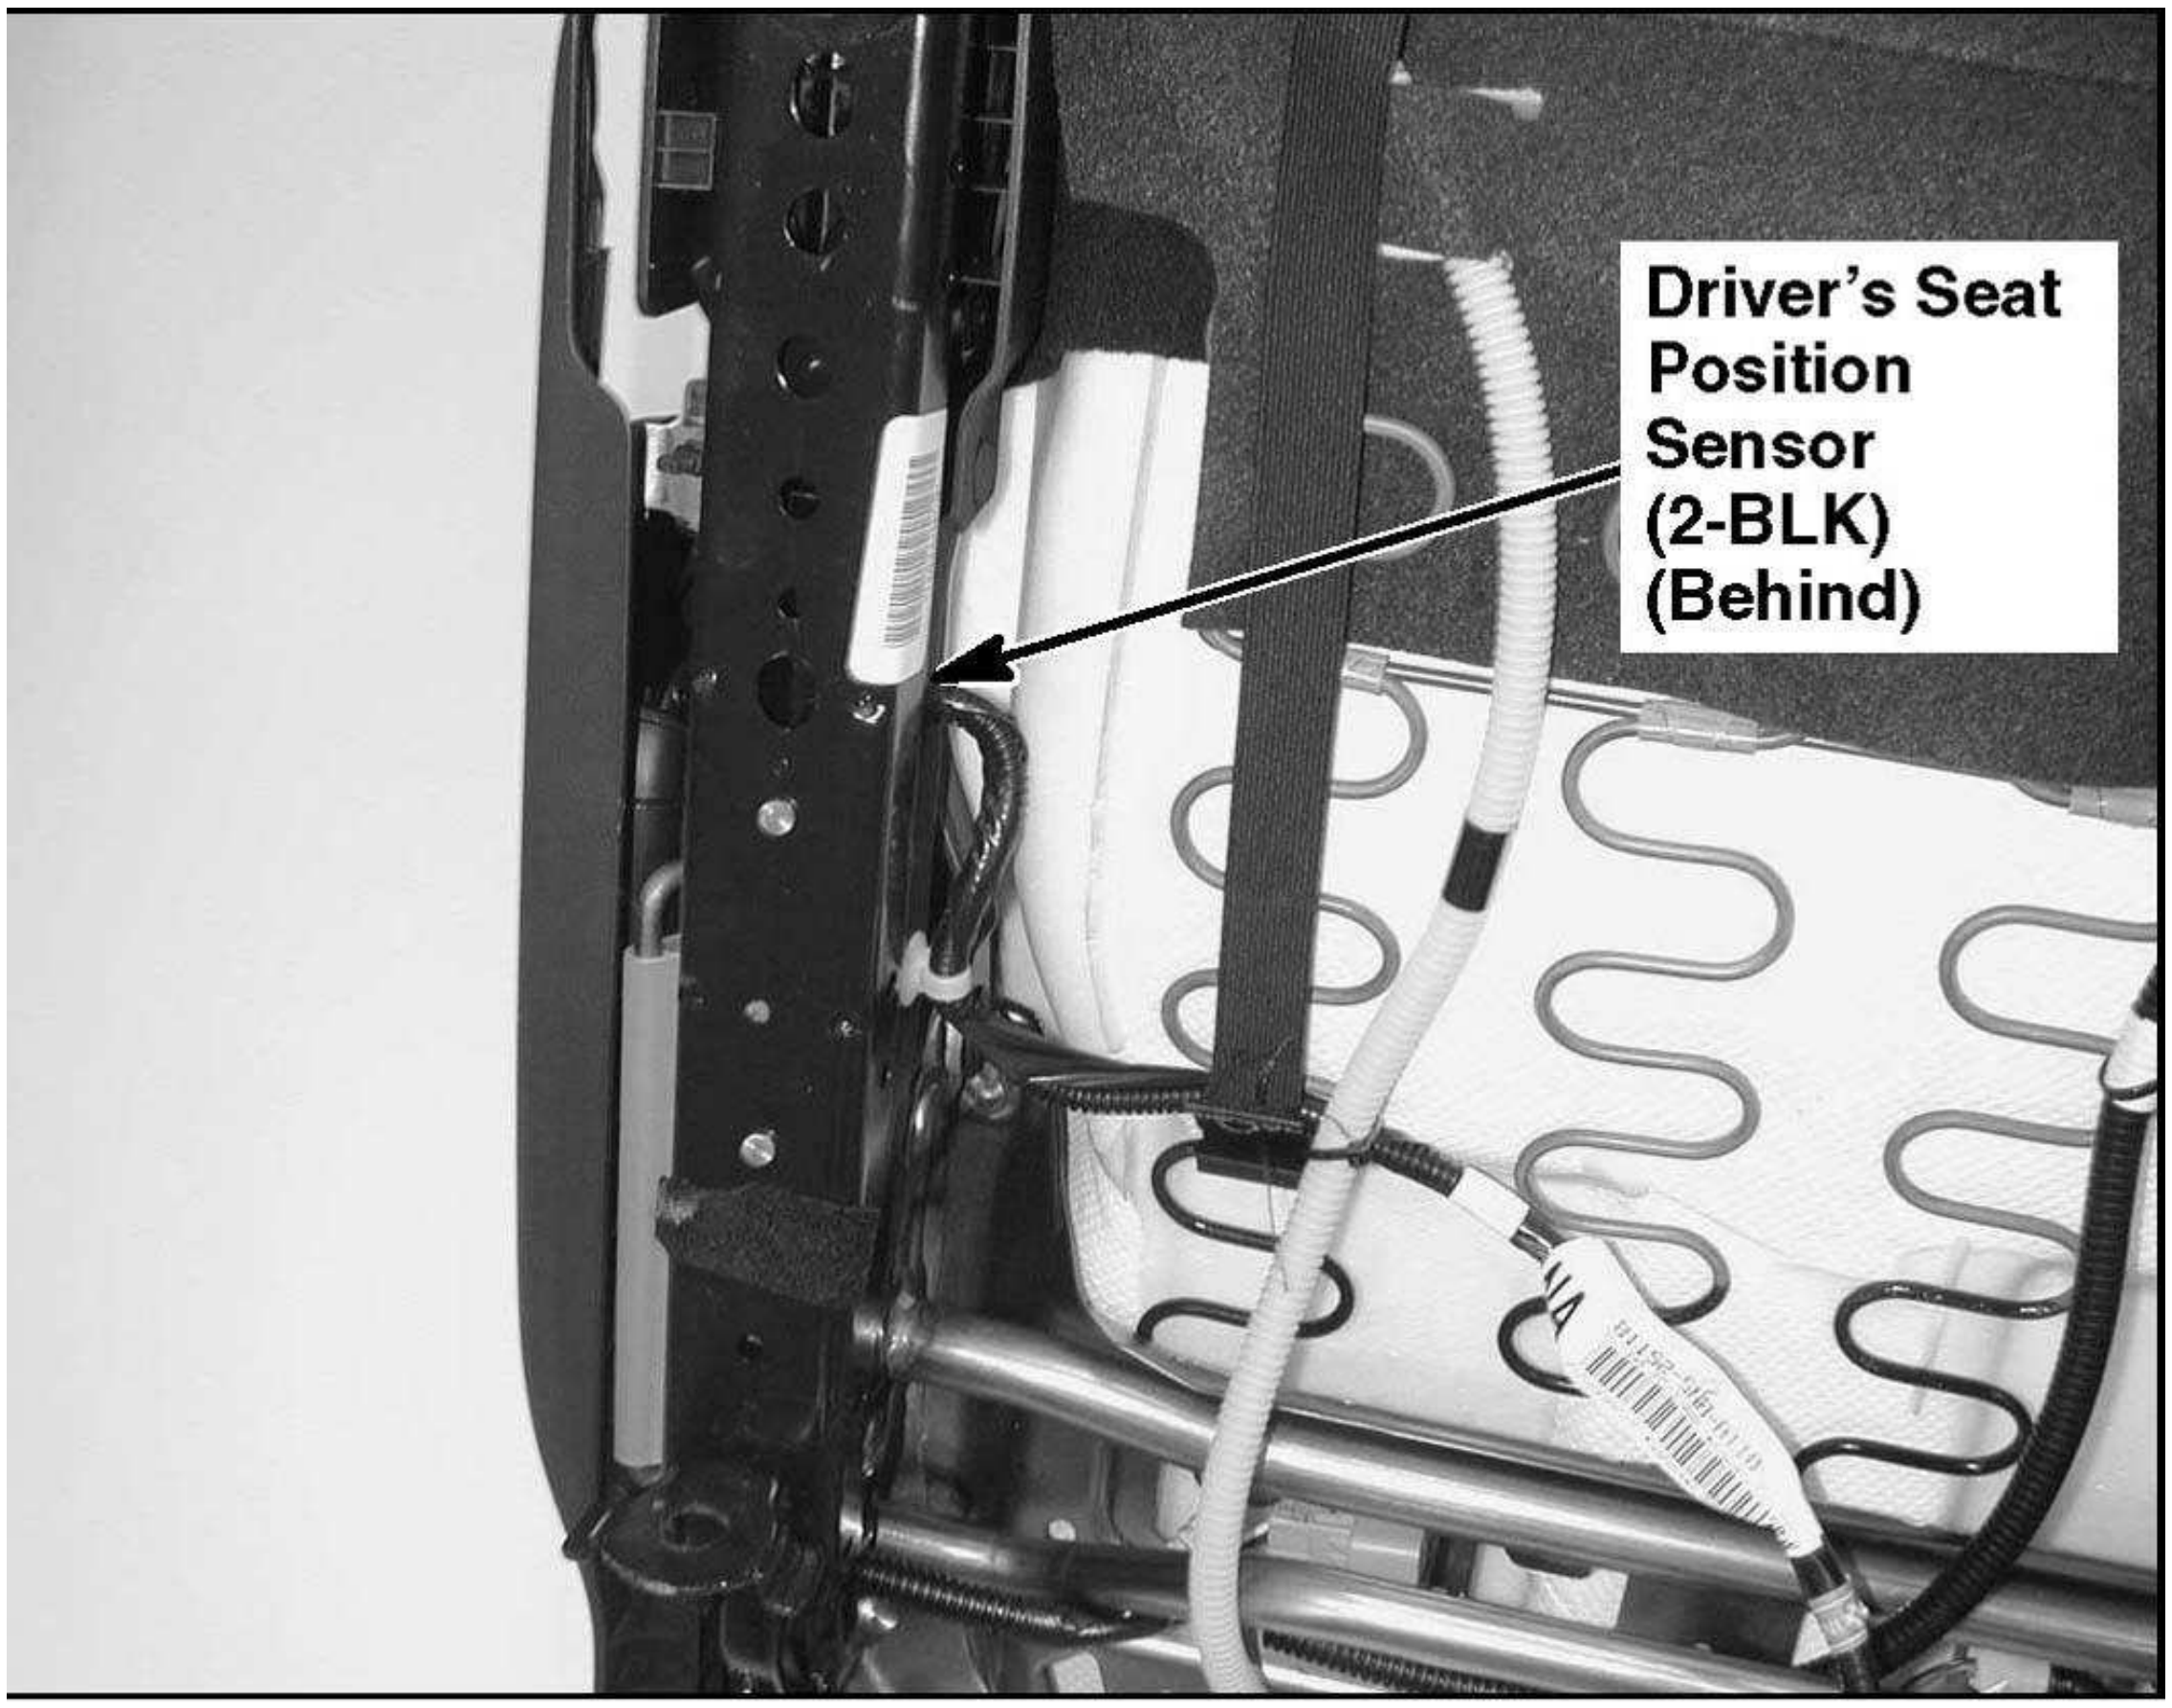
Driver's Seat
Position
Sensor
(2-BLK)
(Behind)

G00434425

Fig. 83: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

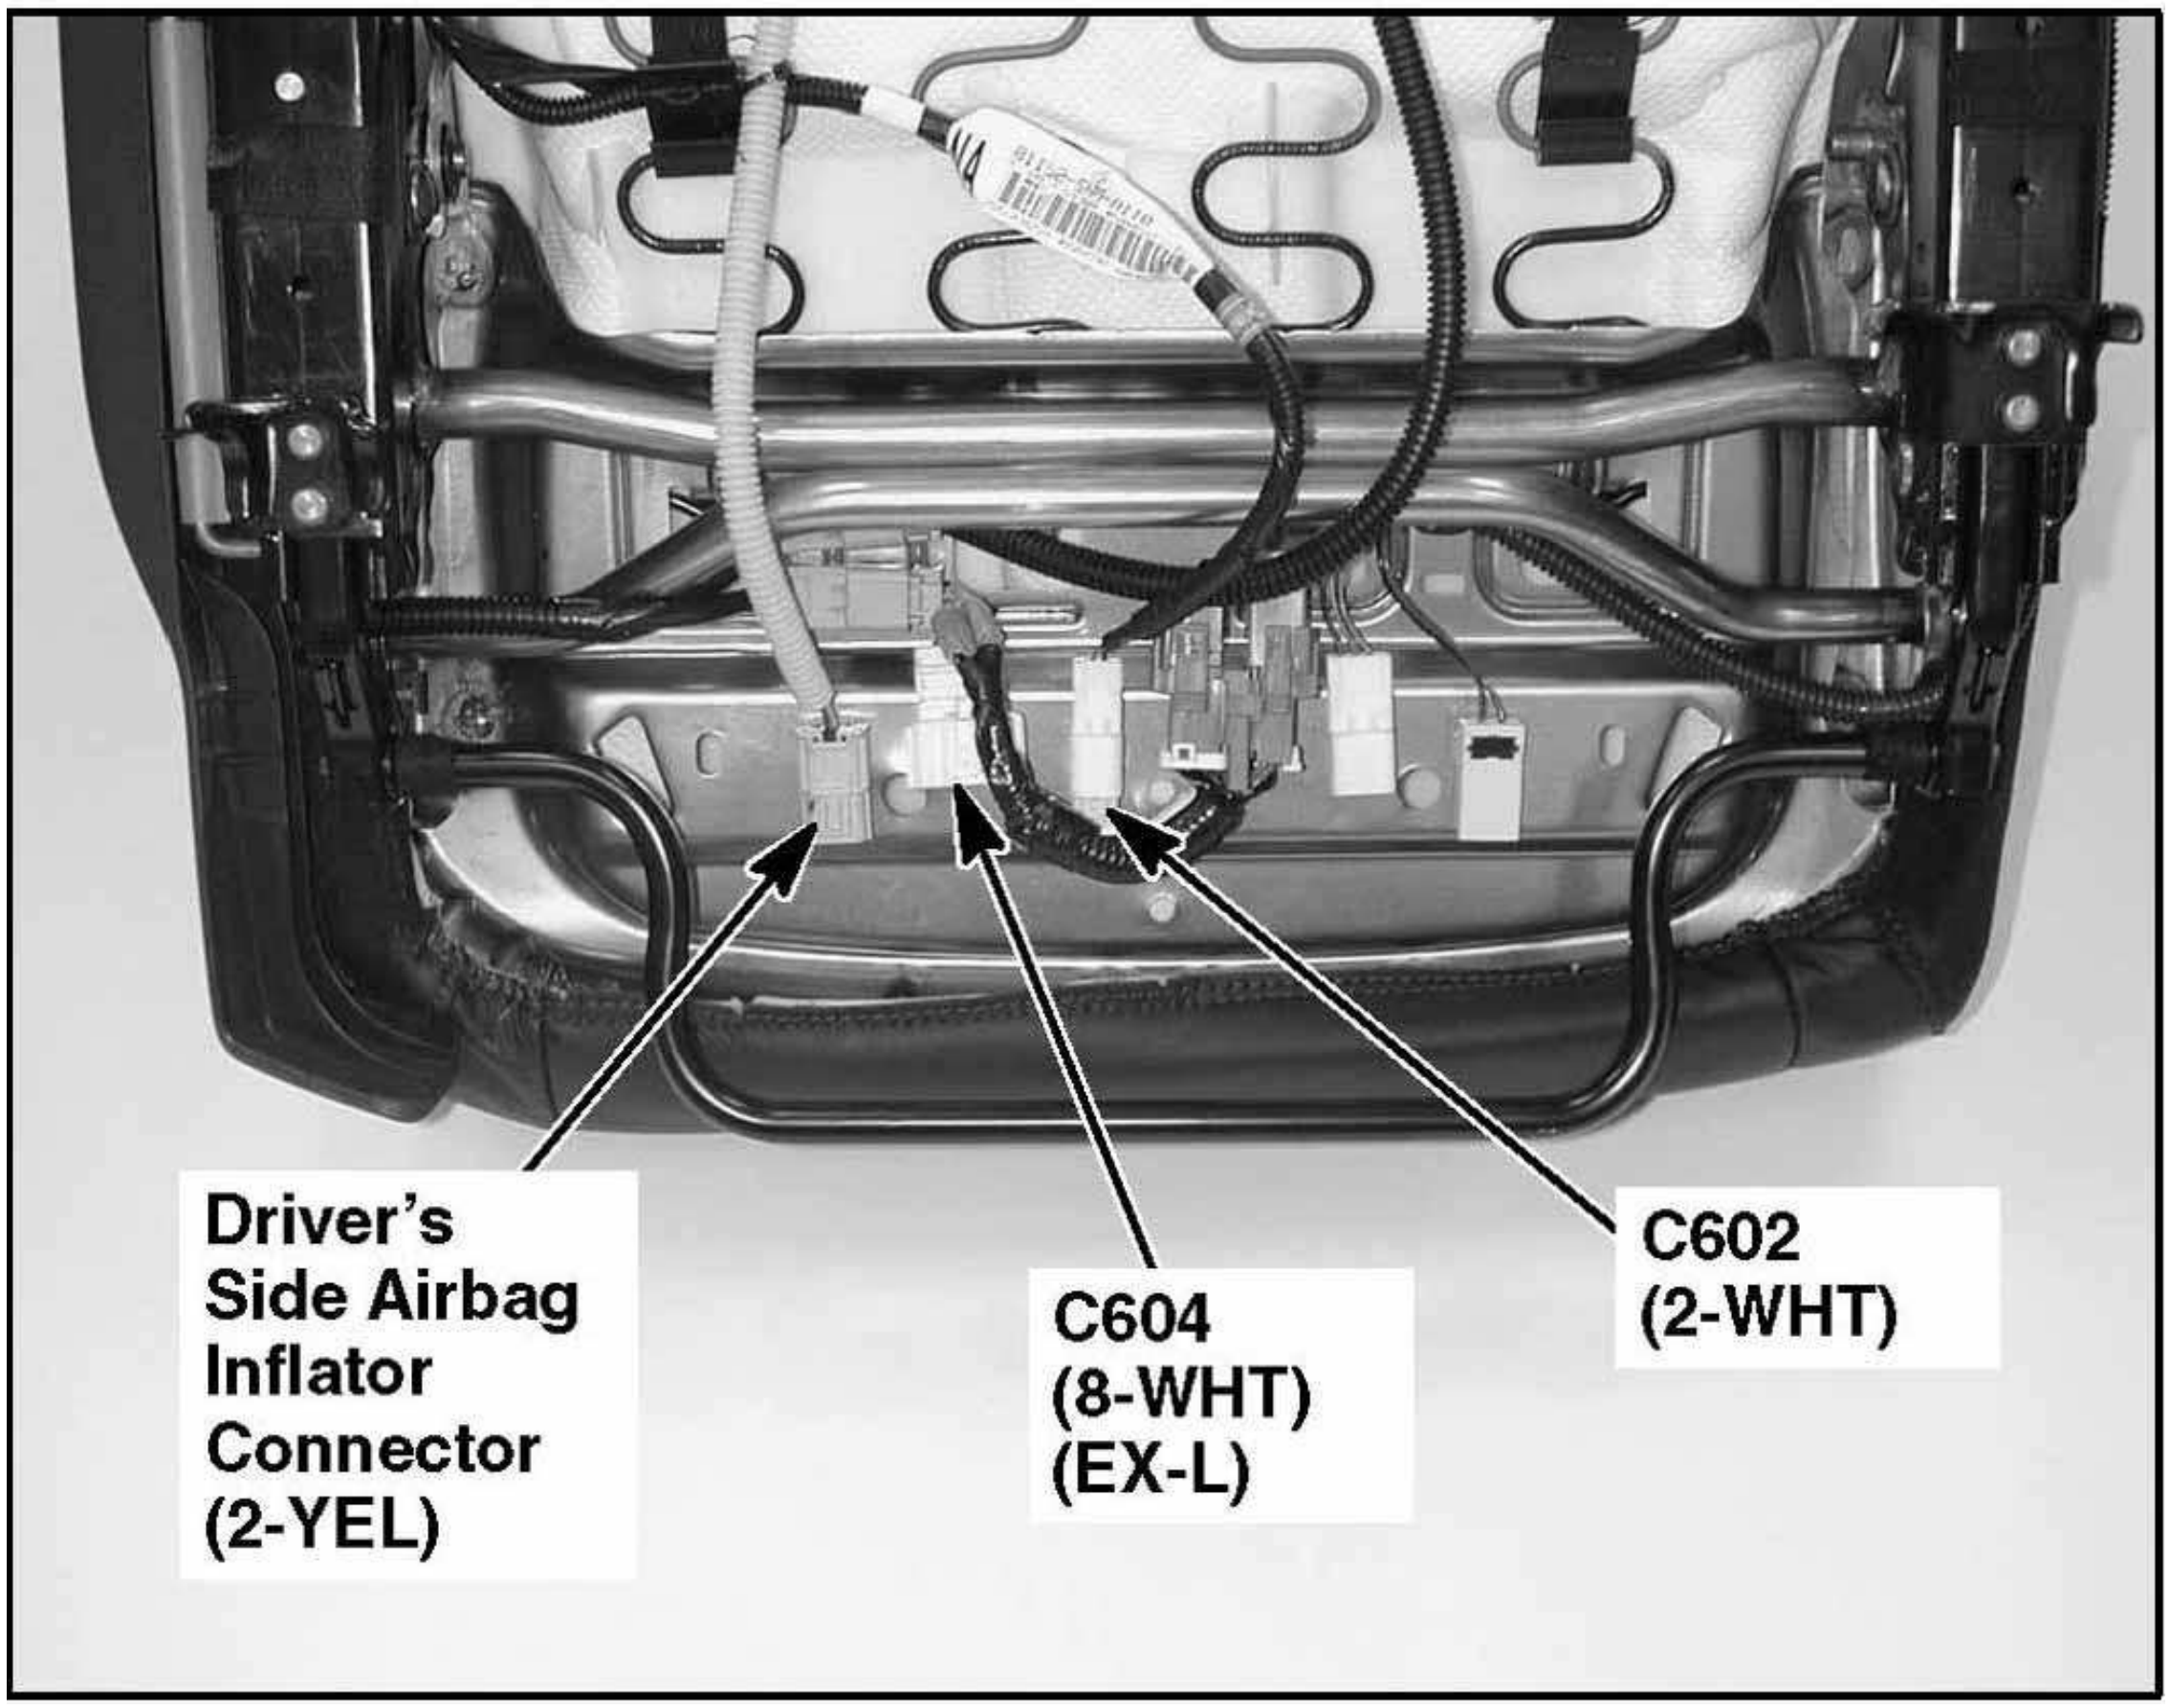
Driver's Side Airbag Inflator Connector (2-YEL)
C604 (8-WHT) (EX-L)
C602 (2-WHT)

Fig. 84: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

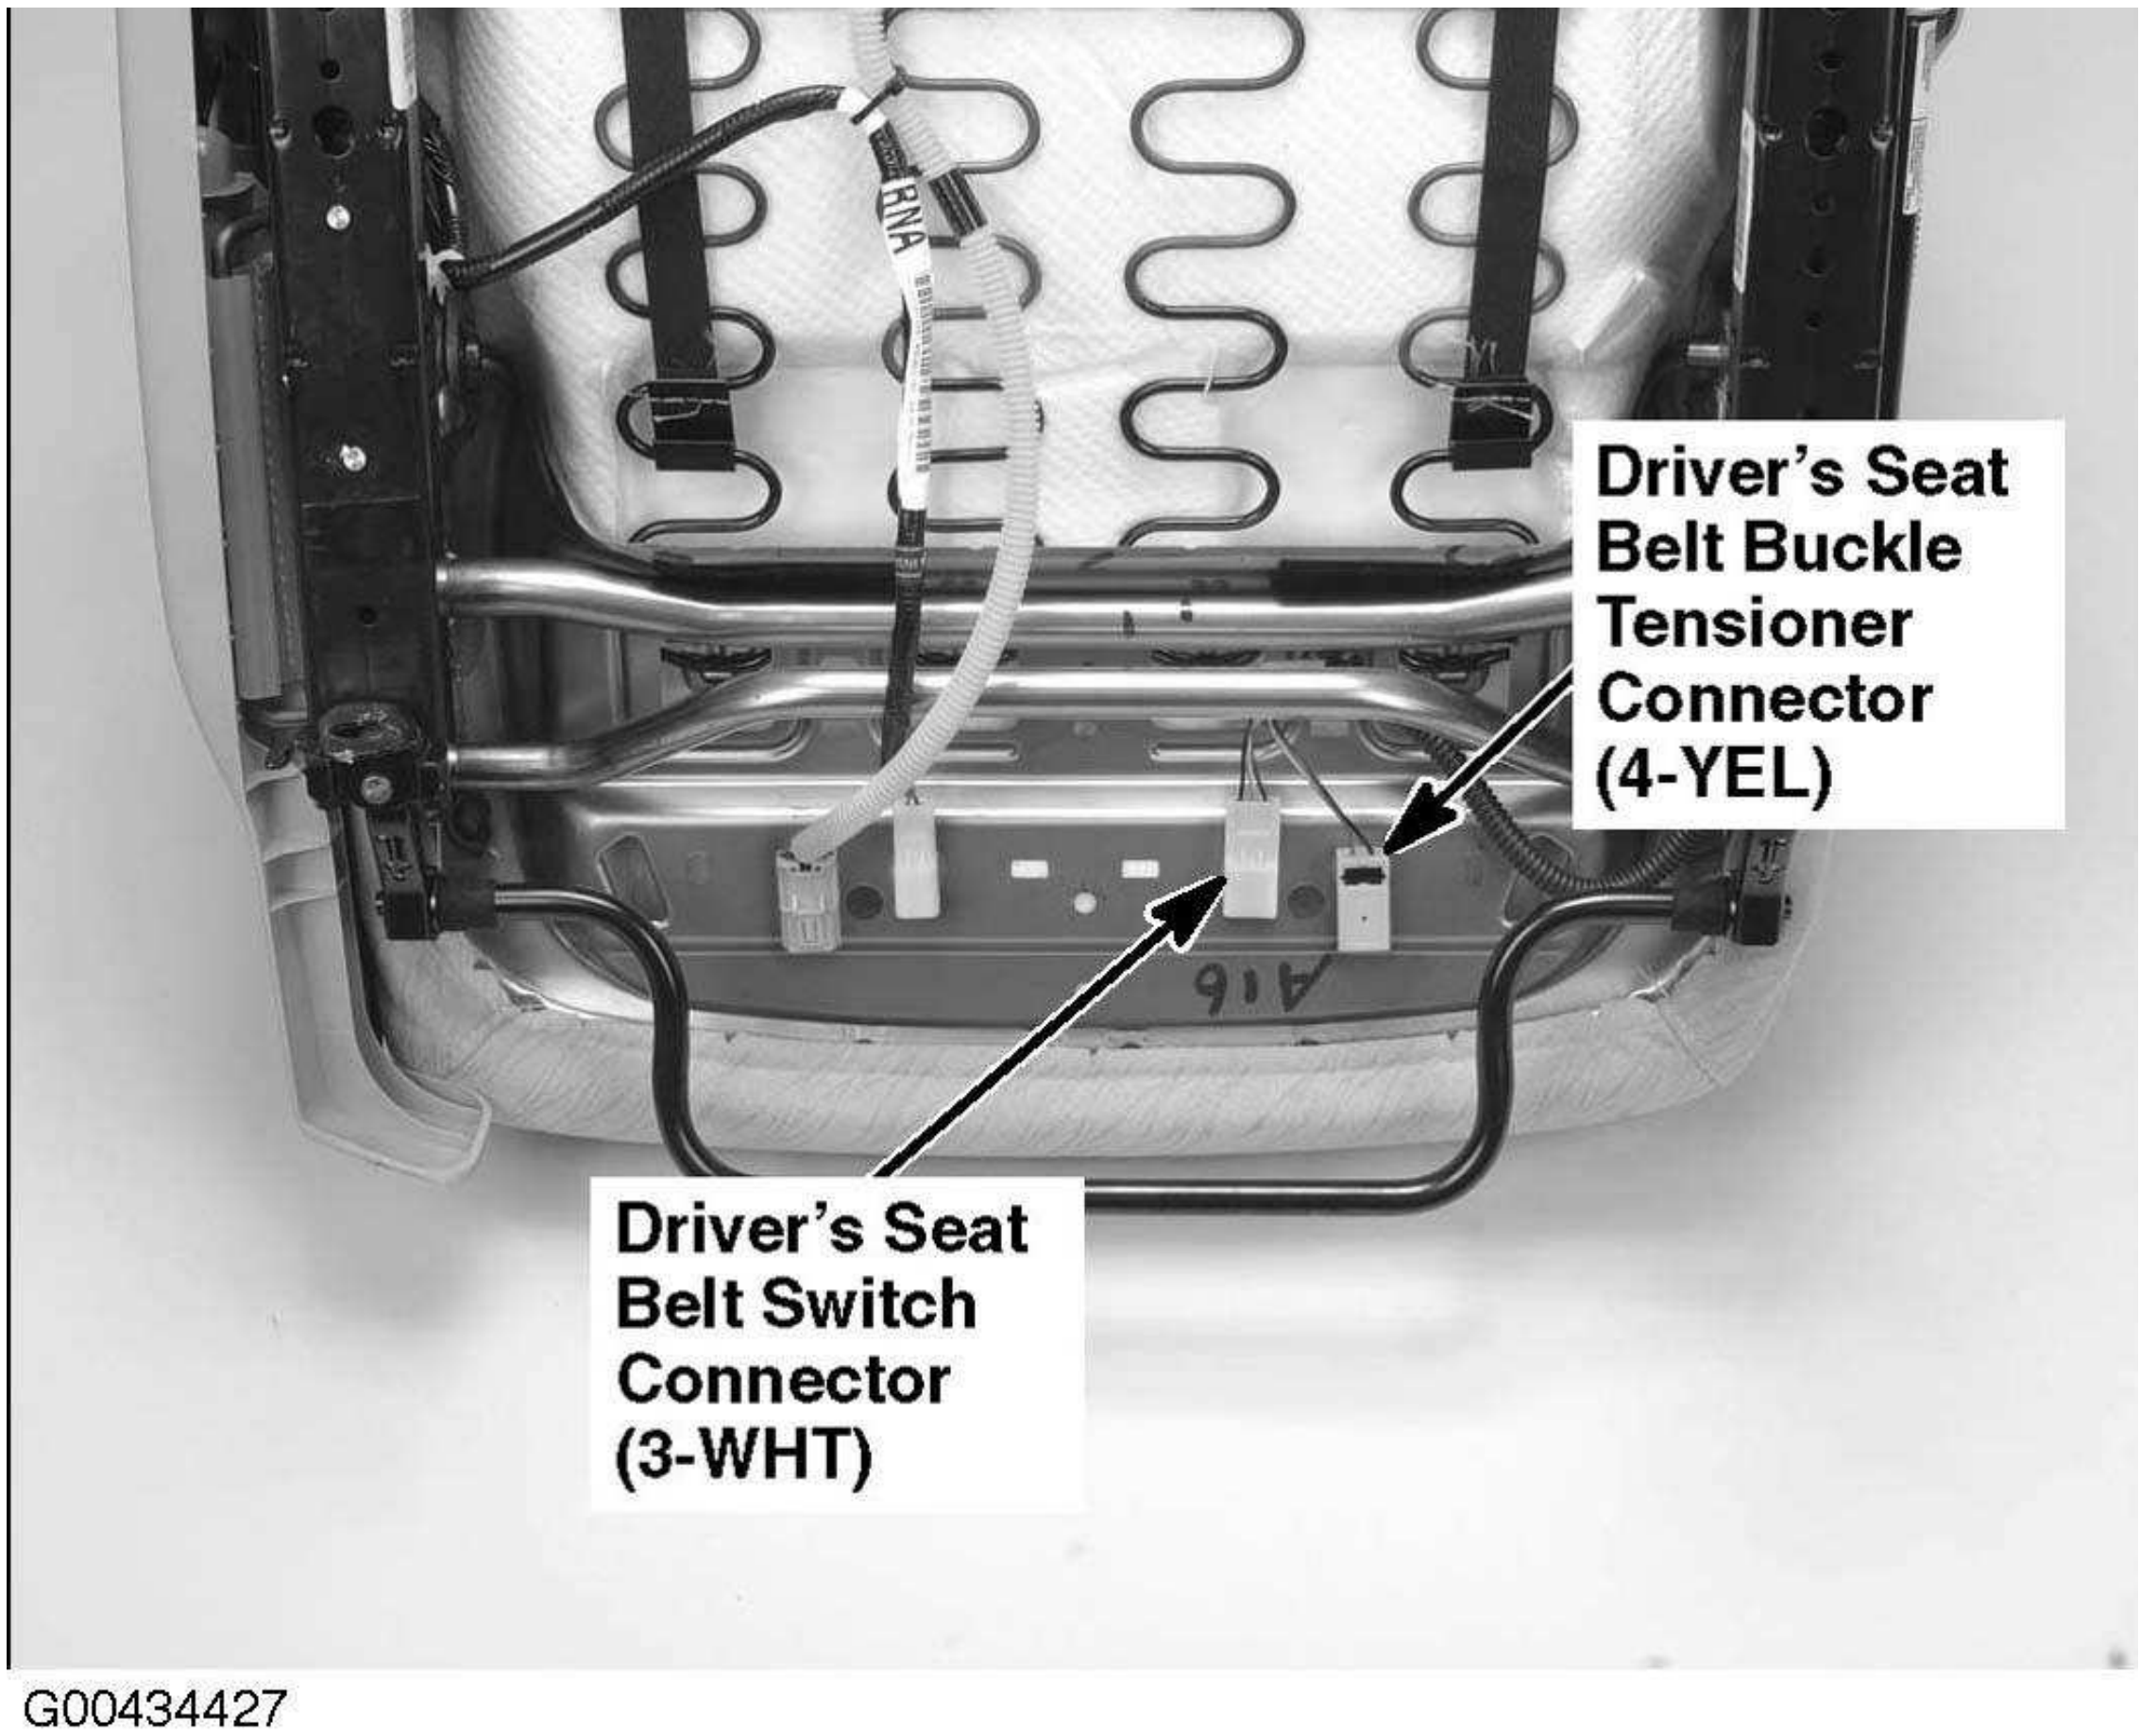
Driver's Seat Belt Buckle Tensioner Connector (4-YEL)
Driver's Seat Belt Switch Connector (3-WHT)
G00434427

Fig. 85: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

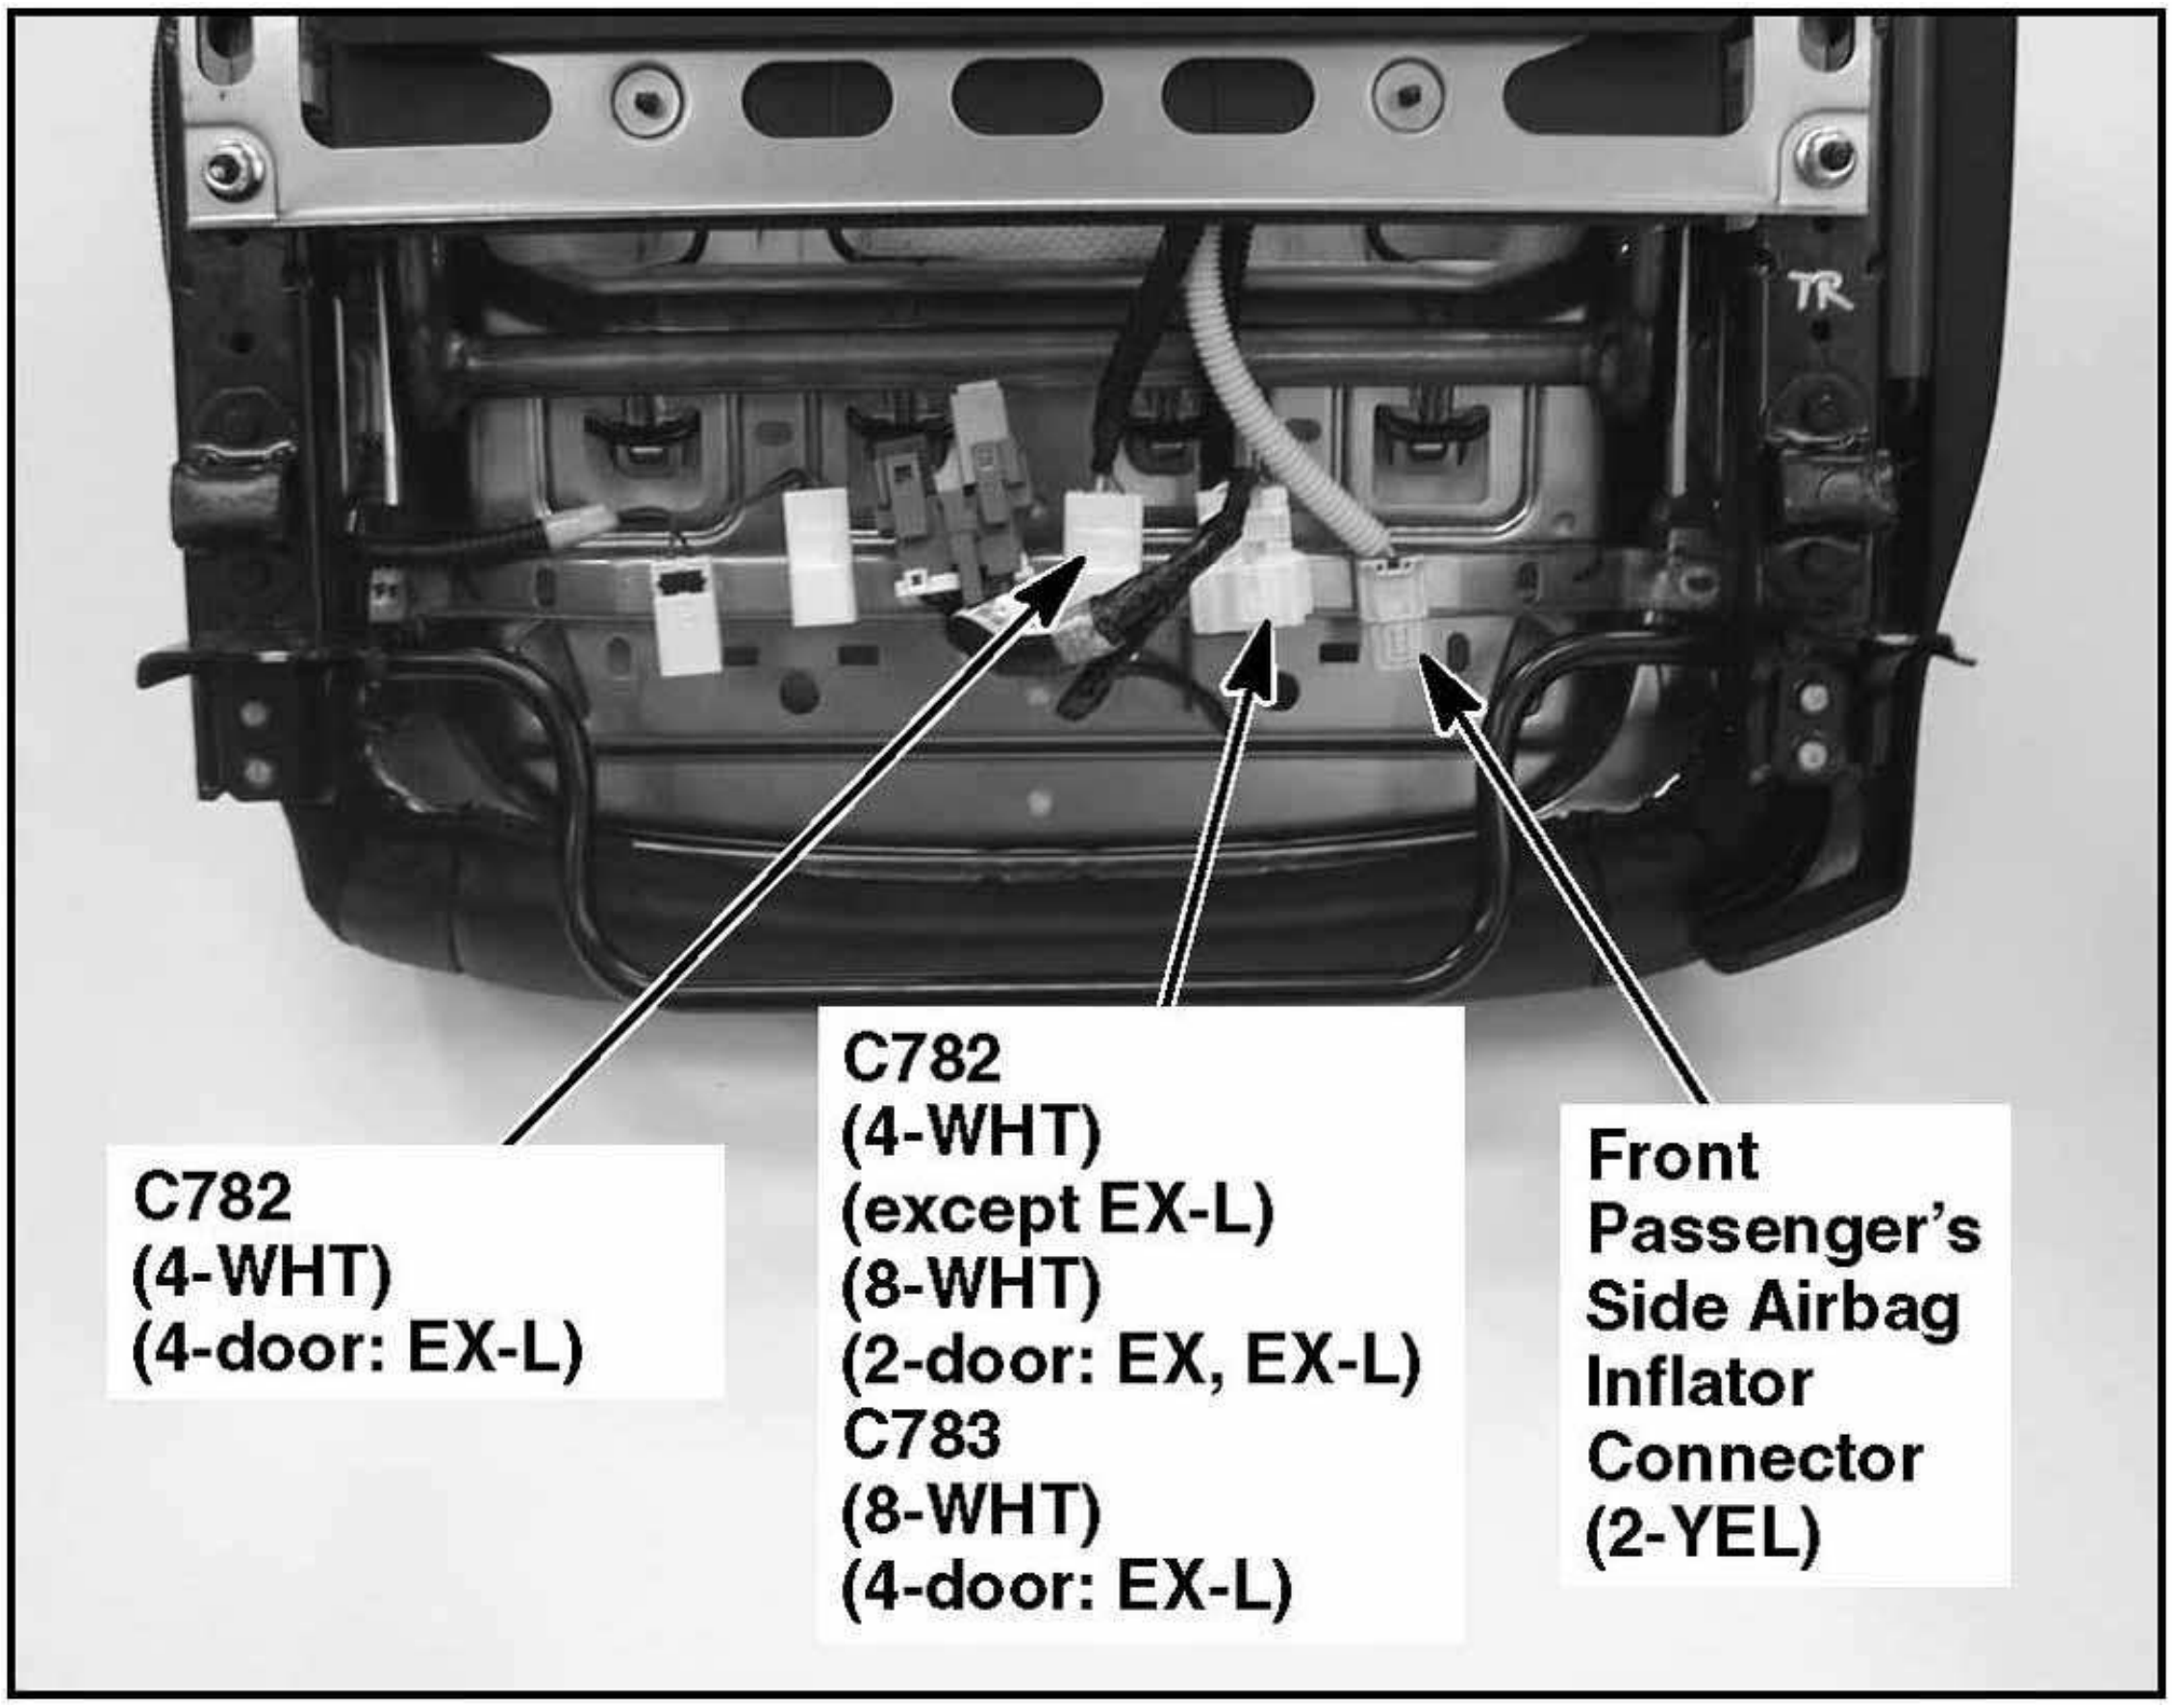
C782
(4-WHT)
(4-door: EX-L)
C782
(4-WHT)
(except EX-L)
(8-WHT)
(2-door: EX, EX-L)
C783
(8-WHT)
(4-door: EX-L)
Front Passenger's Side Airbag Inflator Connector (2-YEL)

Fig. 86: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

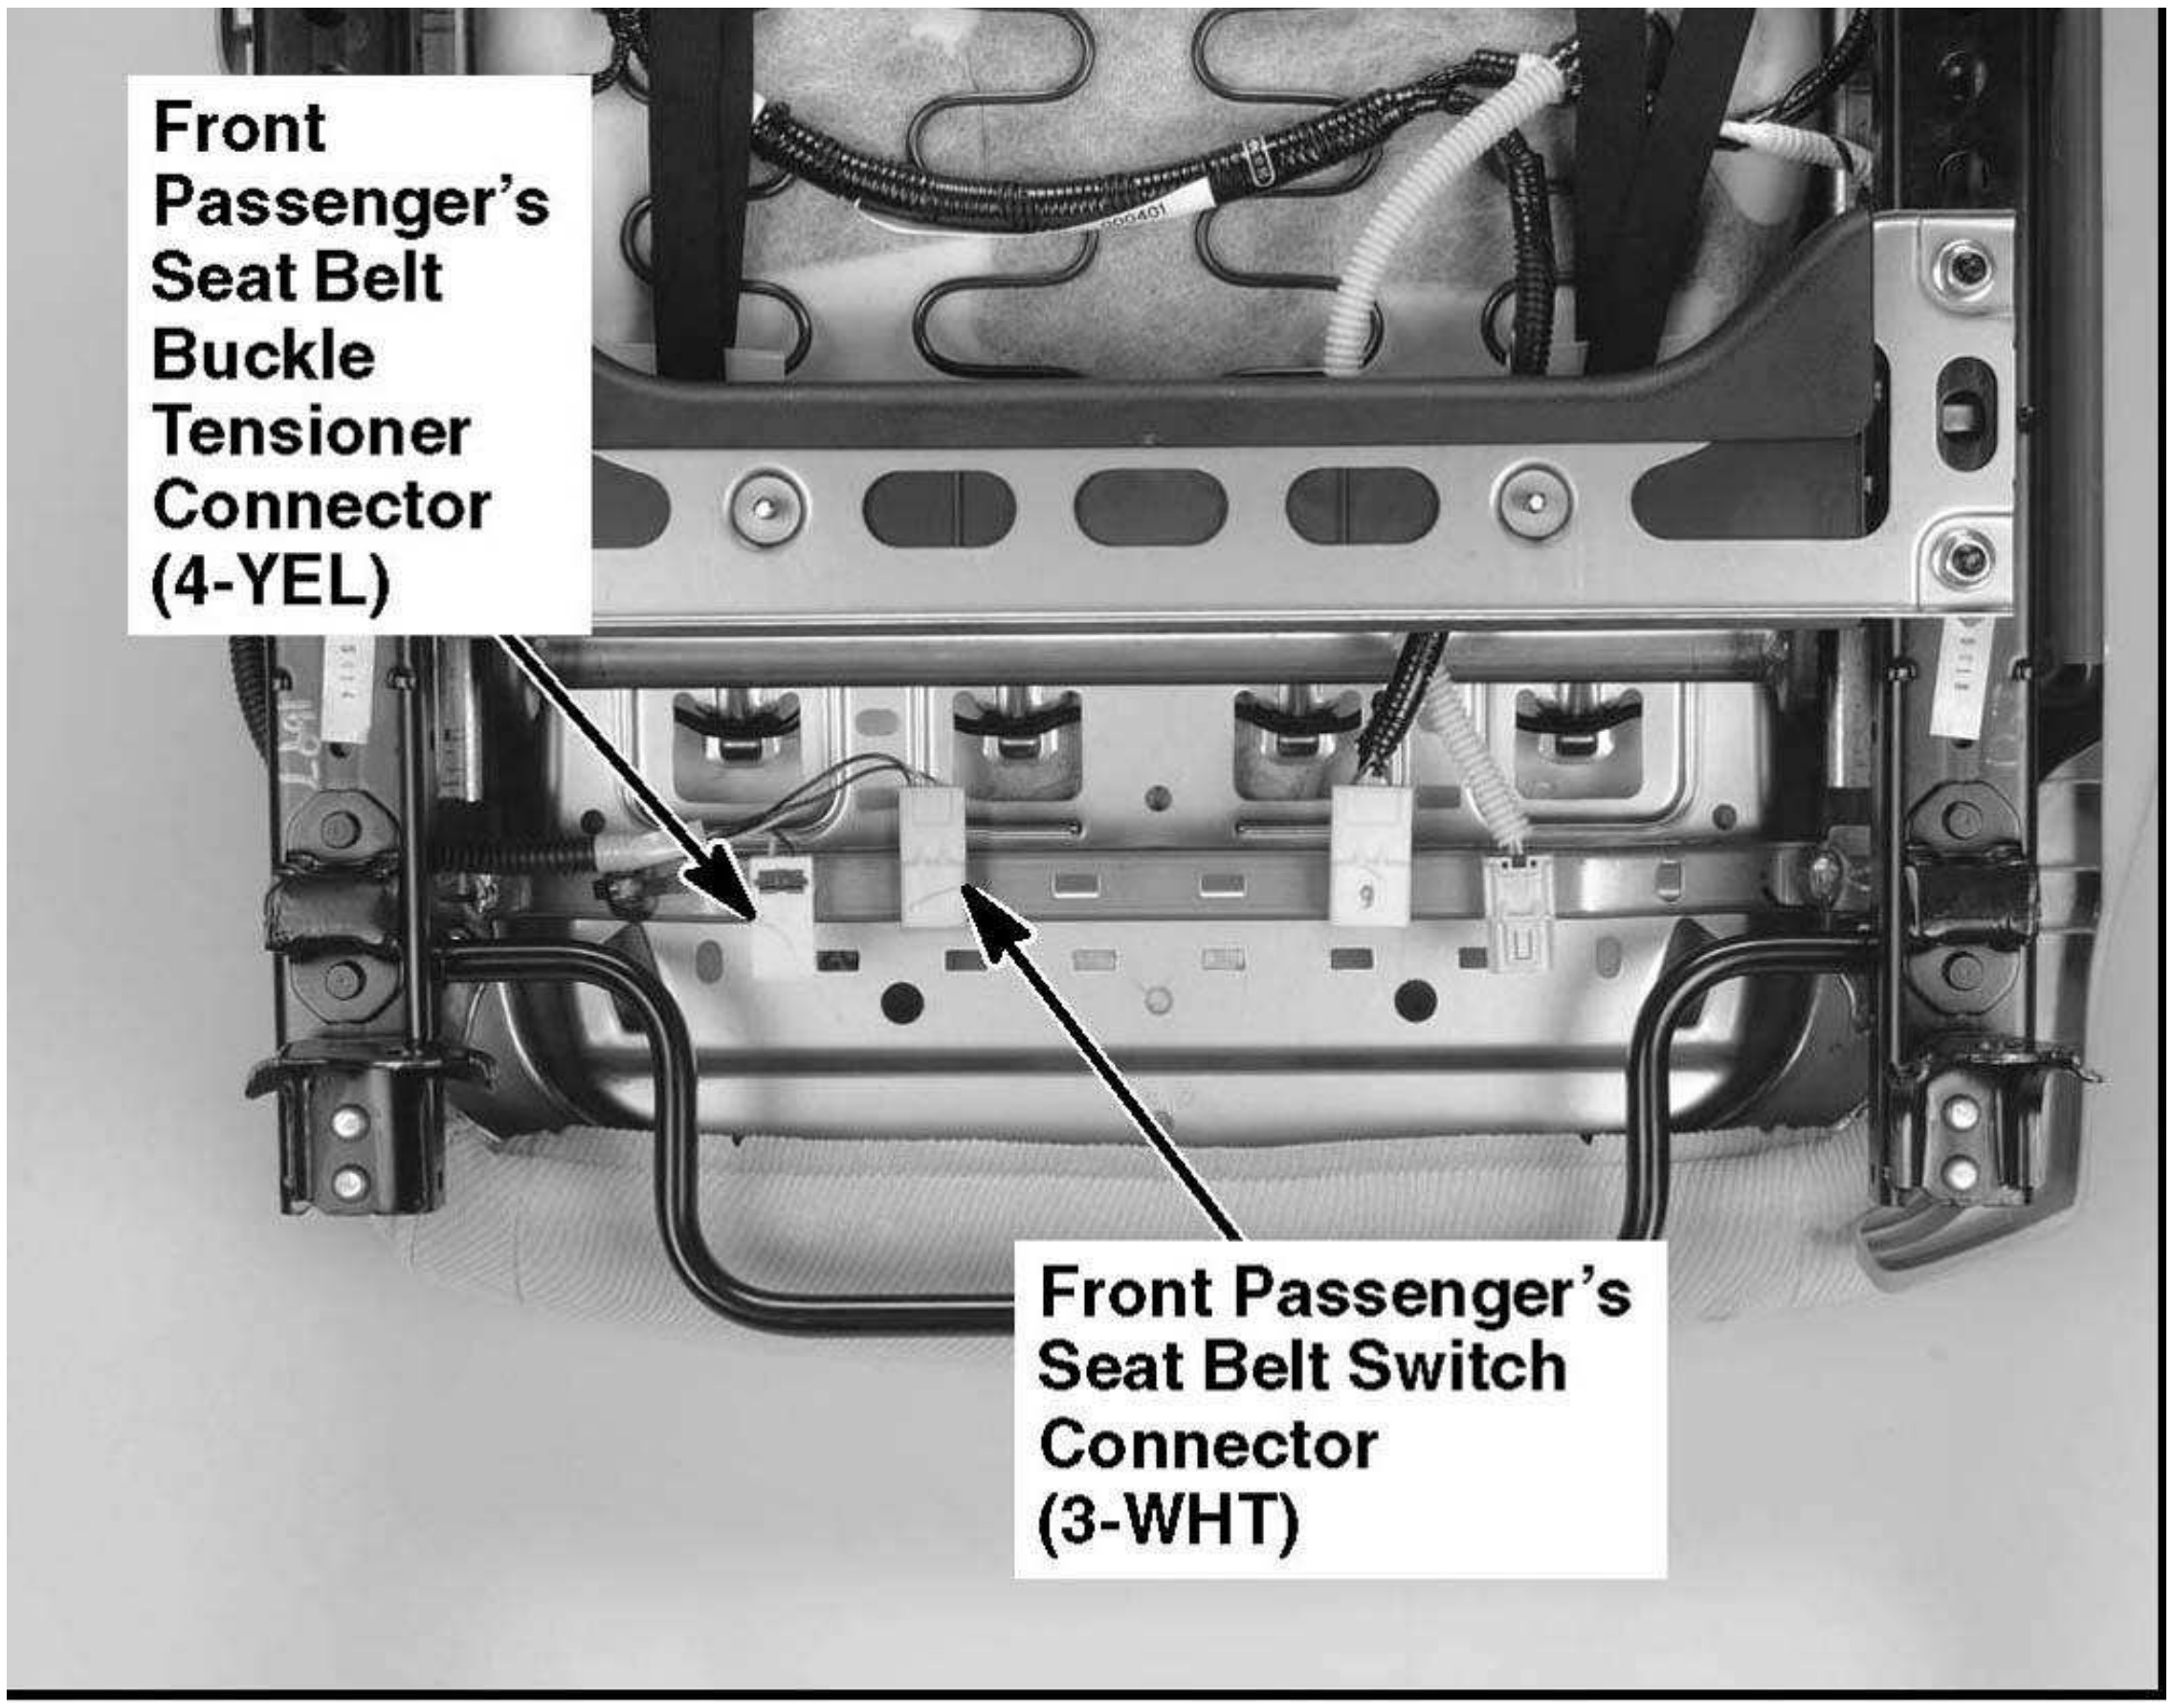
Front Passenger's Seat Belt Buckle Tensioner Connector (4-YEL)
Front Passenger's Seat Belt Switch Connector (3-WHT)
G00434429

Fig. 87: Under Front Passenger's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

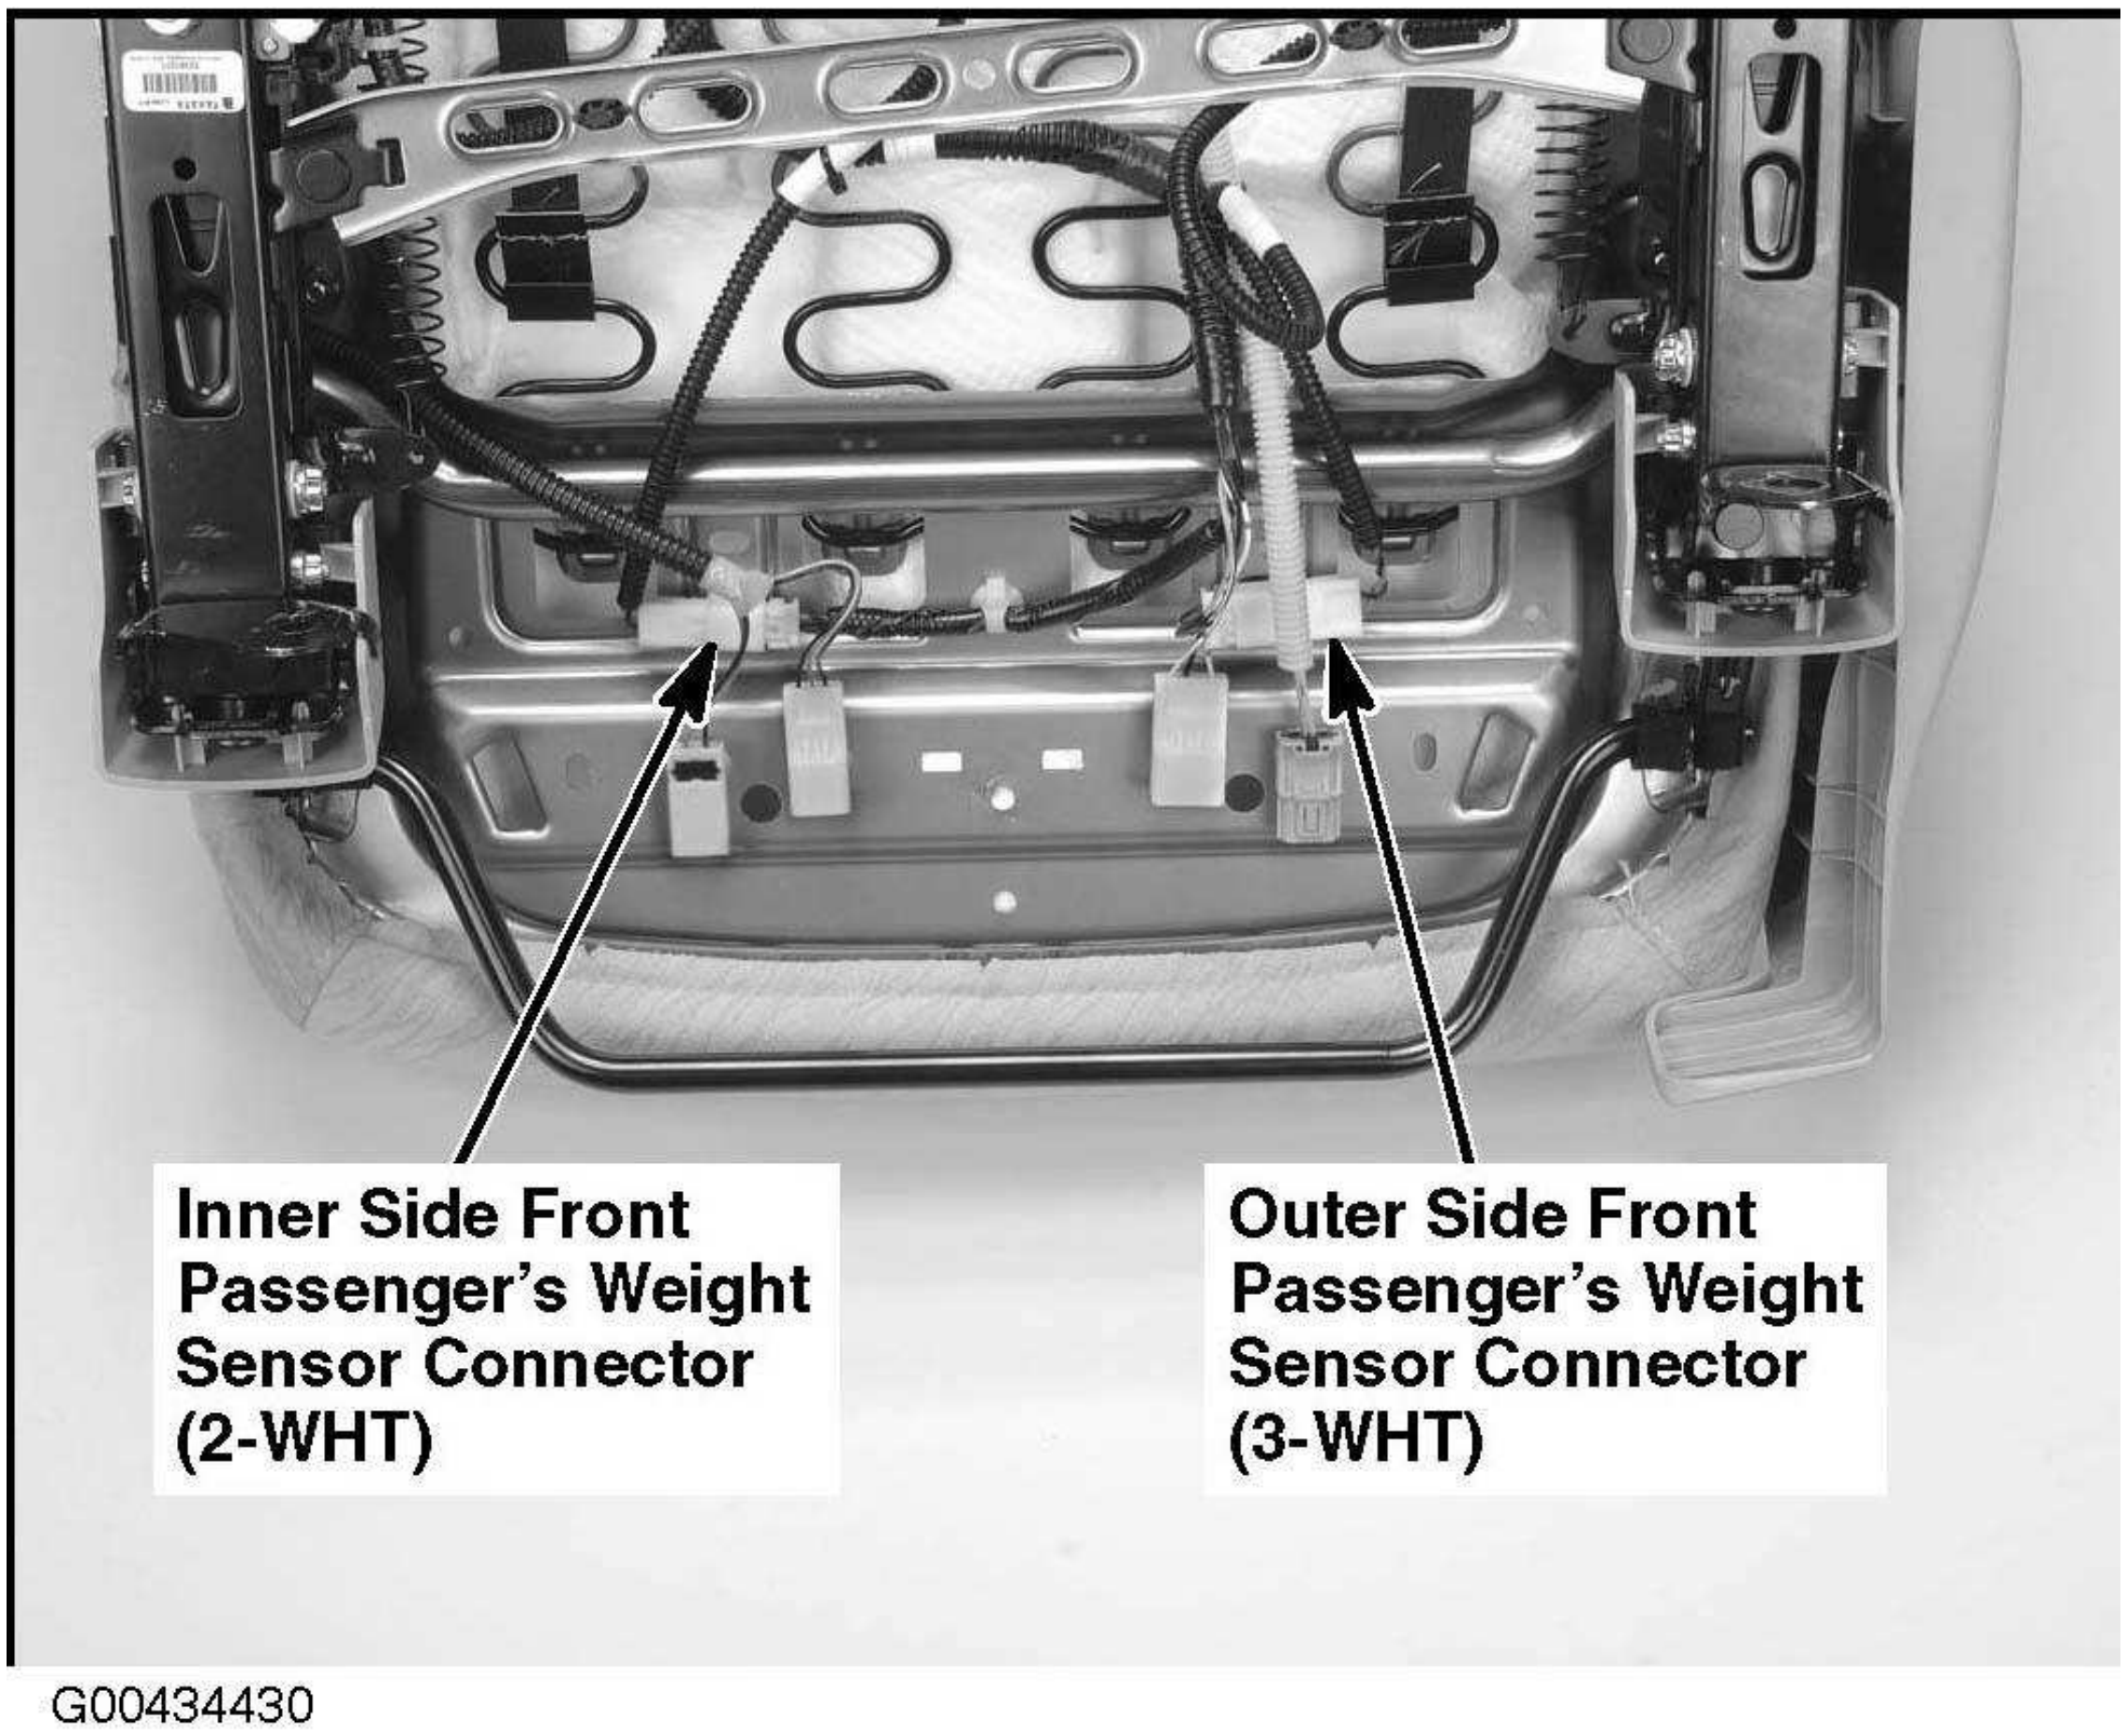
Inner Side Front Passenger's Weight Sensor Connector (2-WHT)
Outer Side Front Passenger's Weight Sensor Connector (3-WHT)
G00434430

Fig. 88: Under Front Passenger's Seat (2-Door)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

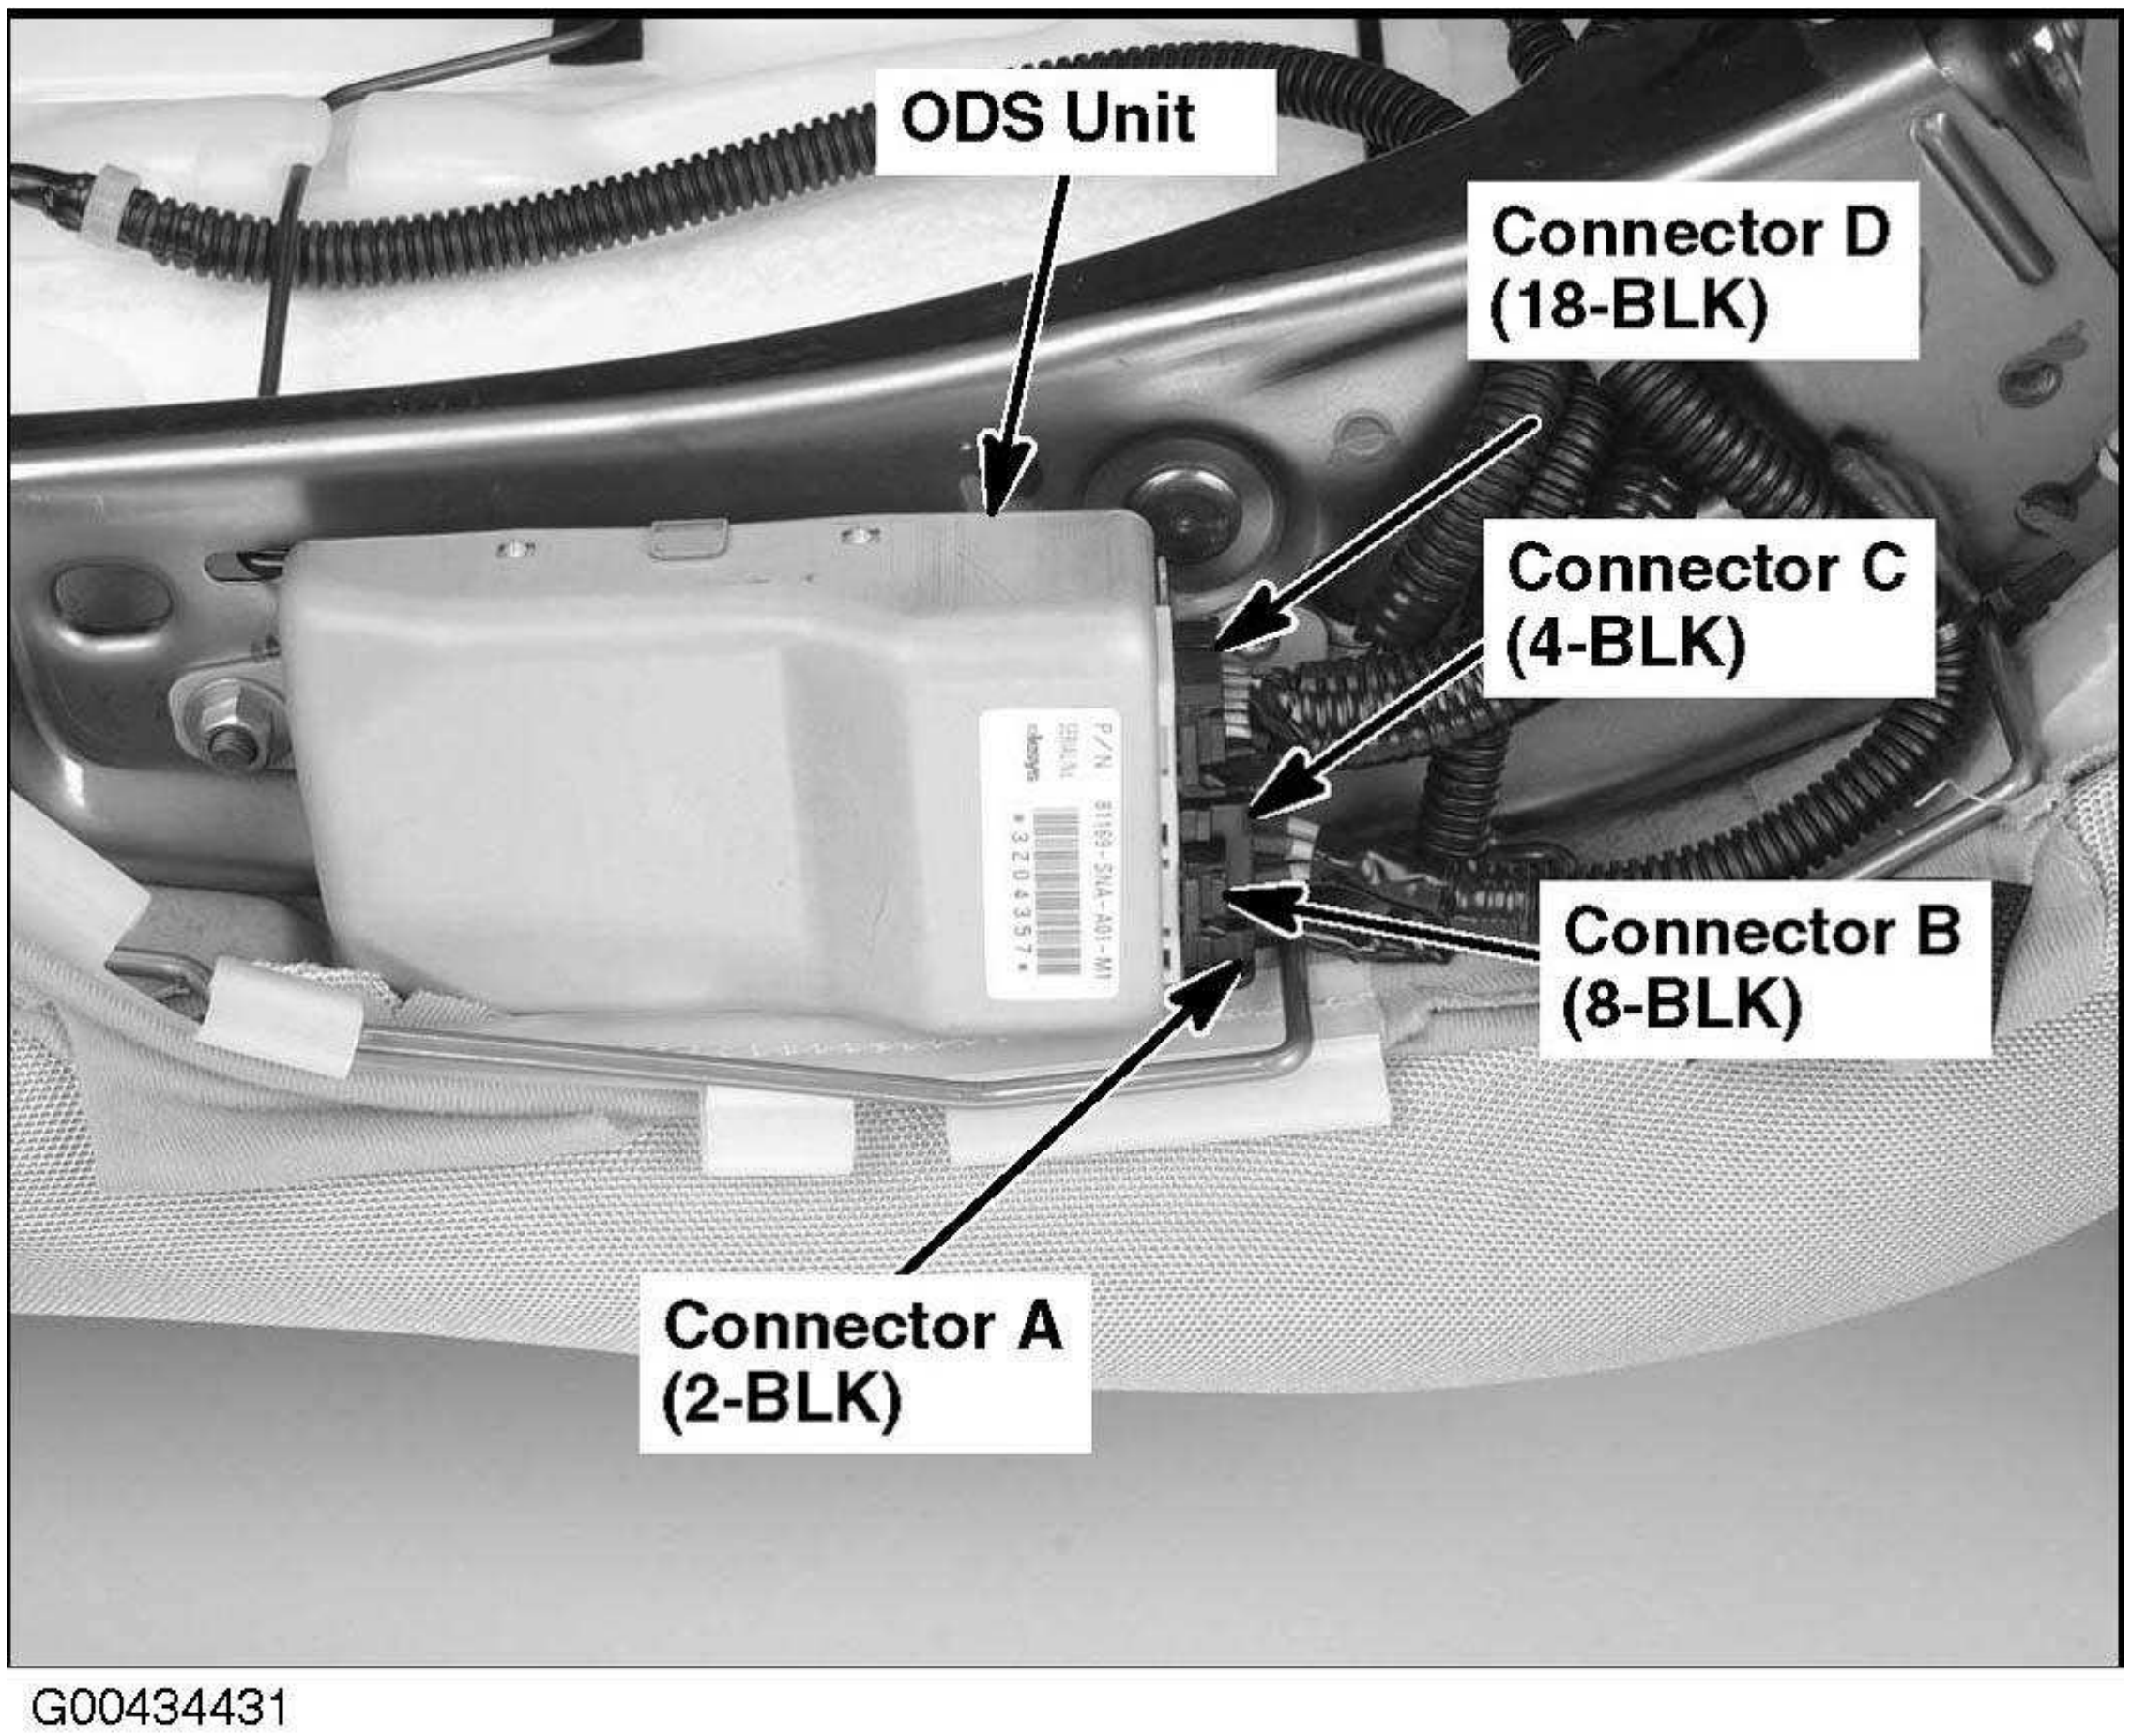
ODS Unit
Connector D (18-BLK)
Connector C (4-BLK)
Connector B (8-BLK)
Connector A (2-BLK)
G00434431

Fig. 89: Front Passenger's Seat Back
Courtesy of AMERICAN HONDA MOTOR CO., INC.

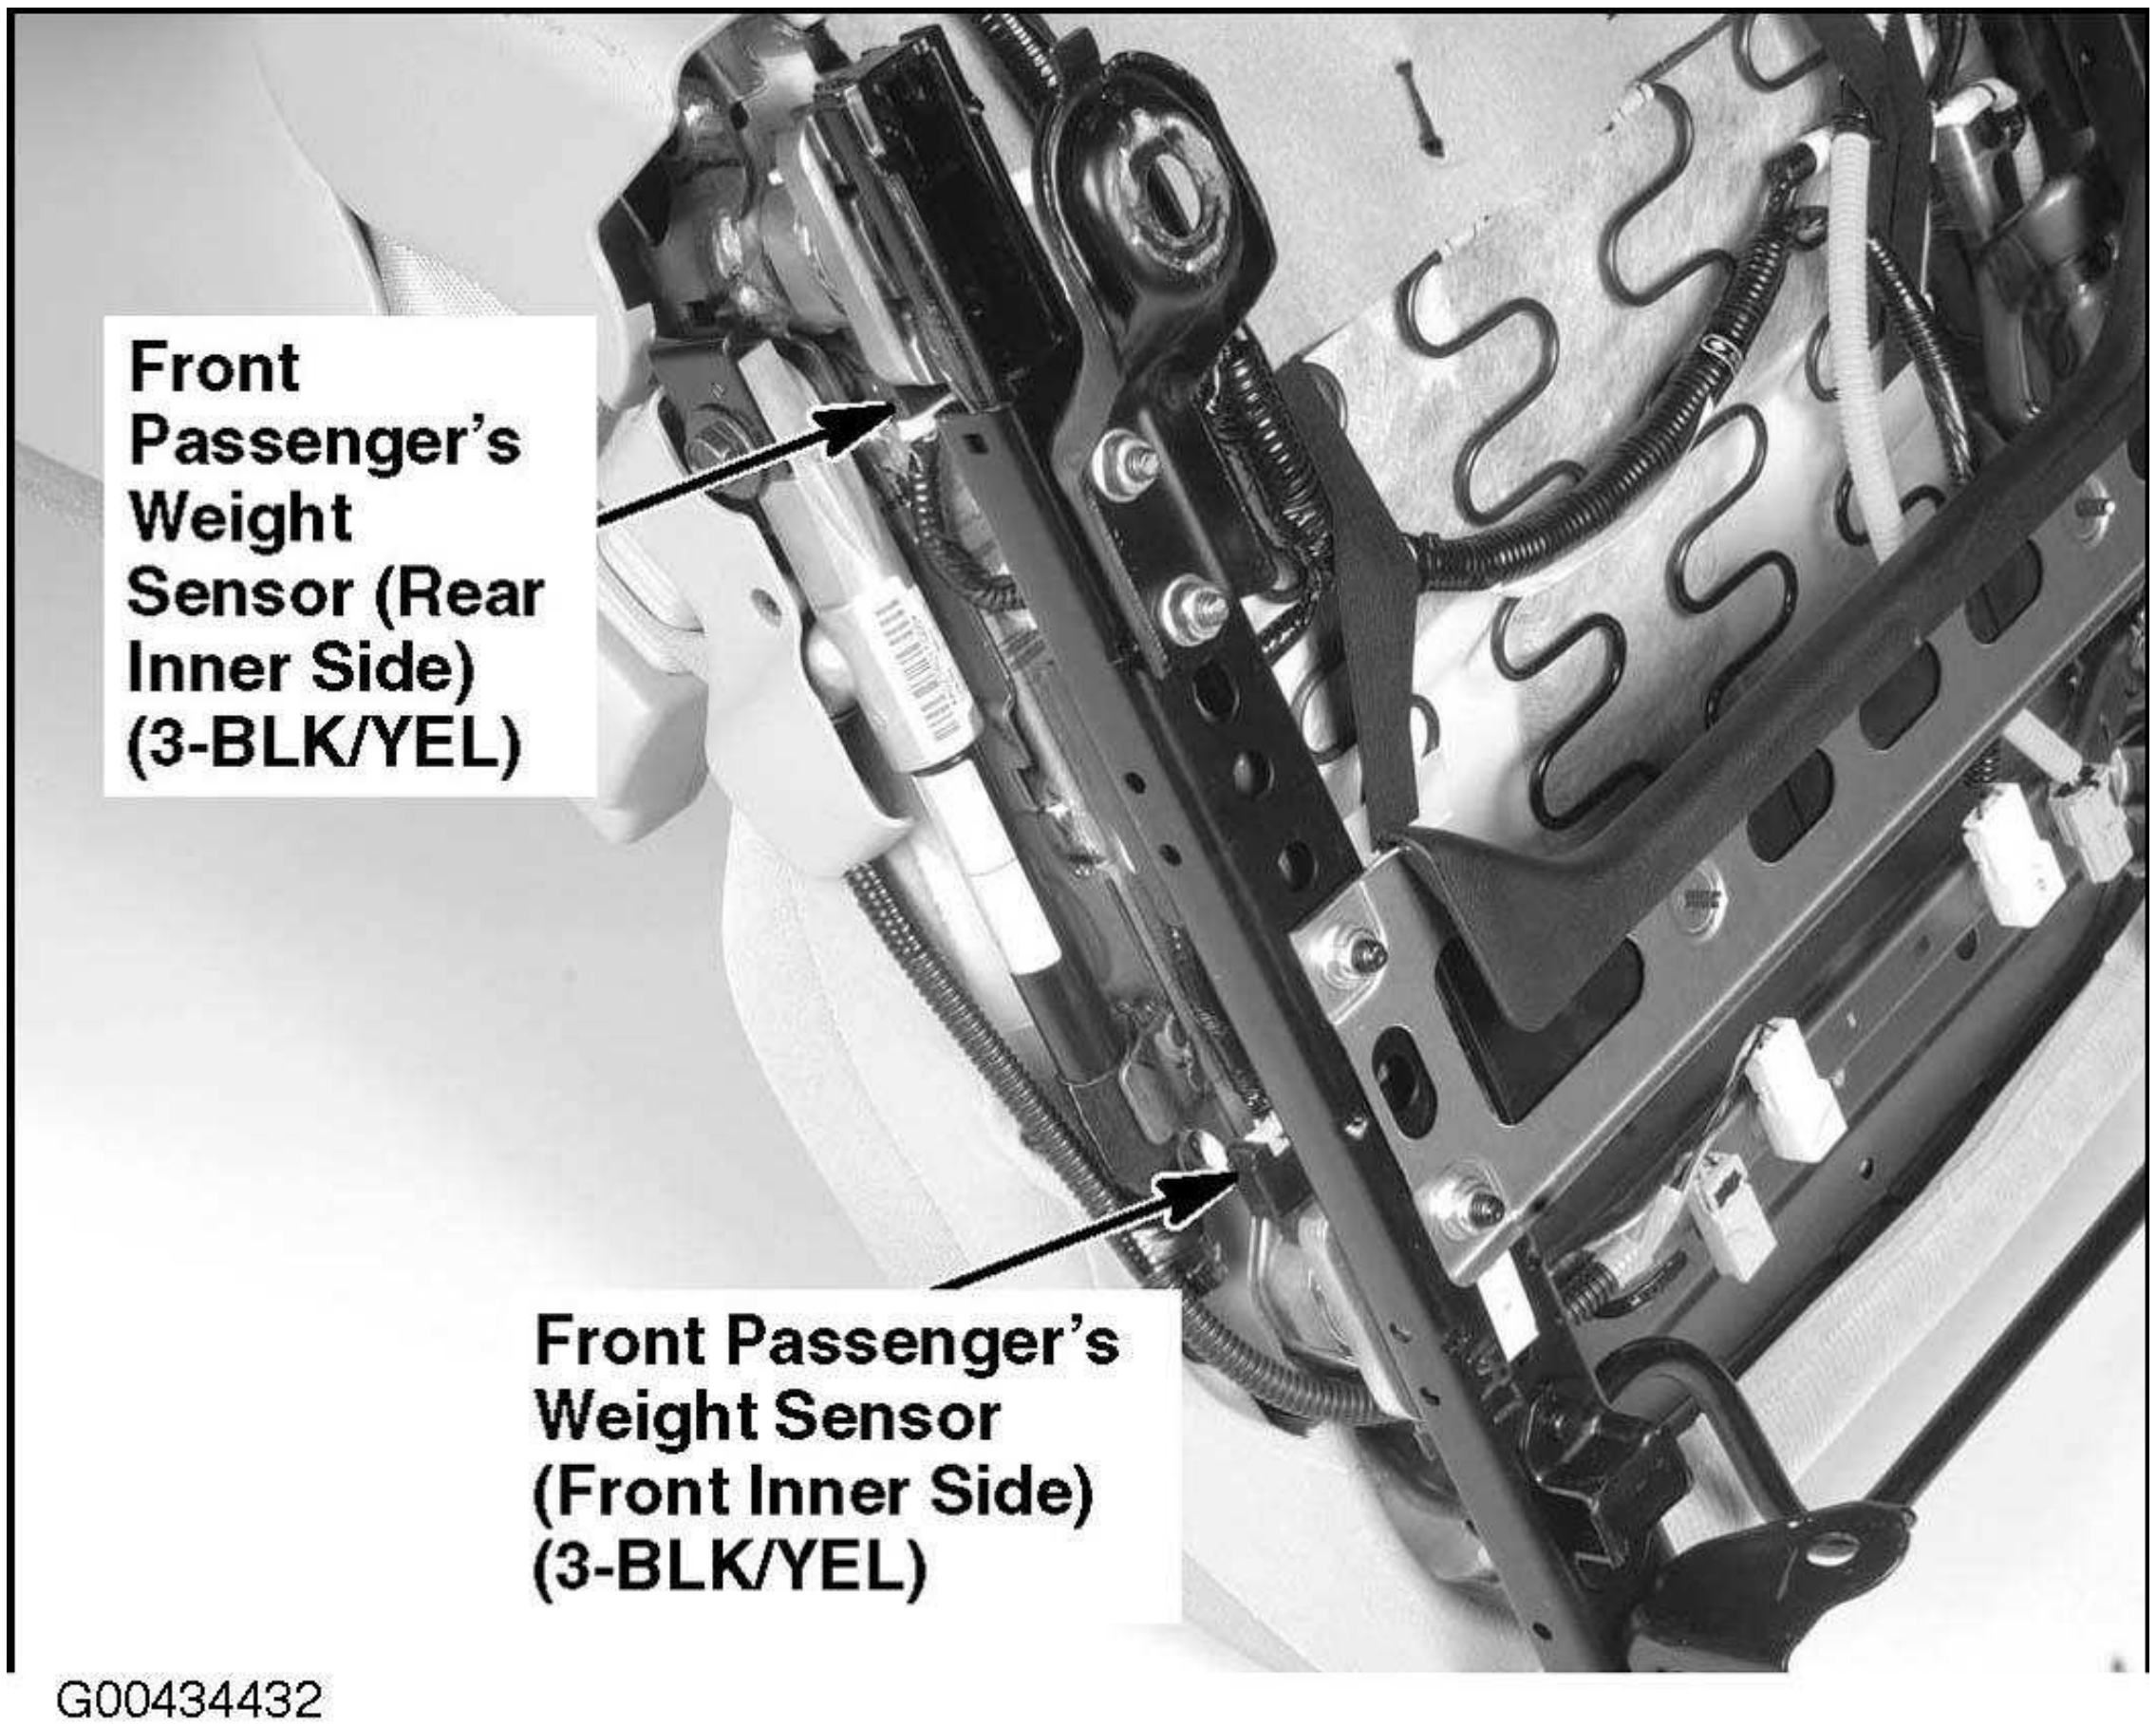
Front Passenger's Weight Sensor (Rear Inner Side) (3-BLK/YEL)
Front Passenger's Weight Sensor (Front Inner Side) (3-BLK/YEL)
G00434432

Fig. 90: Under Front Passenger's Seat (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

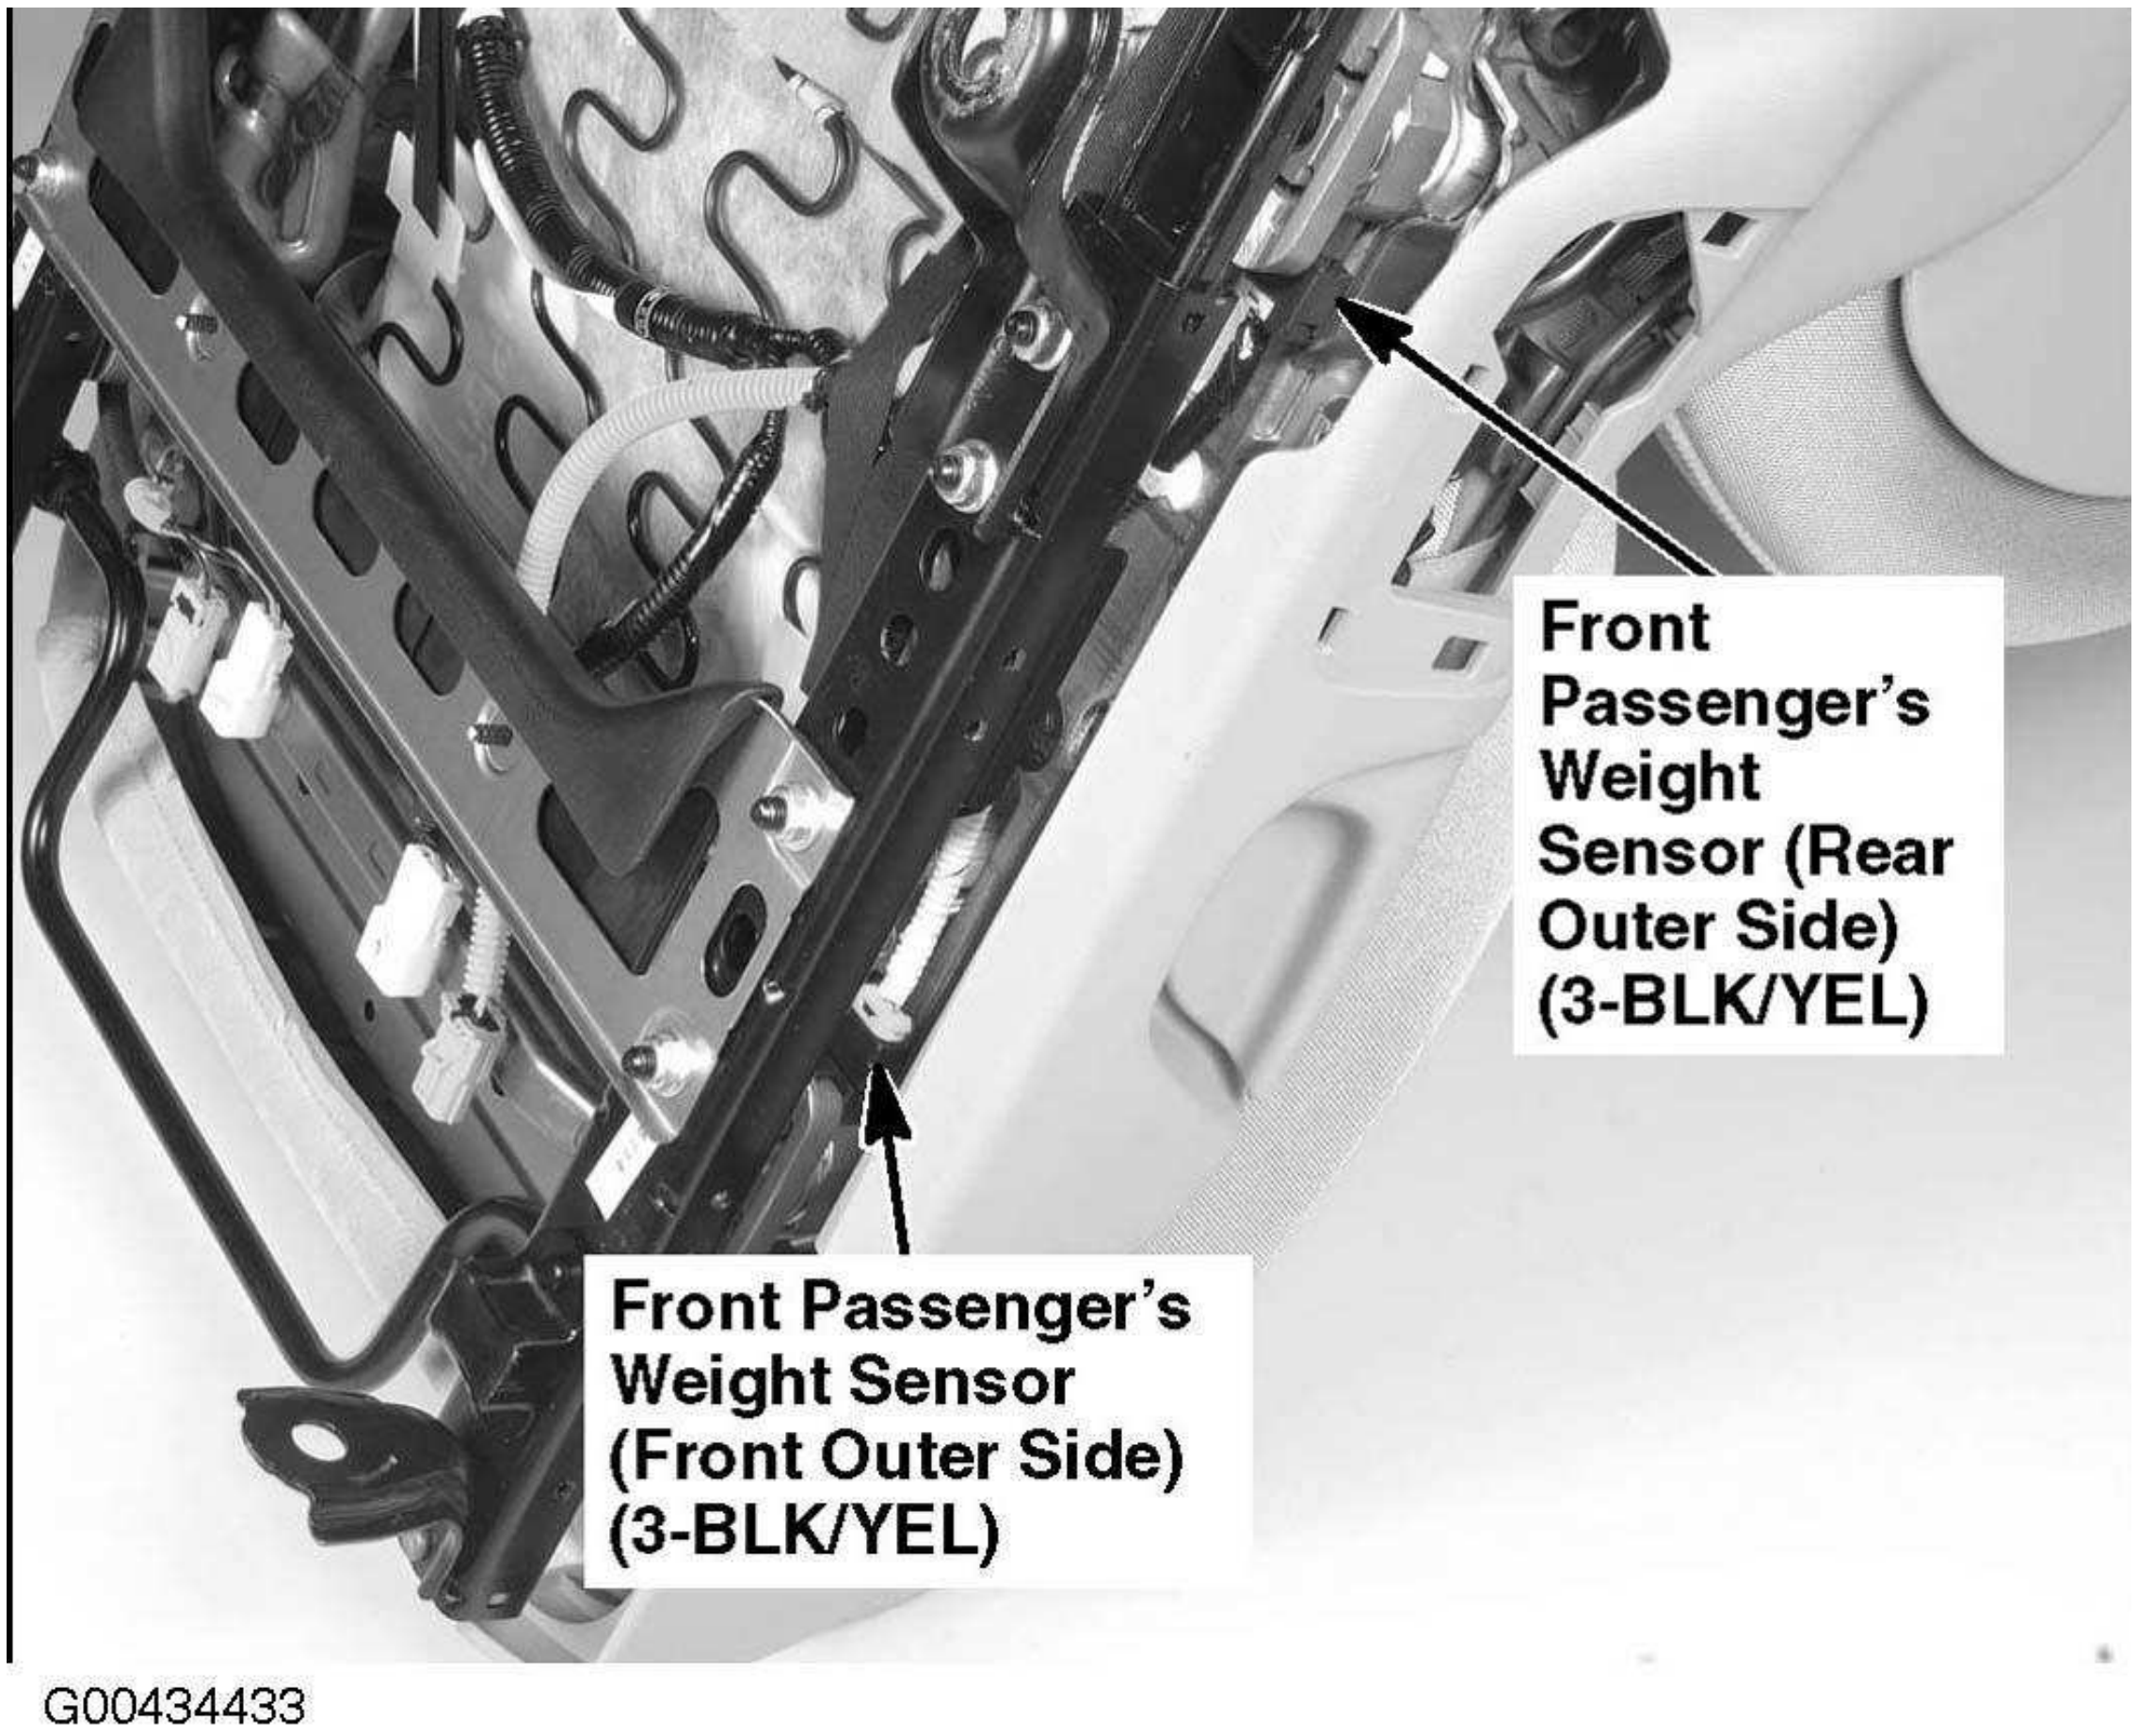
Front Passenger's Weight Sensor (Rear Outer Side) (3-BLK/YEL)
Front Passenger's Weight Sensor (Front Outer Side) (3-BLK/YEL)
G00434433

Fig. 91: Under Front Passenger's Seat (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

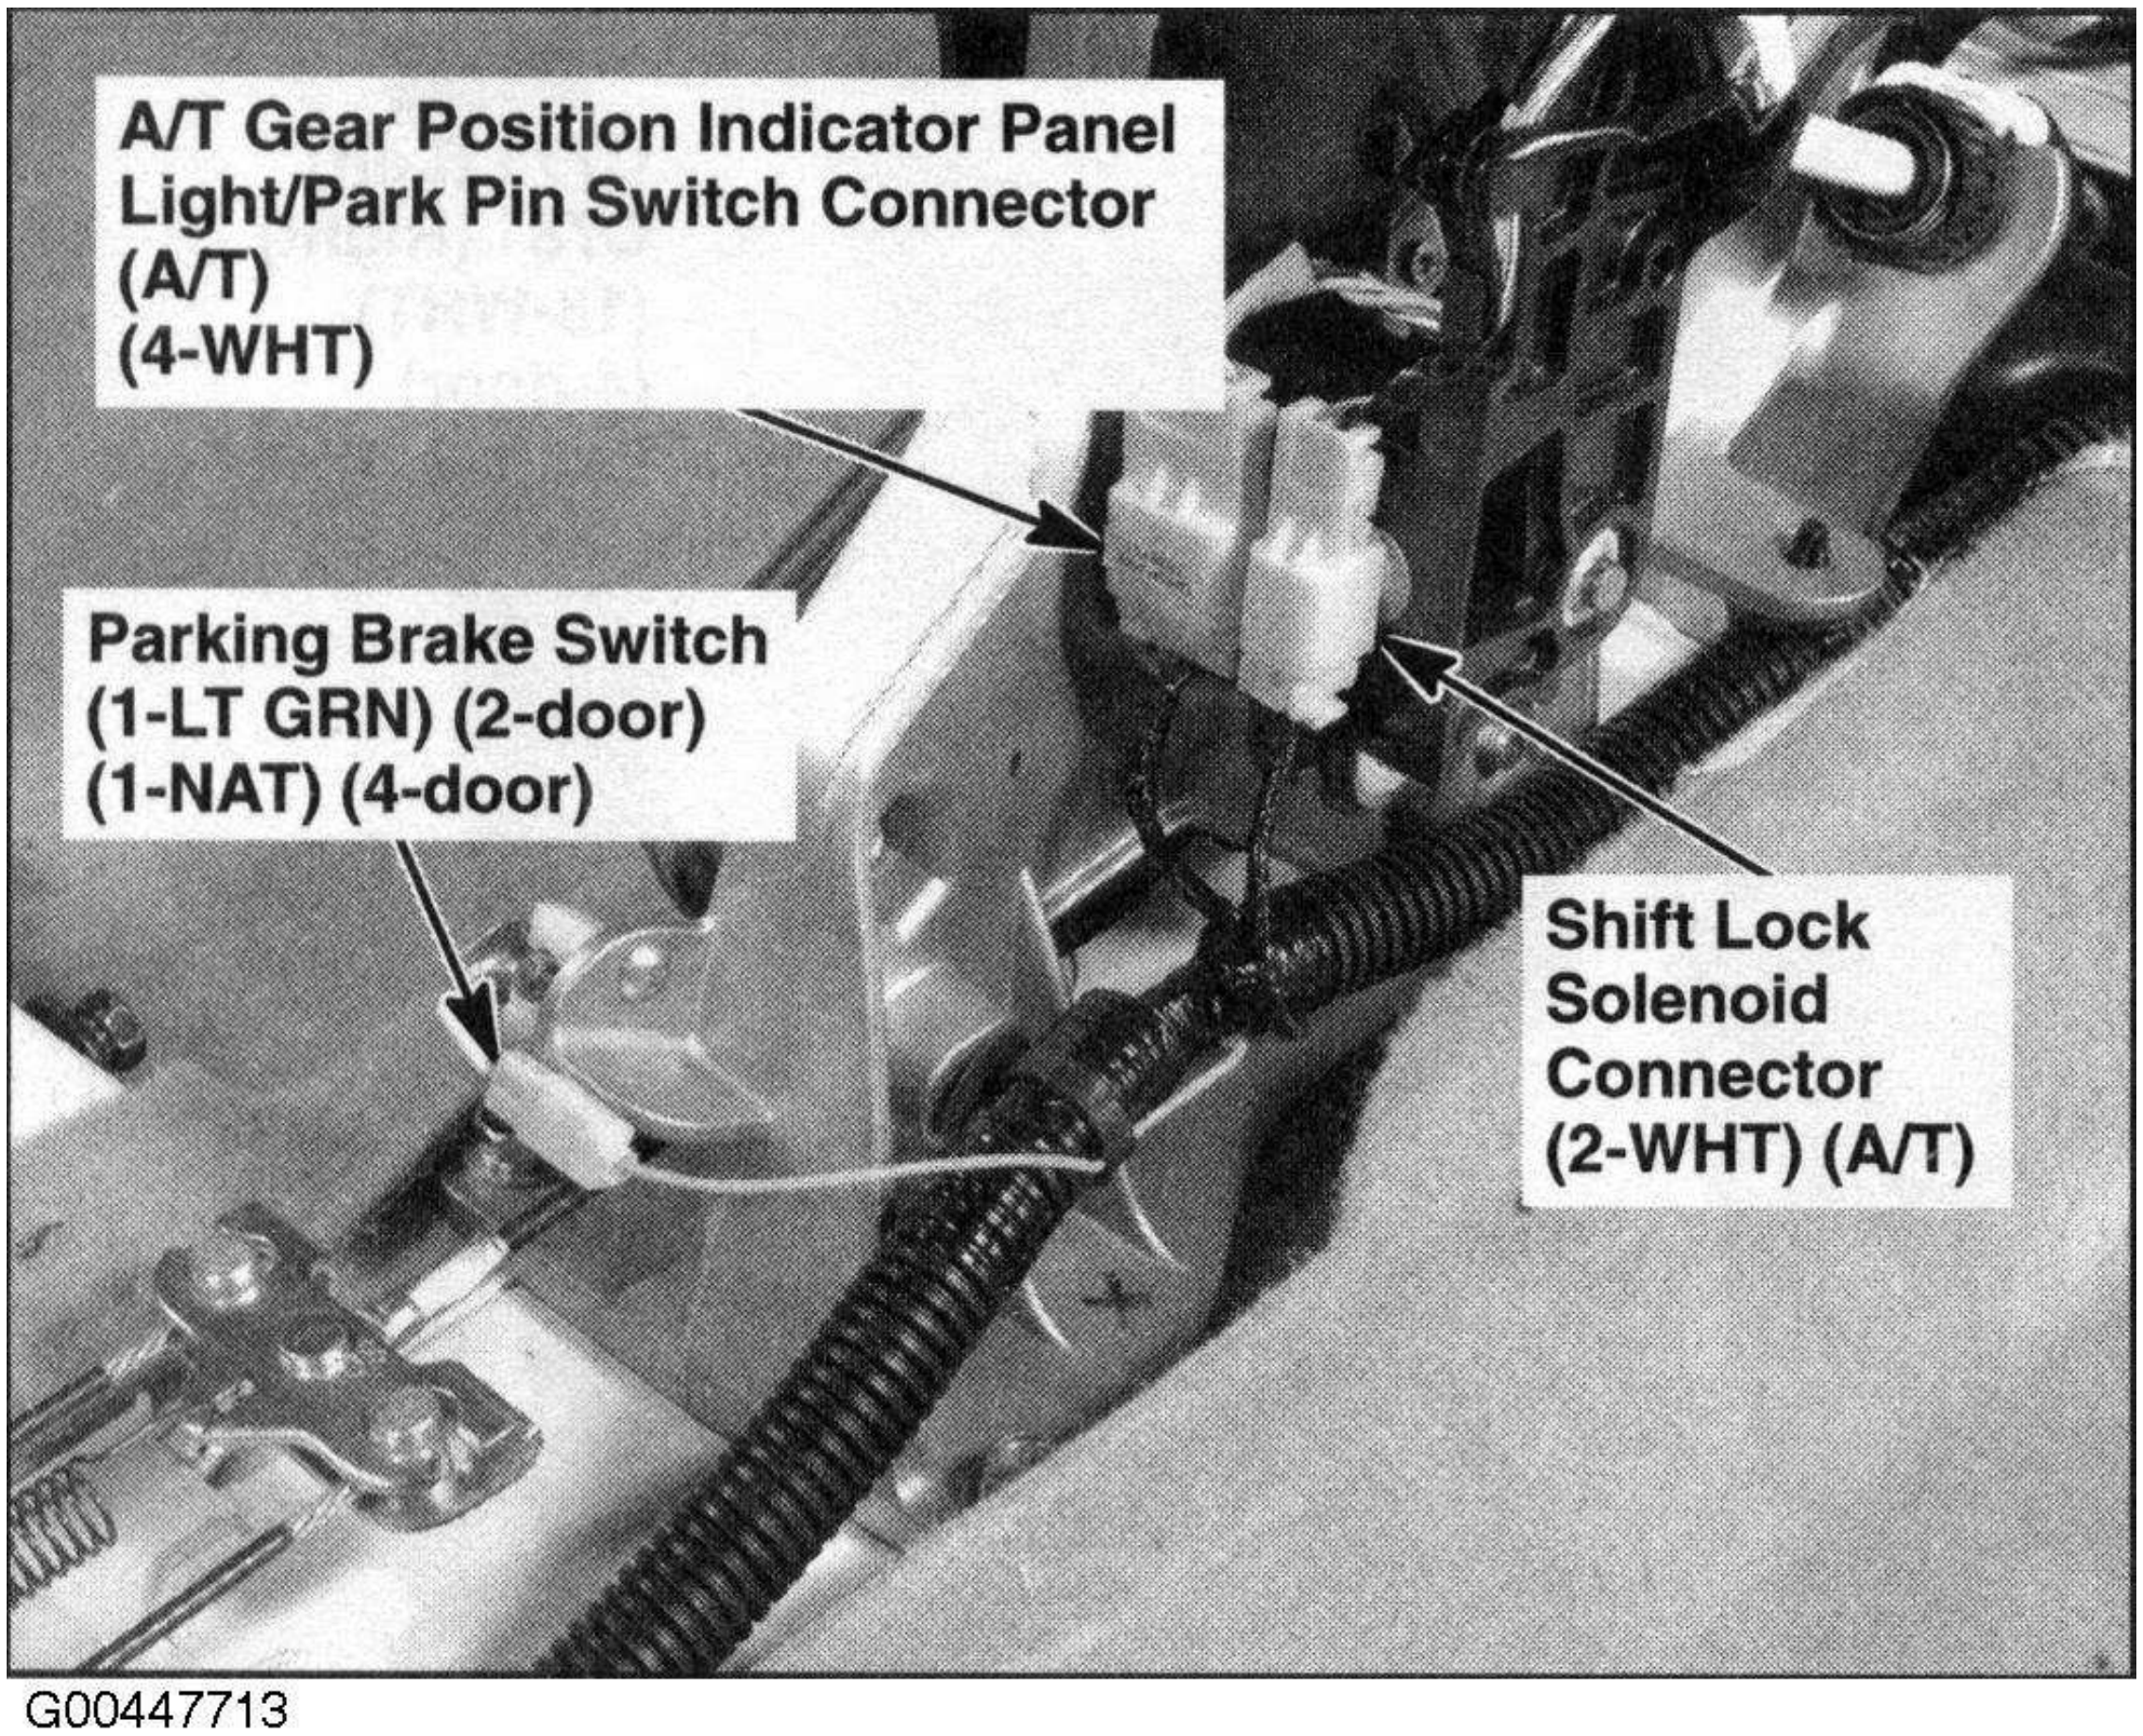
A/T Gear Position Indicator Panel Light/Park Pin Switch Connector
(A/T)
(4-WHT)
Parking Brake Switch
(1-LT GRN) (2-door)
(1-NAT) (4-door)
Shift Lock Solenoid Connector
(2-WHT) (A/T)
G00447713

Fig. 92: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

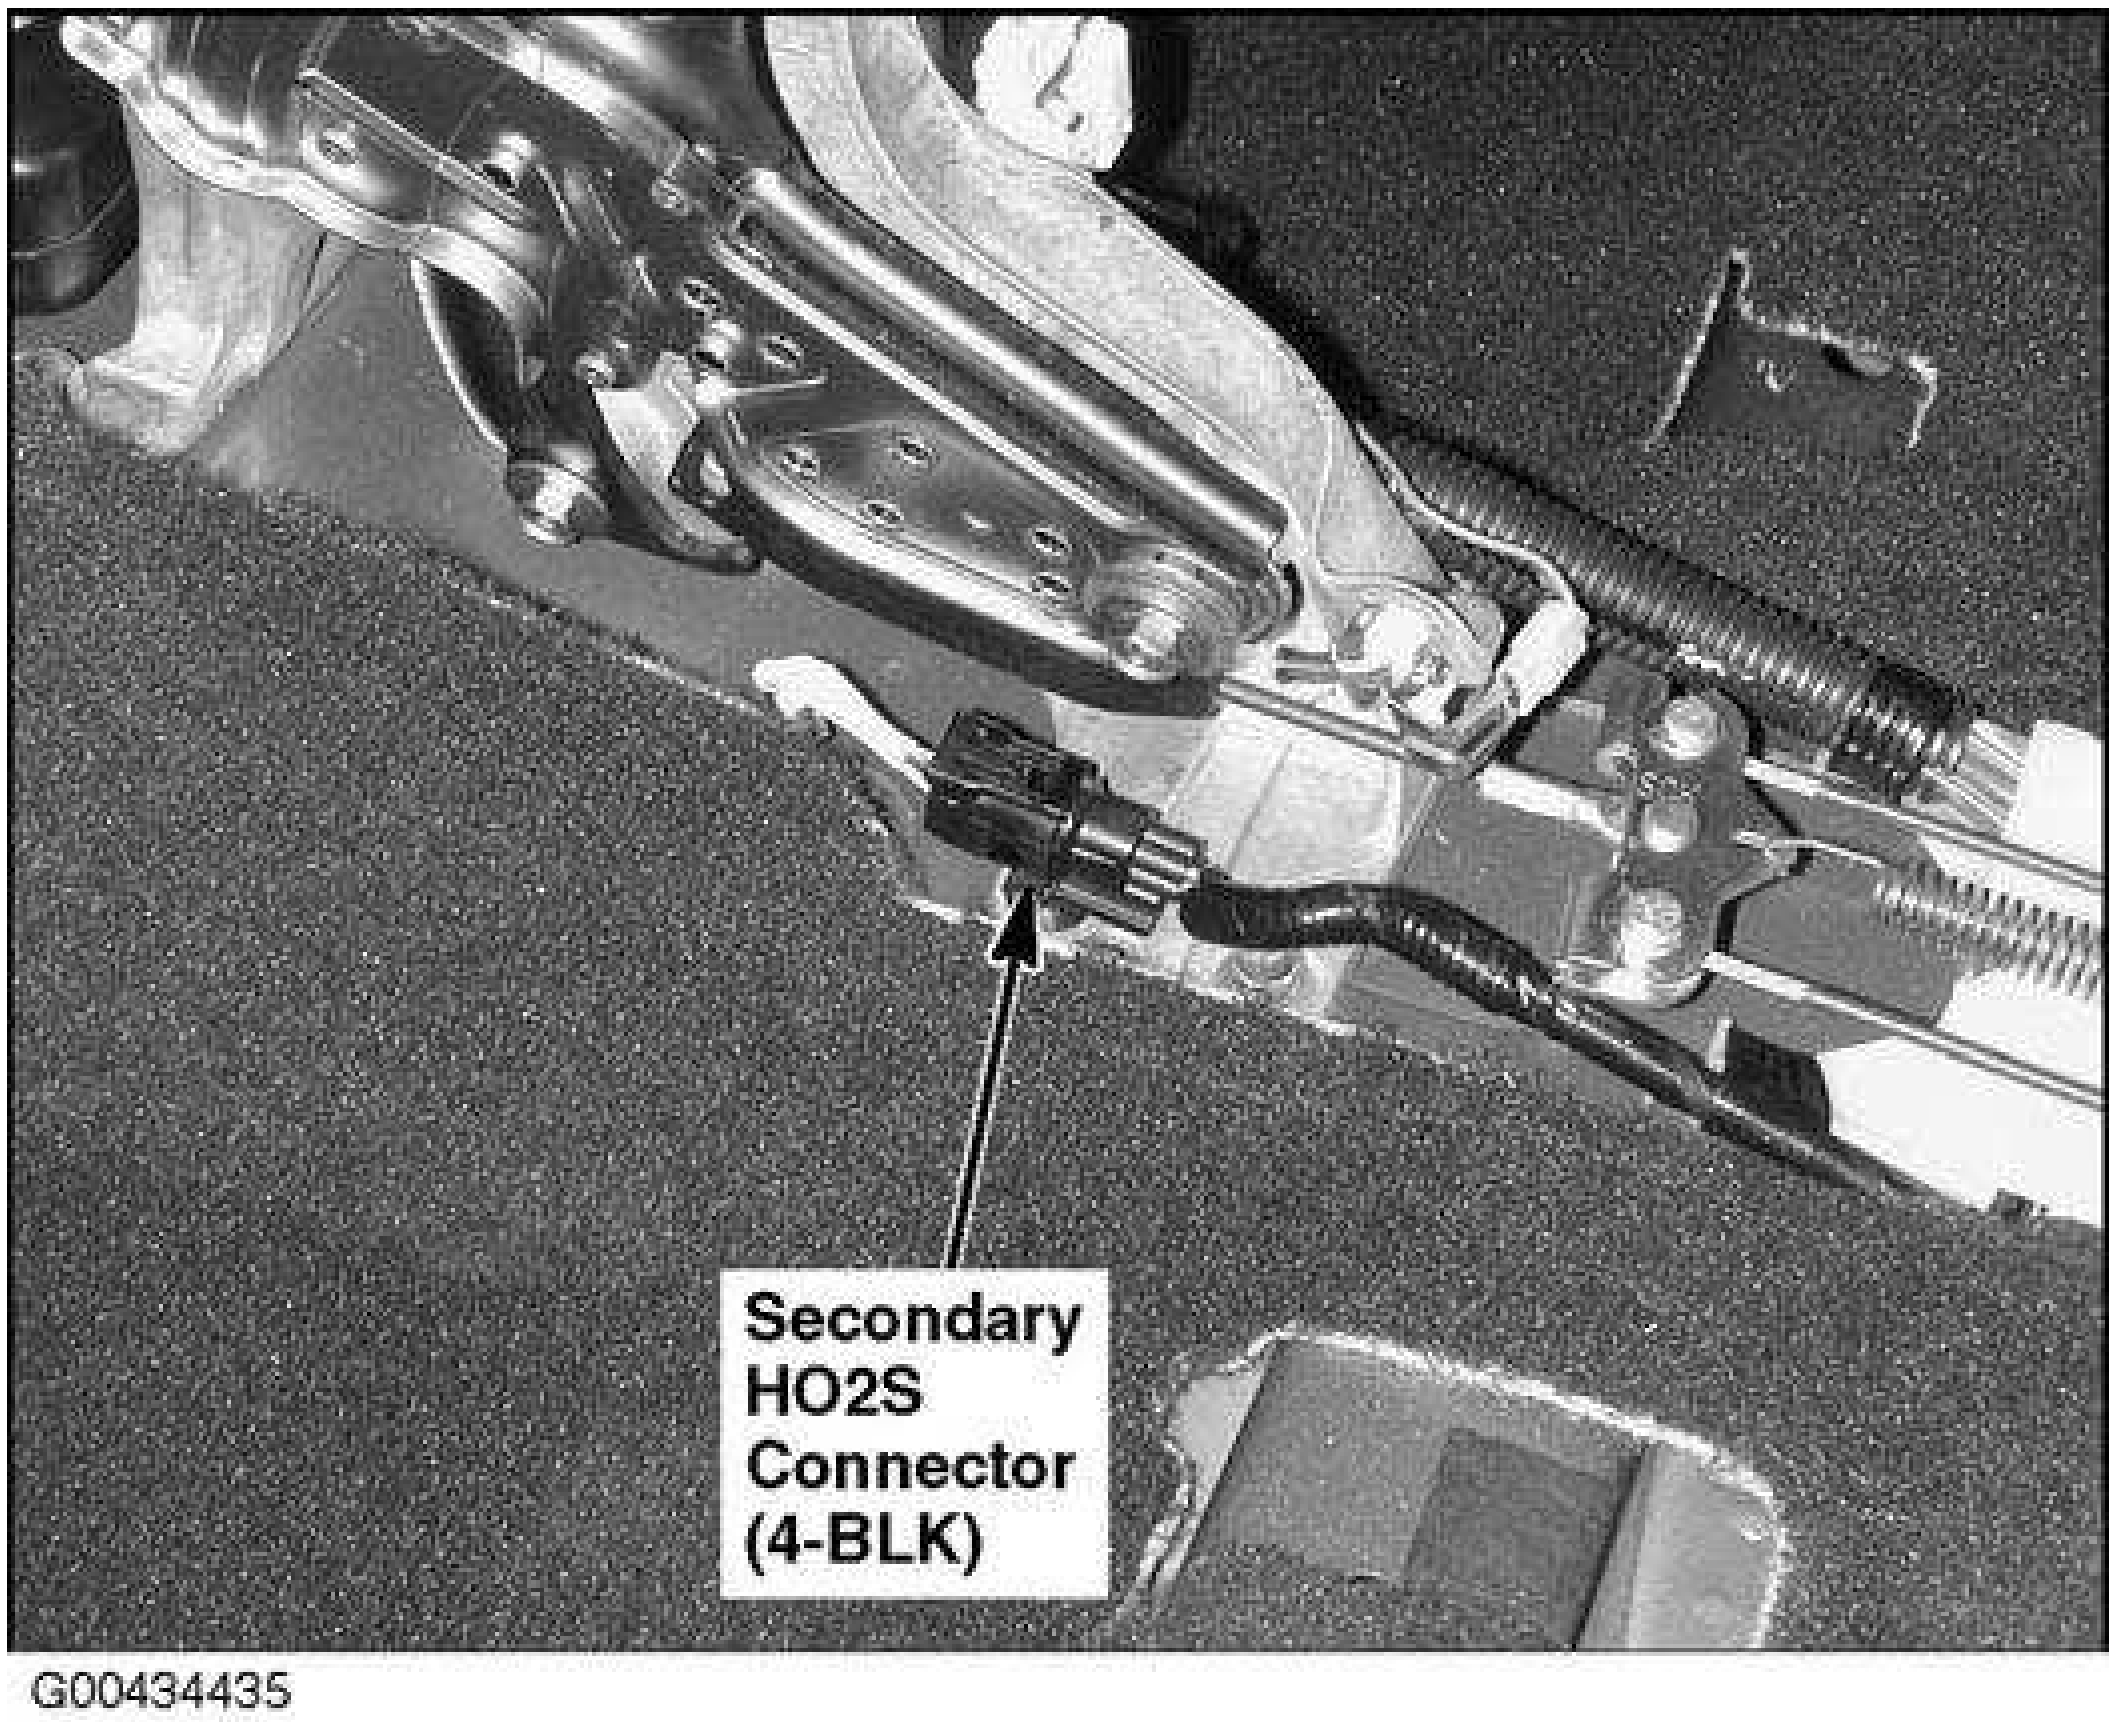
Secondary HO2S Connector (4-BLK)
G00434435

Fig. 93: Under Center Console (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

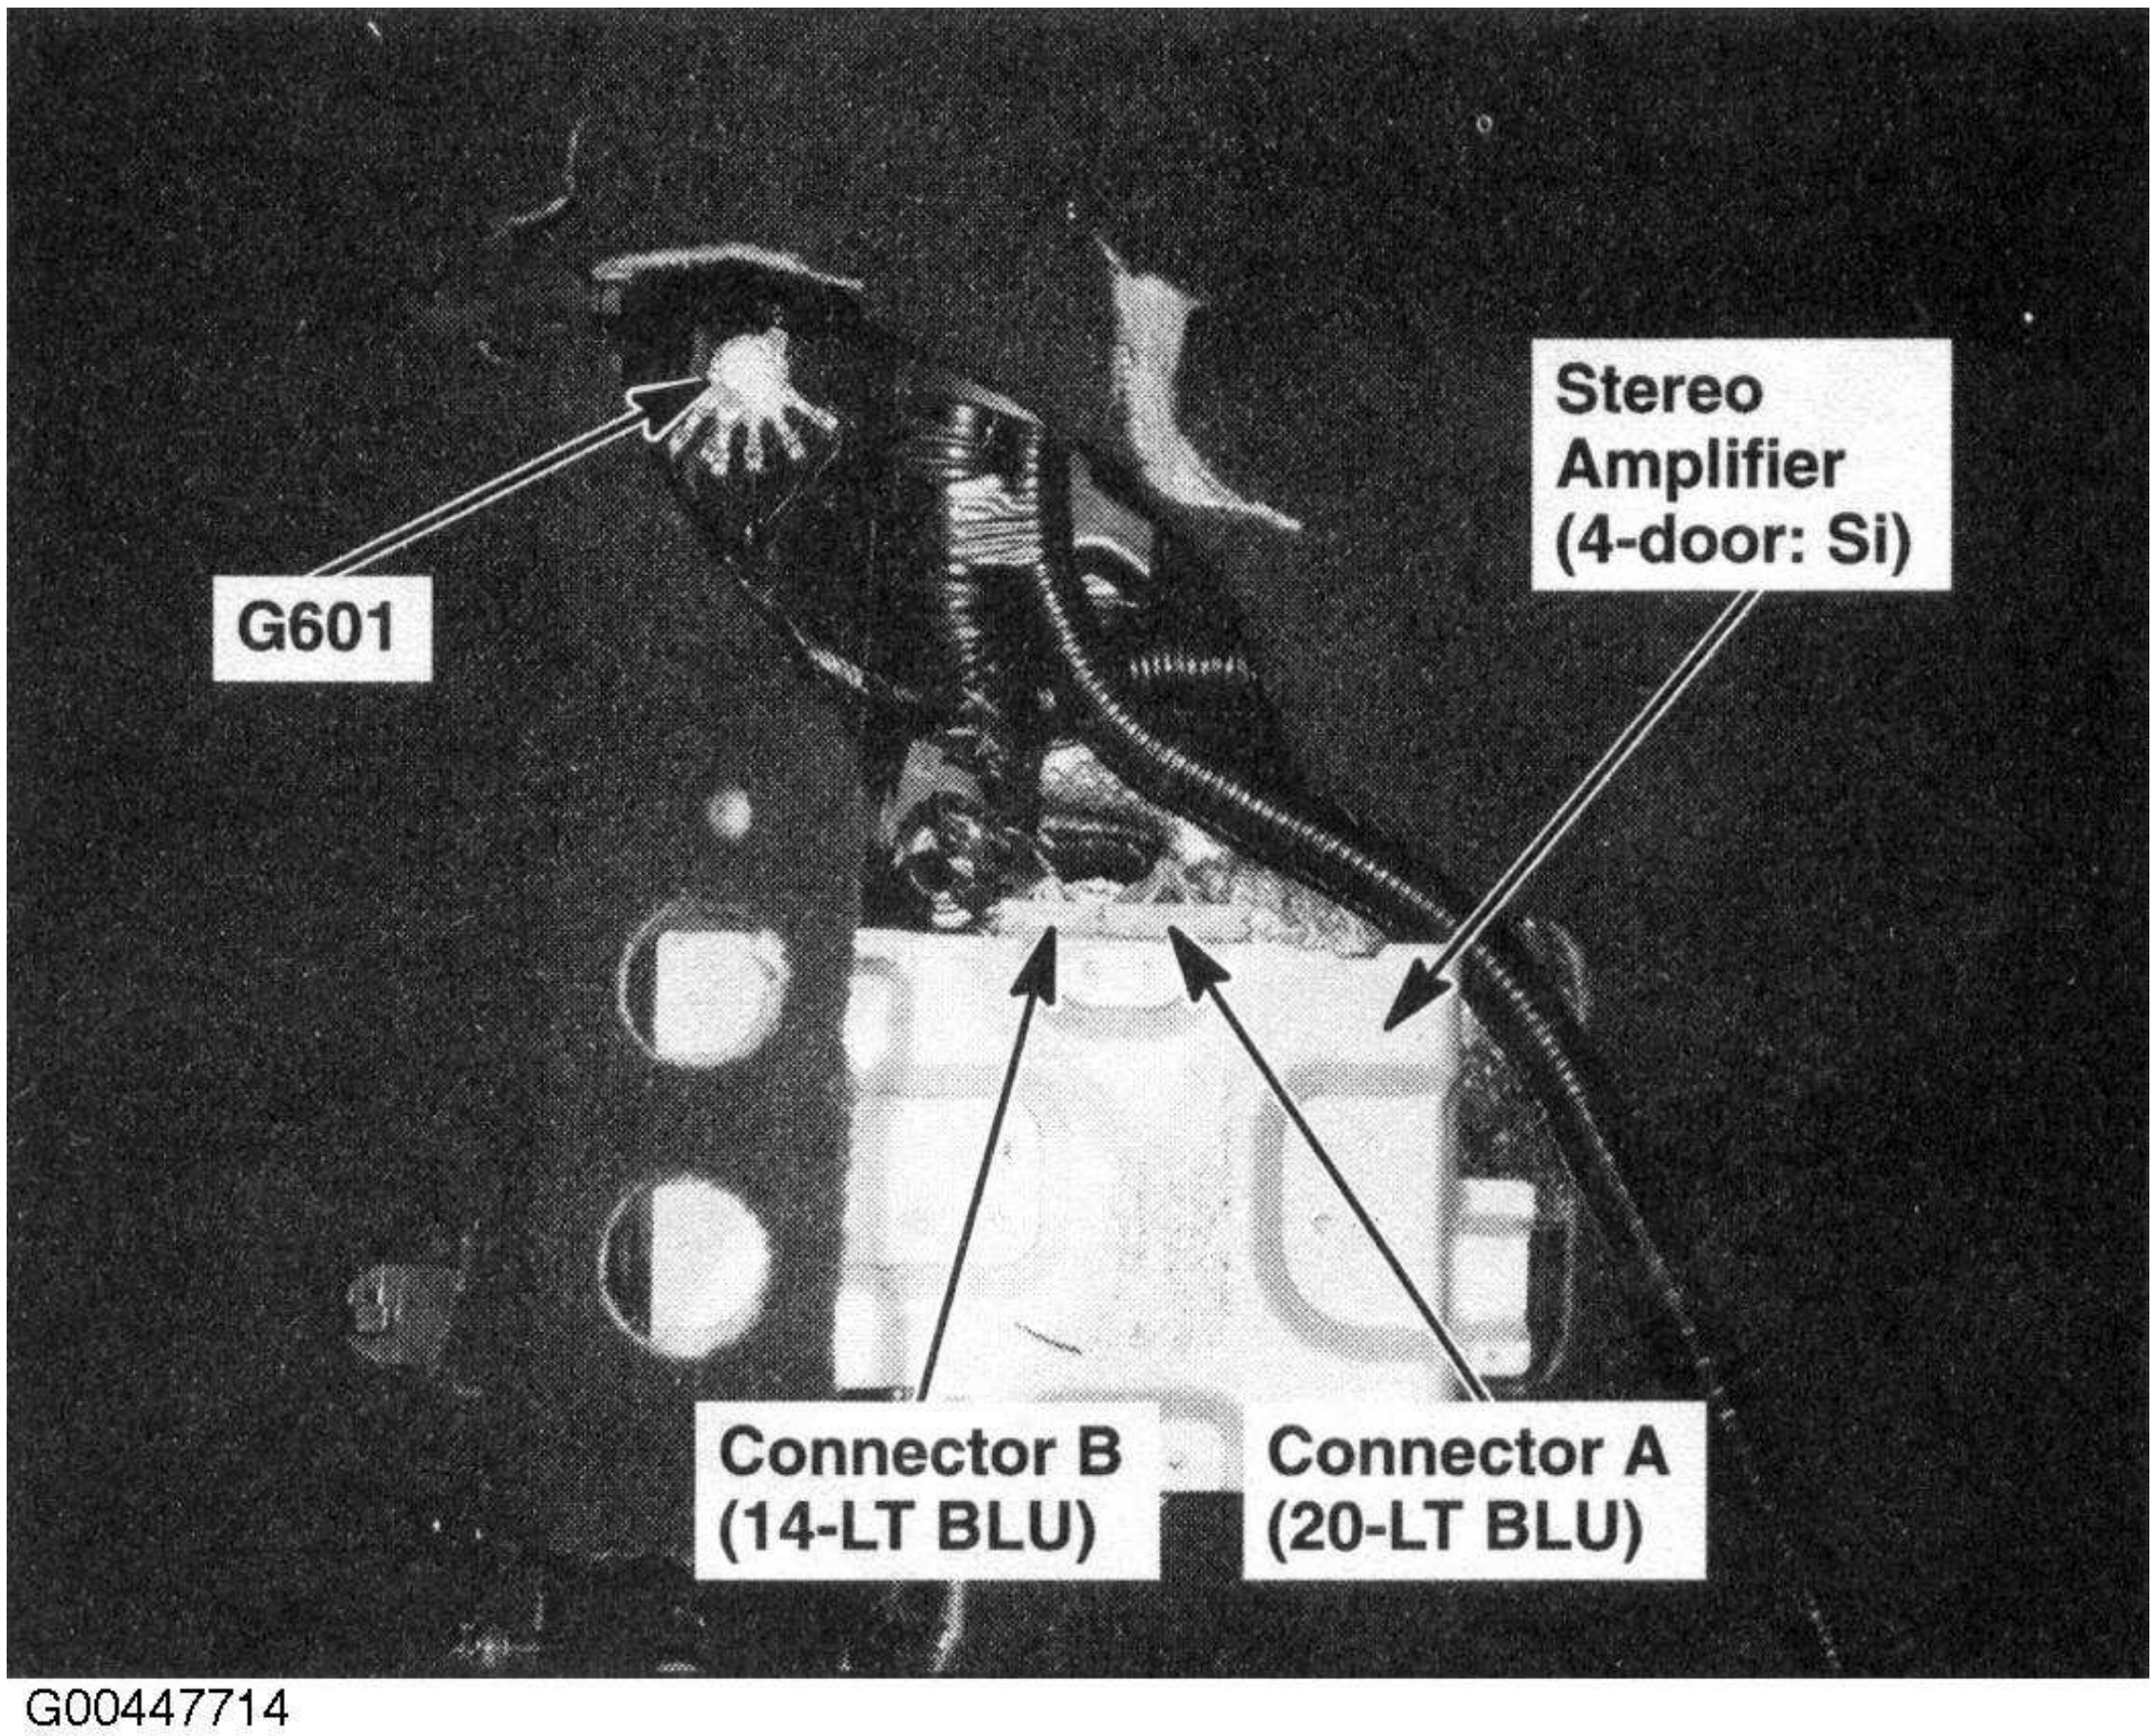
G601
Stereo Amplifier (4-door: Si)
Connector B (14-LT BLU)
Connector A (20-LT BLU)
G00447714

Fig. 94: Under Driver's Seat
Courtesy of AMERICAN HONDA MOTOR CO., INC.

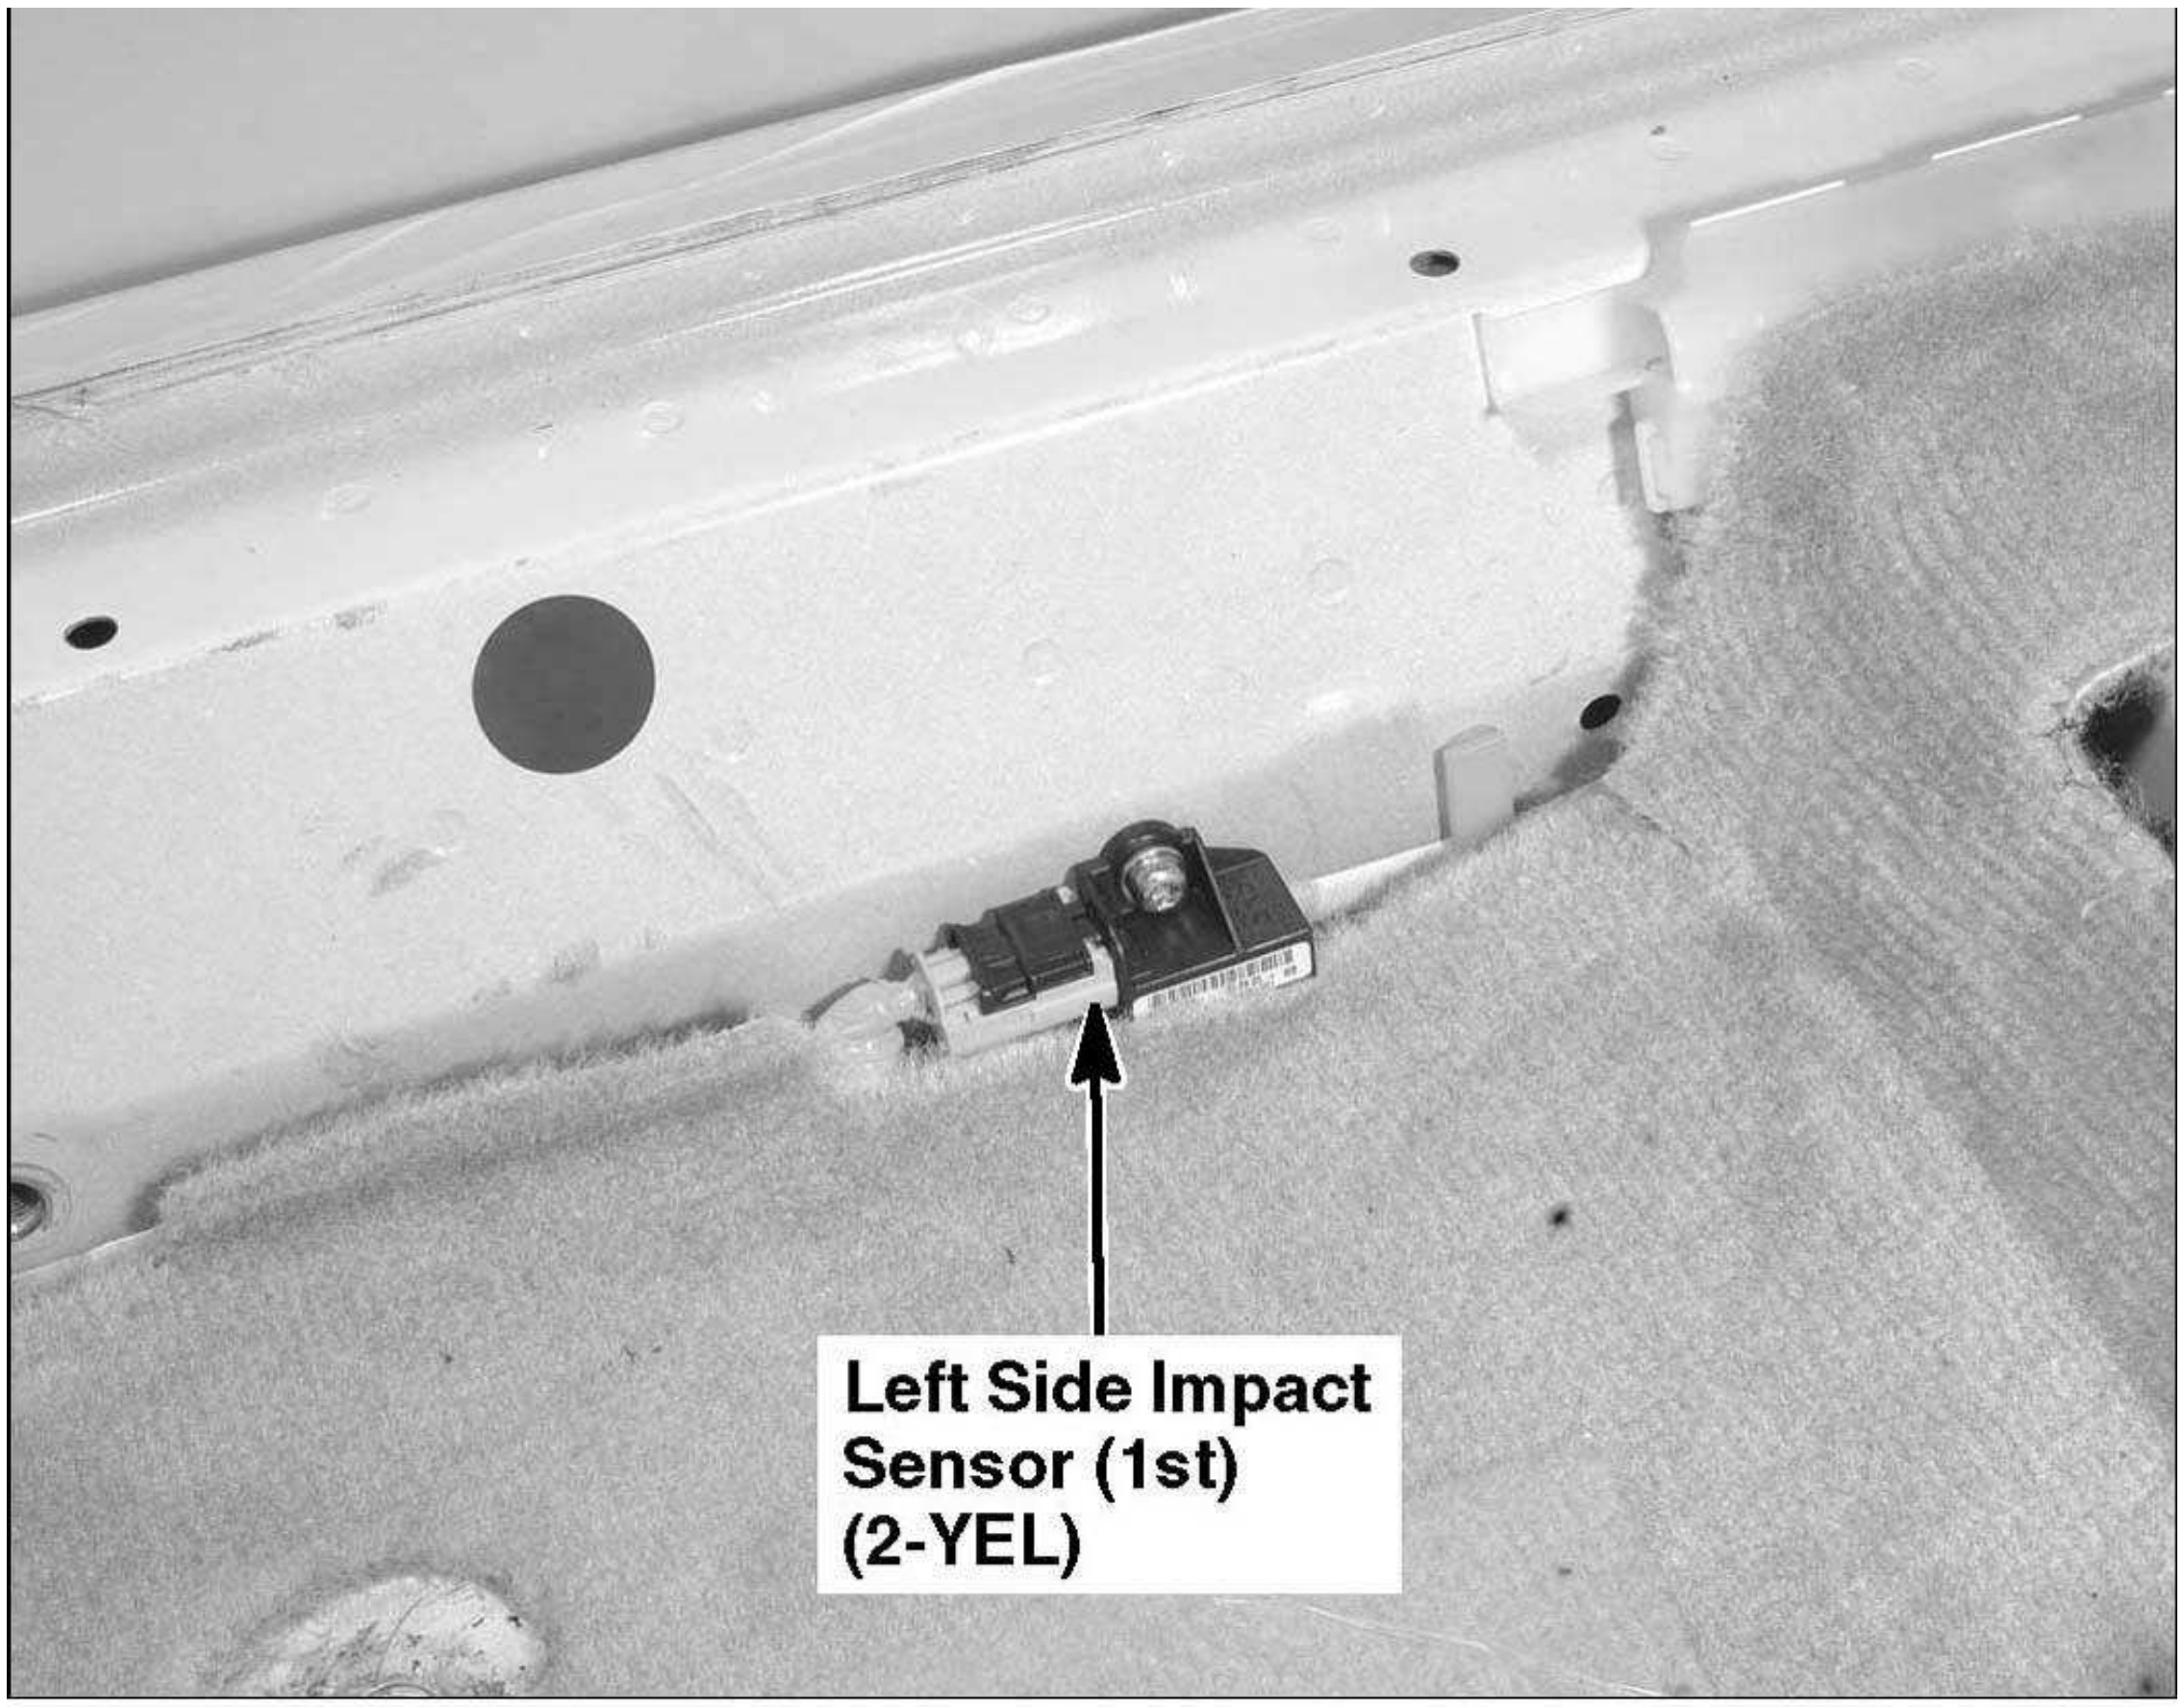
Left Side Impact Sensor (1st) (2-YEL)
G00434437

Fig. 95: Left Side Of Floor (2-Door) (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

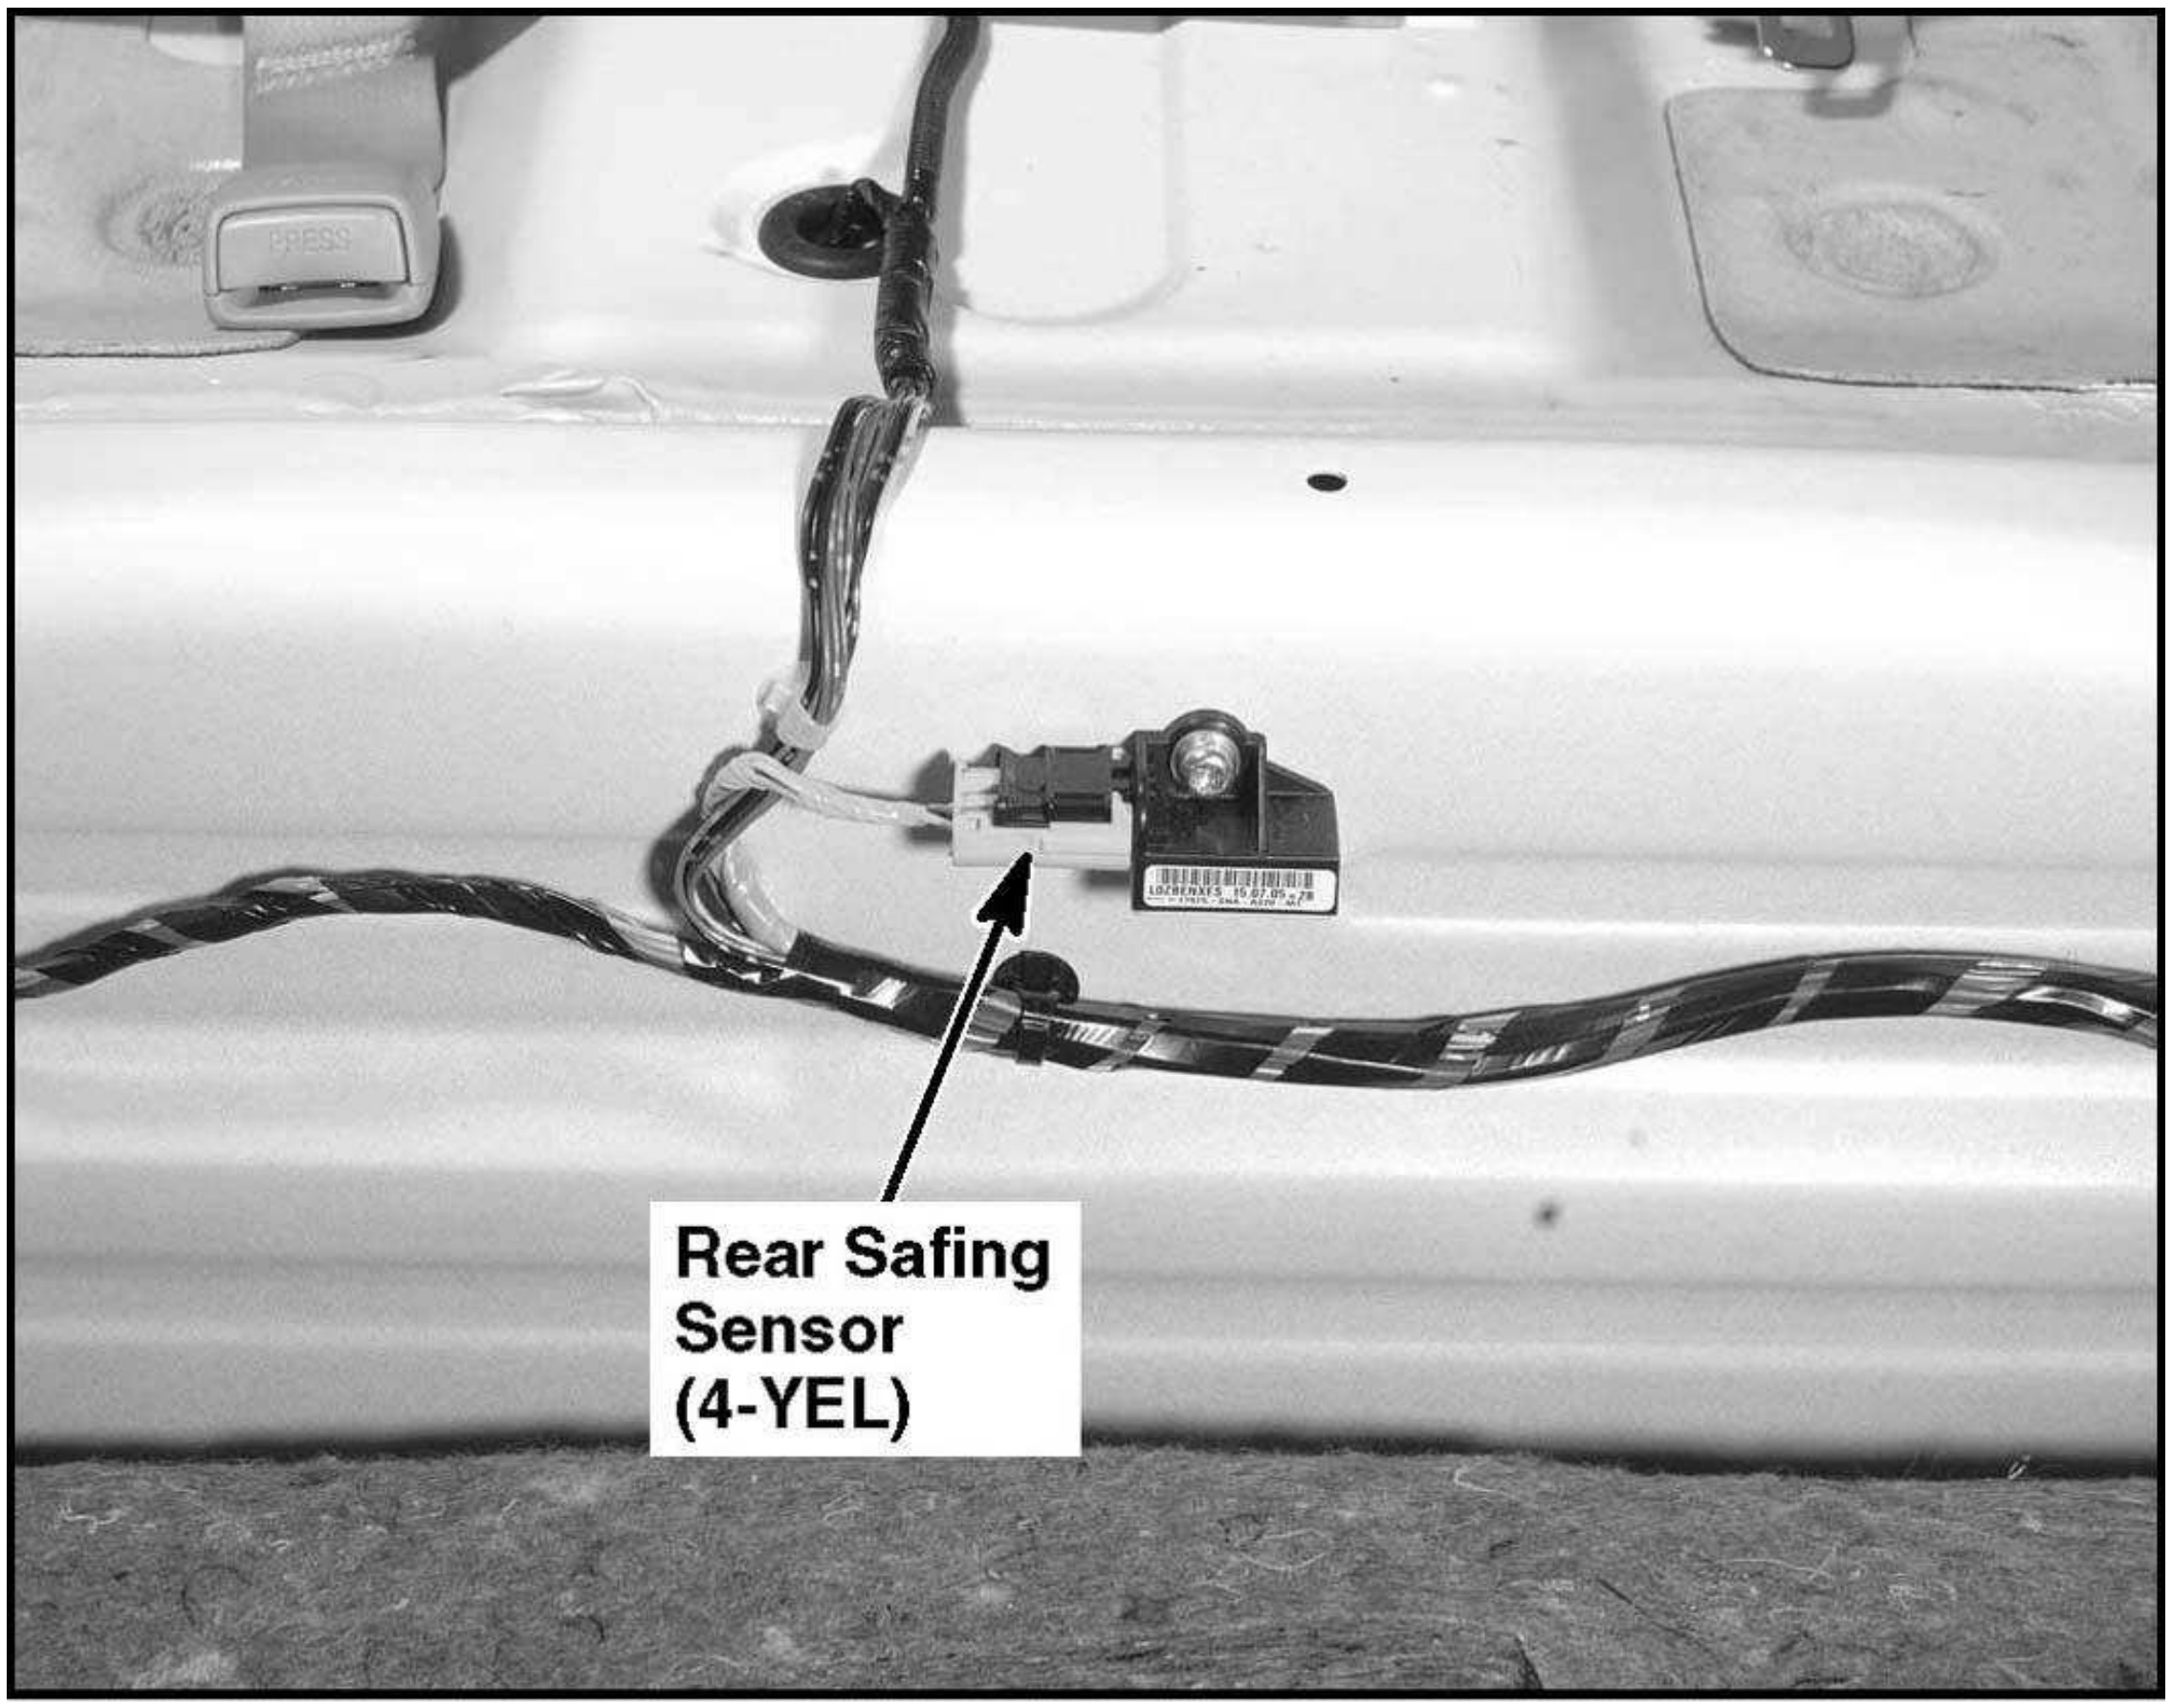
Rear Safing Sensor (4-YEL)
G00434438

Fig. 96: Middle Of Floor
Courtesy of AMERICAN HONDA MOTOR CO., INC.

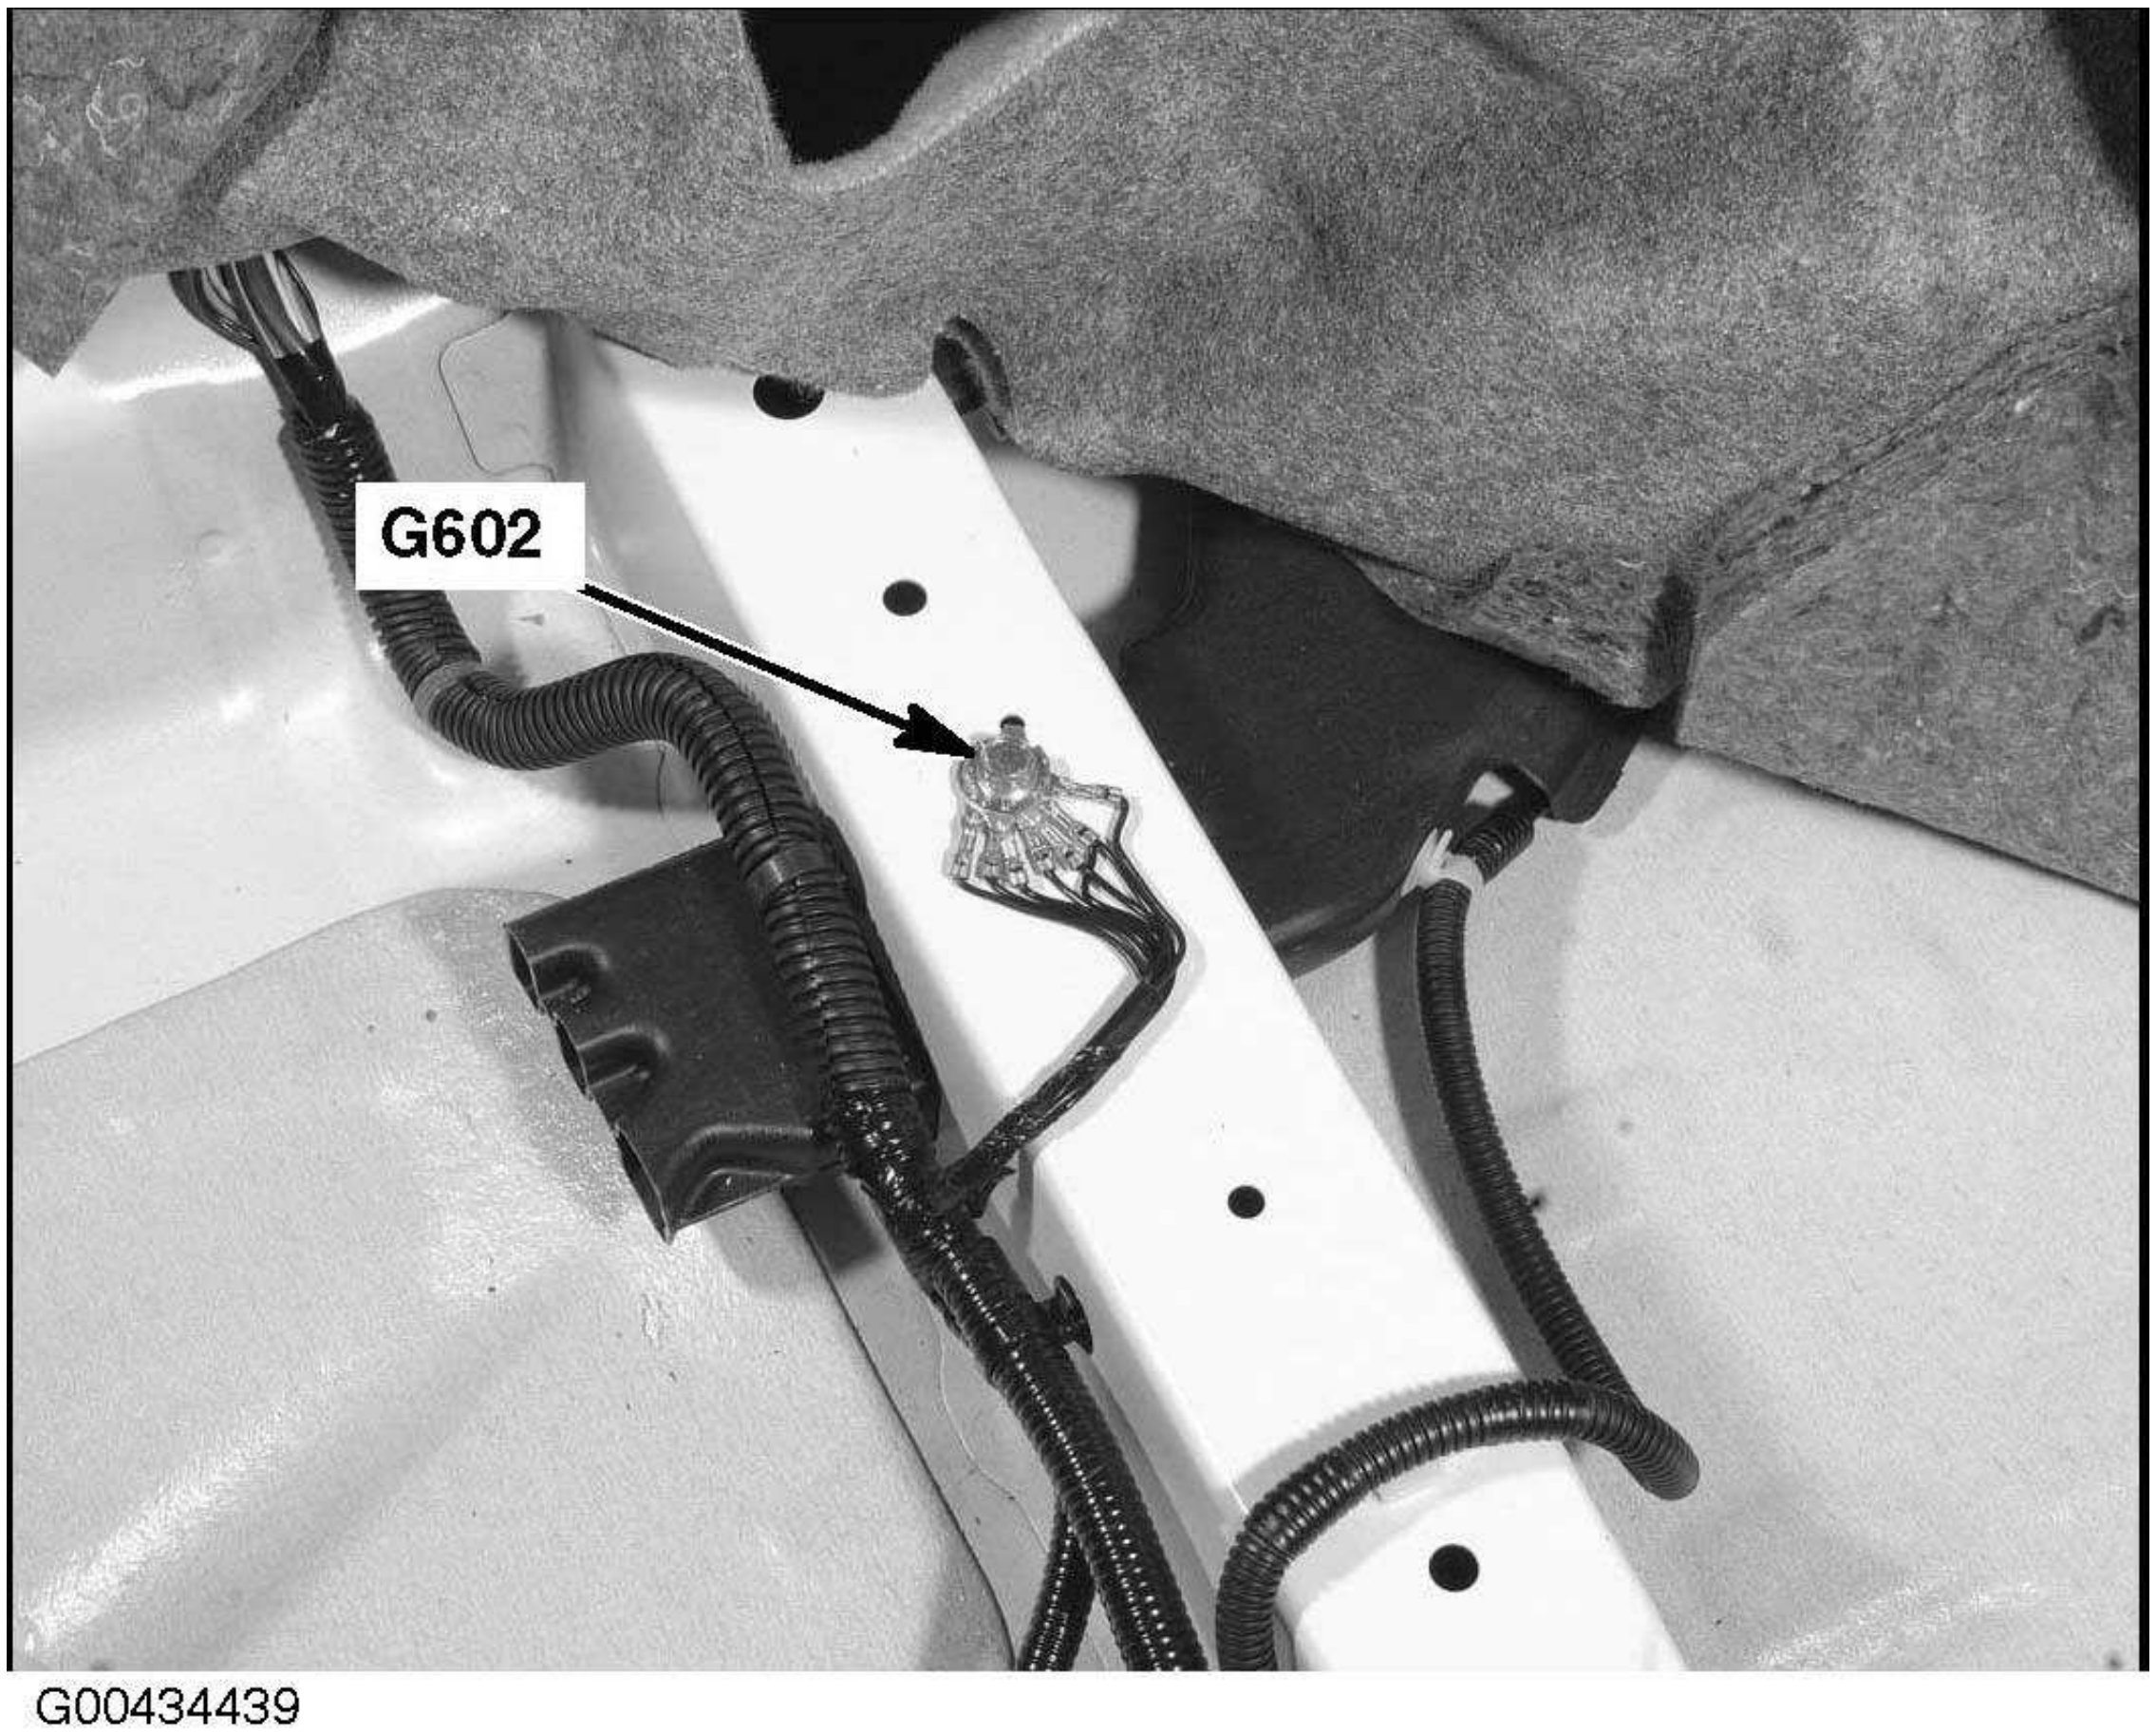
G602
G00434439

Fig. 97: Front Right Side Of Floor
Courtesy of AMERICAN HONDA MOTOR CO., INC.

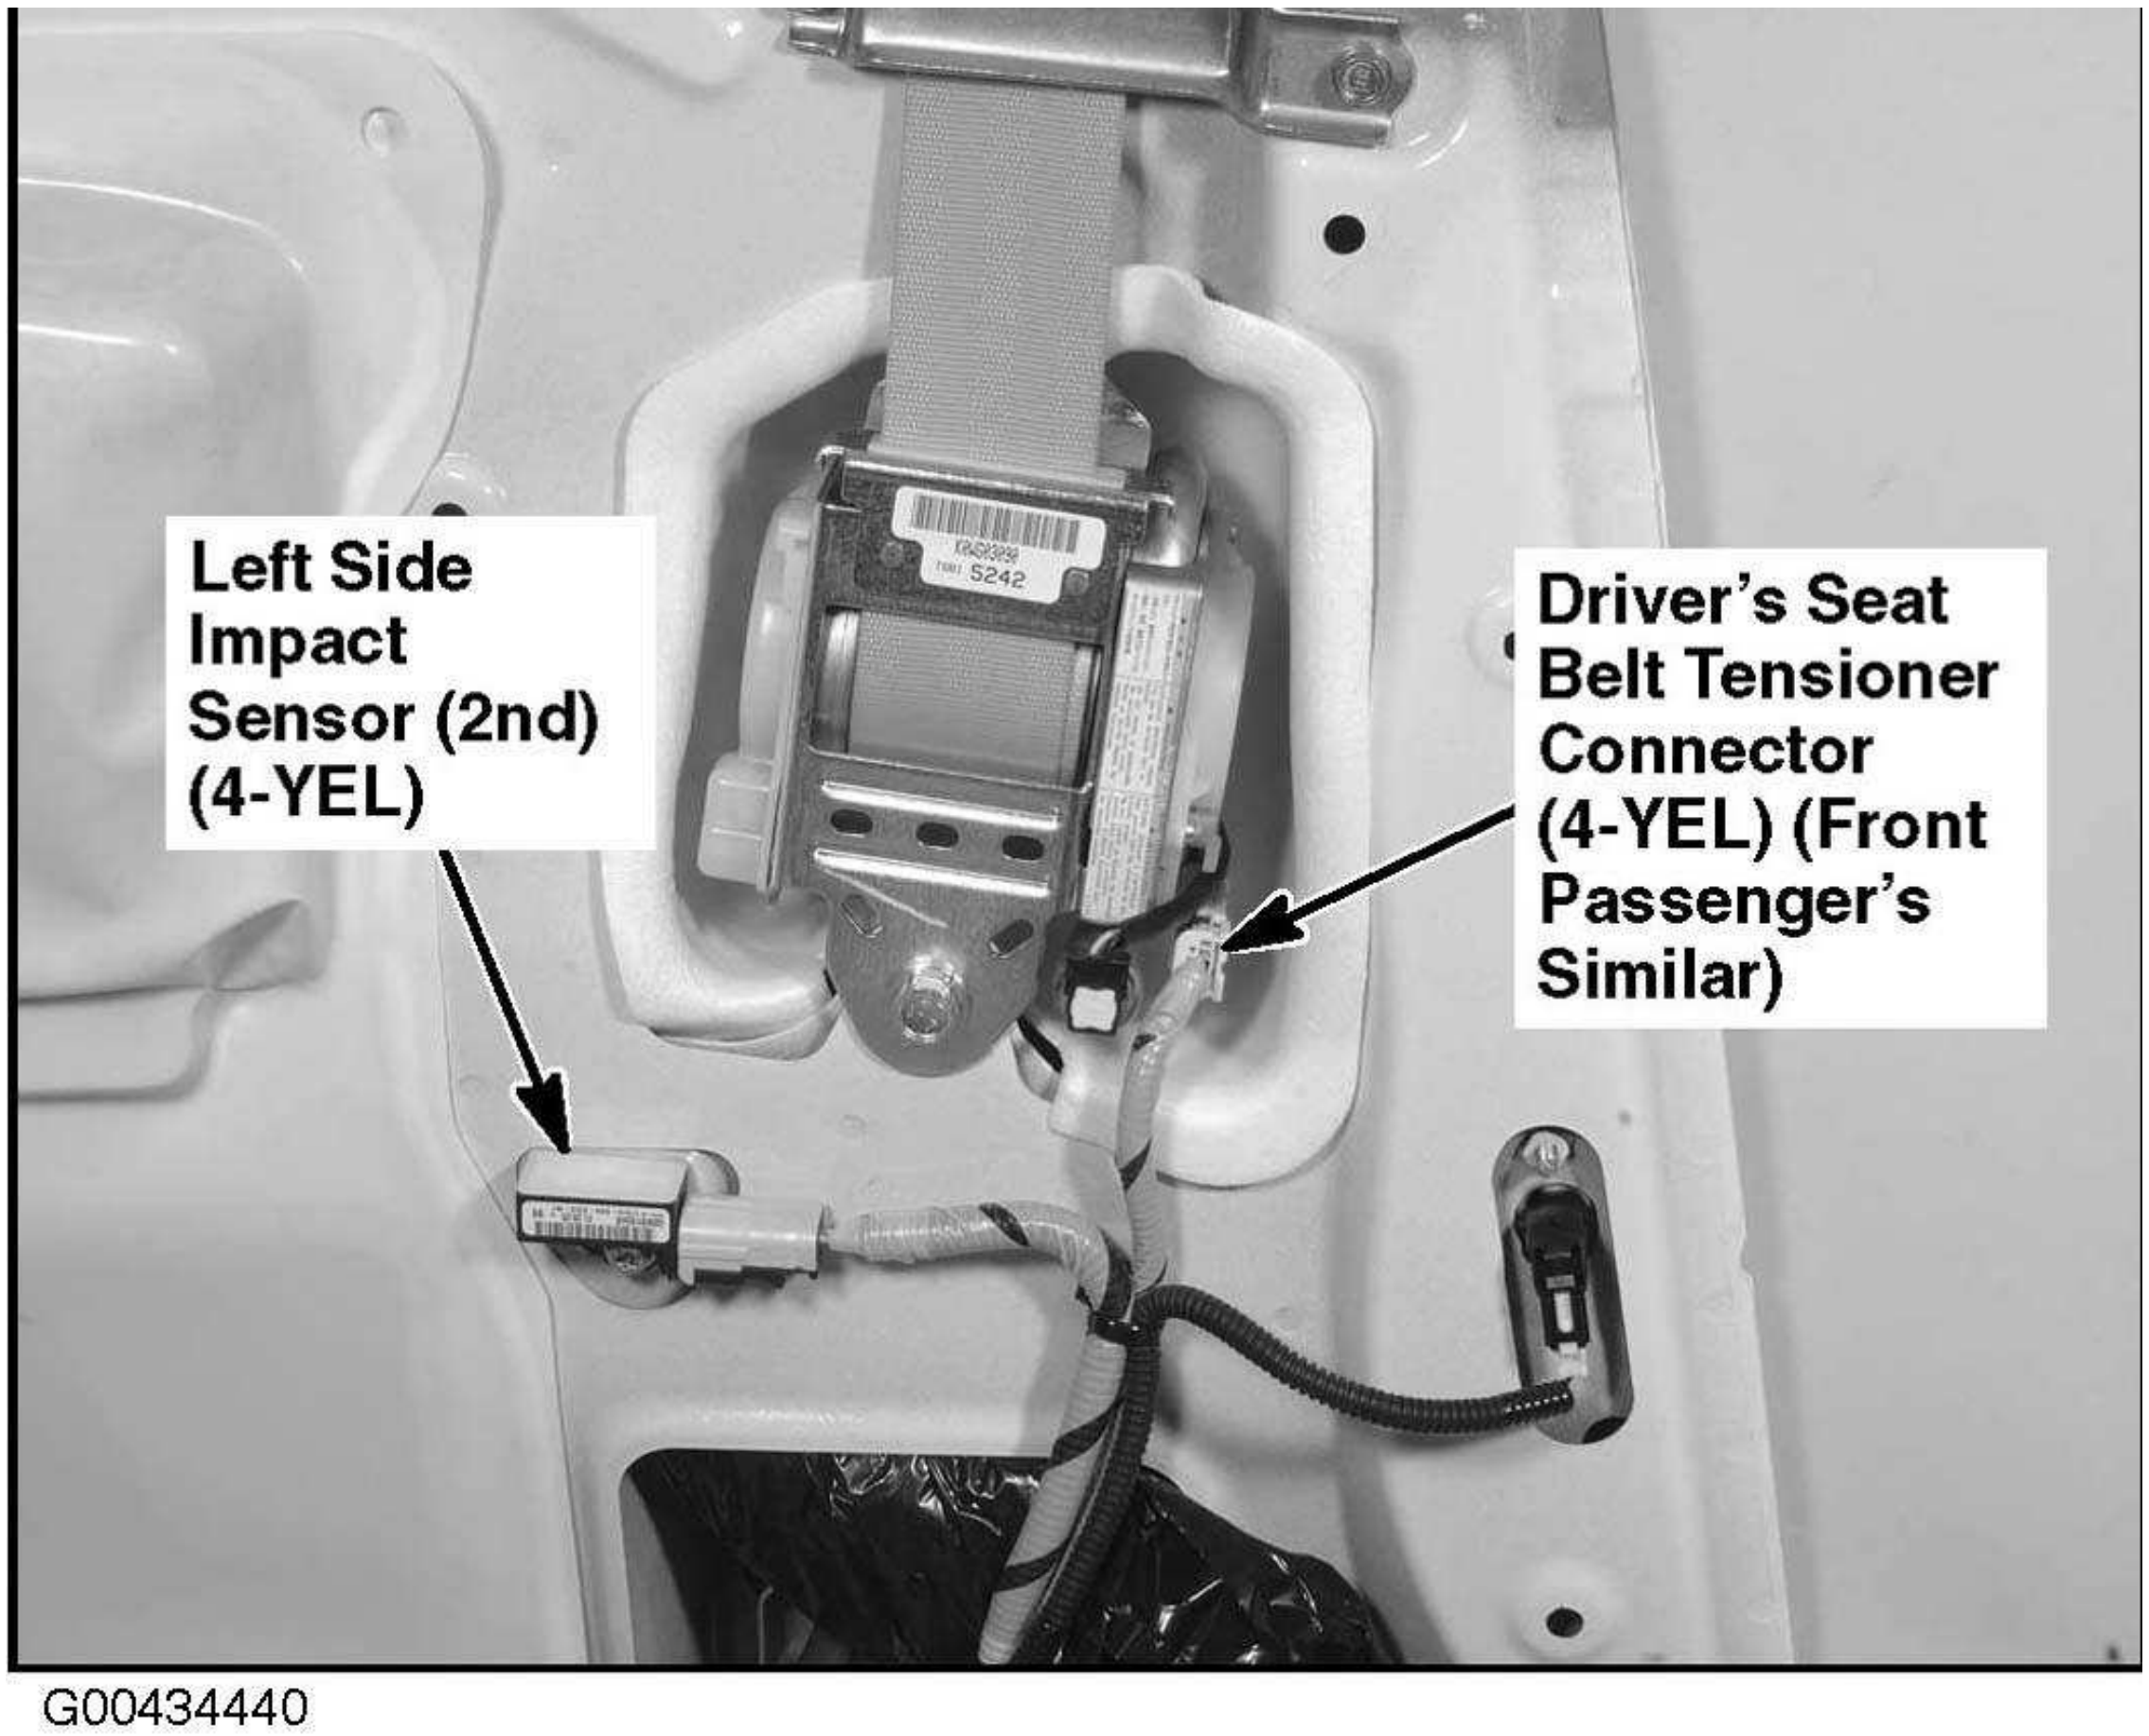
Left Side Impact Sensor (2nd) (4-YEL)
Driver's Seat Belt Tensioner Connector (4-YEL) (Front Passenger's Similar)
G00434440

Fig. 98: Left "B" Pillar (2-Door) (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

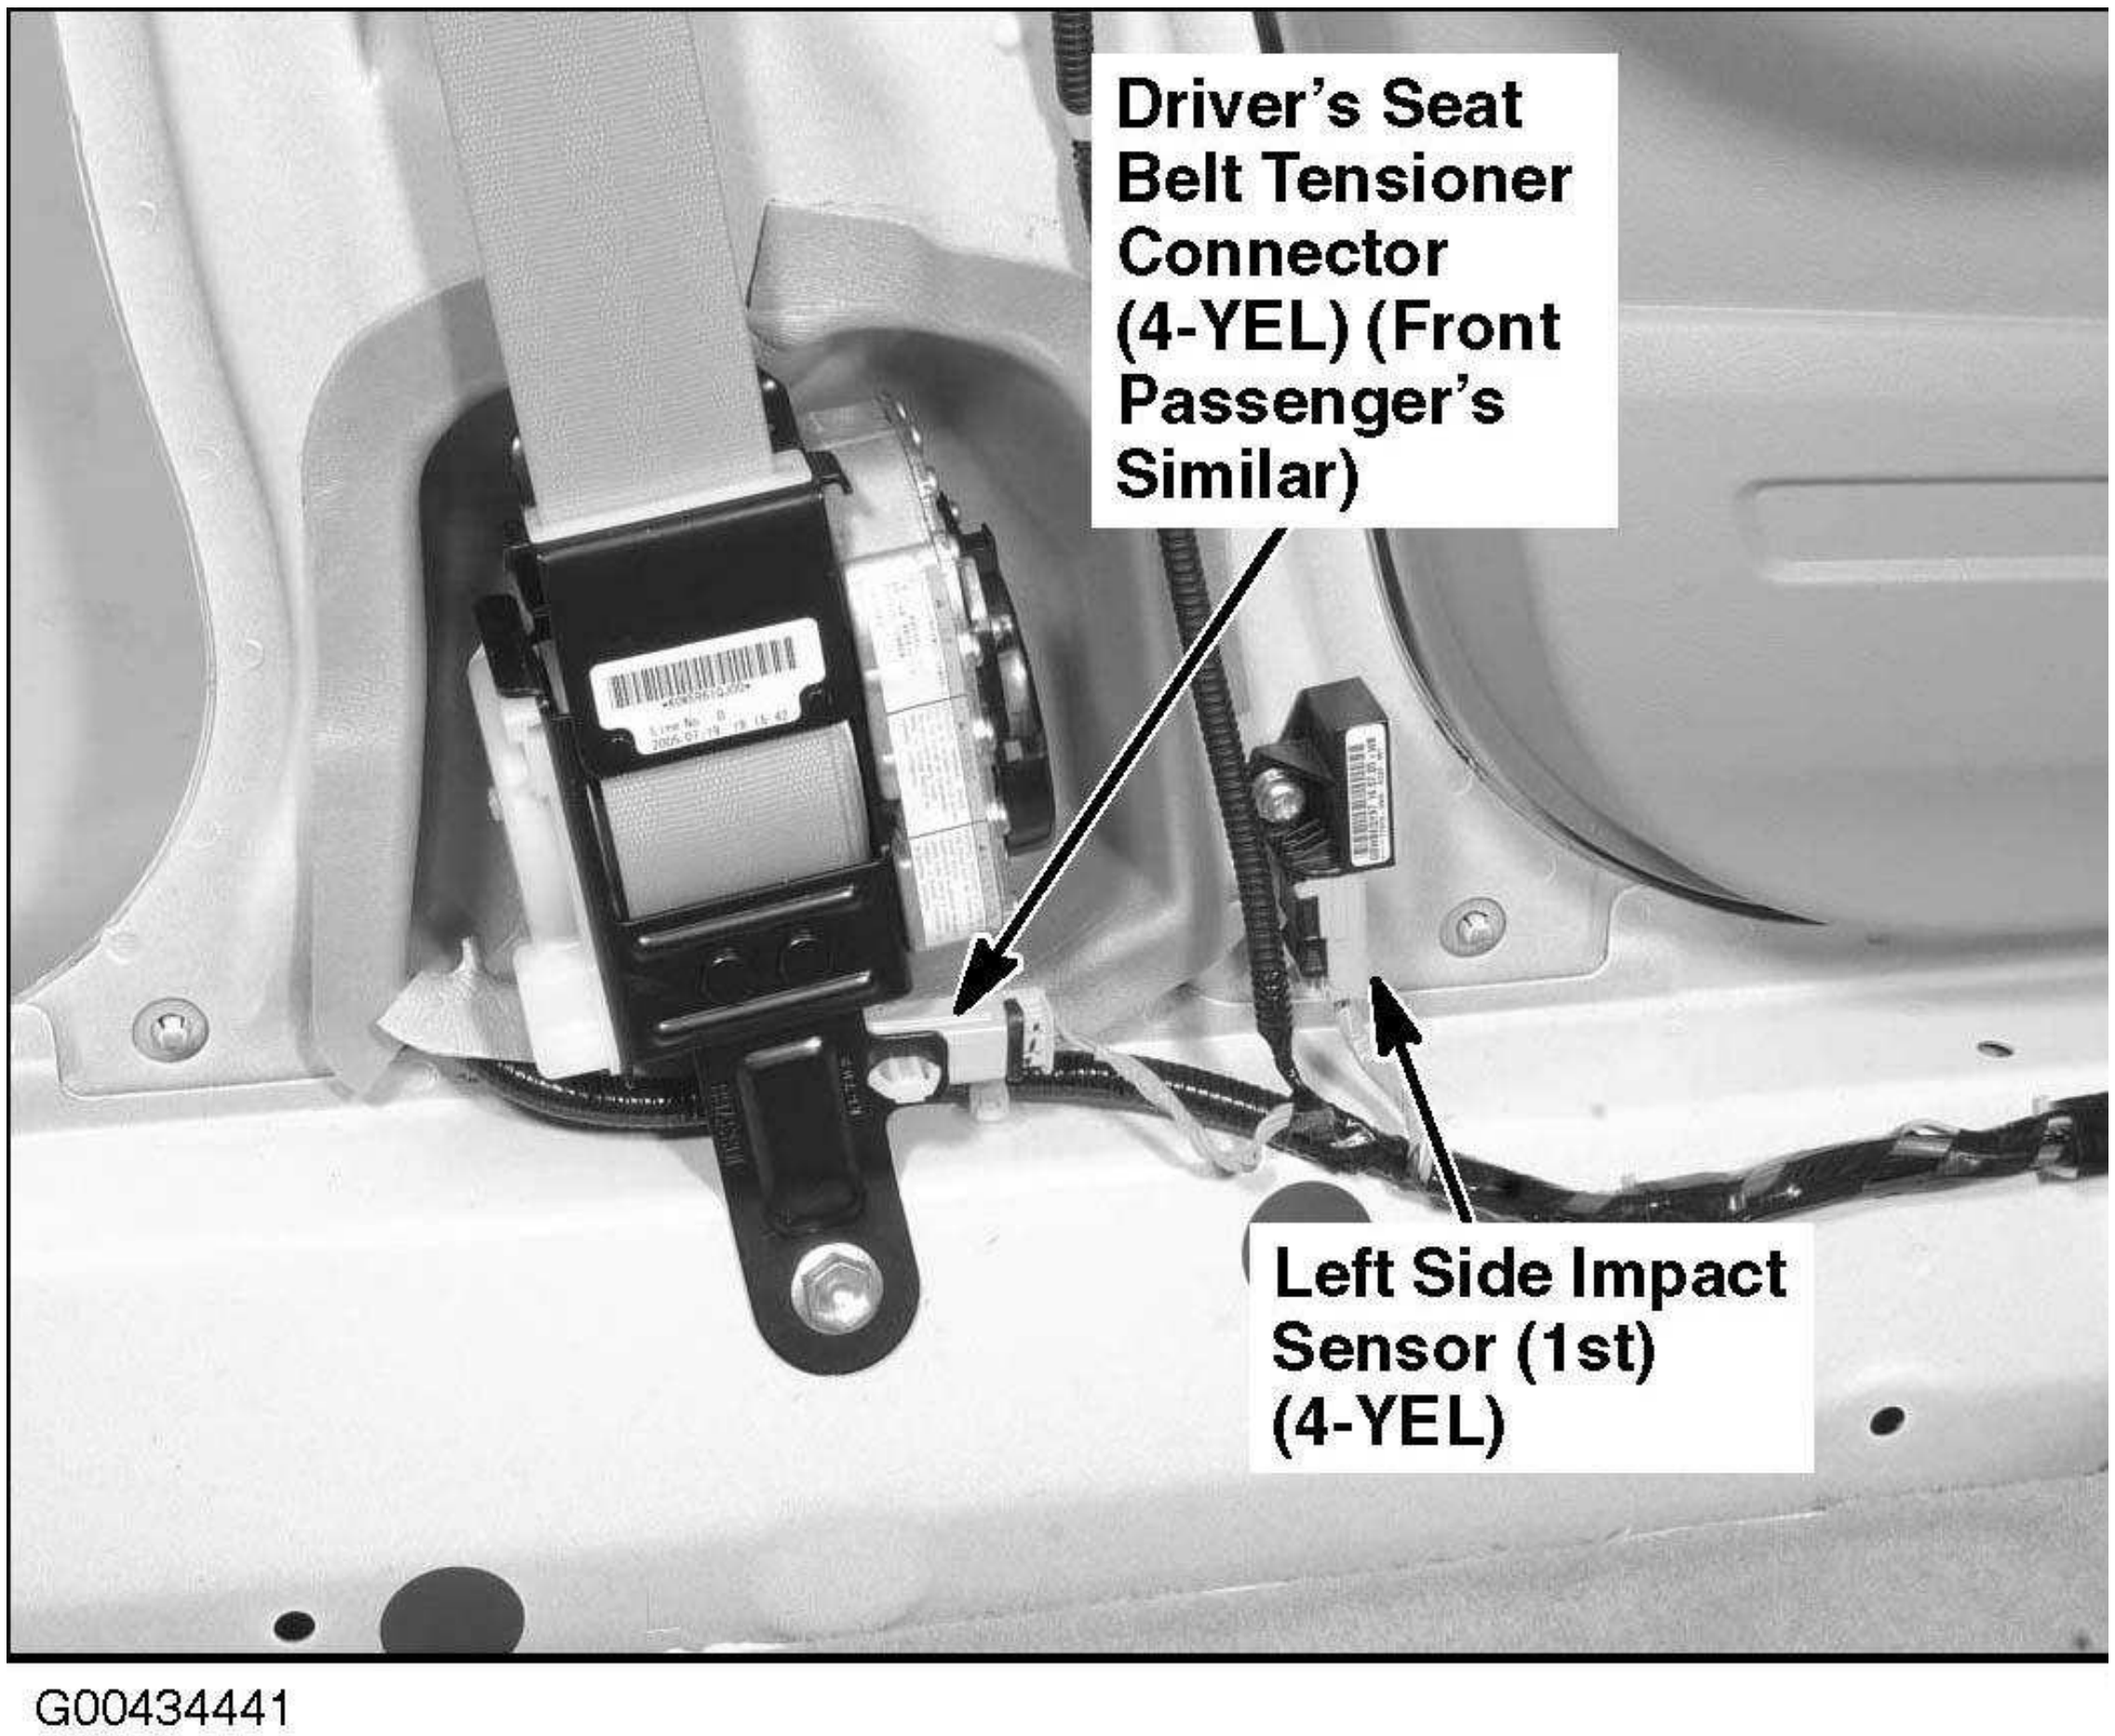
Driver's Seat Belt Tensioner Connector (4-YEL) (Front Passenger's Similar)
Left Side Impact Sensor (1st) (4-YEL)
G00434441

Fig. 99: Base Of Left "B" Pillar (4-Door) (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

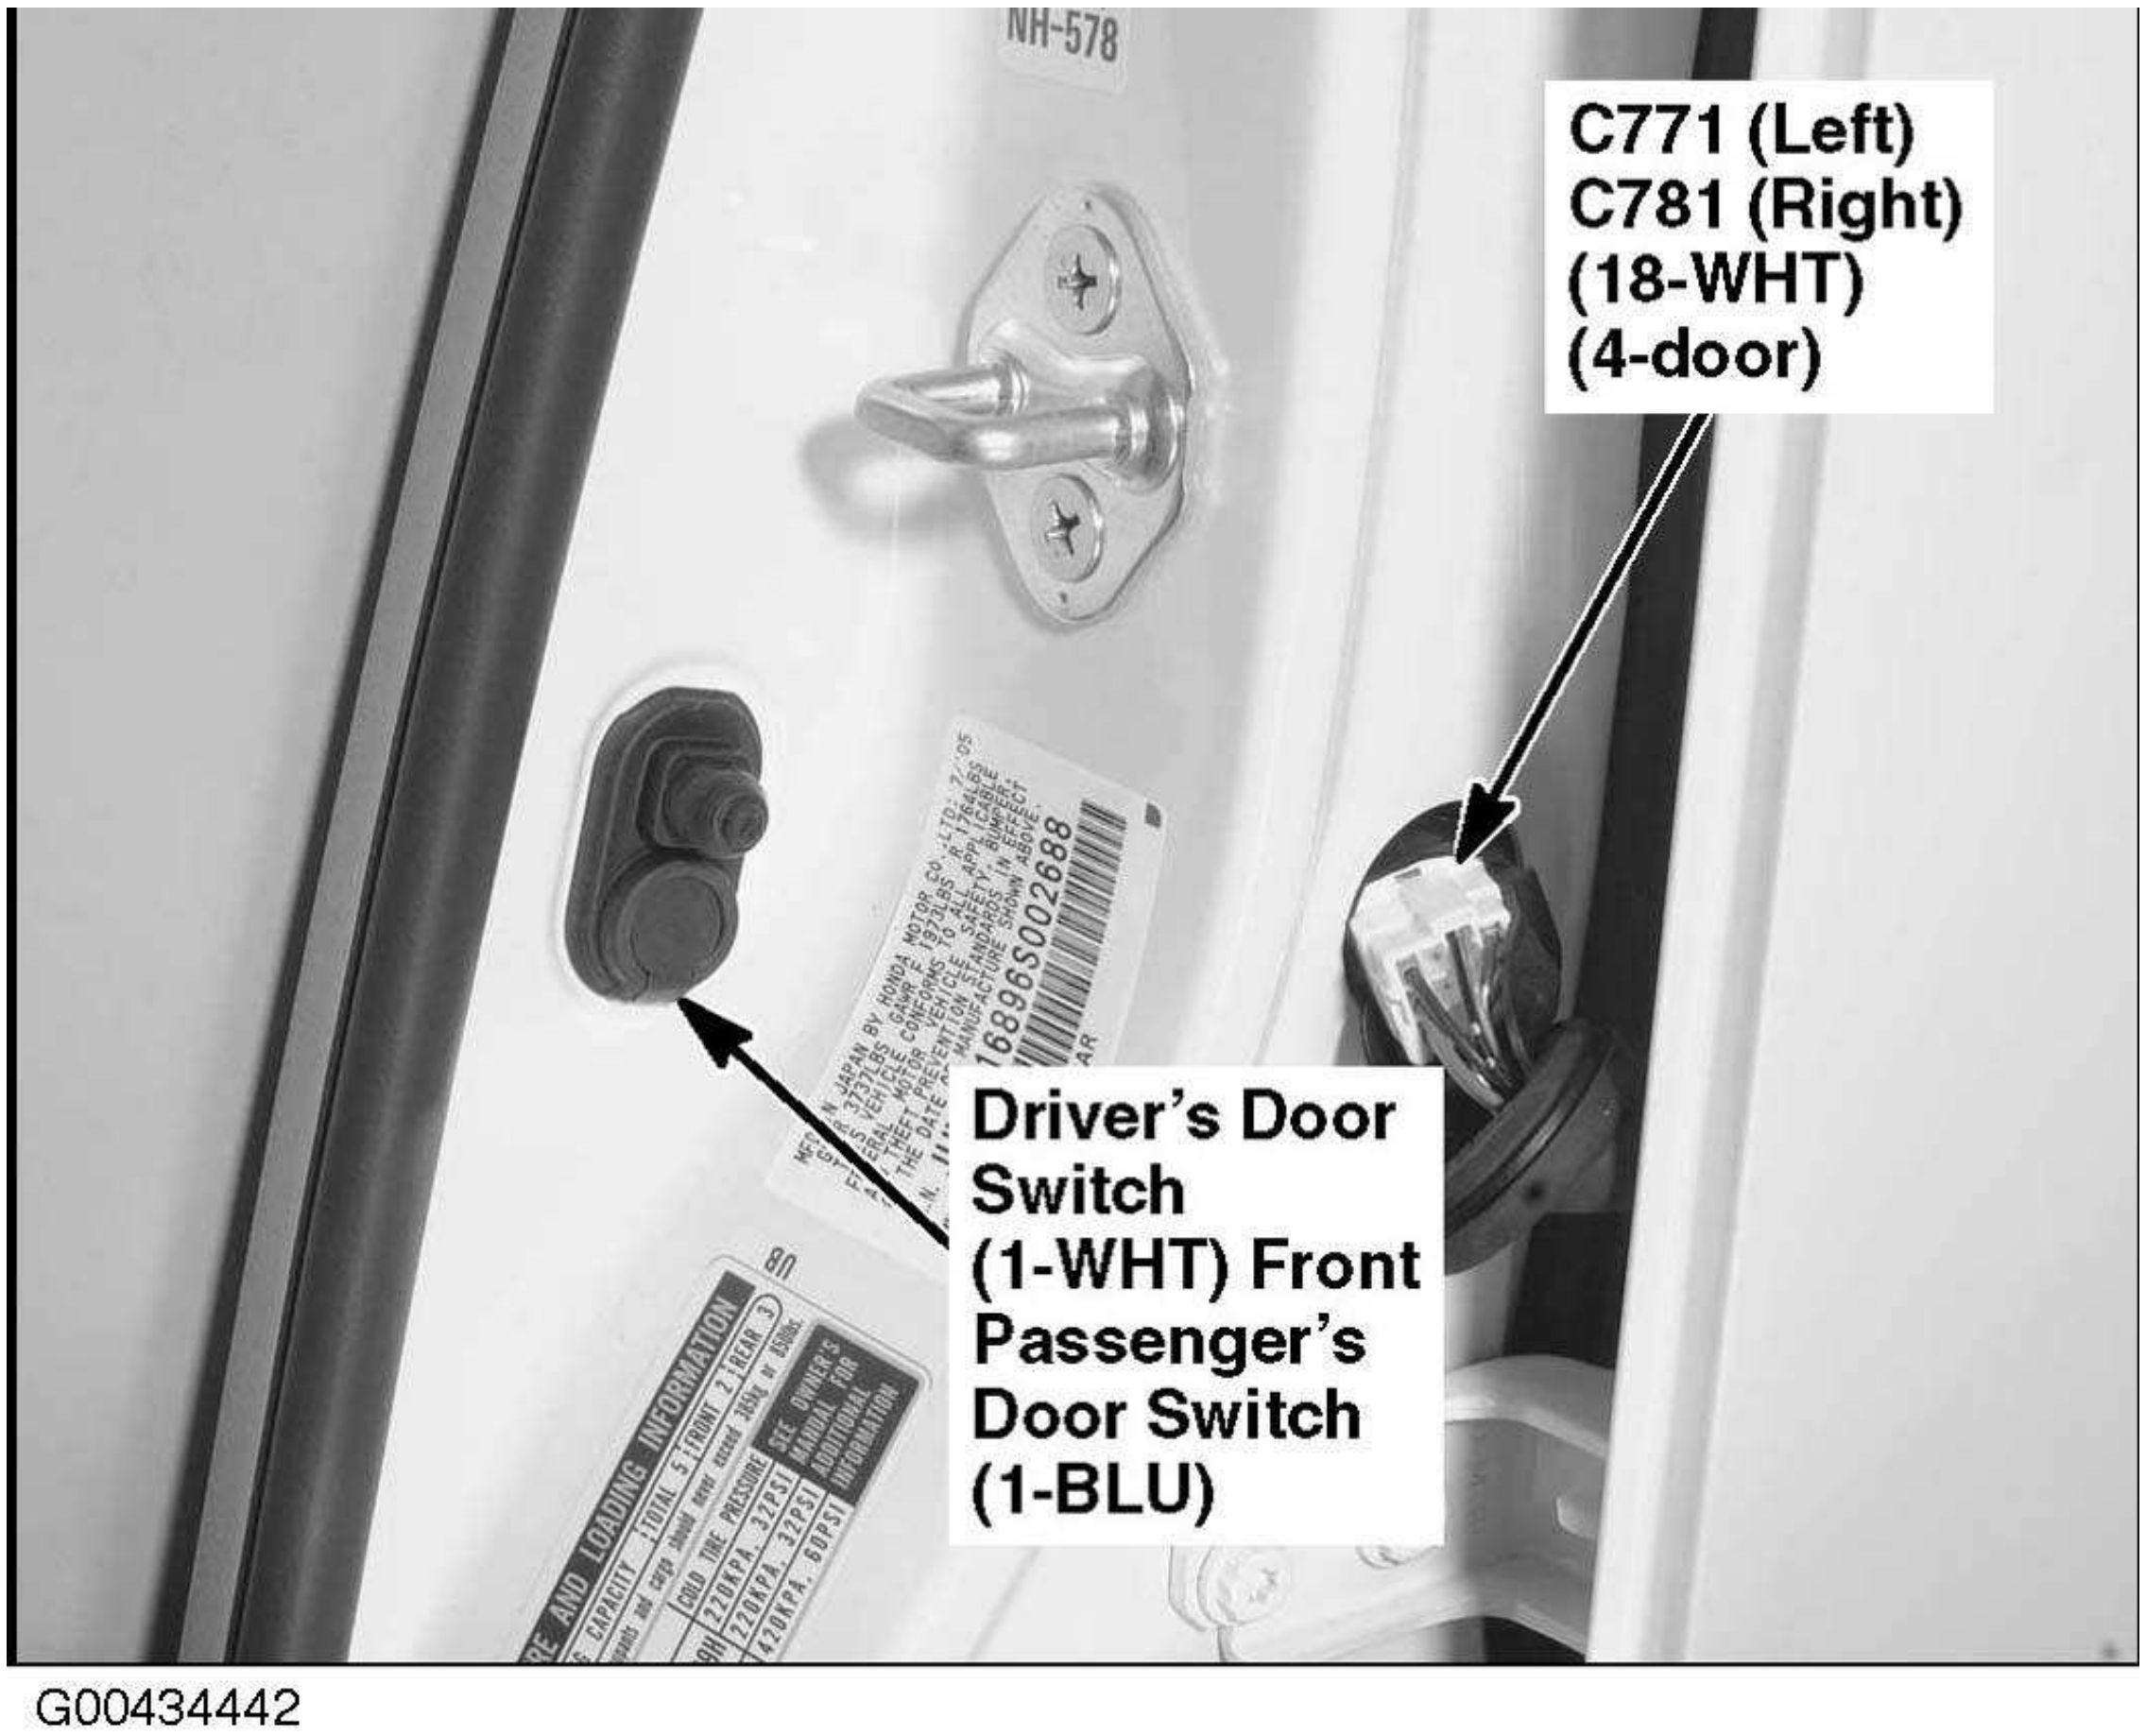
C771 (Left)
C781 (Right)
(18-WHT)
(4-door)
Driver's Door Switch (1-WHT) Front Passenger's Door Switch (1-BLU)
G00434442

Fig. 100: Left "B" Pillar (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

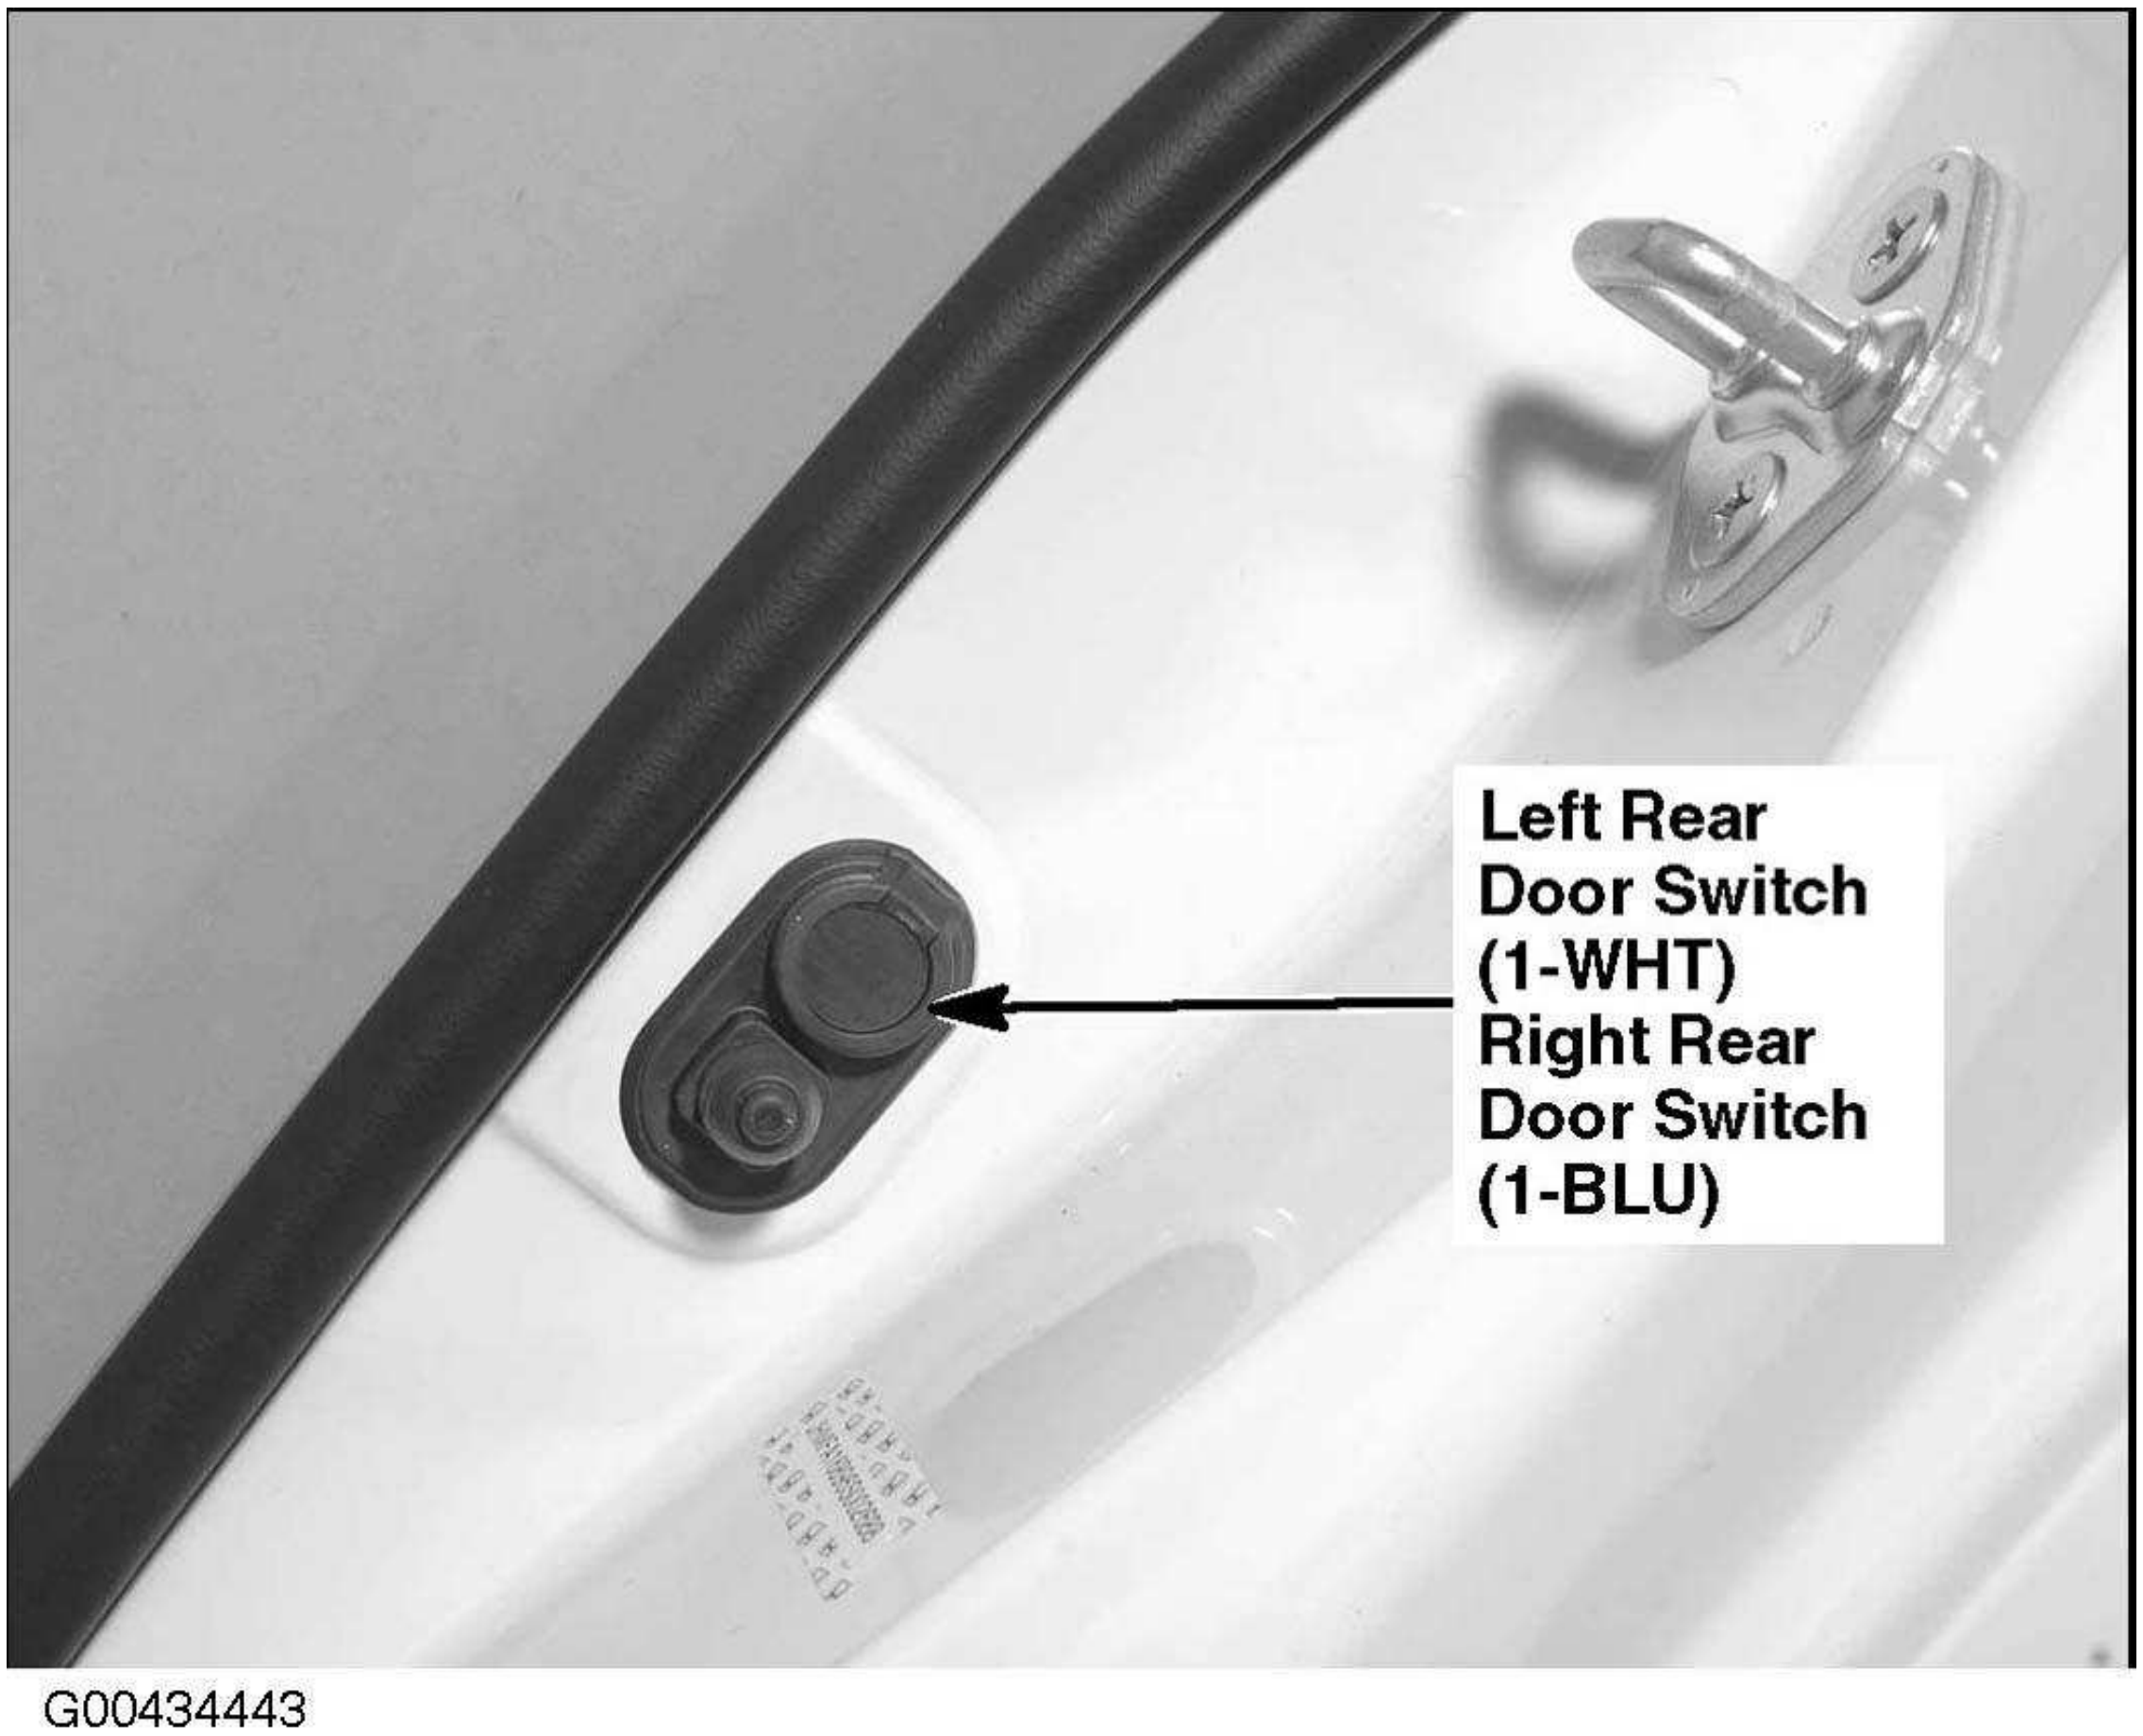
Left Rear
Door Switch
(1-WHT)
Right Rear
Door Switch
(1-BLU)
G00434443

Fig. 101: Left "C" Pillar (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

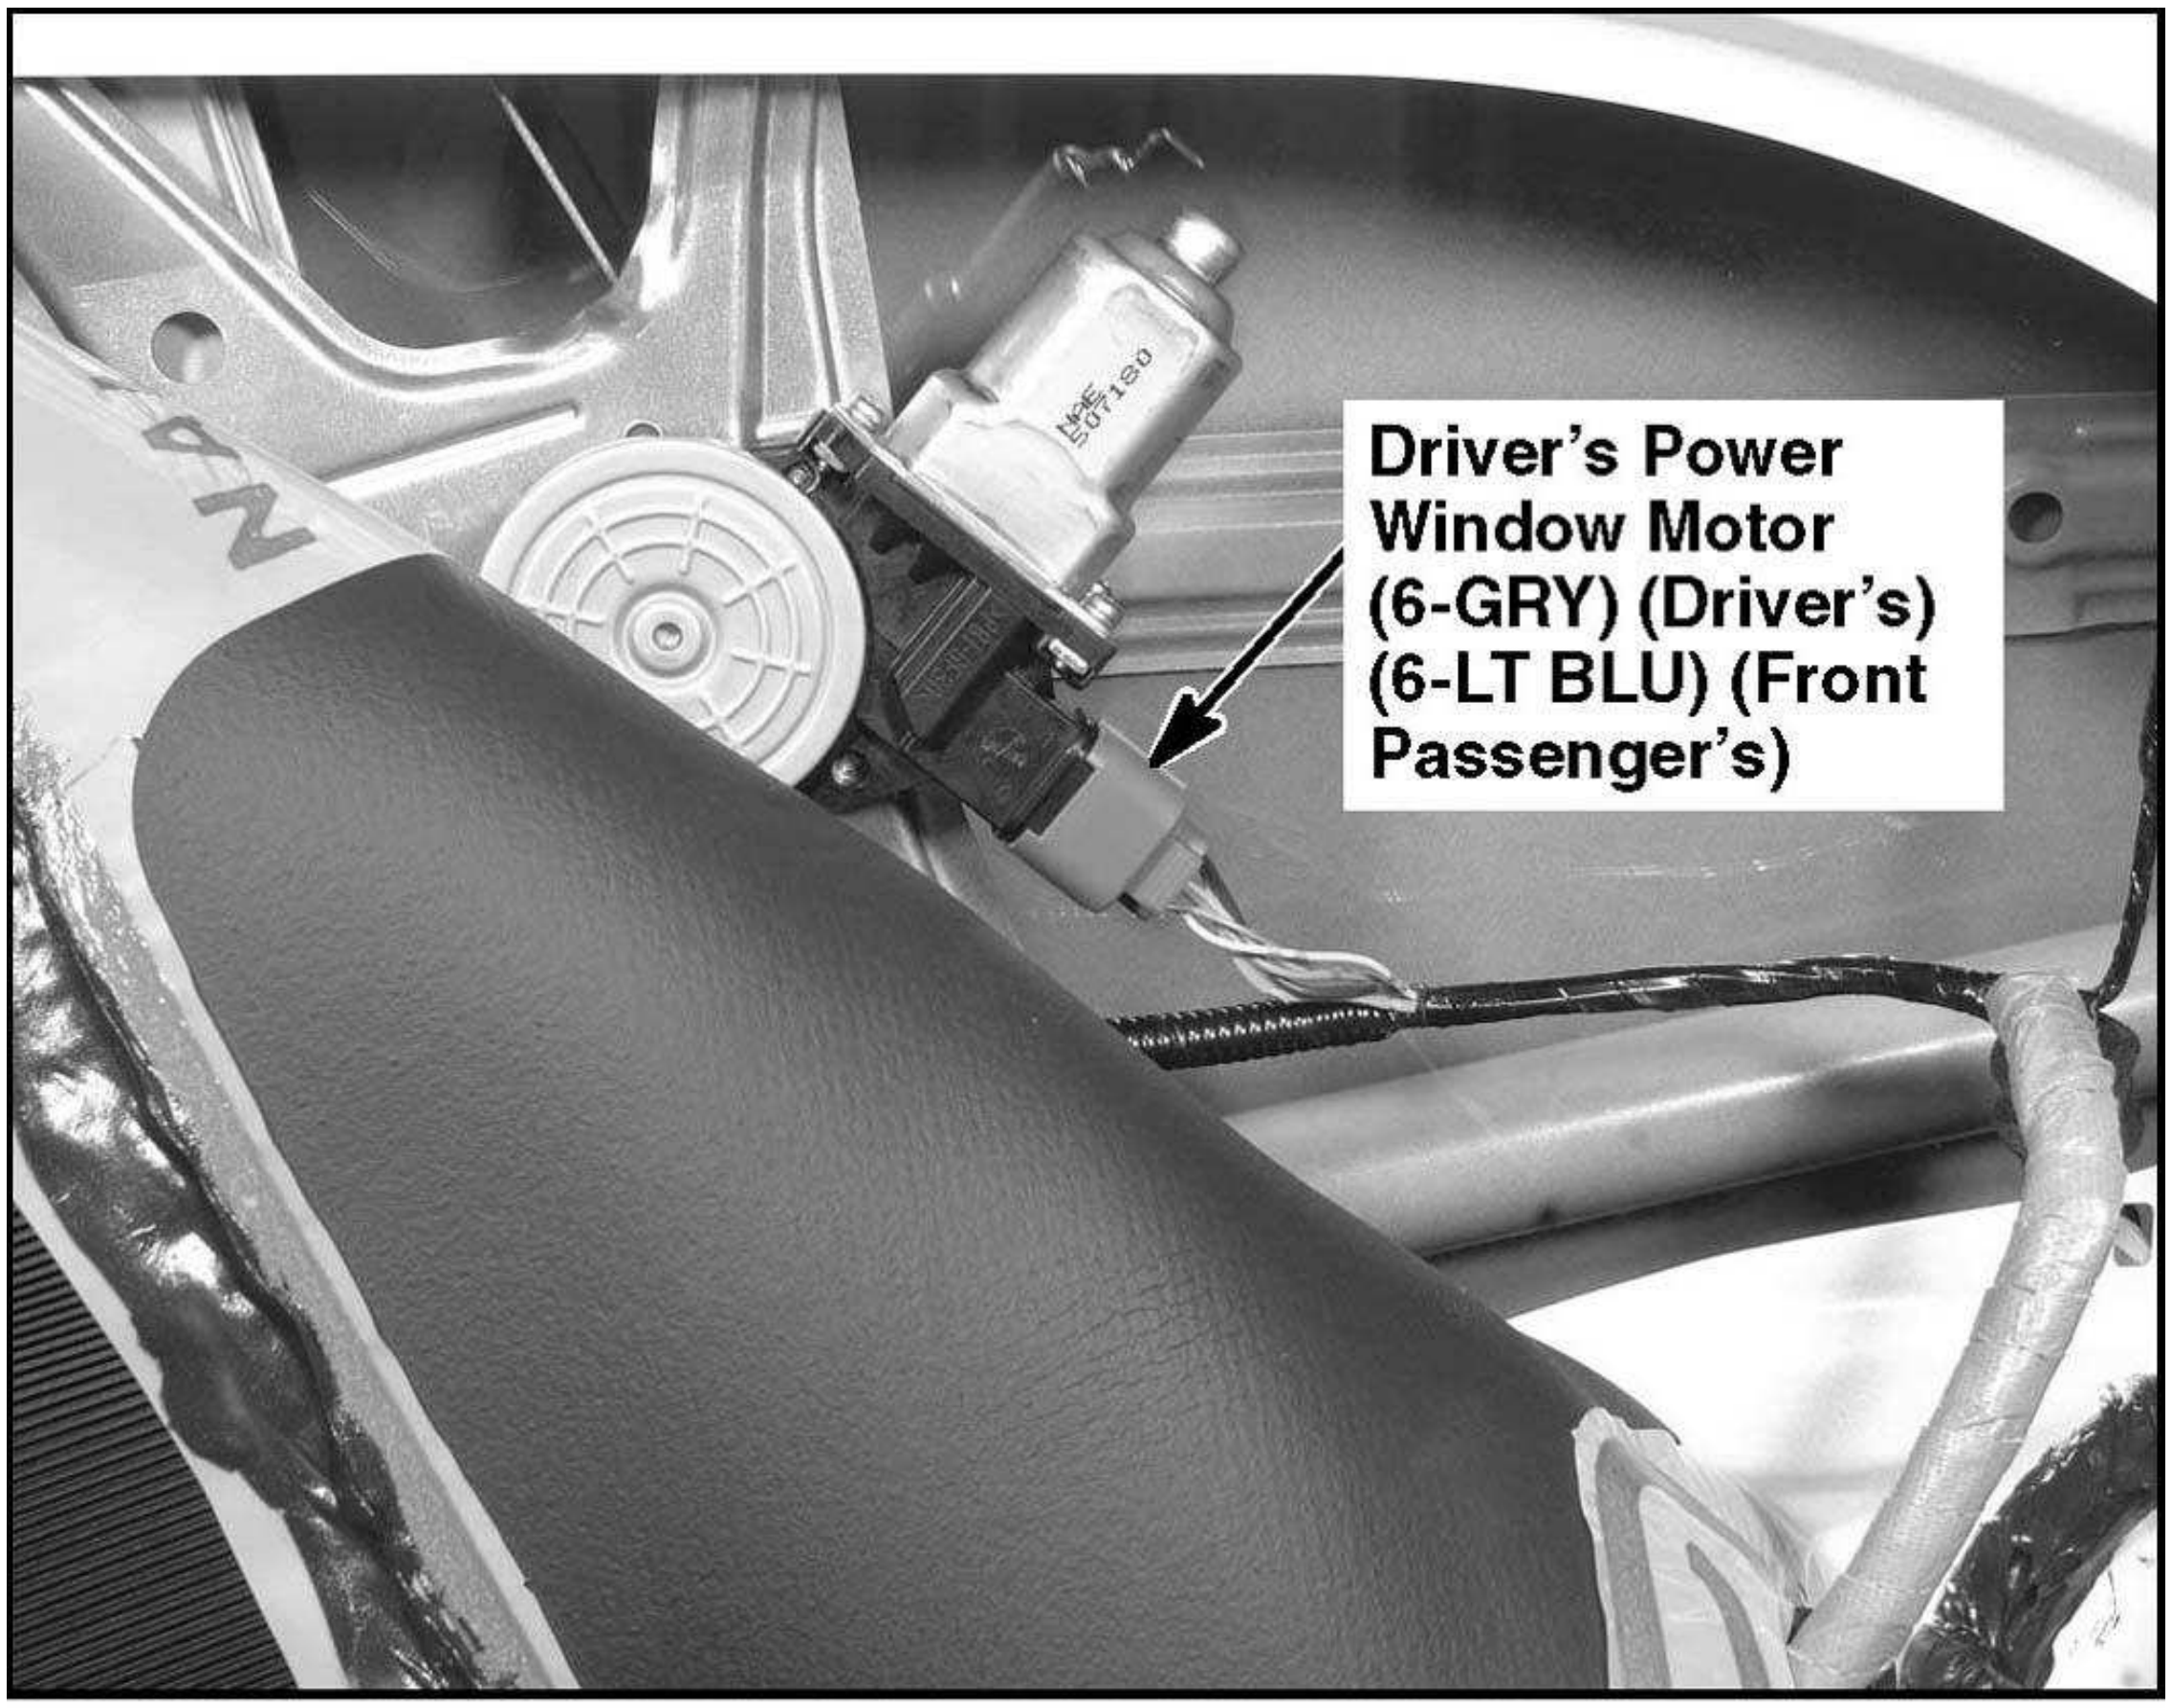

Driver's Power Window Motor (6-GRY) (Driver's) (6-LT BLU) (Front Passenger's)
G00434444

Fig. 102: Driver's Door (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

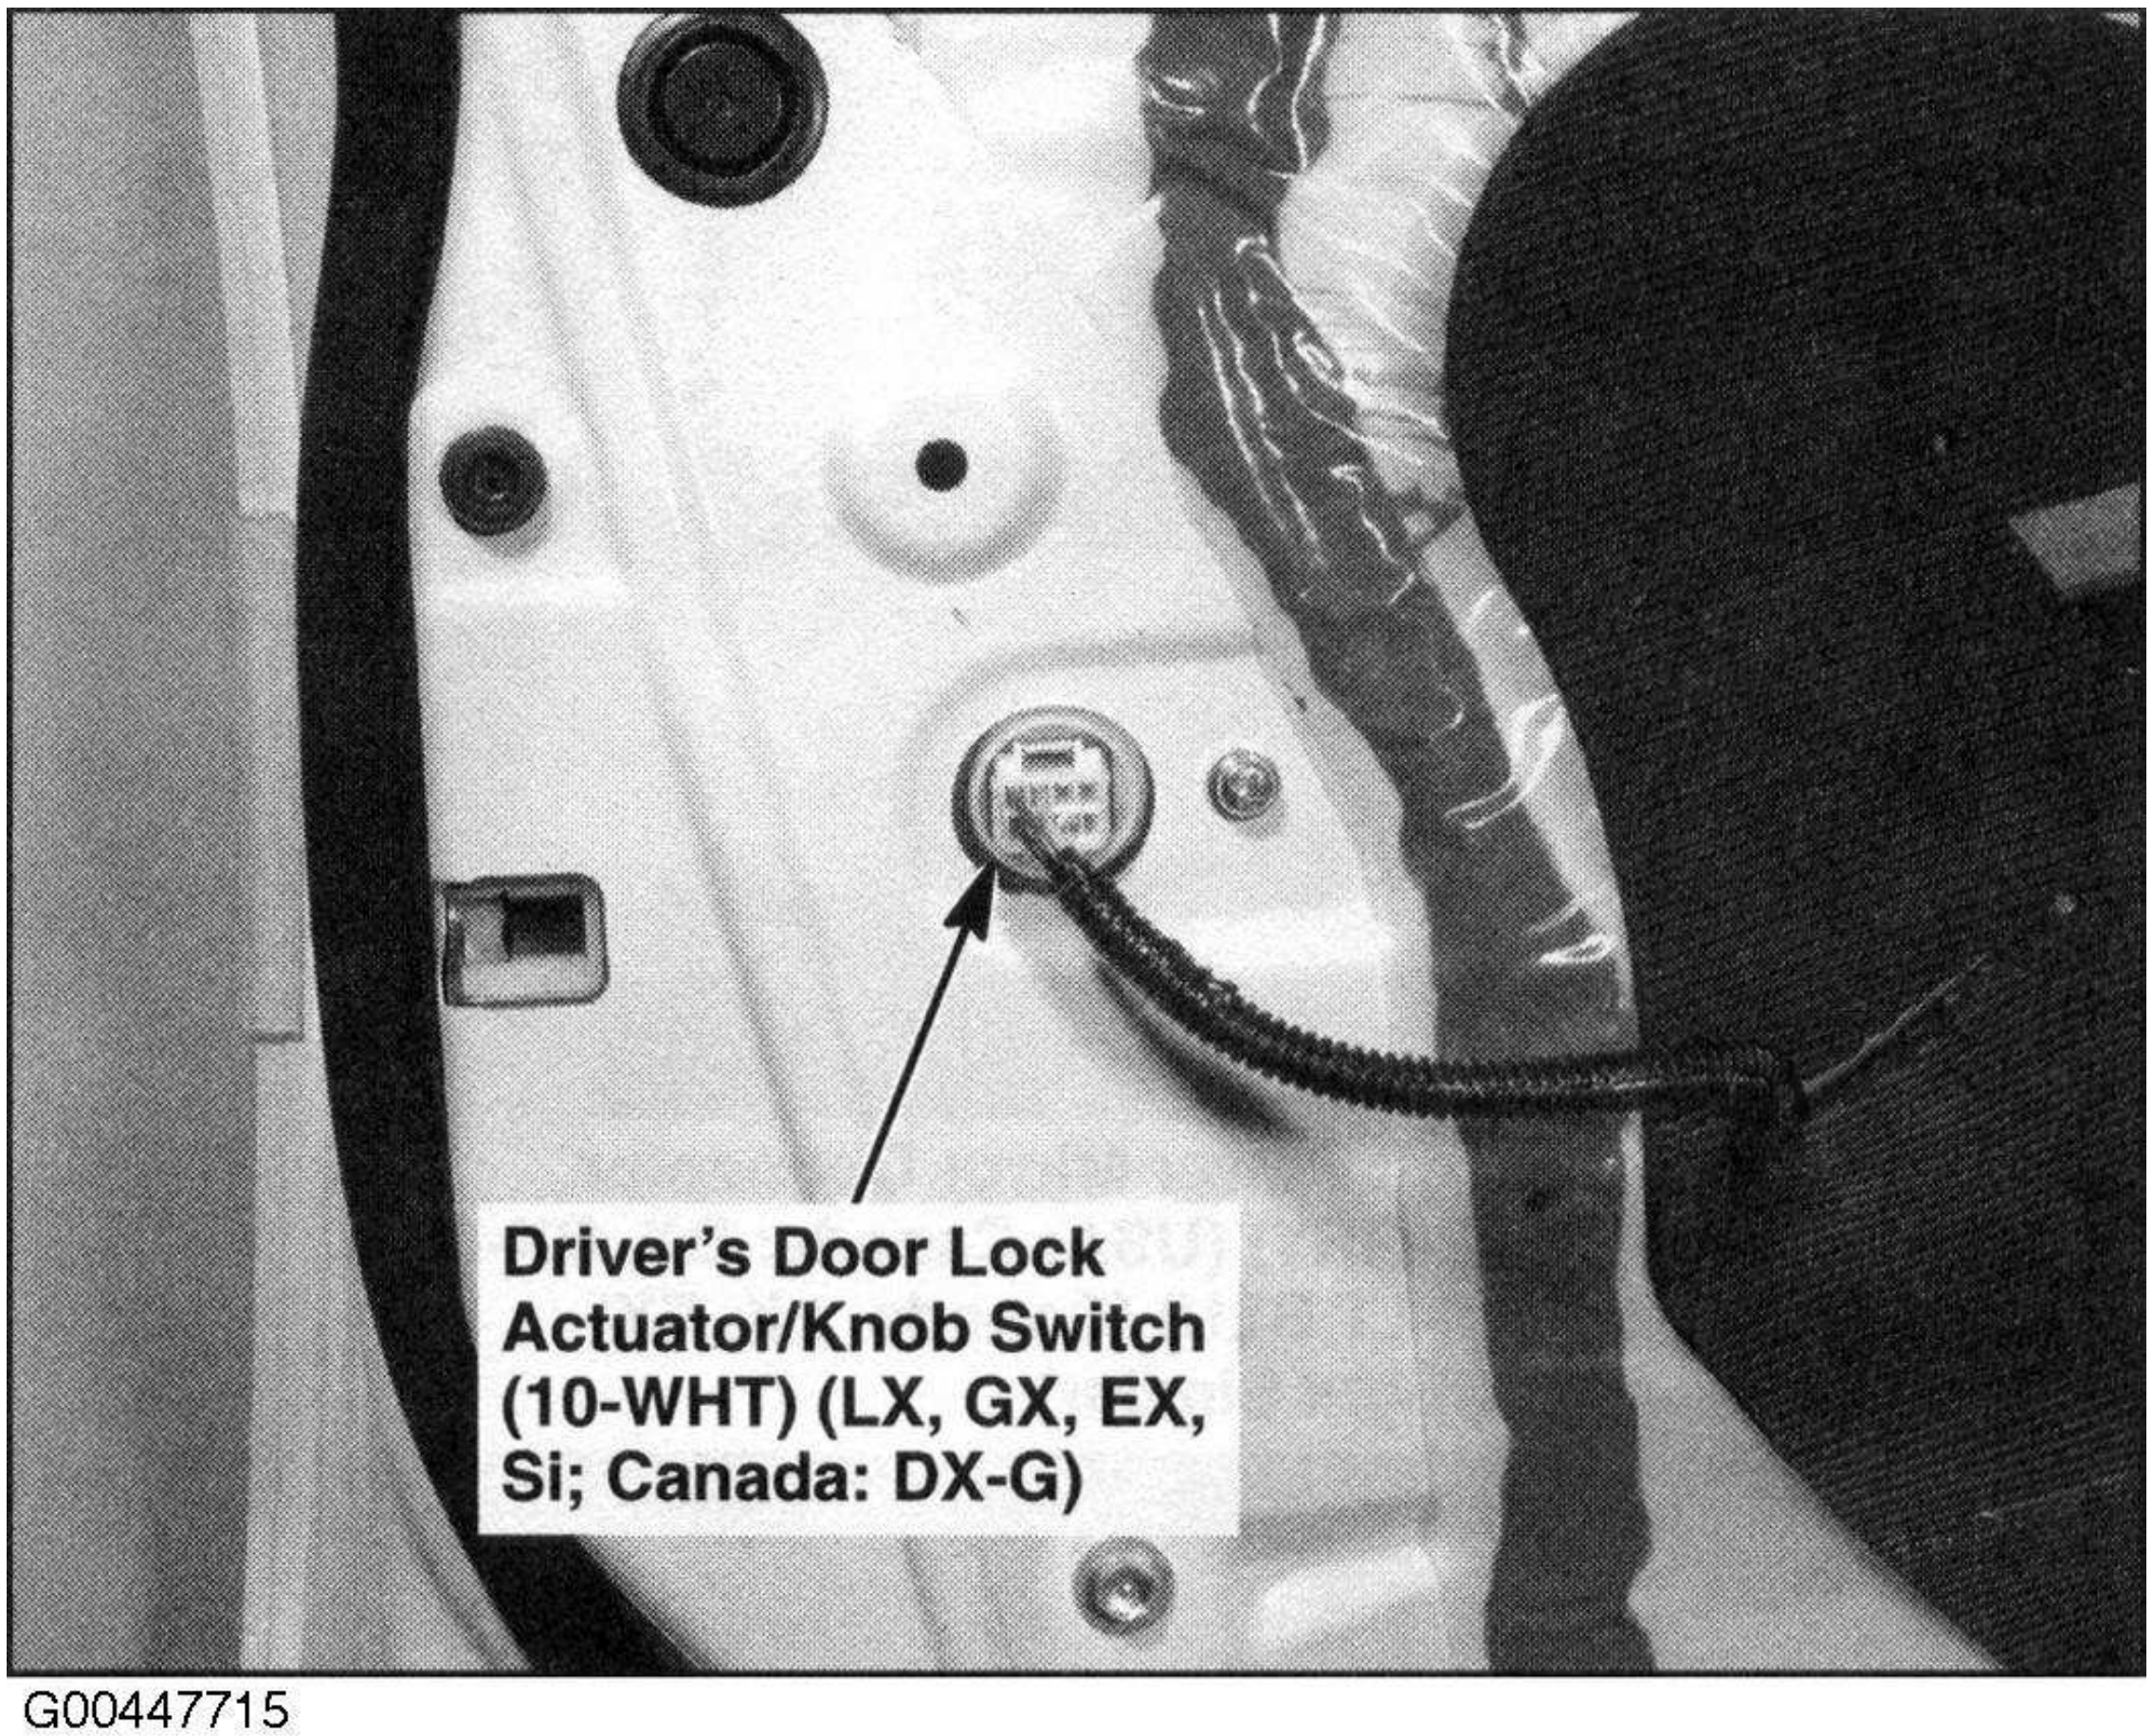
Driver's Door Lock
Actuator/Knob Switch
(10-WHT) (LX, GX, EX,
Si; Canada: DX-G)
G00447715

Fig. 103: Driver's Door (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

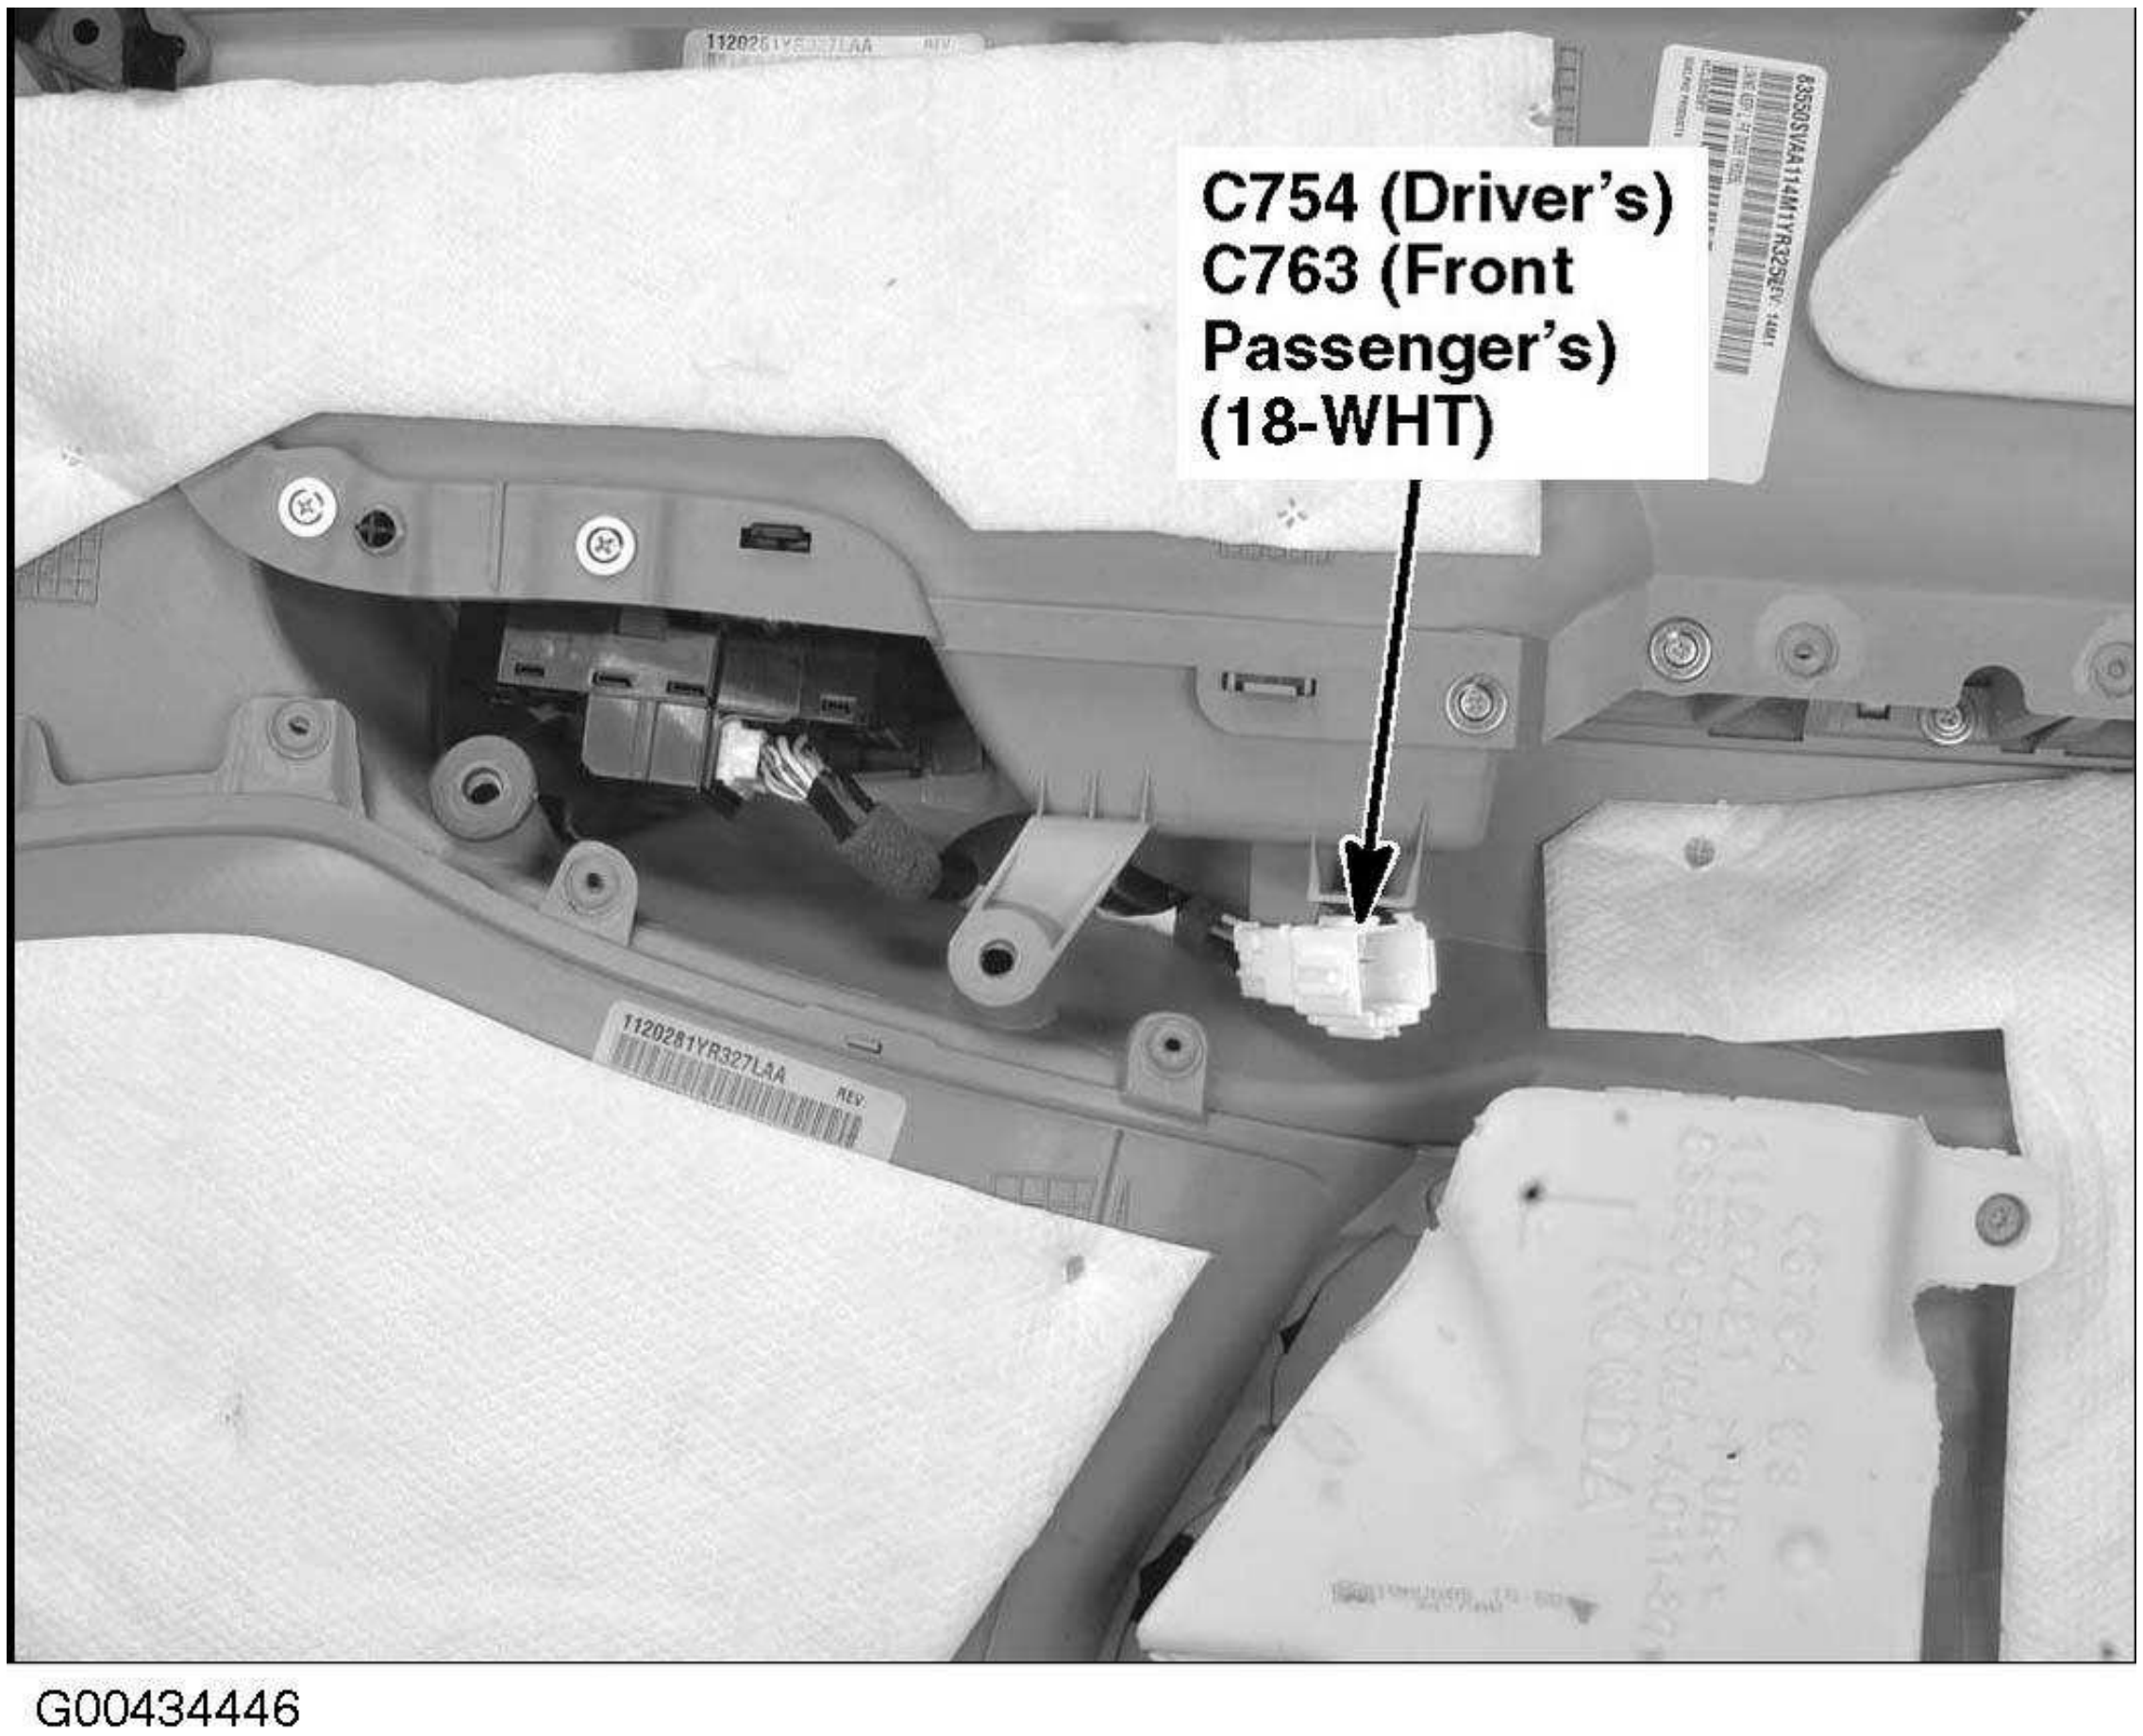
C754 (Driver's)
C763 (Front
Passenger's)
(18-WHT)
G00434446

Fig. 104: Driver's Door (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

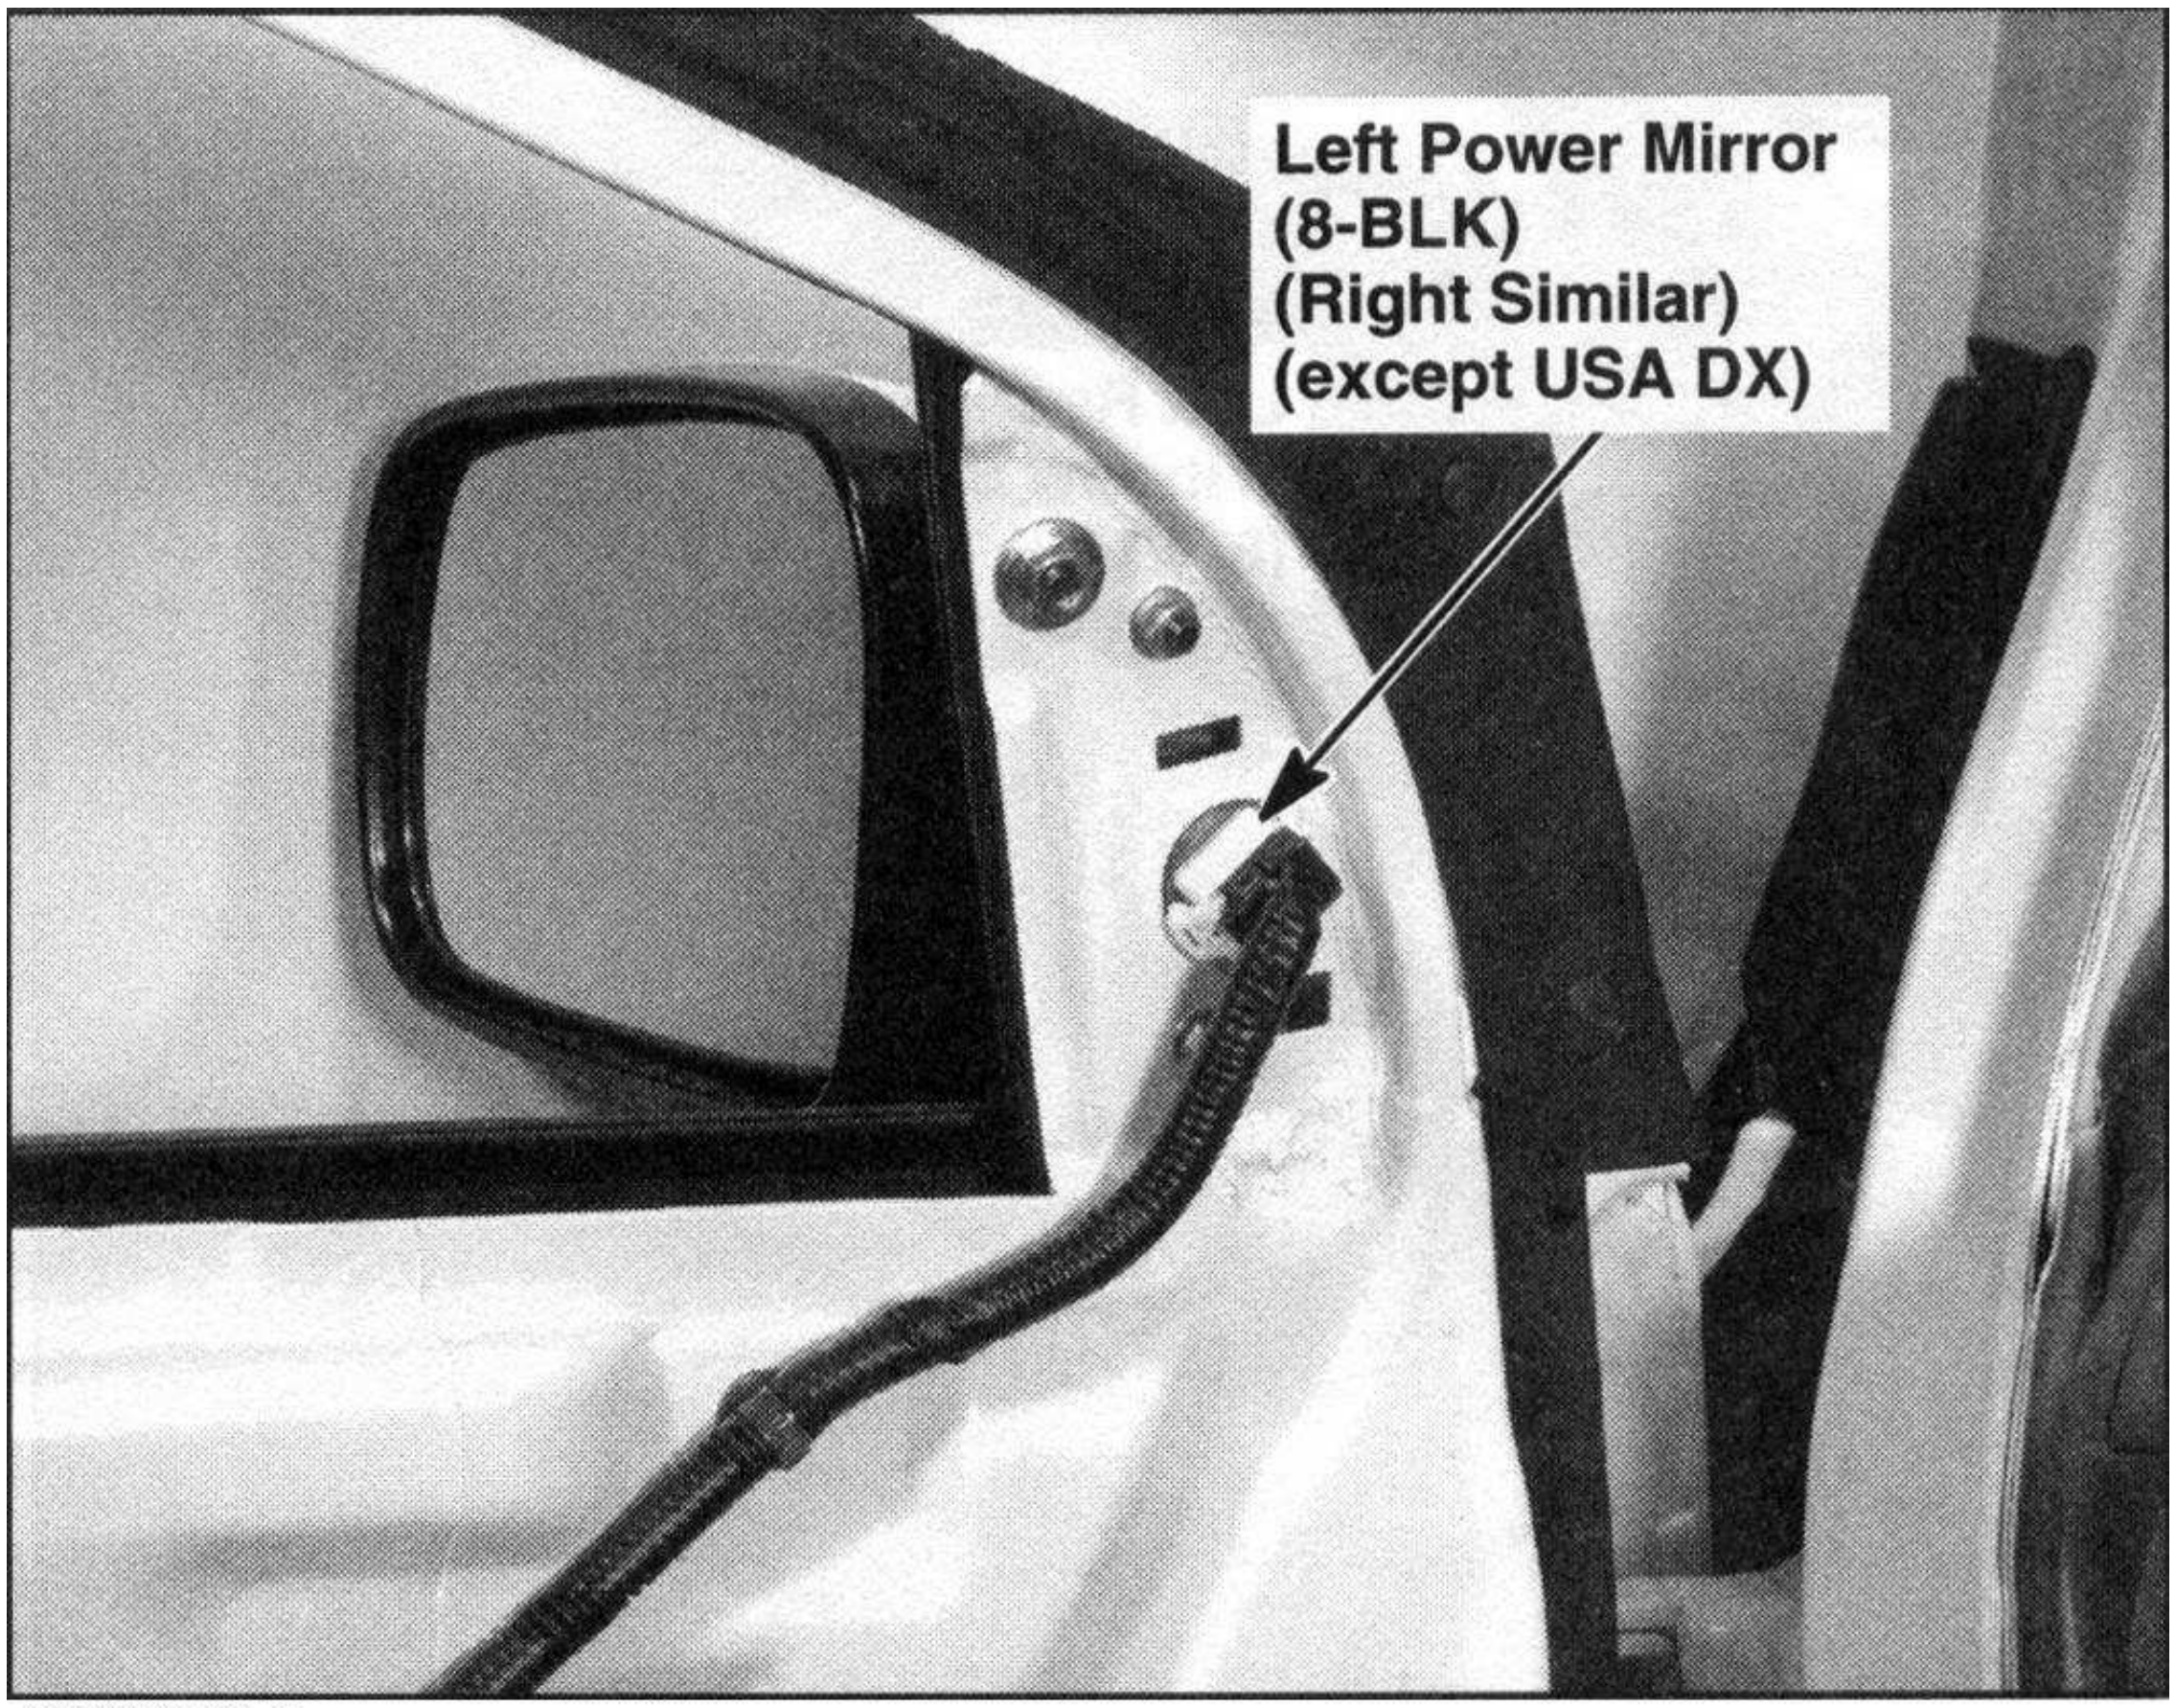
Left Power Mirror
(8-BLK)
(Right Similar)
(except USA DX)
G00447716

Fig. 105: Driver's Door (2-Door) (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

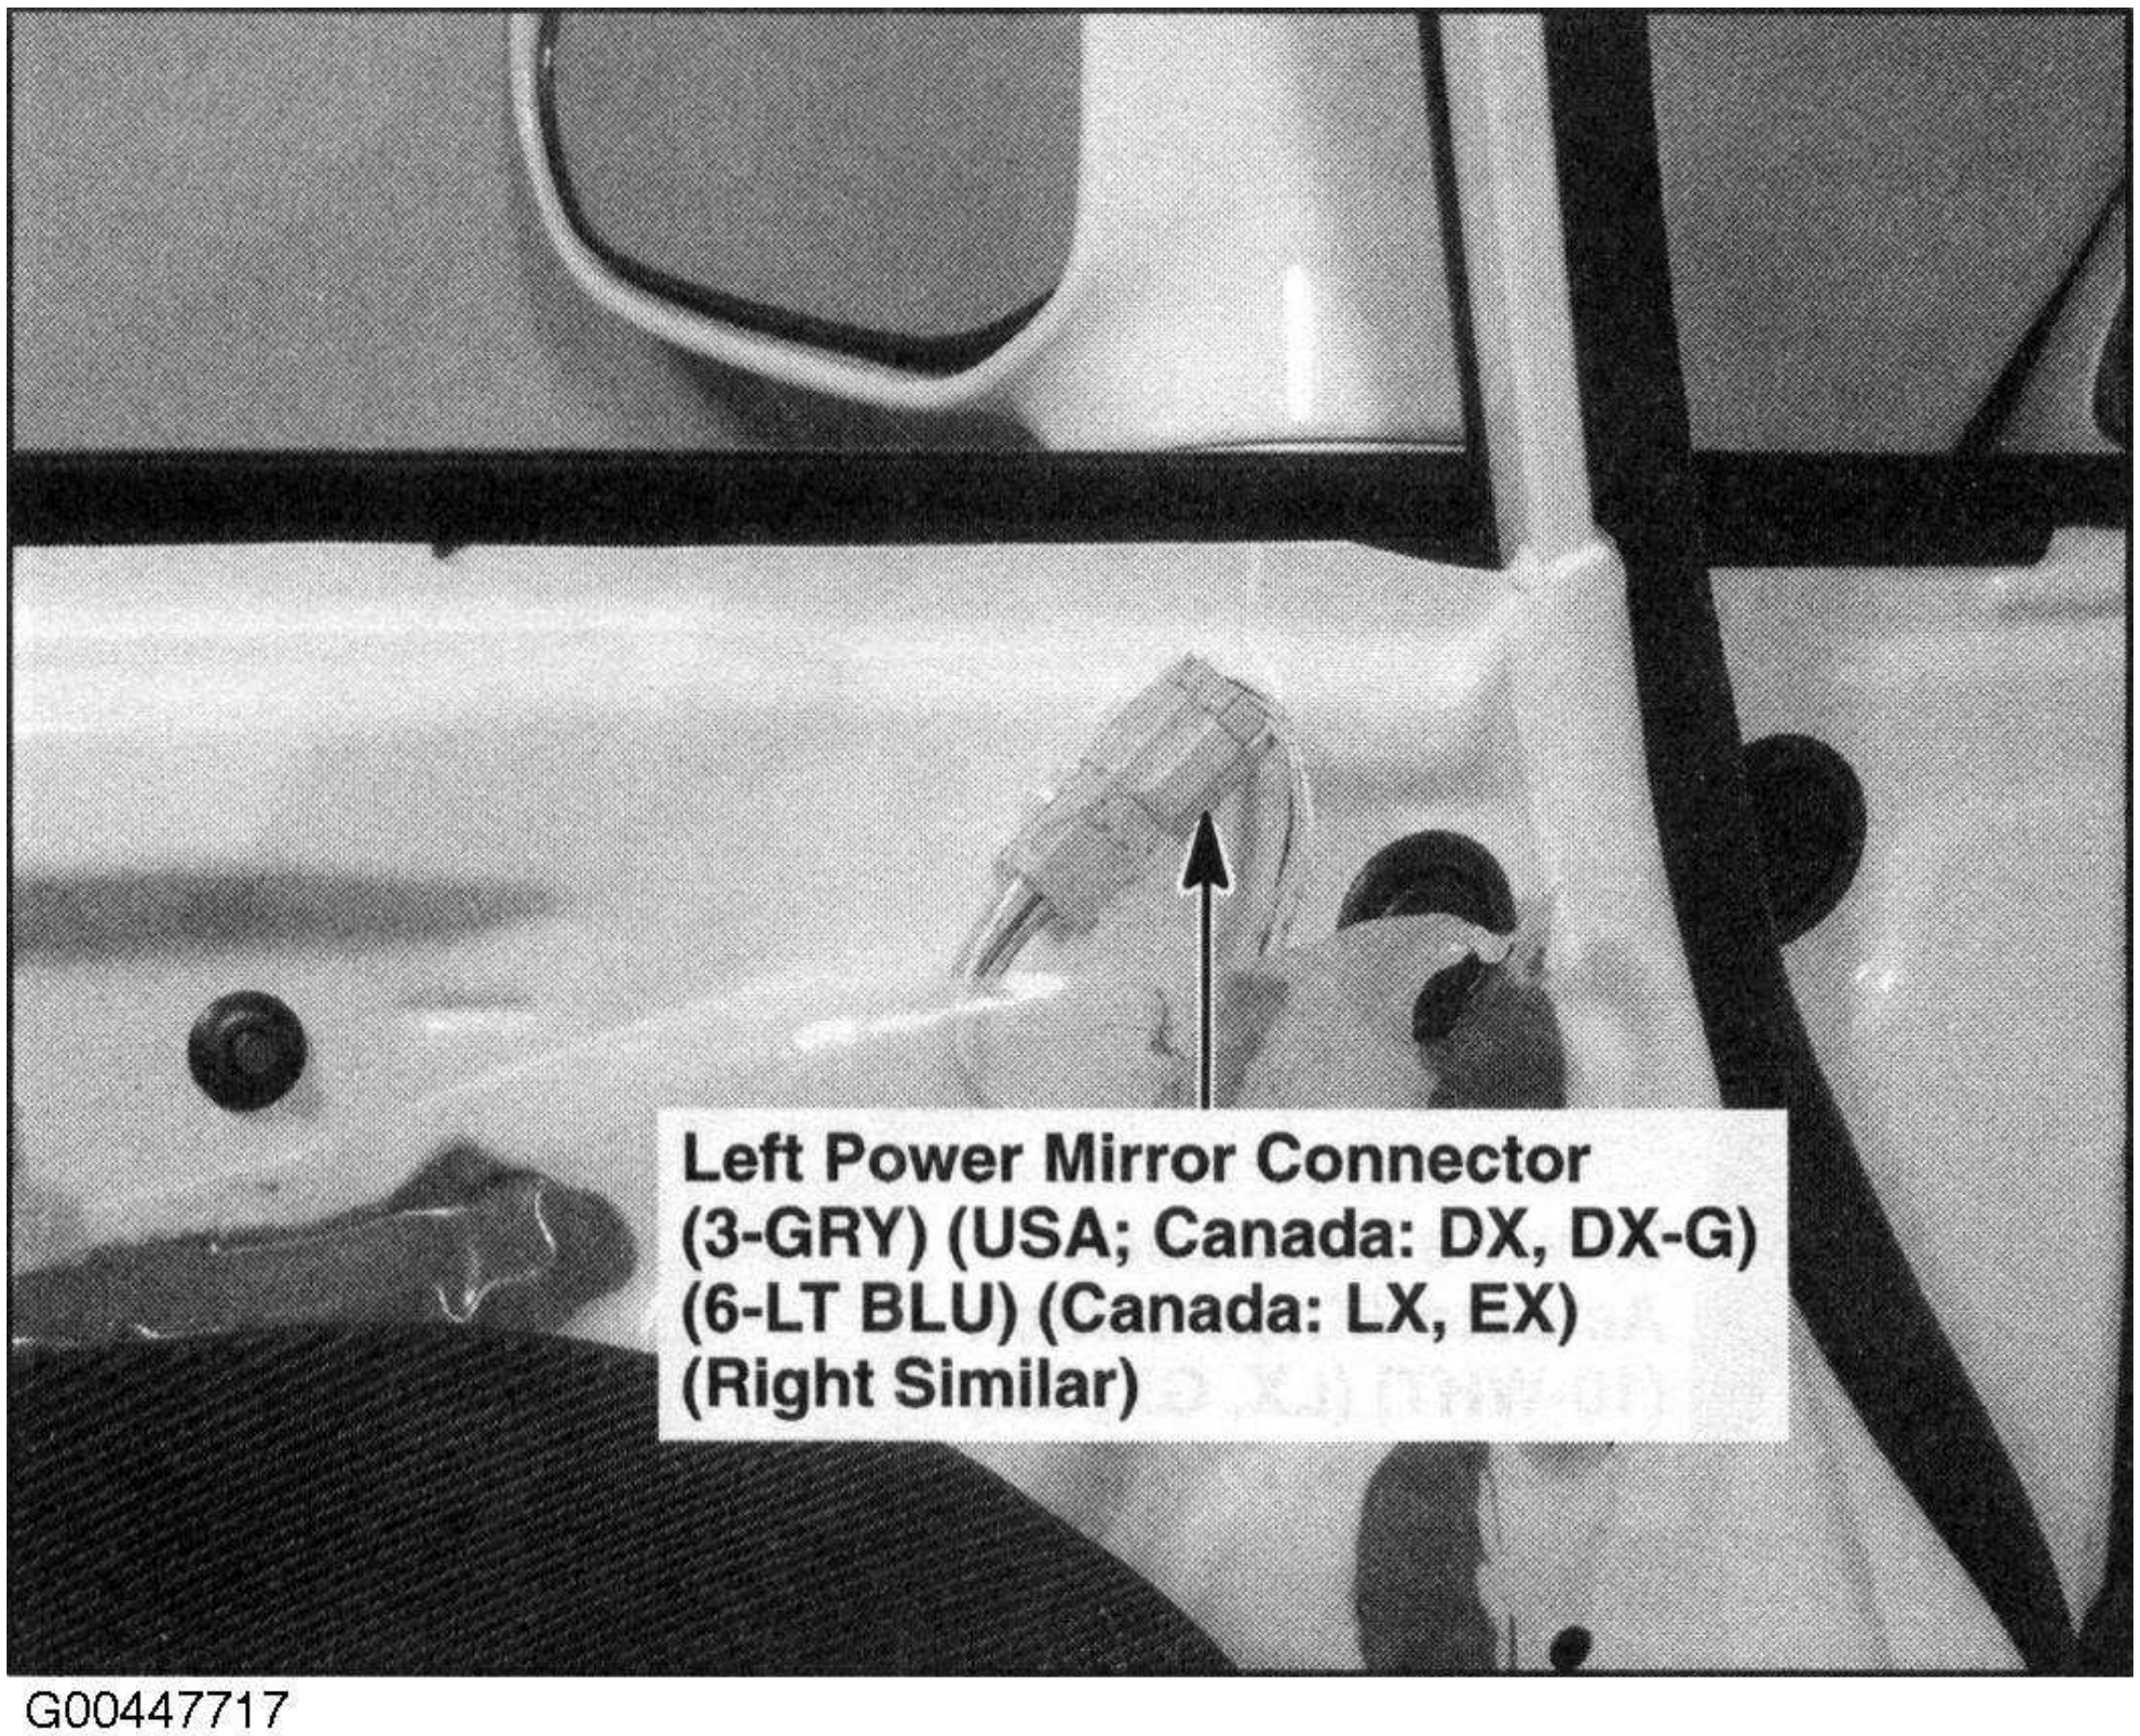
Left Power Mirror Connector
(3-GRY) (USA; Canada: DX, DX-G)
(6-LT BLU) (Canada: LX, EX)
(Right Similar)
G00447717

Fig. 106: Driver's Door (4-Door) (Front Passenger's Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

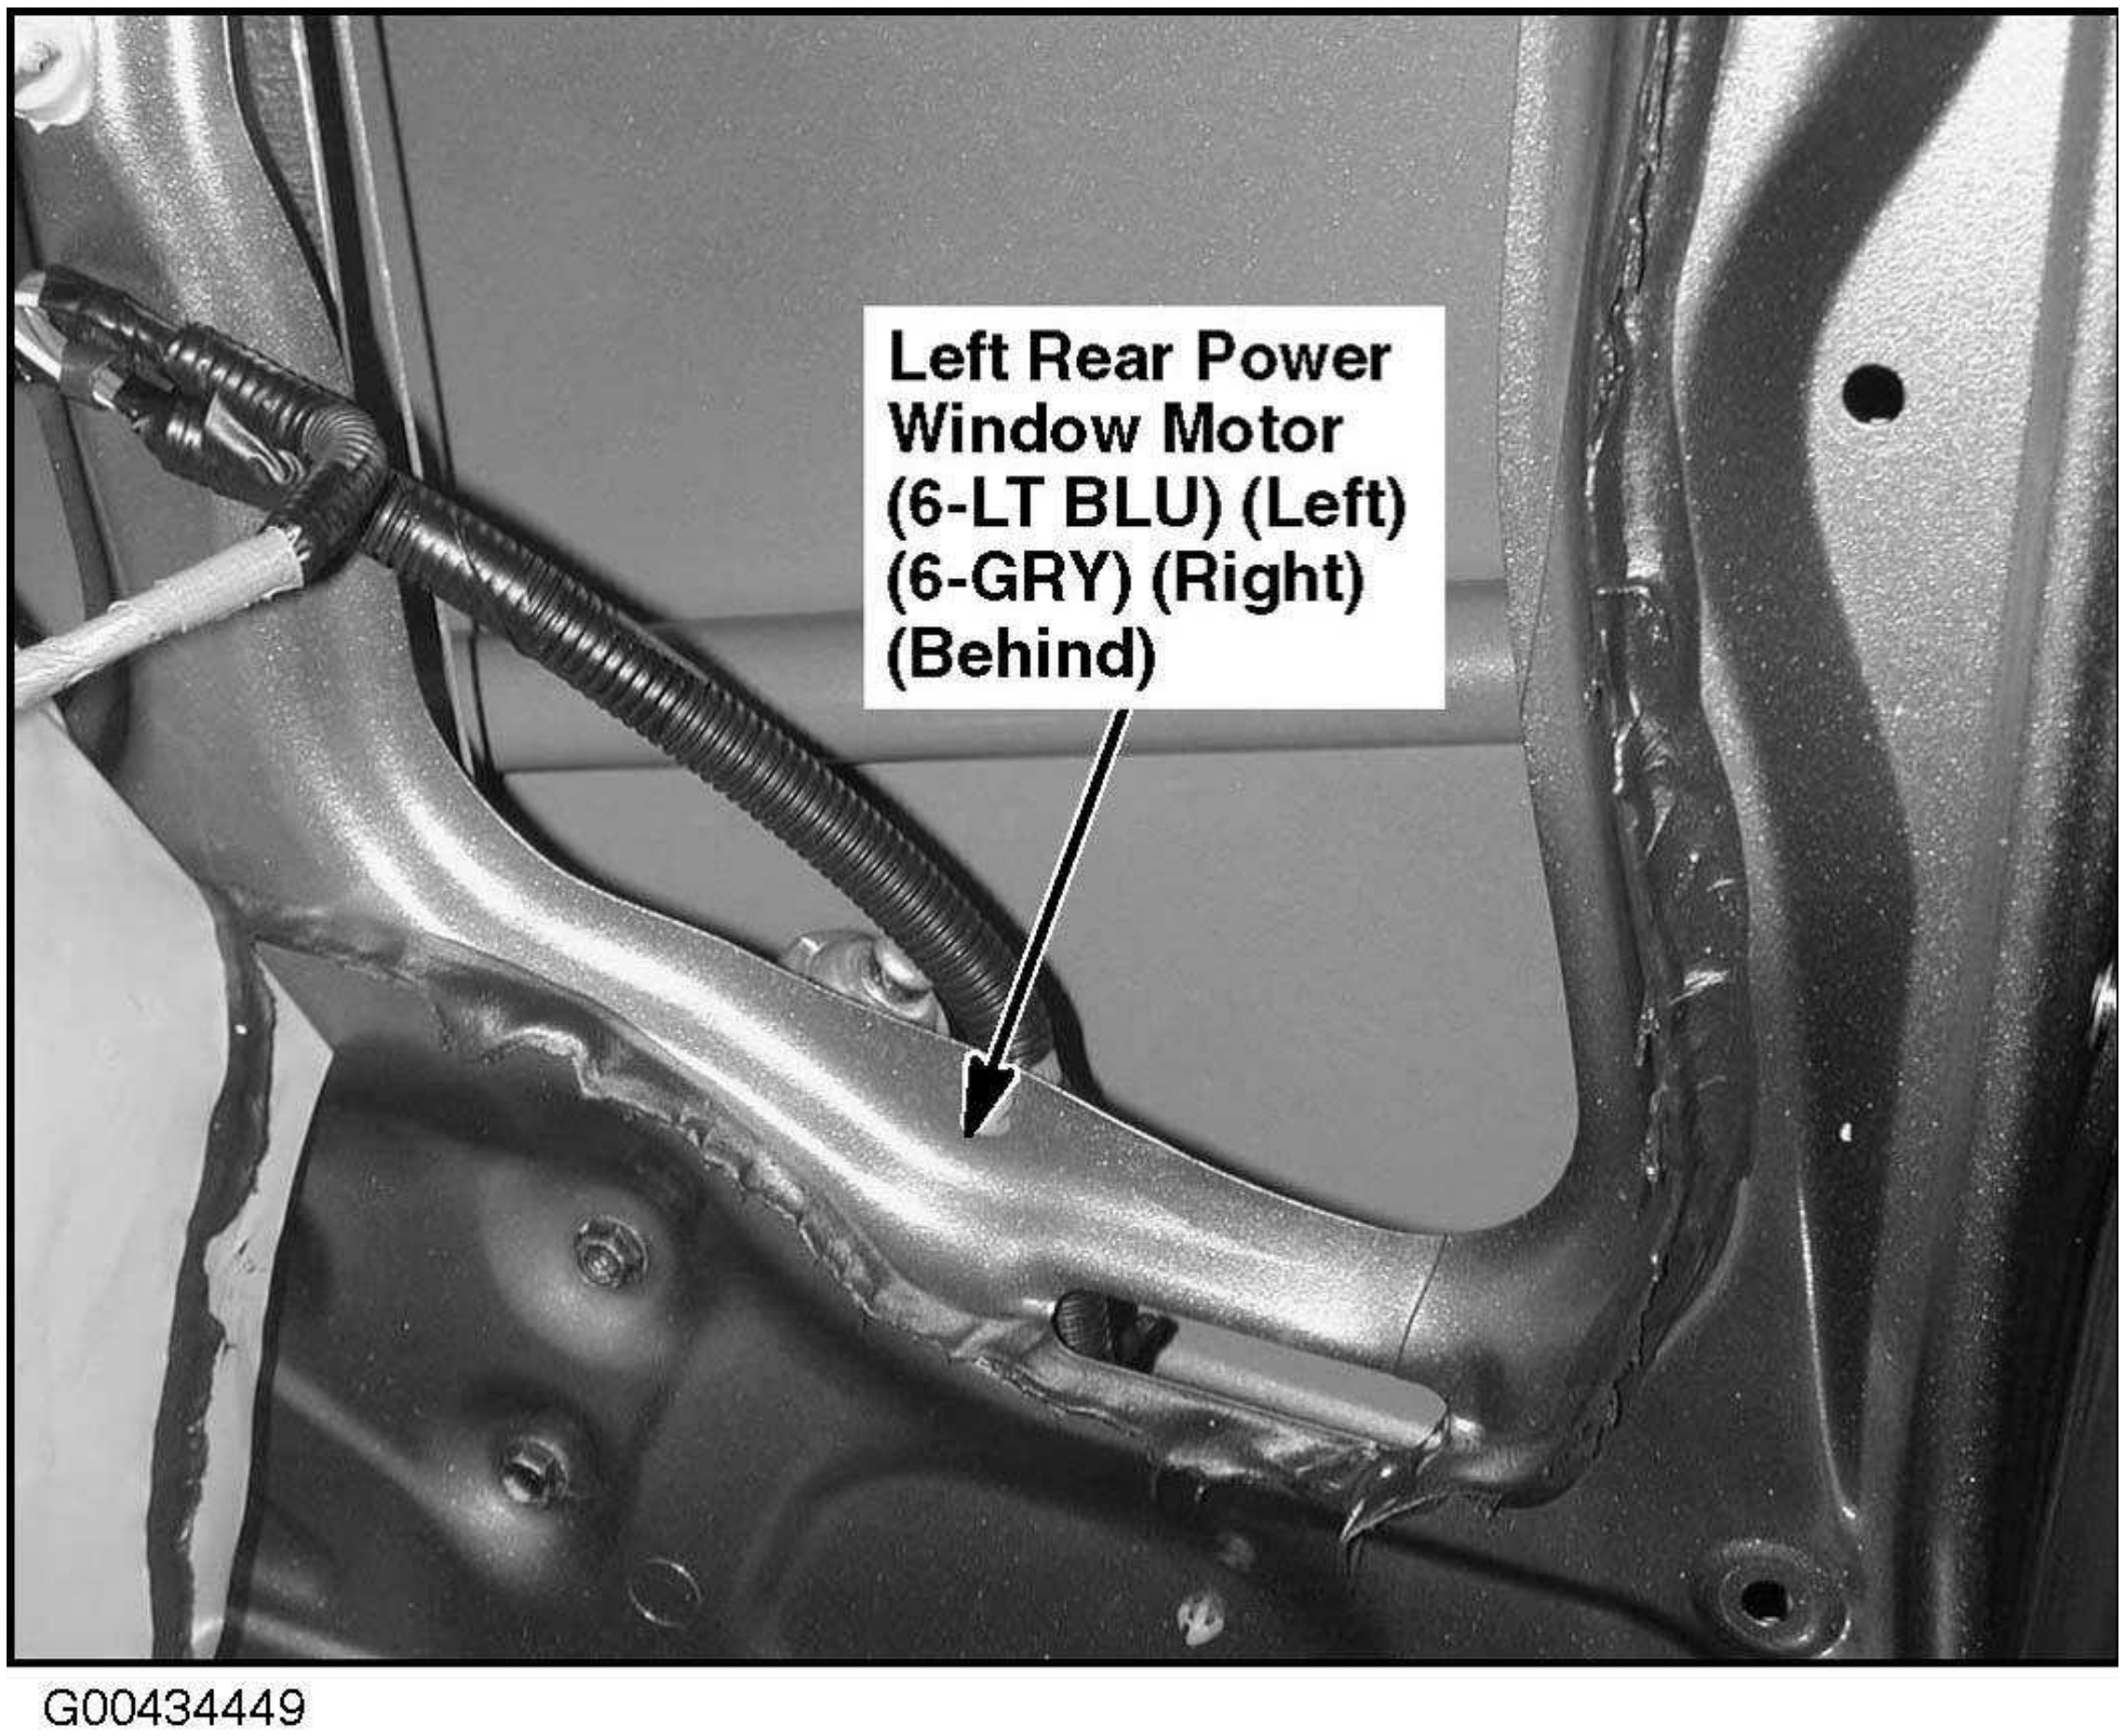
Left Rear Power
Window Motor
(6-LT BLU) (Left)
(6-GRY) (Right)
(Behind)
G00434449

Fig. 107: Left Rear Door (Right Rear Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

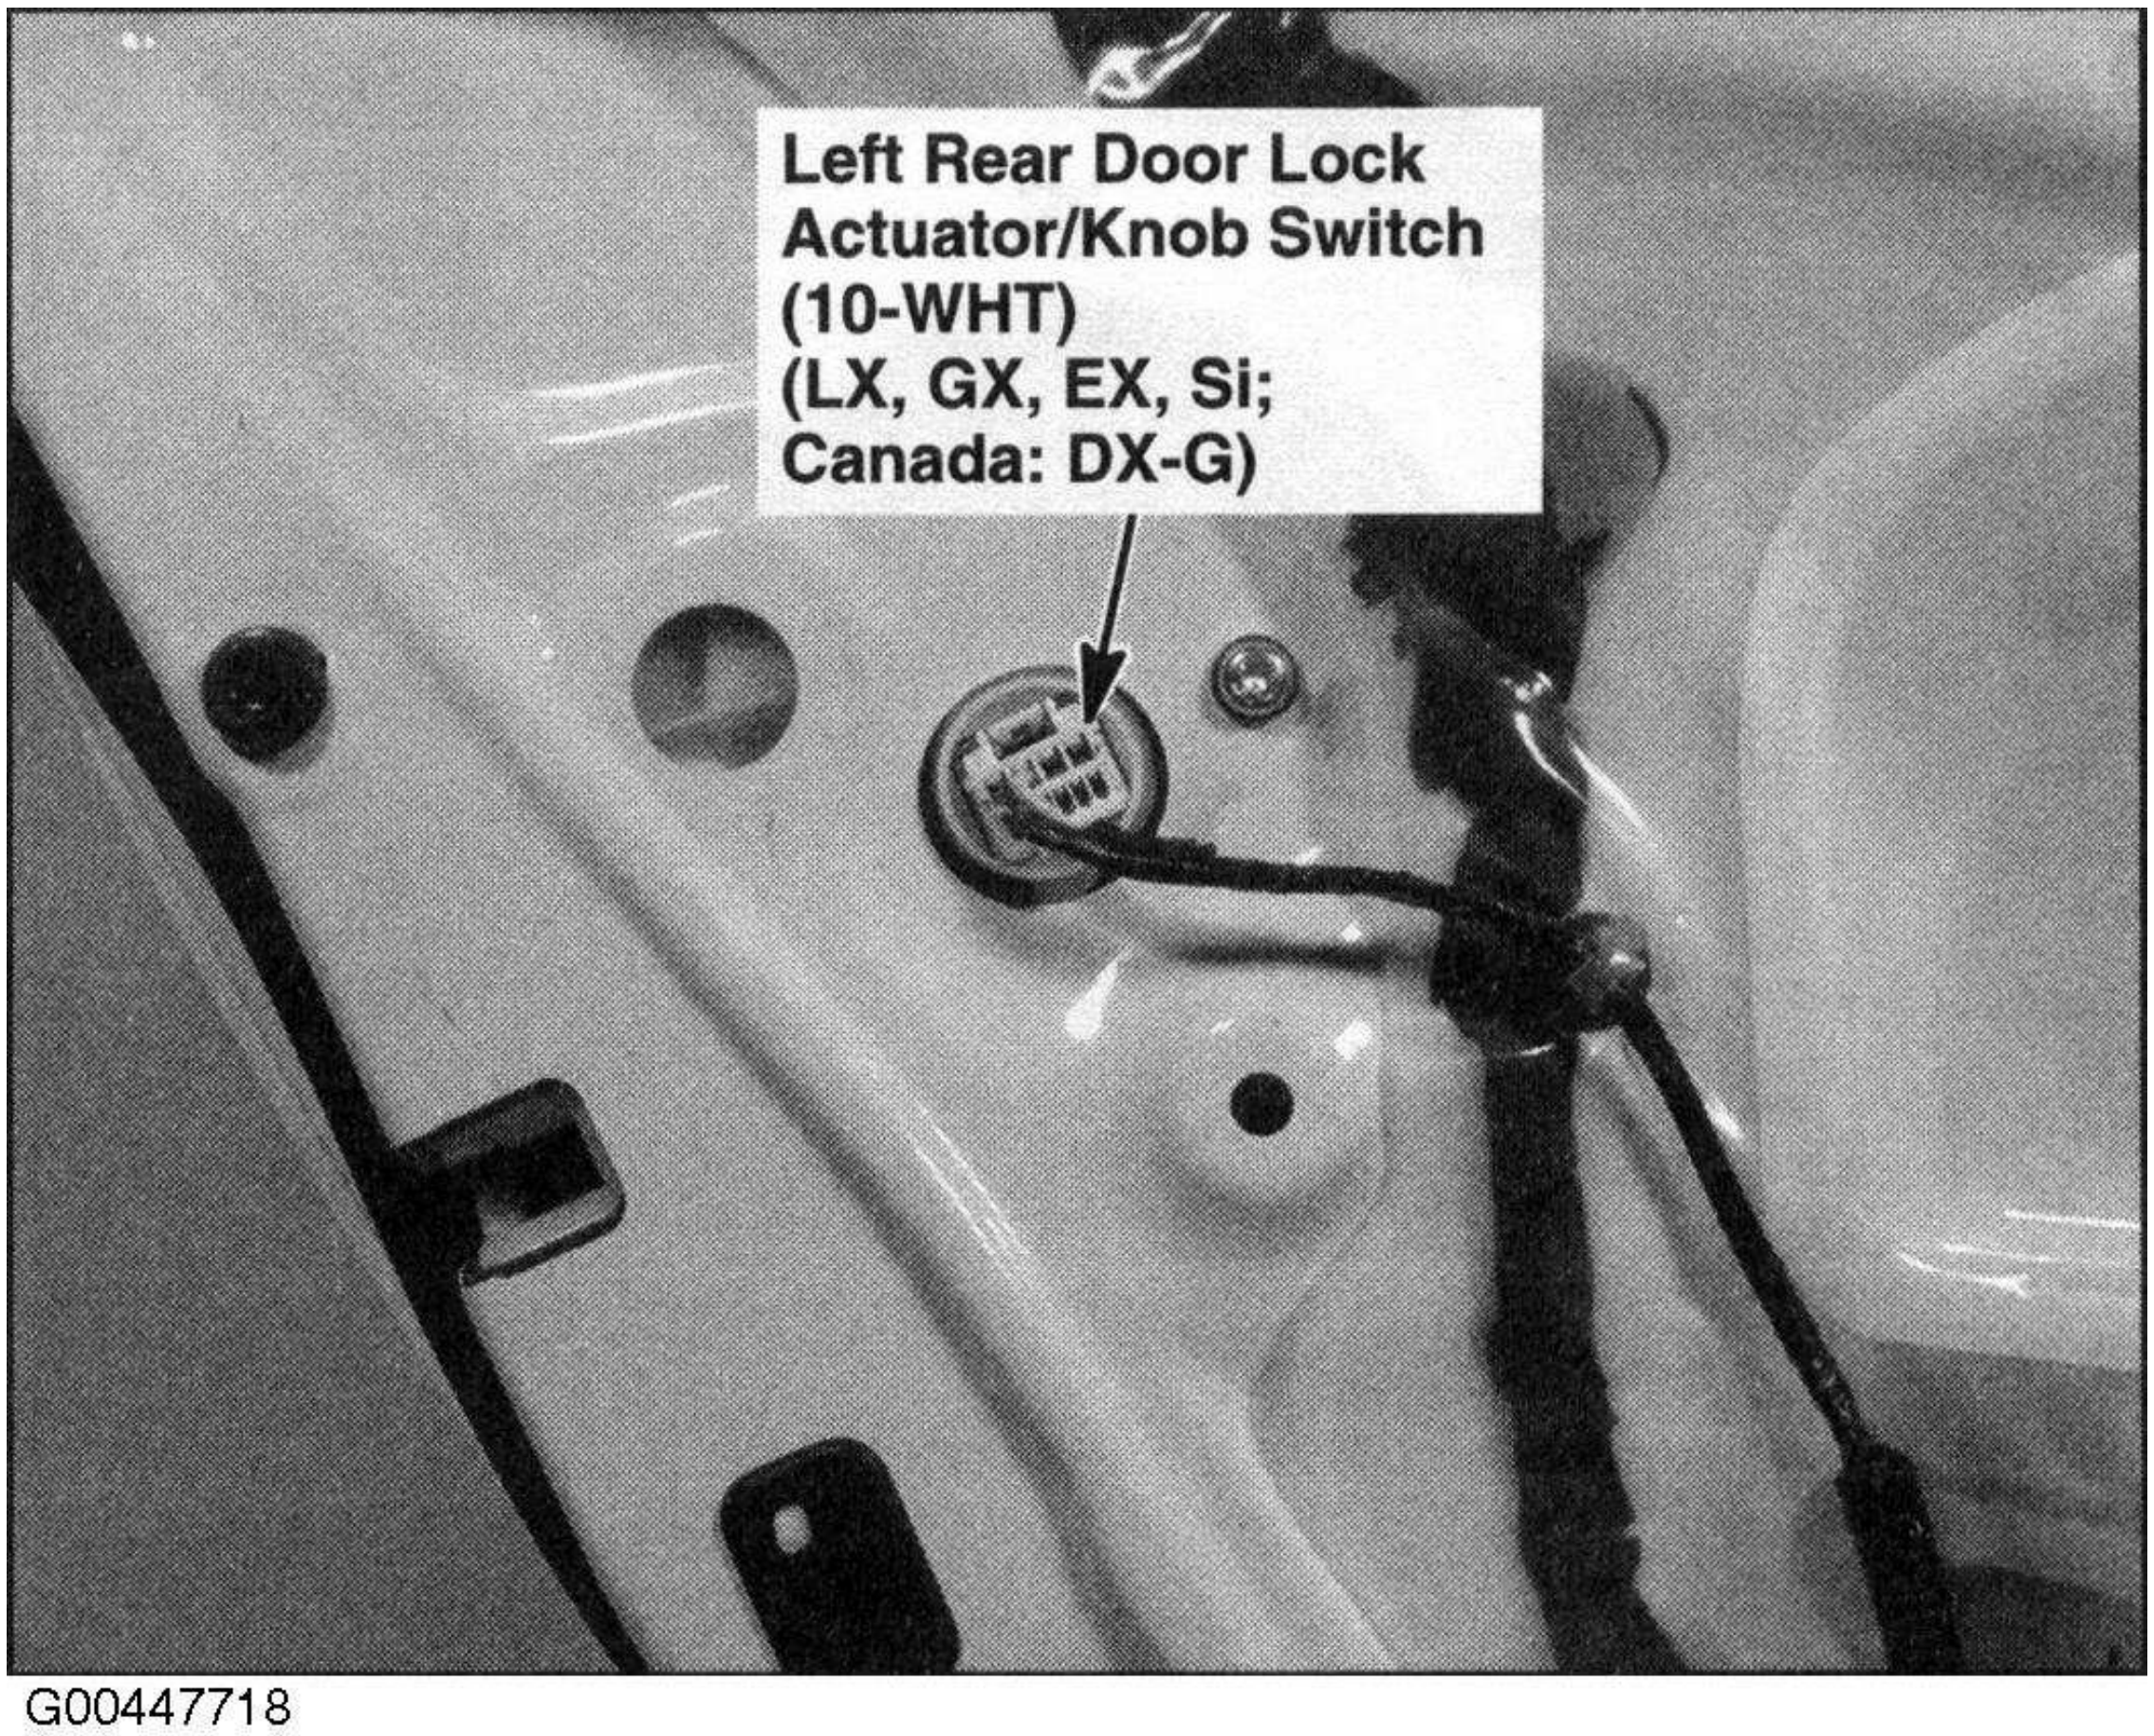
Left Rear Door Lock
Actuator/Knob Switch
(10-WHT)
(LX, GX, EX, Si;
Canada: DX-G)
G00447718

Fig. 108: Left Rear Door (Right Rear Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

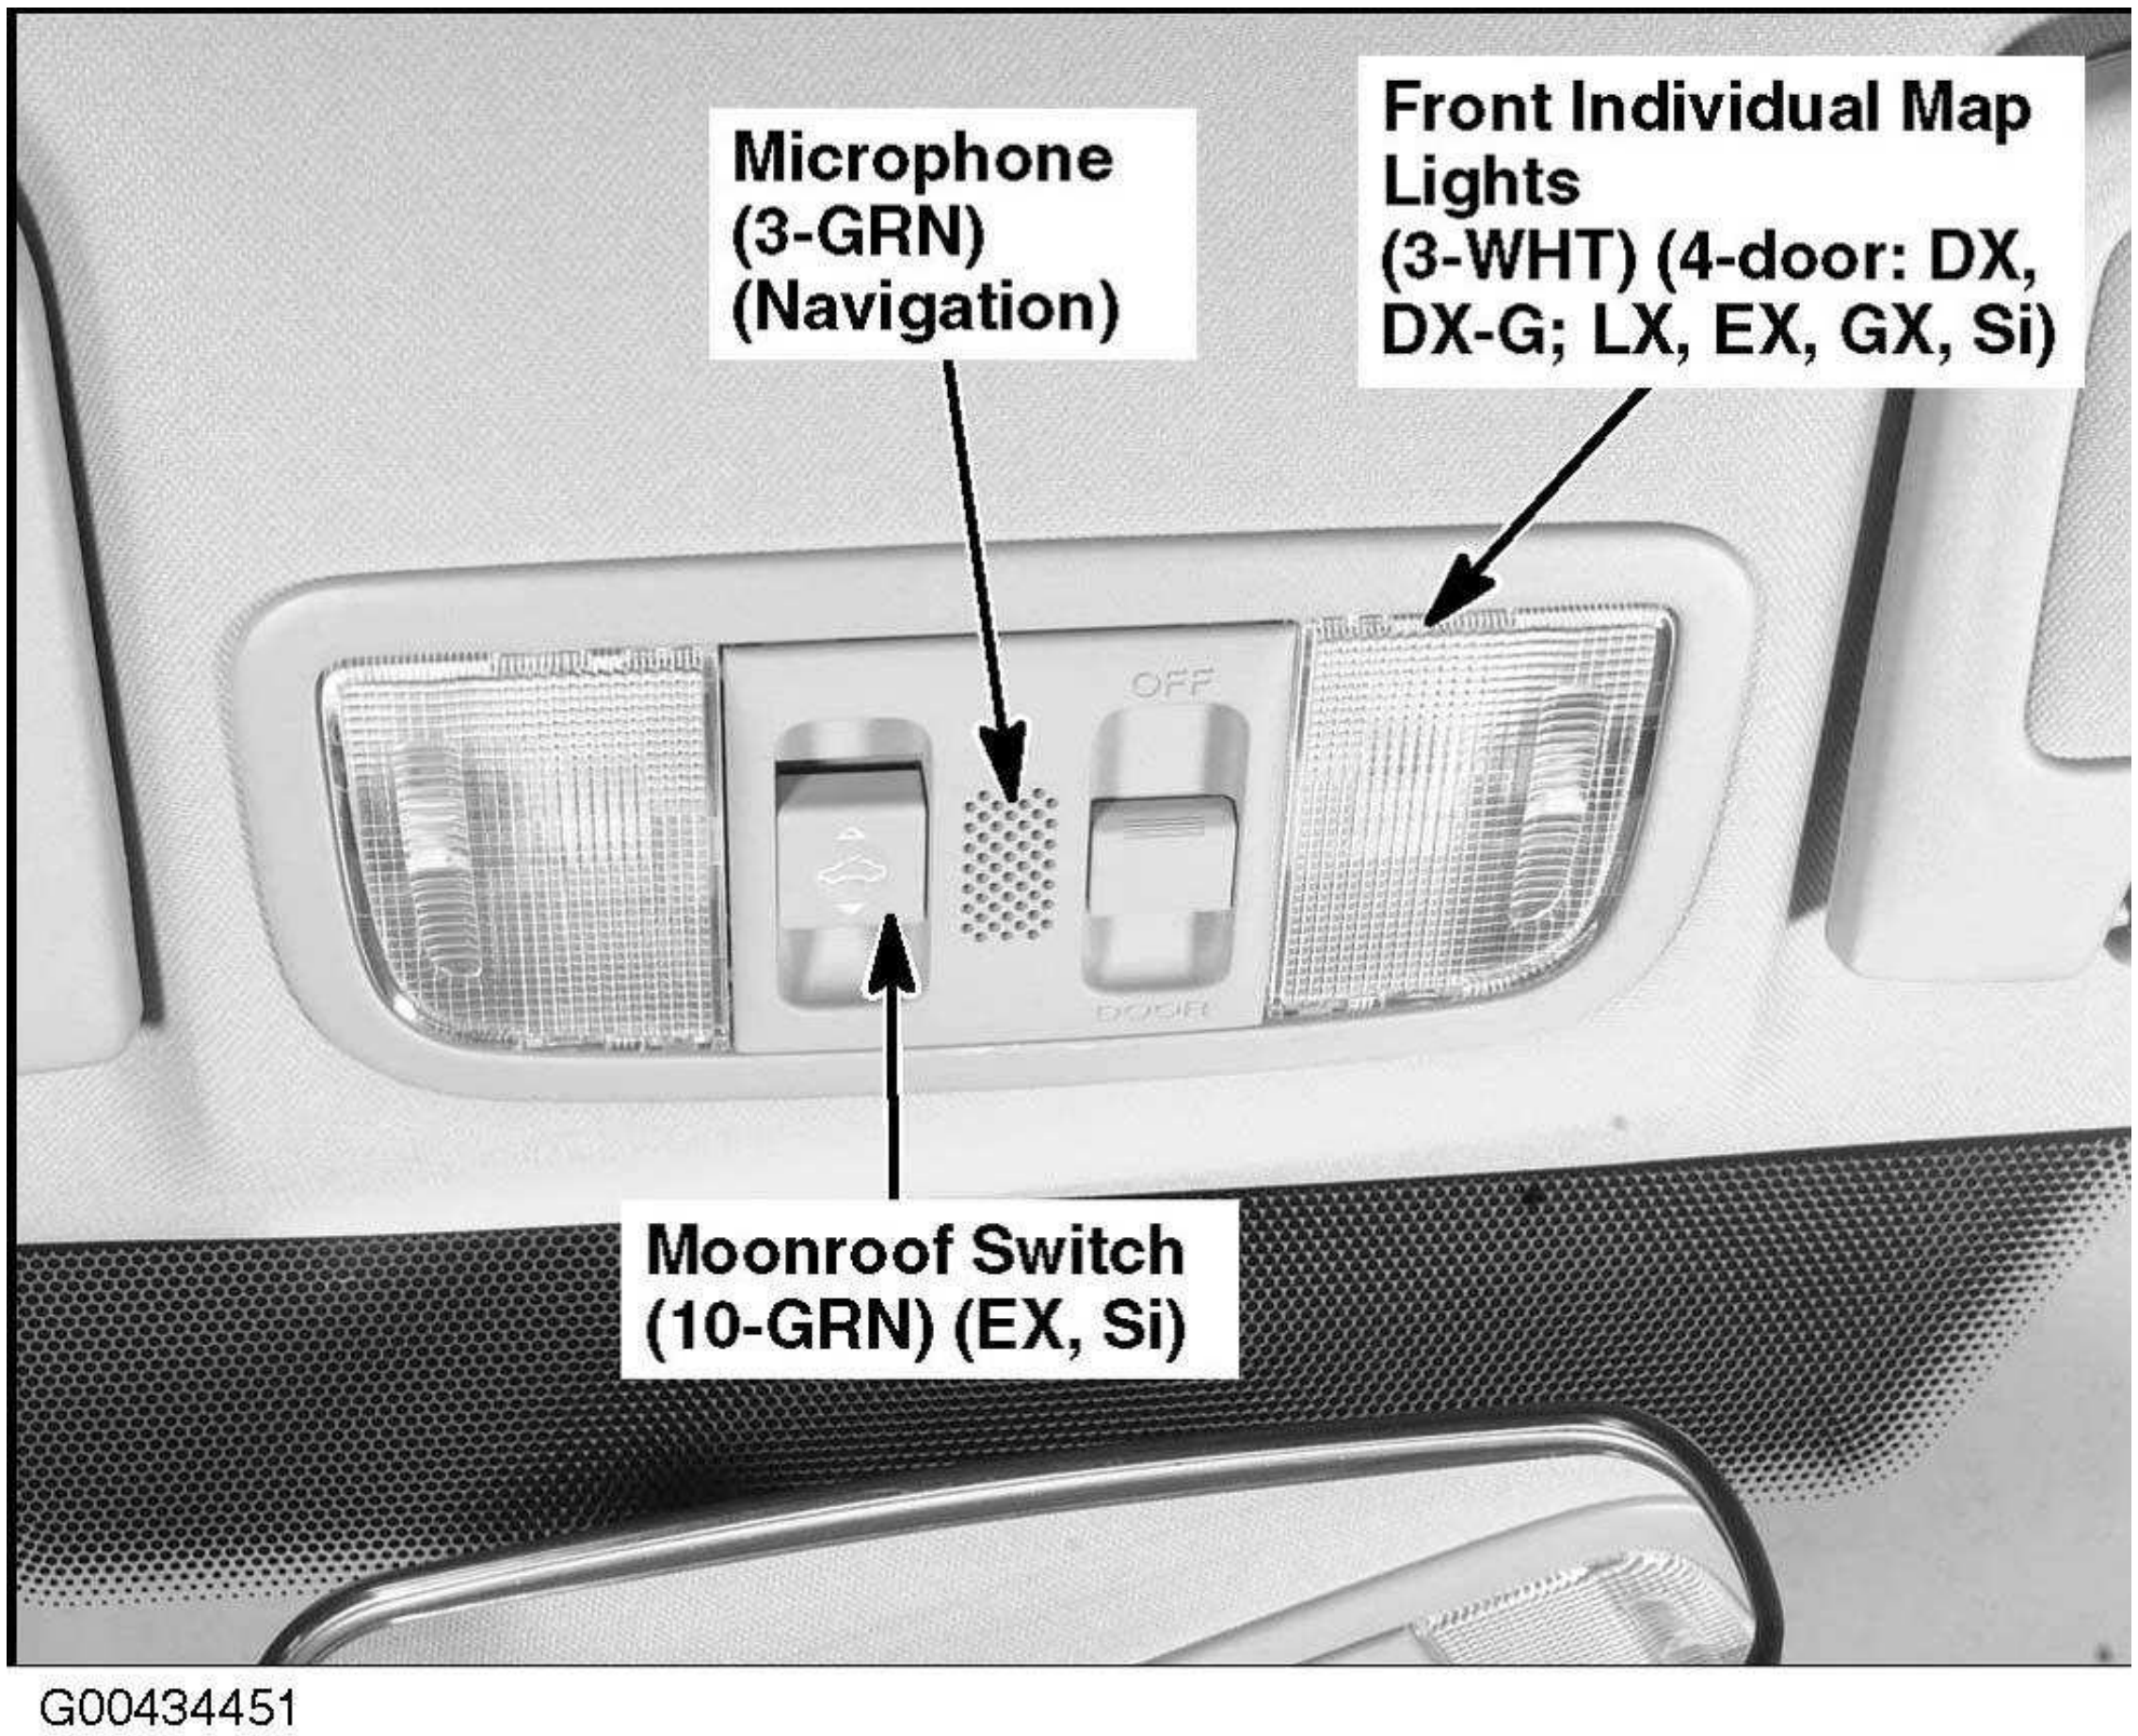
Microphone
(3-GRN)
(Navigation)
Front Individual Map
Lights
(3-WHT) (4-door: DX,
DX-G; LX, EX, GX, Si)
OFF
DOOR
Moonroof Switch
(10-GRN) (EX, Si)
G00434451

Fig. 109: Front Of Roof
Courtesy of AMERICAN HONDA MOTOR CO., INC.

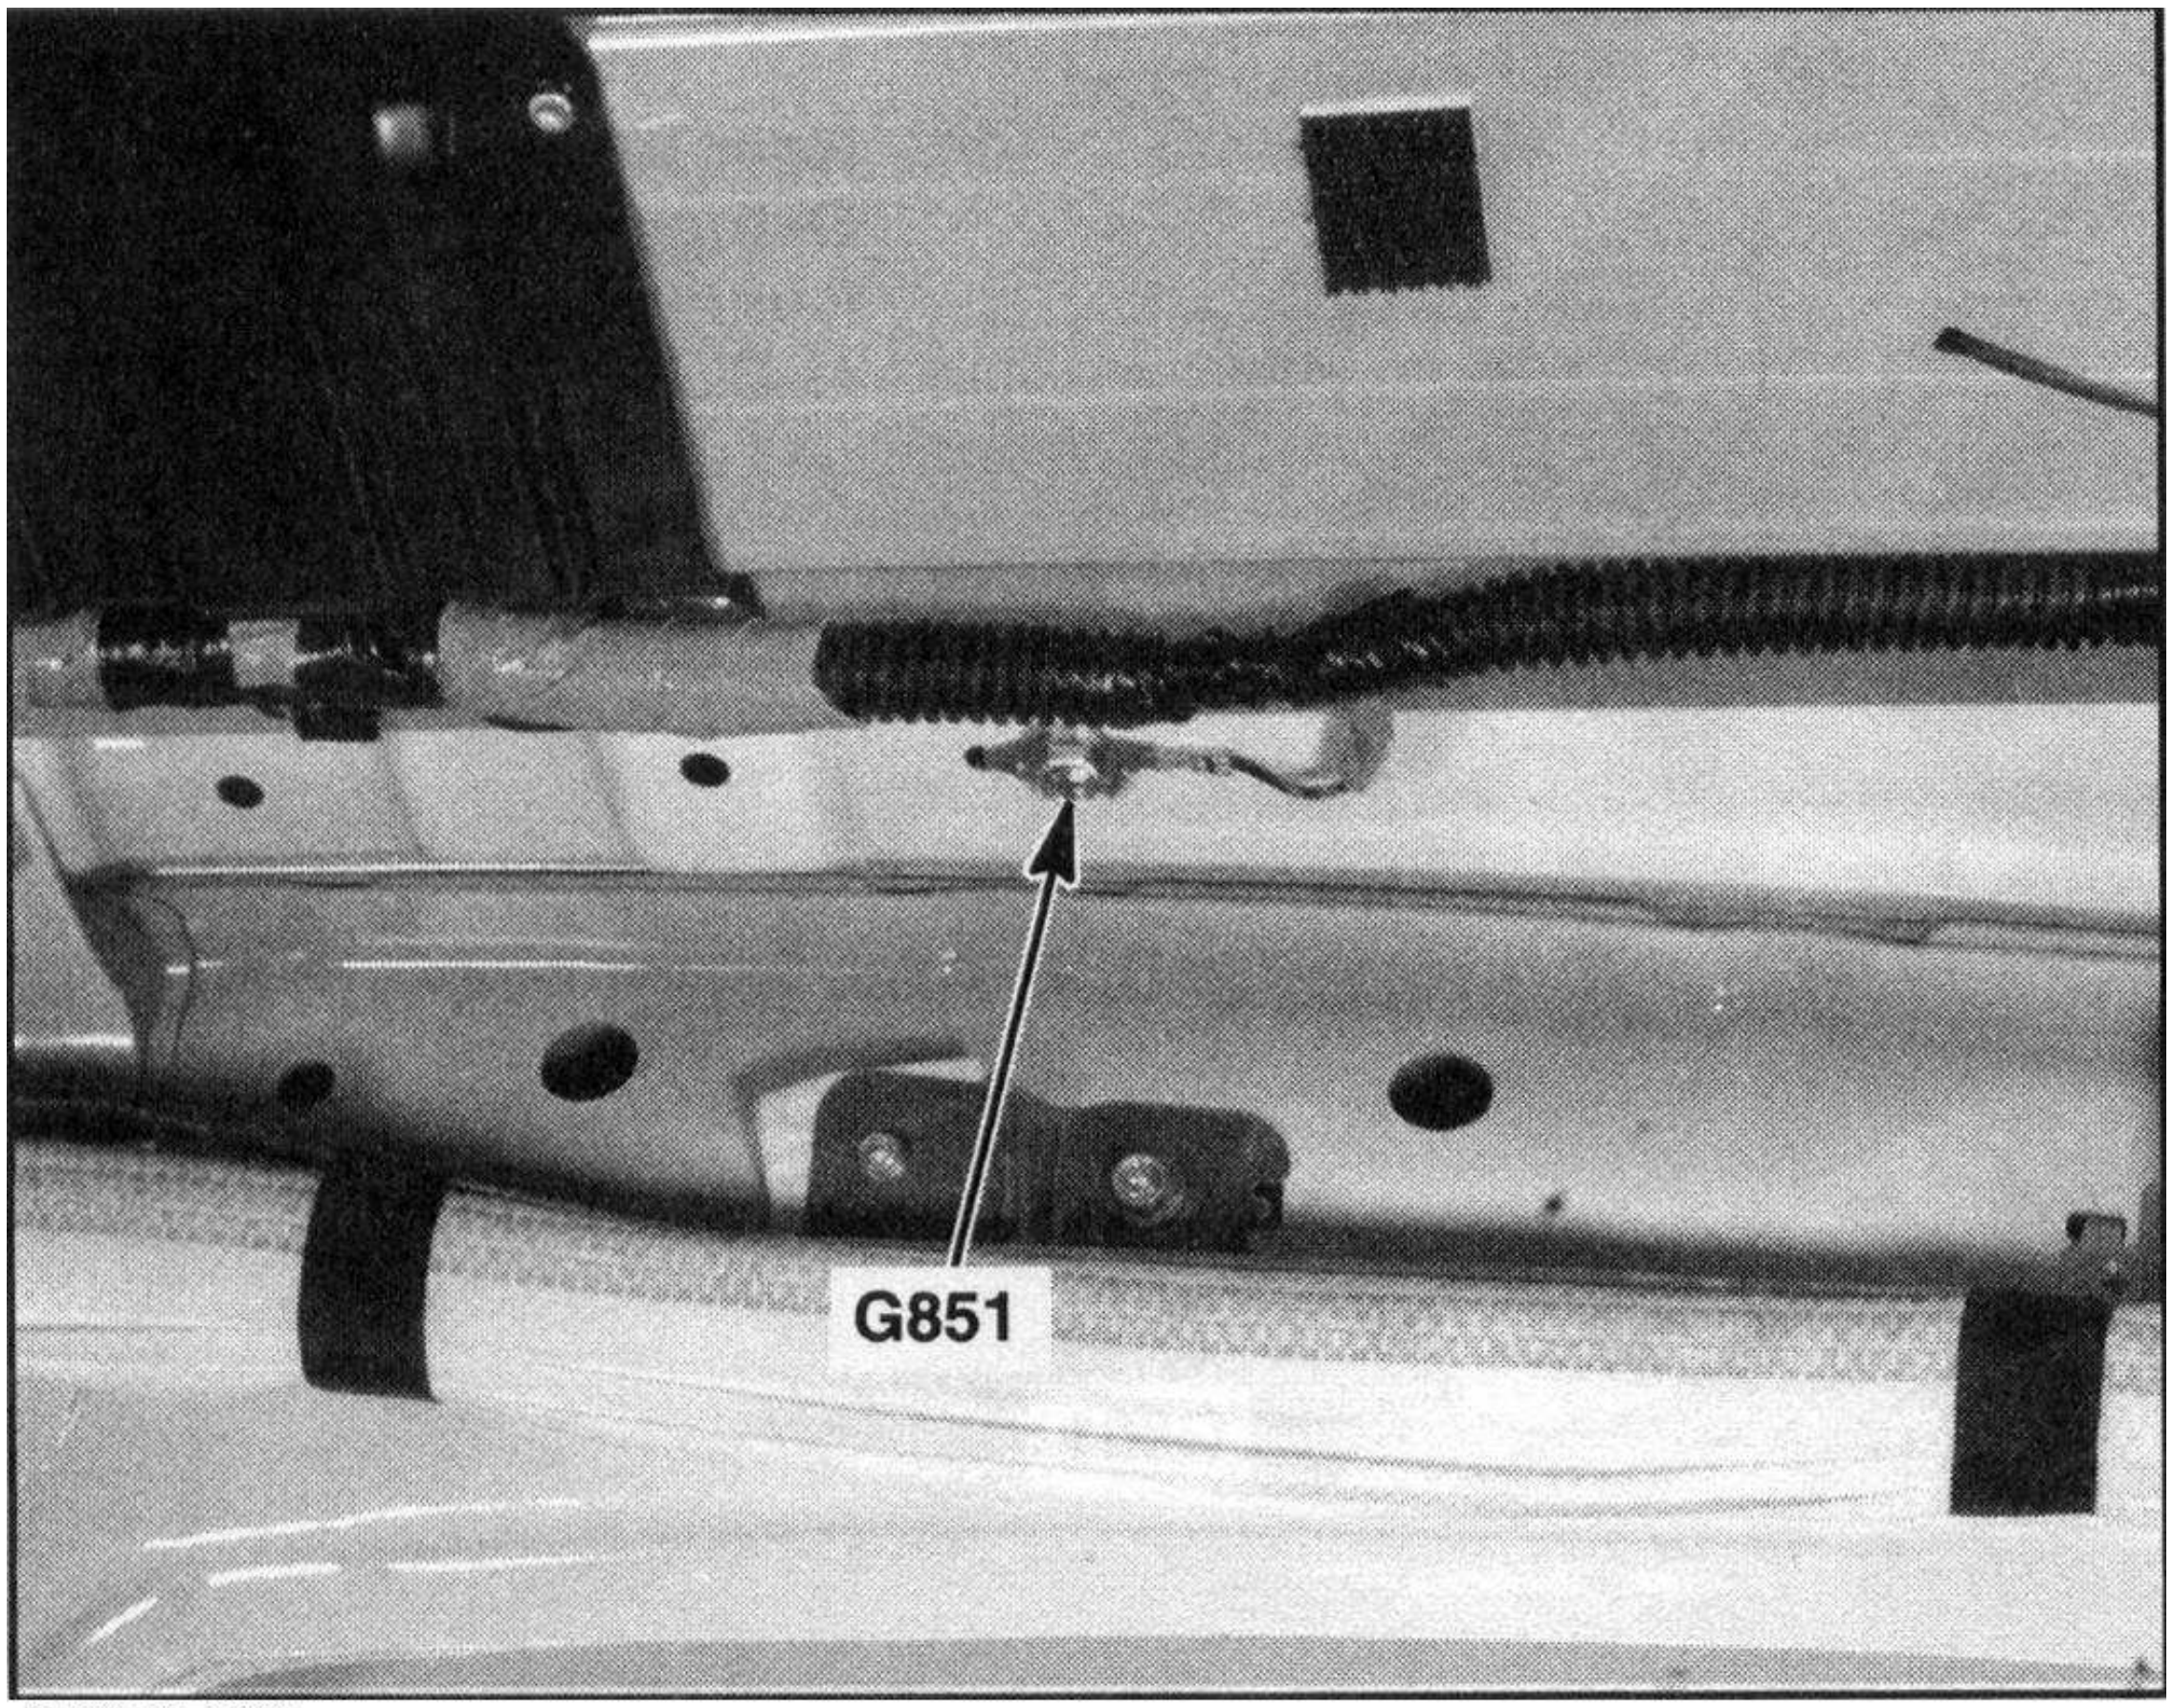
G851
G00447720

Fig. 110: Left Side Of Roof
Courtesy of AMERICAN HONDA MOTOR CO., INC.

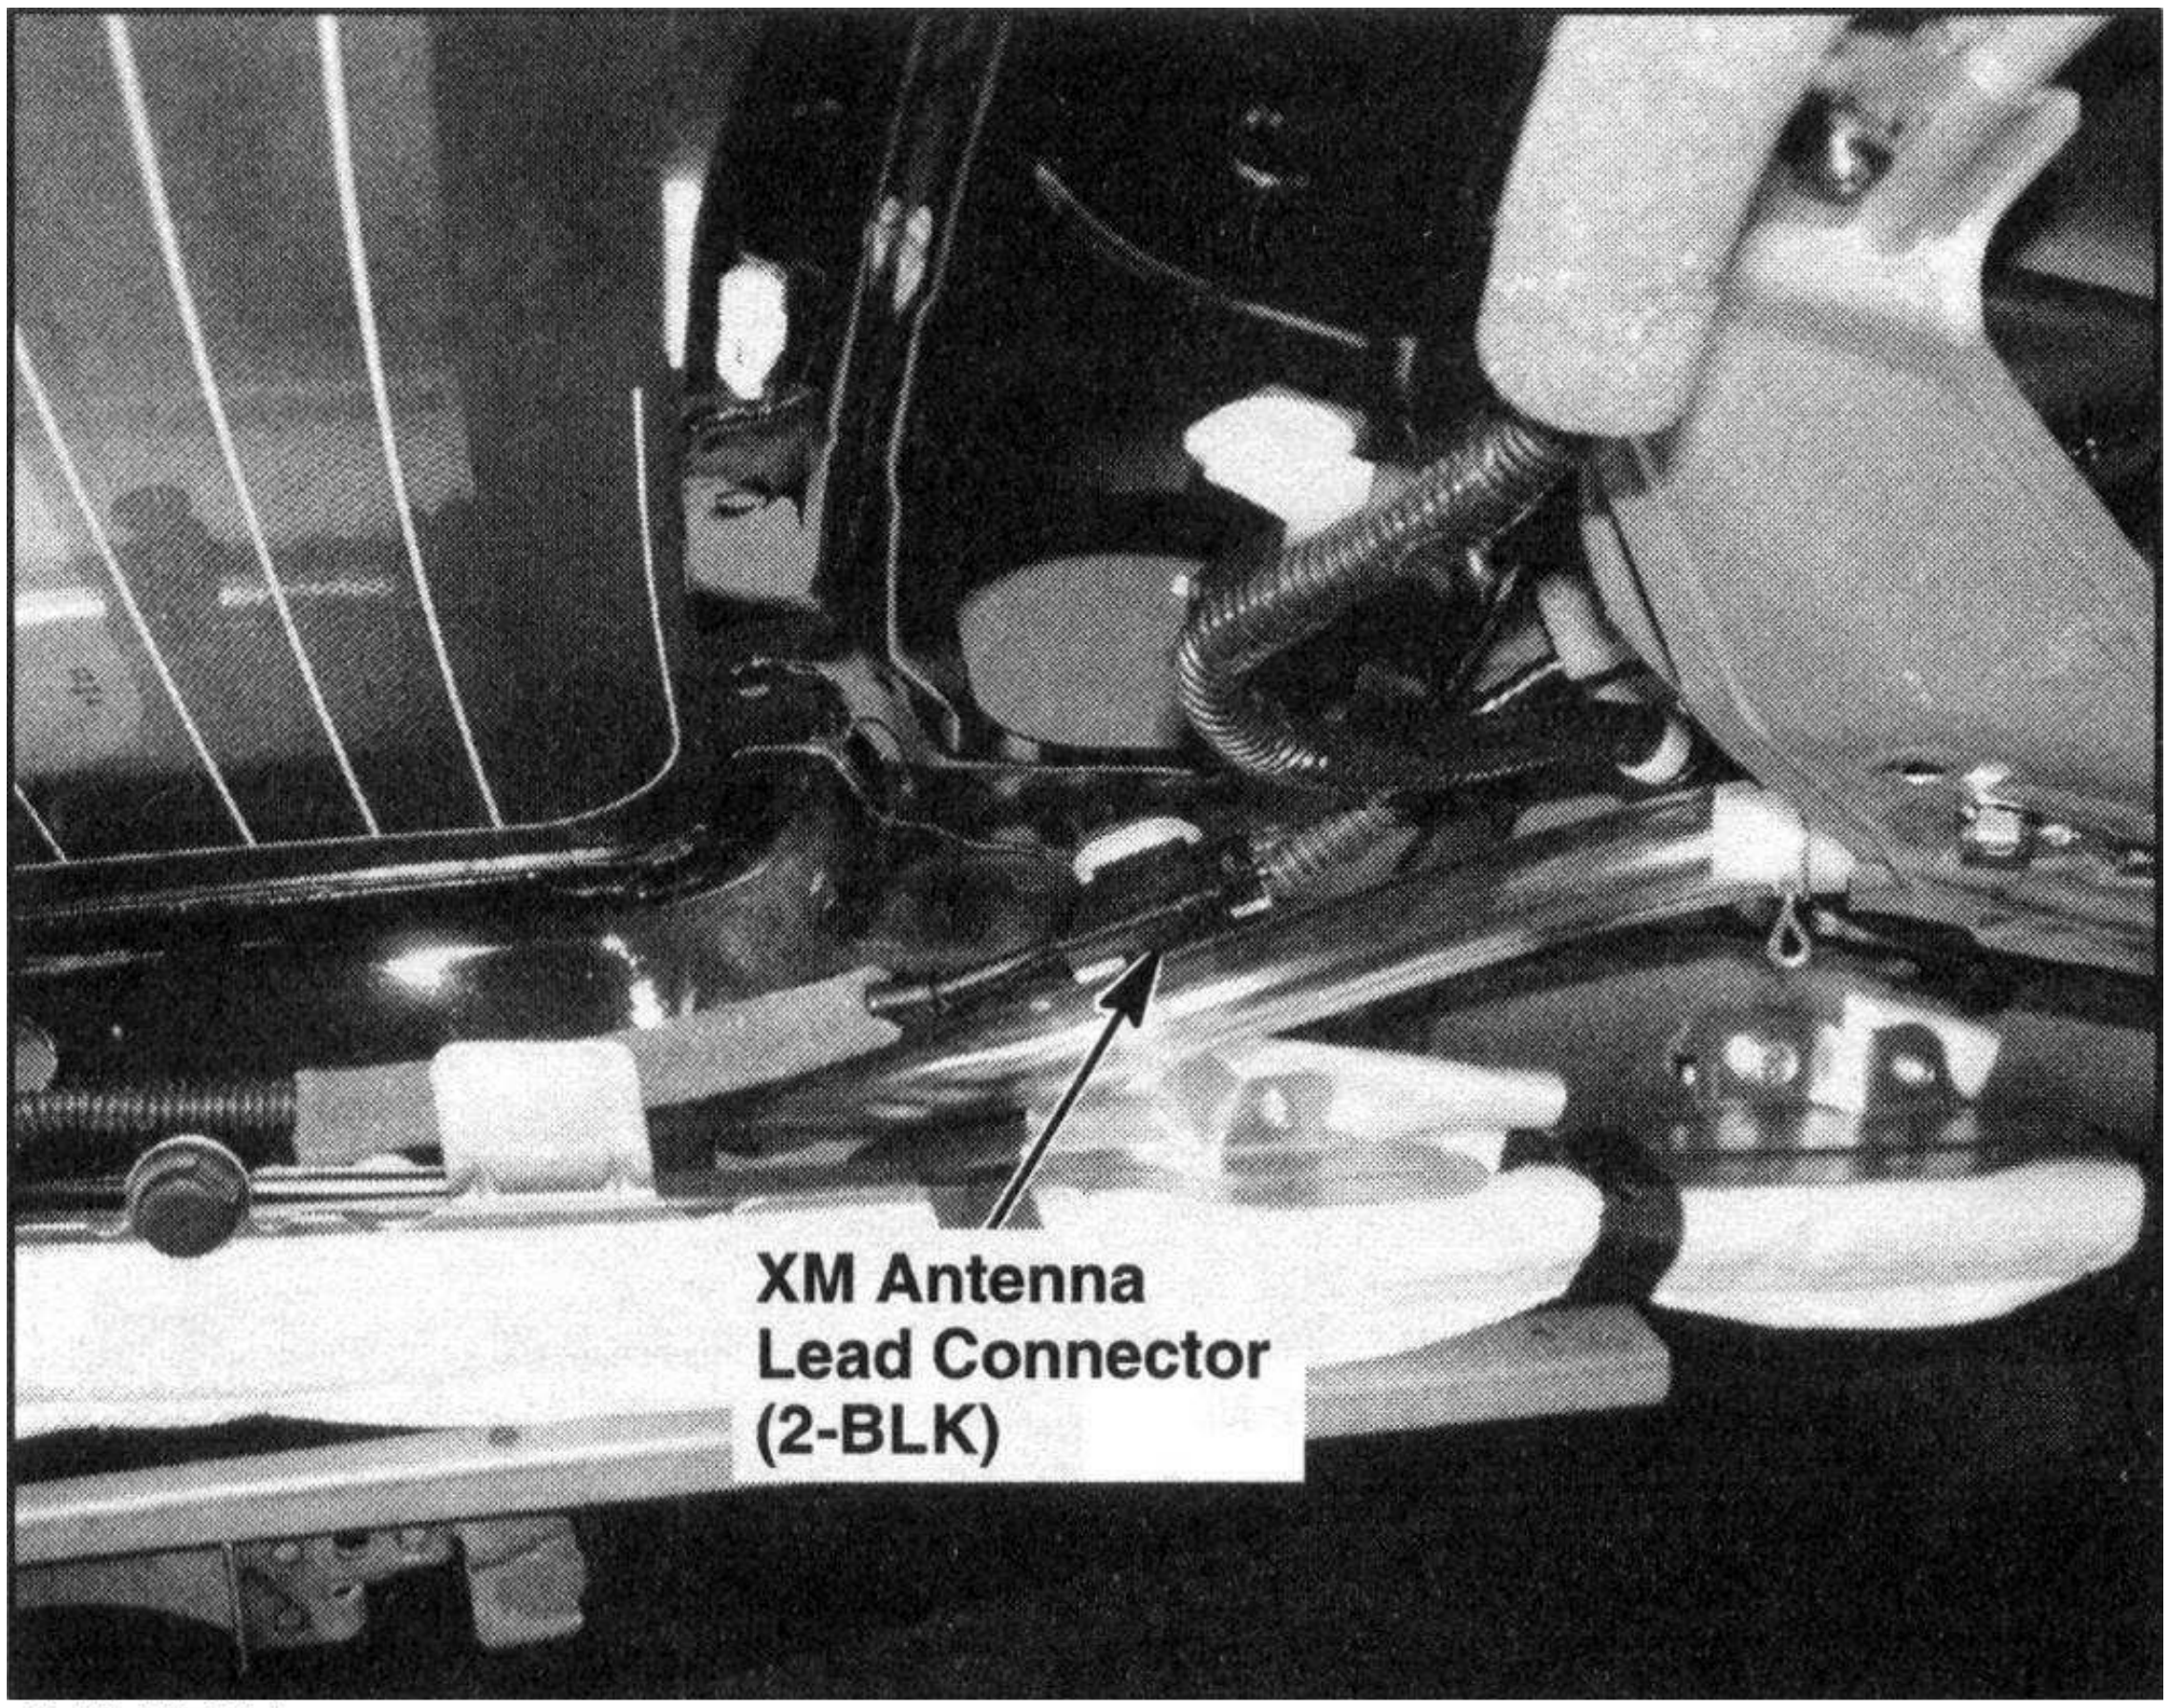
XM Antenna
Lead Connector
(2-BLK)
G00447719

Fig. 111: Left Rear Of Roof
Courtesy of AMERICAN HONDA MOTOR CO., INC.

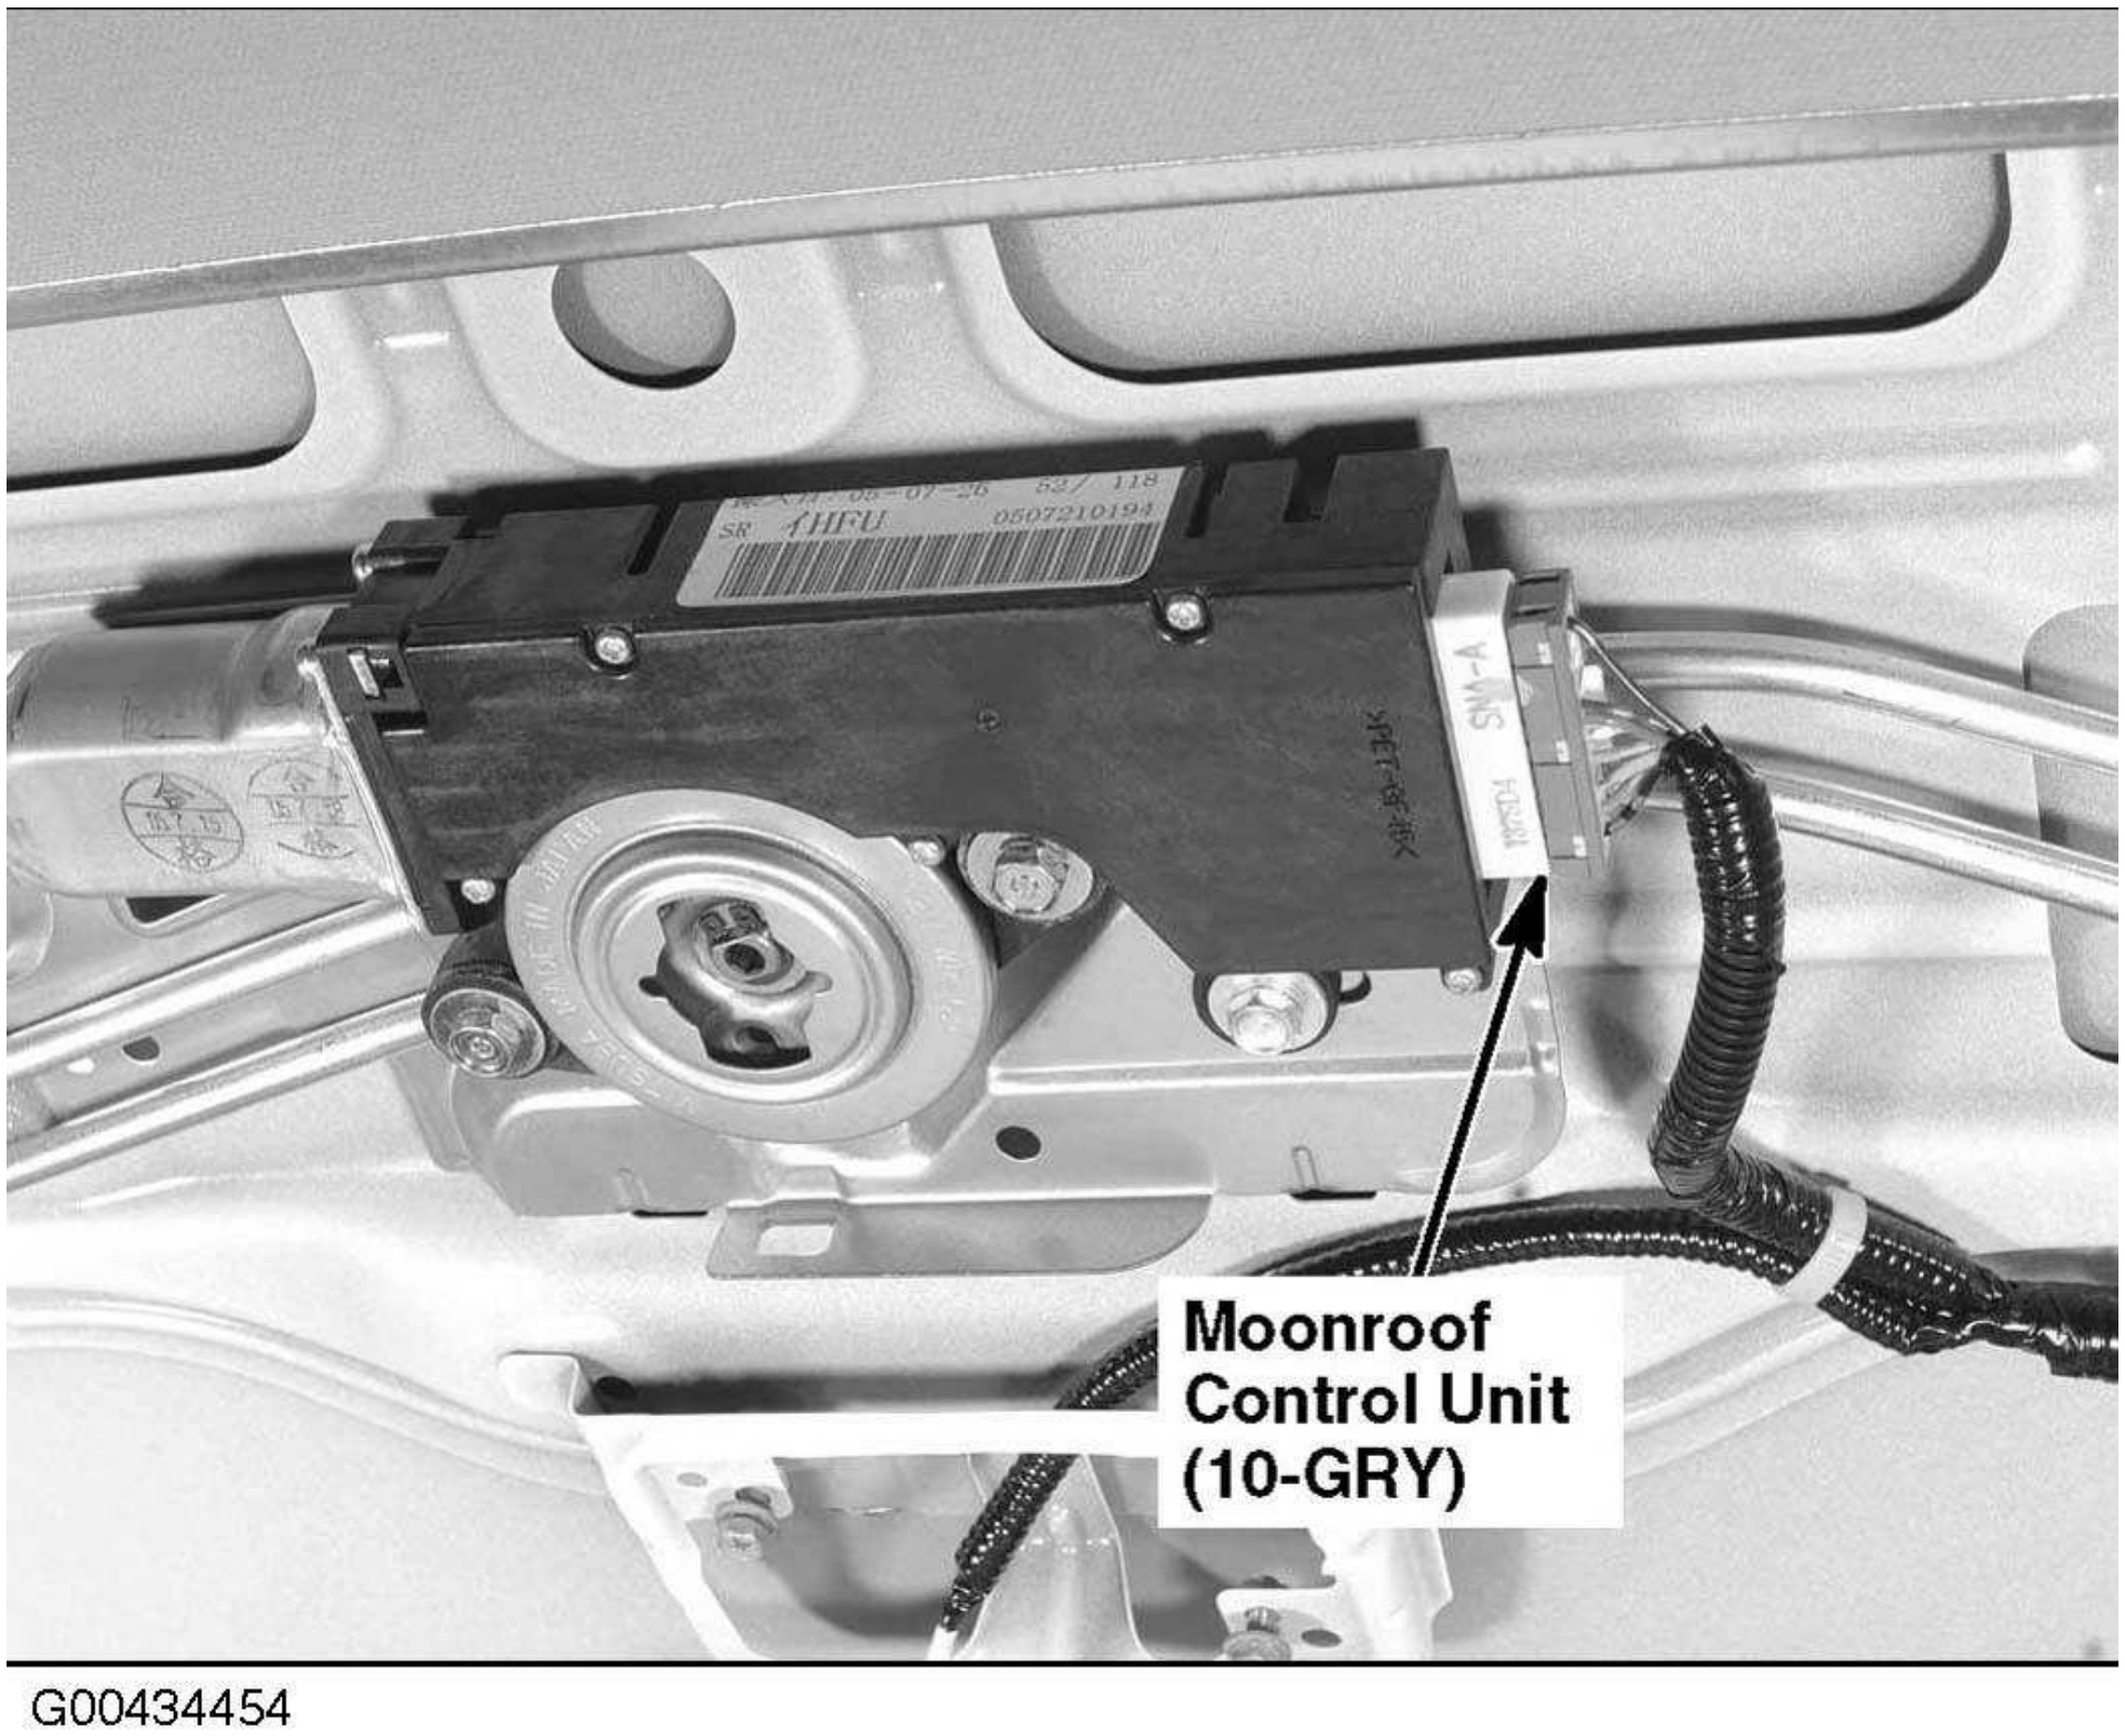
Moonroof
Control Unit
(10-GRY)
G00434454

Fig. 112: Rear Of Roof
Courtesy of AMERICAN HONDA MOTOR CO., INC.

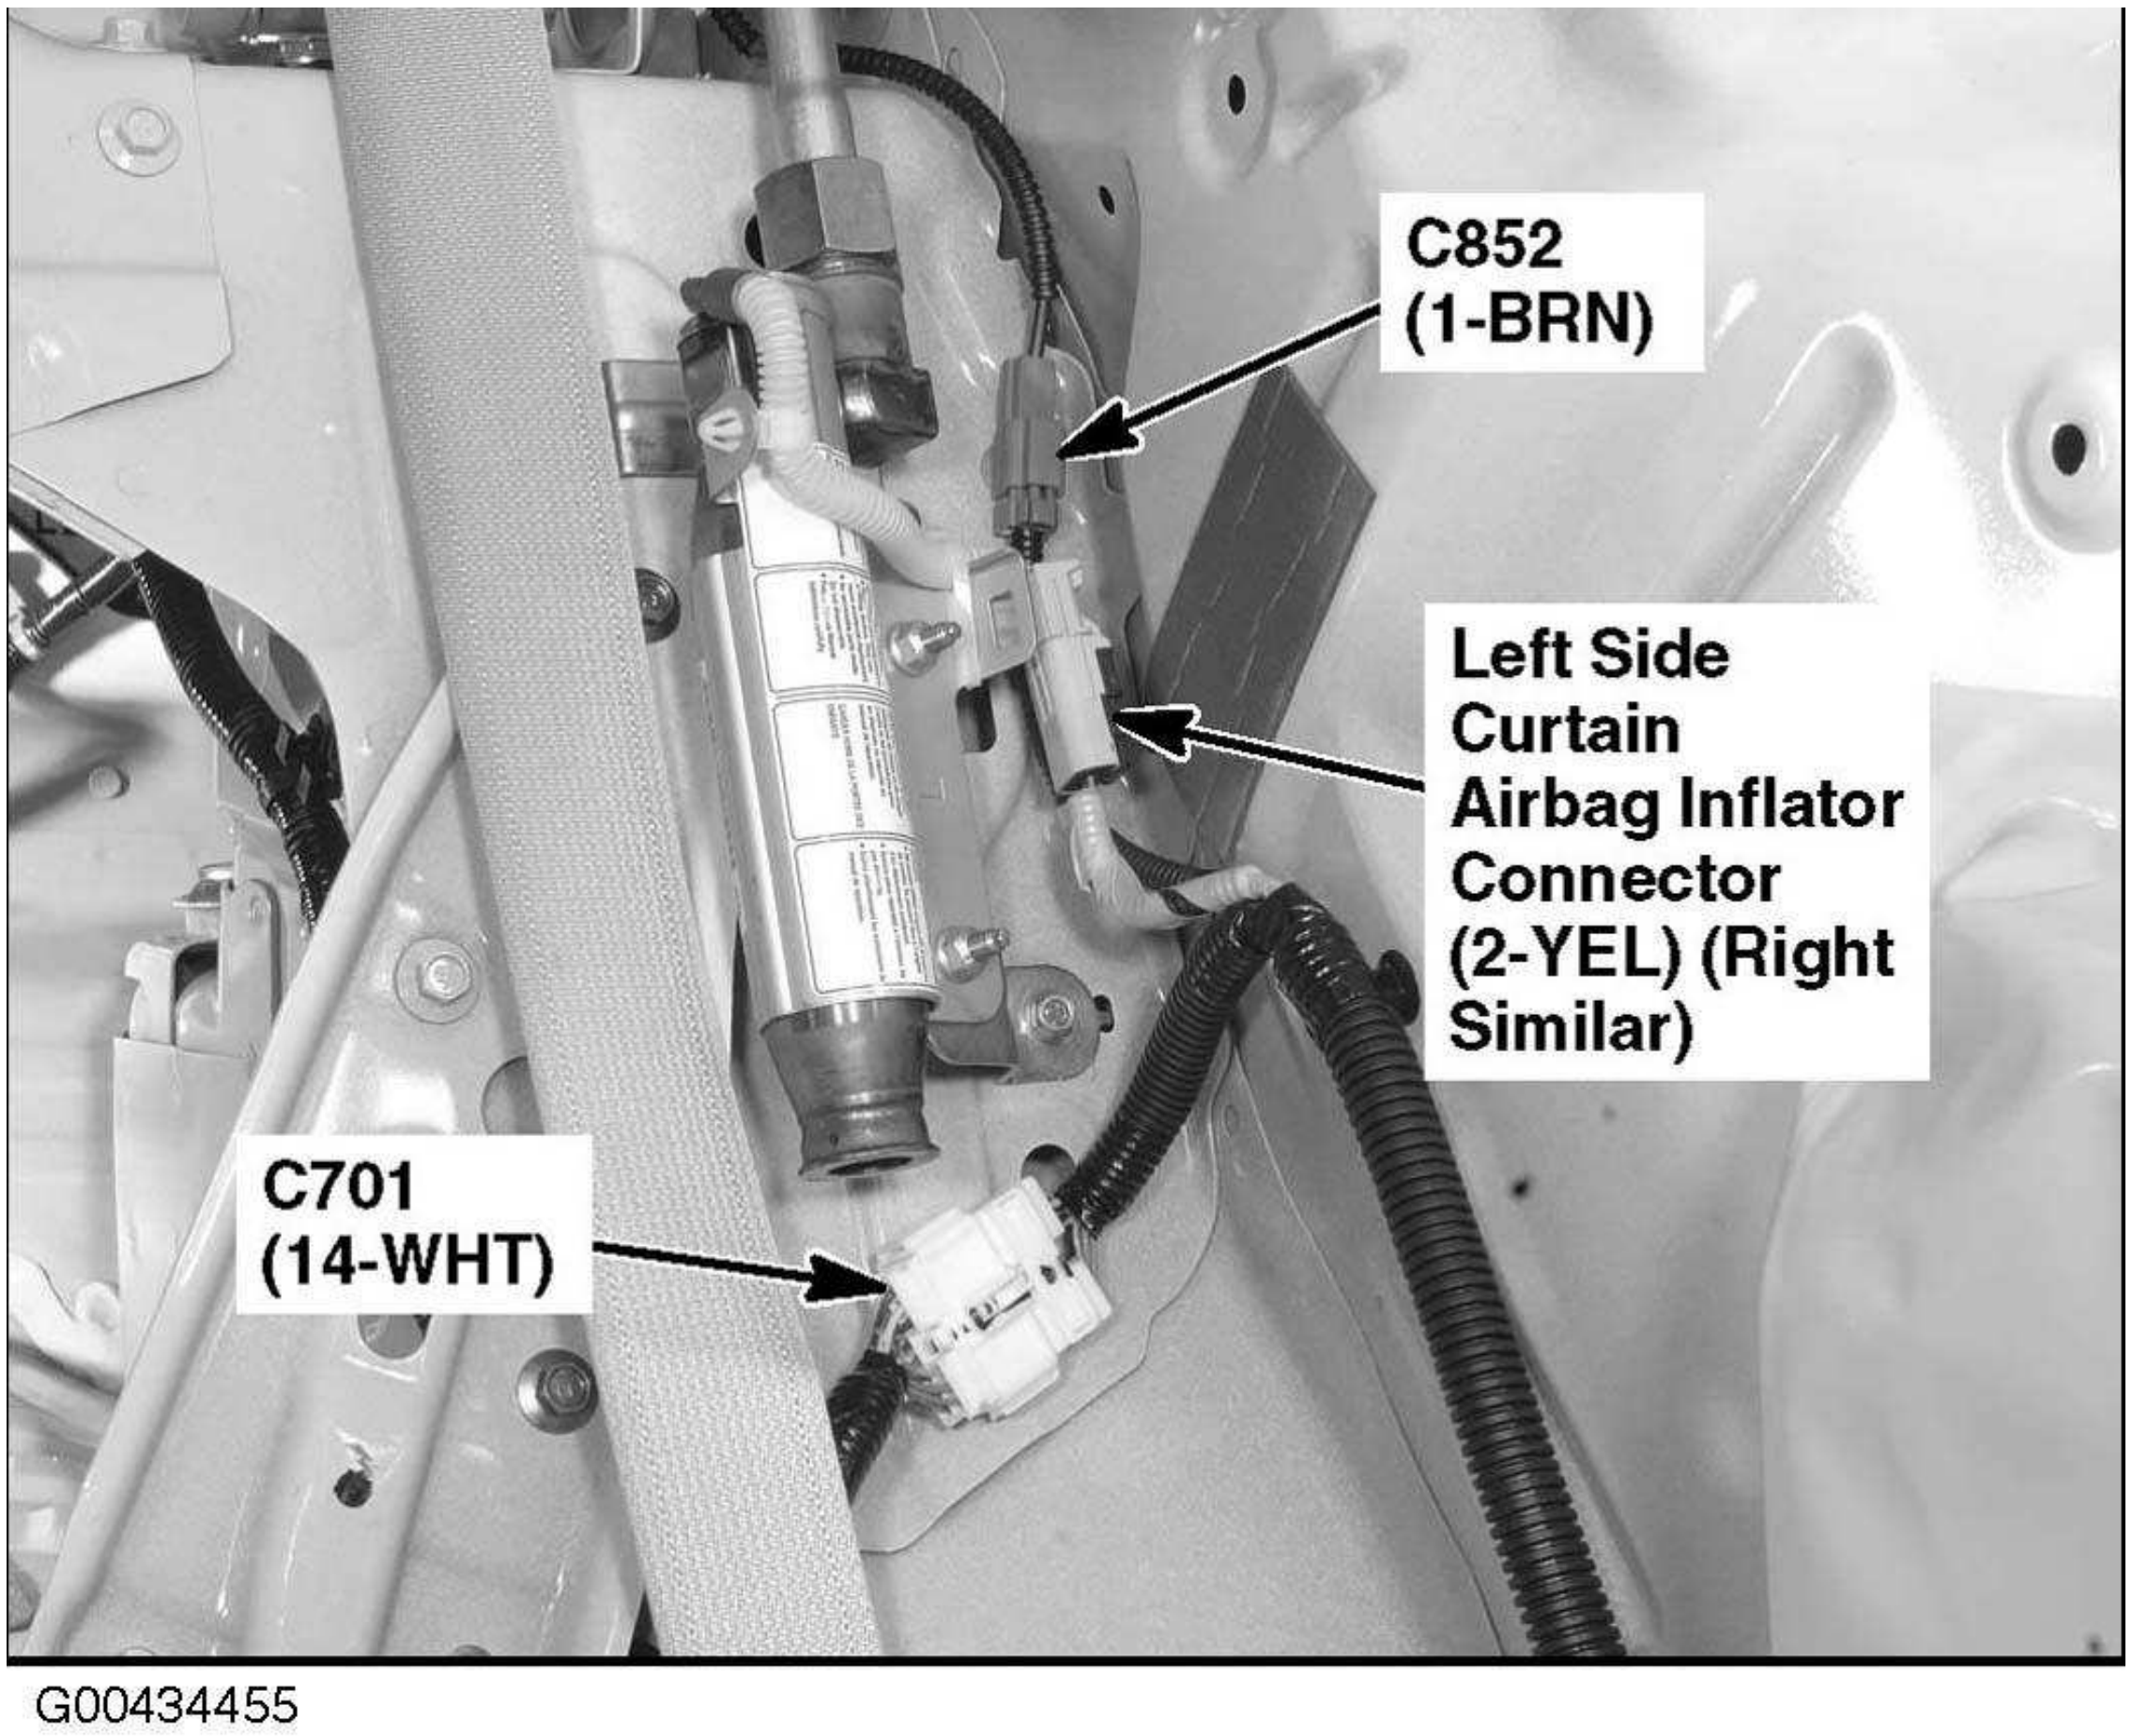
C852
(1-BRN)
Left Side
Curtain
Airbag Inflator
Connector
(2-YEL) (Right
Similar)
C701
(14-WHT)
G00434455

Fig. 113: Left "C" Pillar (2-Door) (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

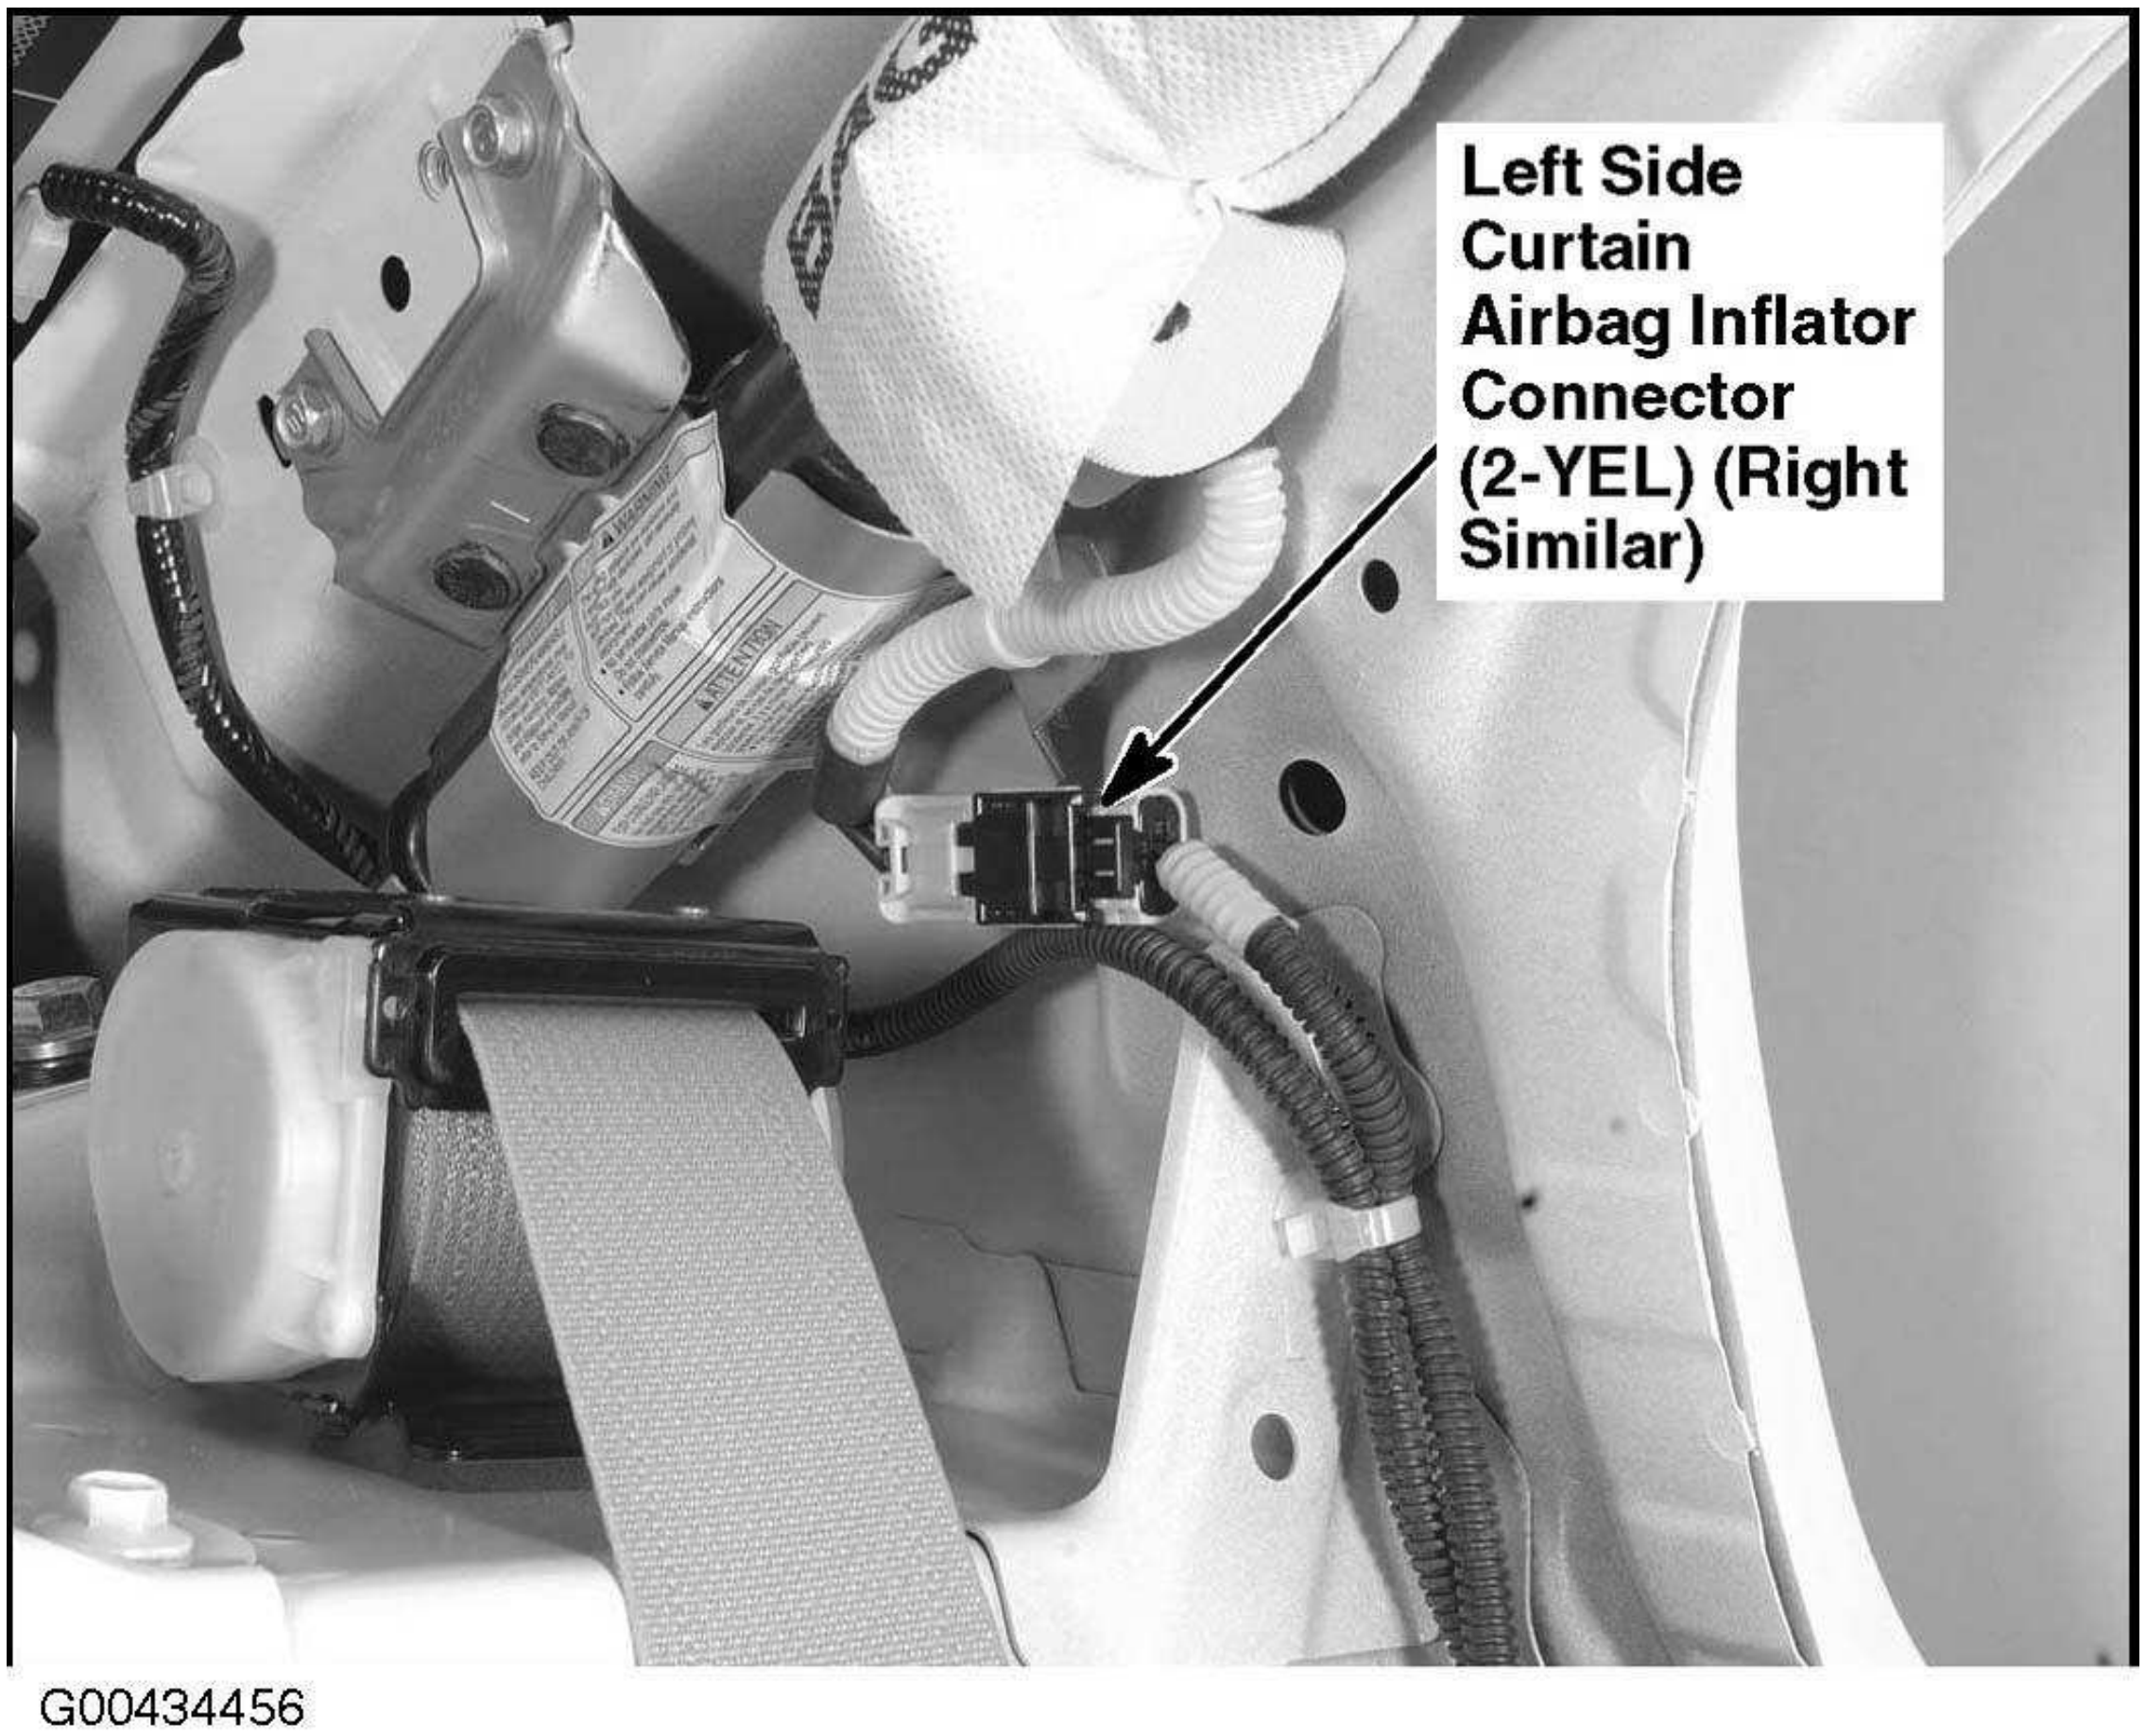
Left Side Curtain Airbag Inflator Connector (2-YEL) (Right Similar)
G00434456

Fig. 114: Left "C" Pillar (4-Door) (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

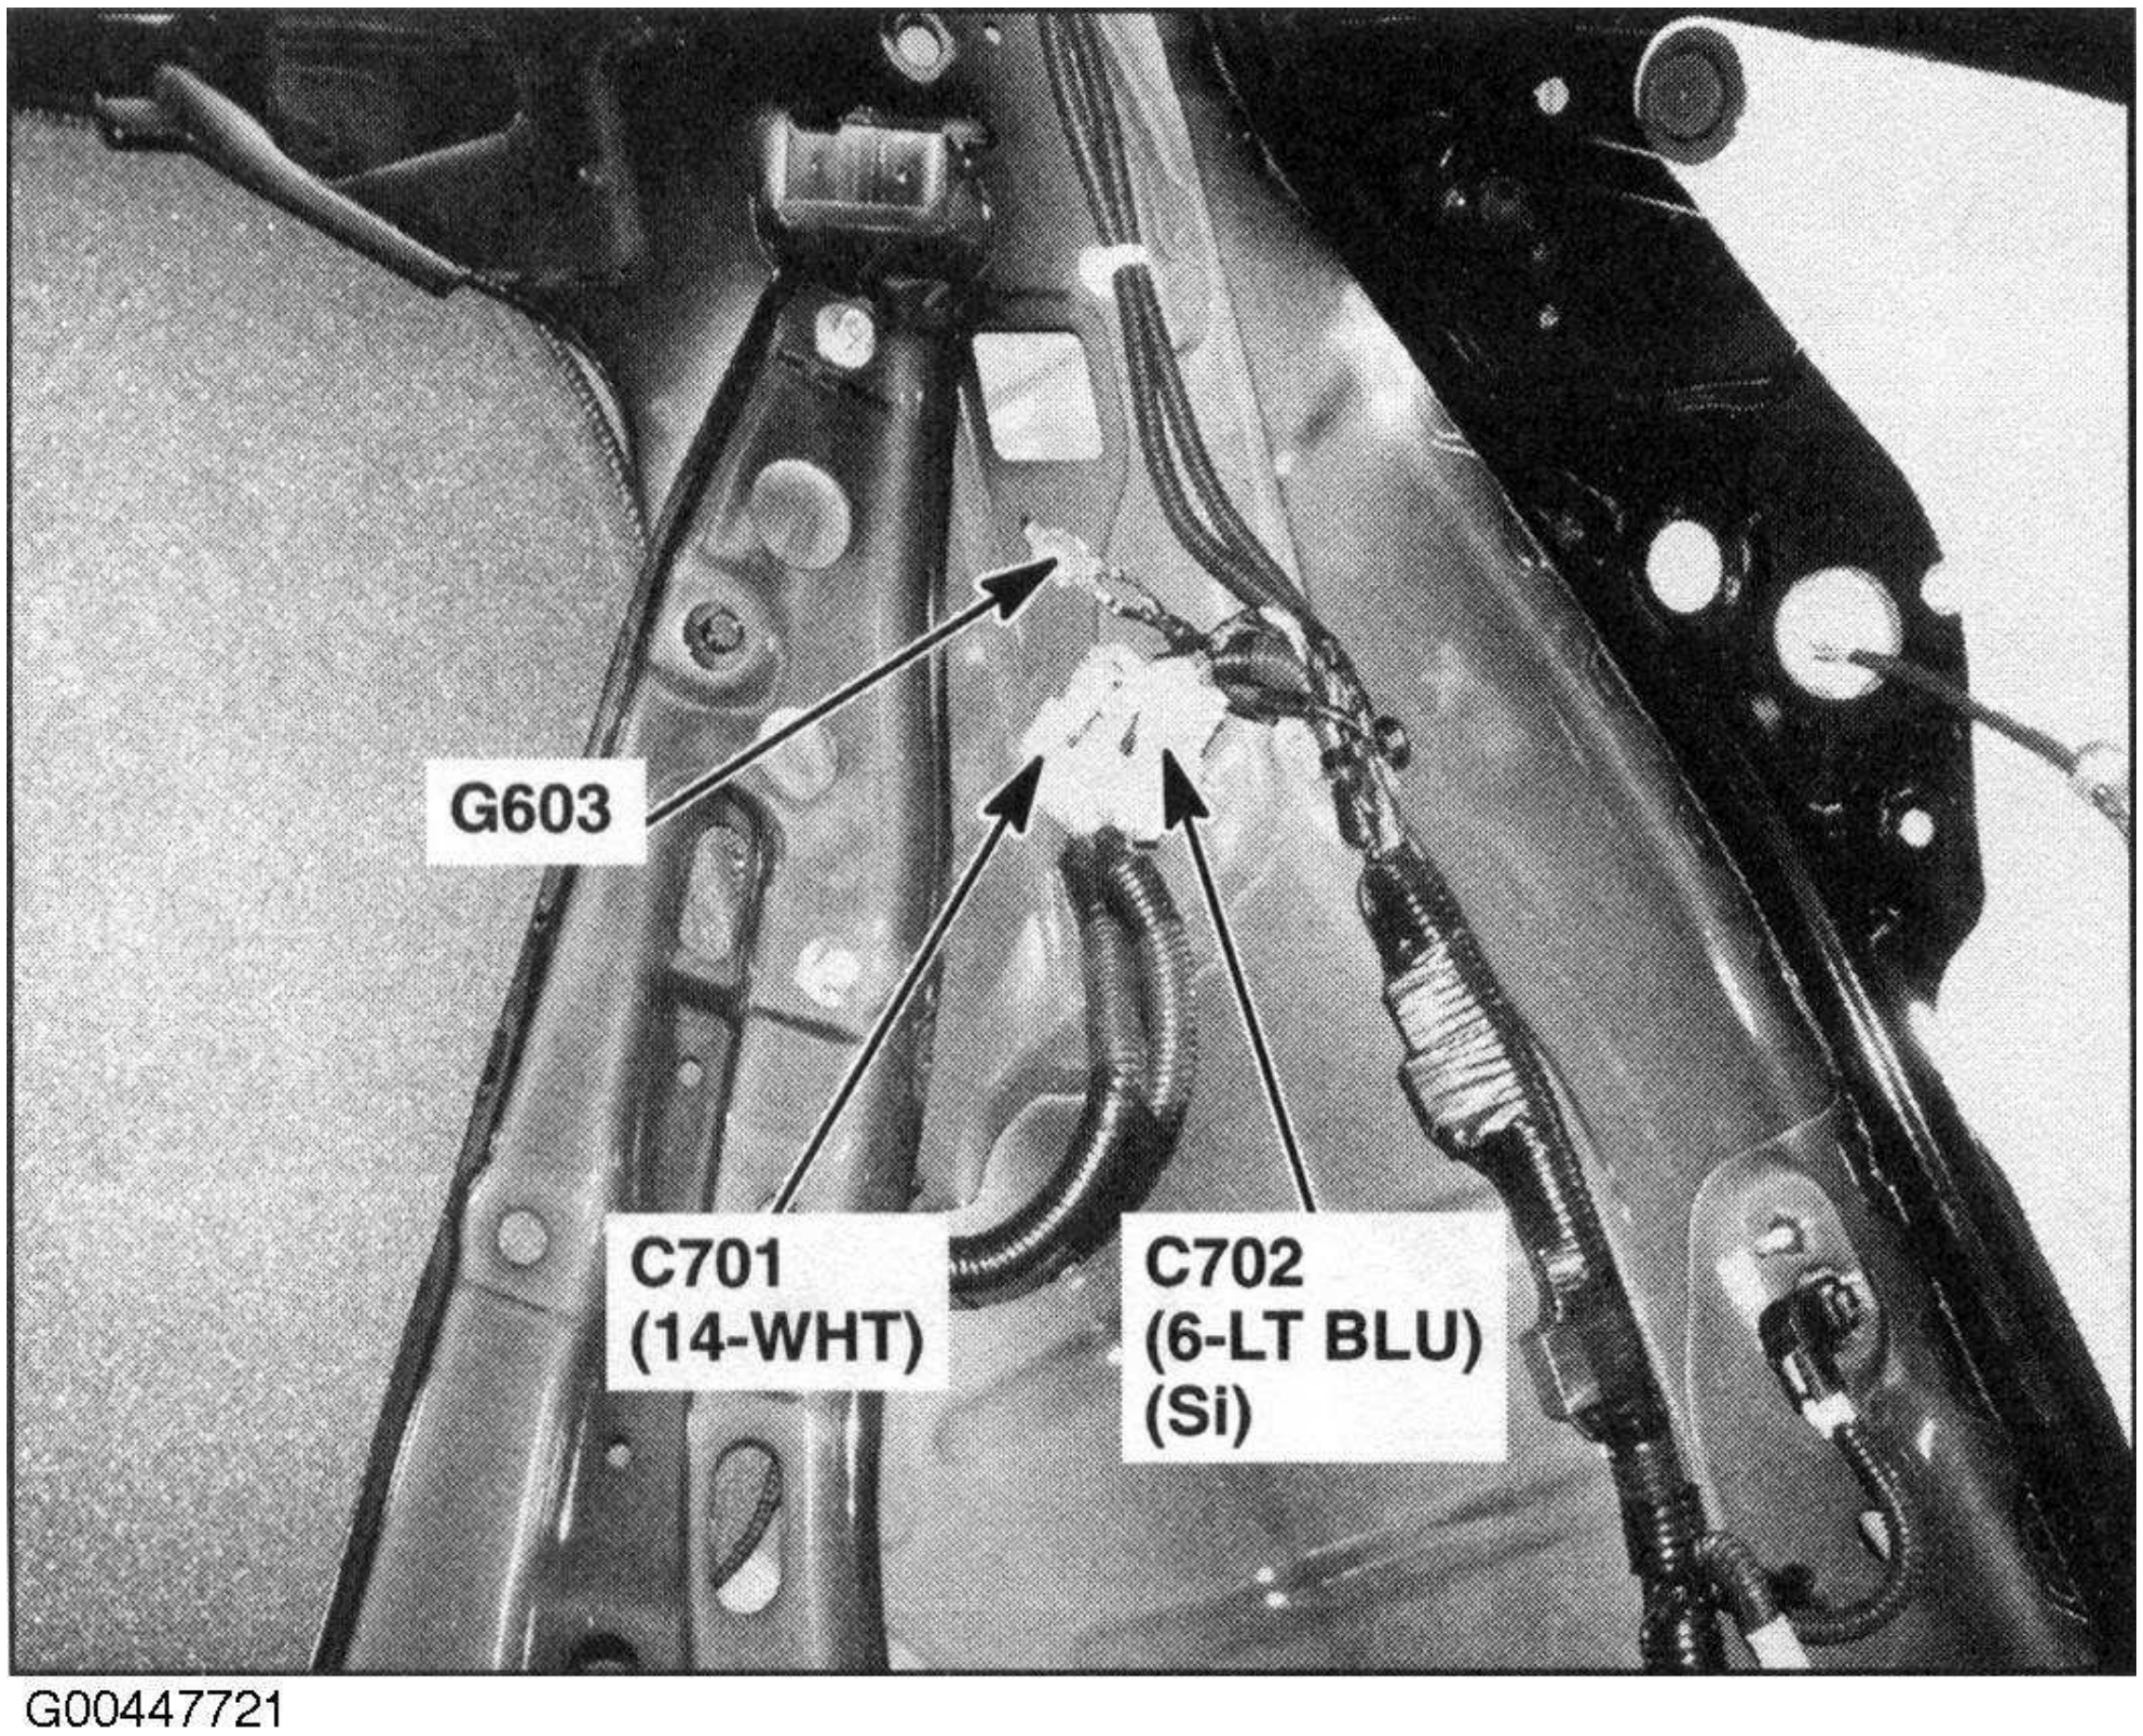
G603
C701
(14-WHT)
C702
(6-LT BLU)
(Si)
G00447721

Fig. 115: Left "C" Pillar (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

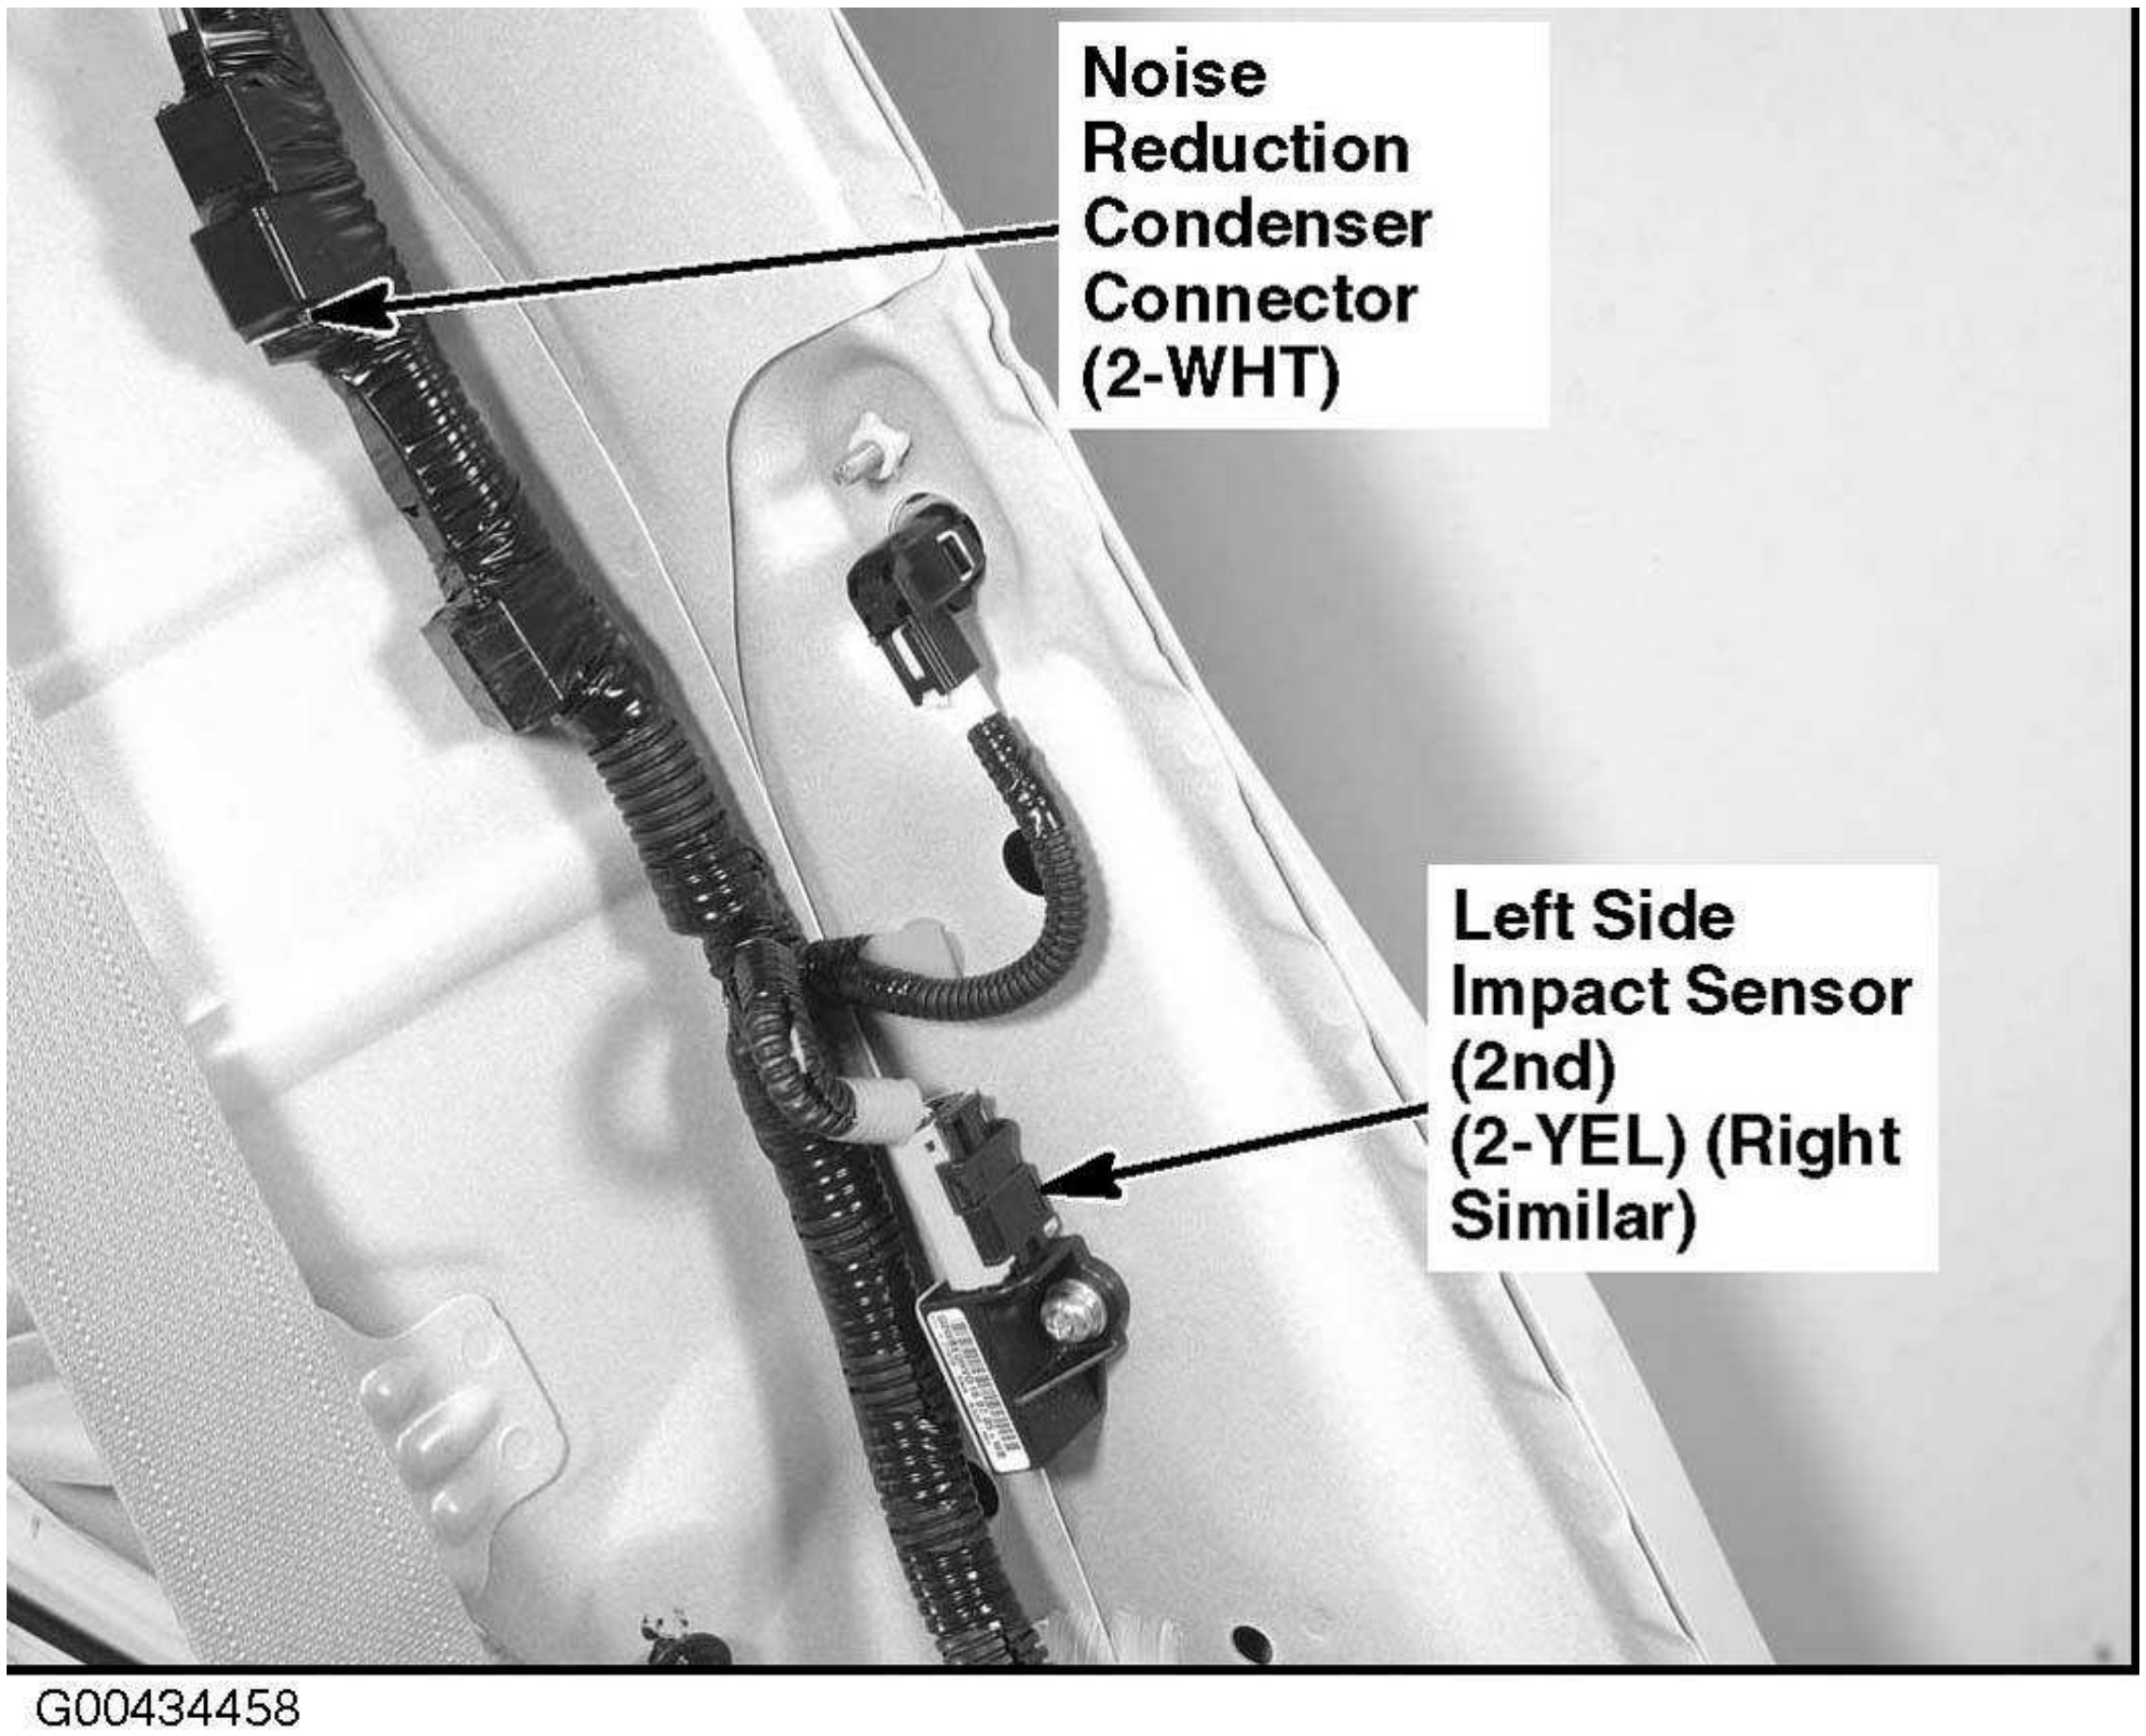
Noise Reduction Condenser Connector (2-WHT)
Left Side Impact Sensor (2nd) (2-YEL) (Right Similar)
G00434458

Fig. 116: Left "C" Pillar (4-Door) (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

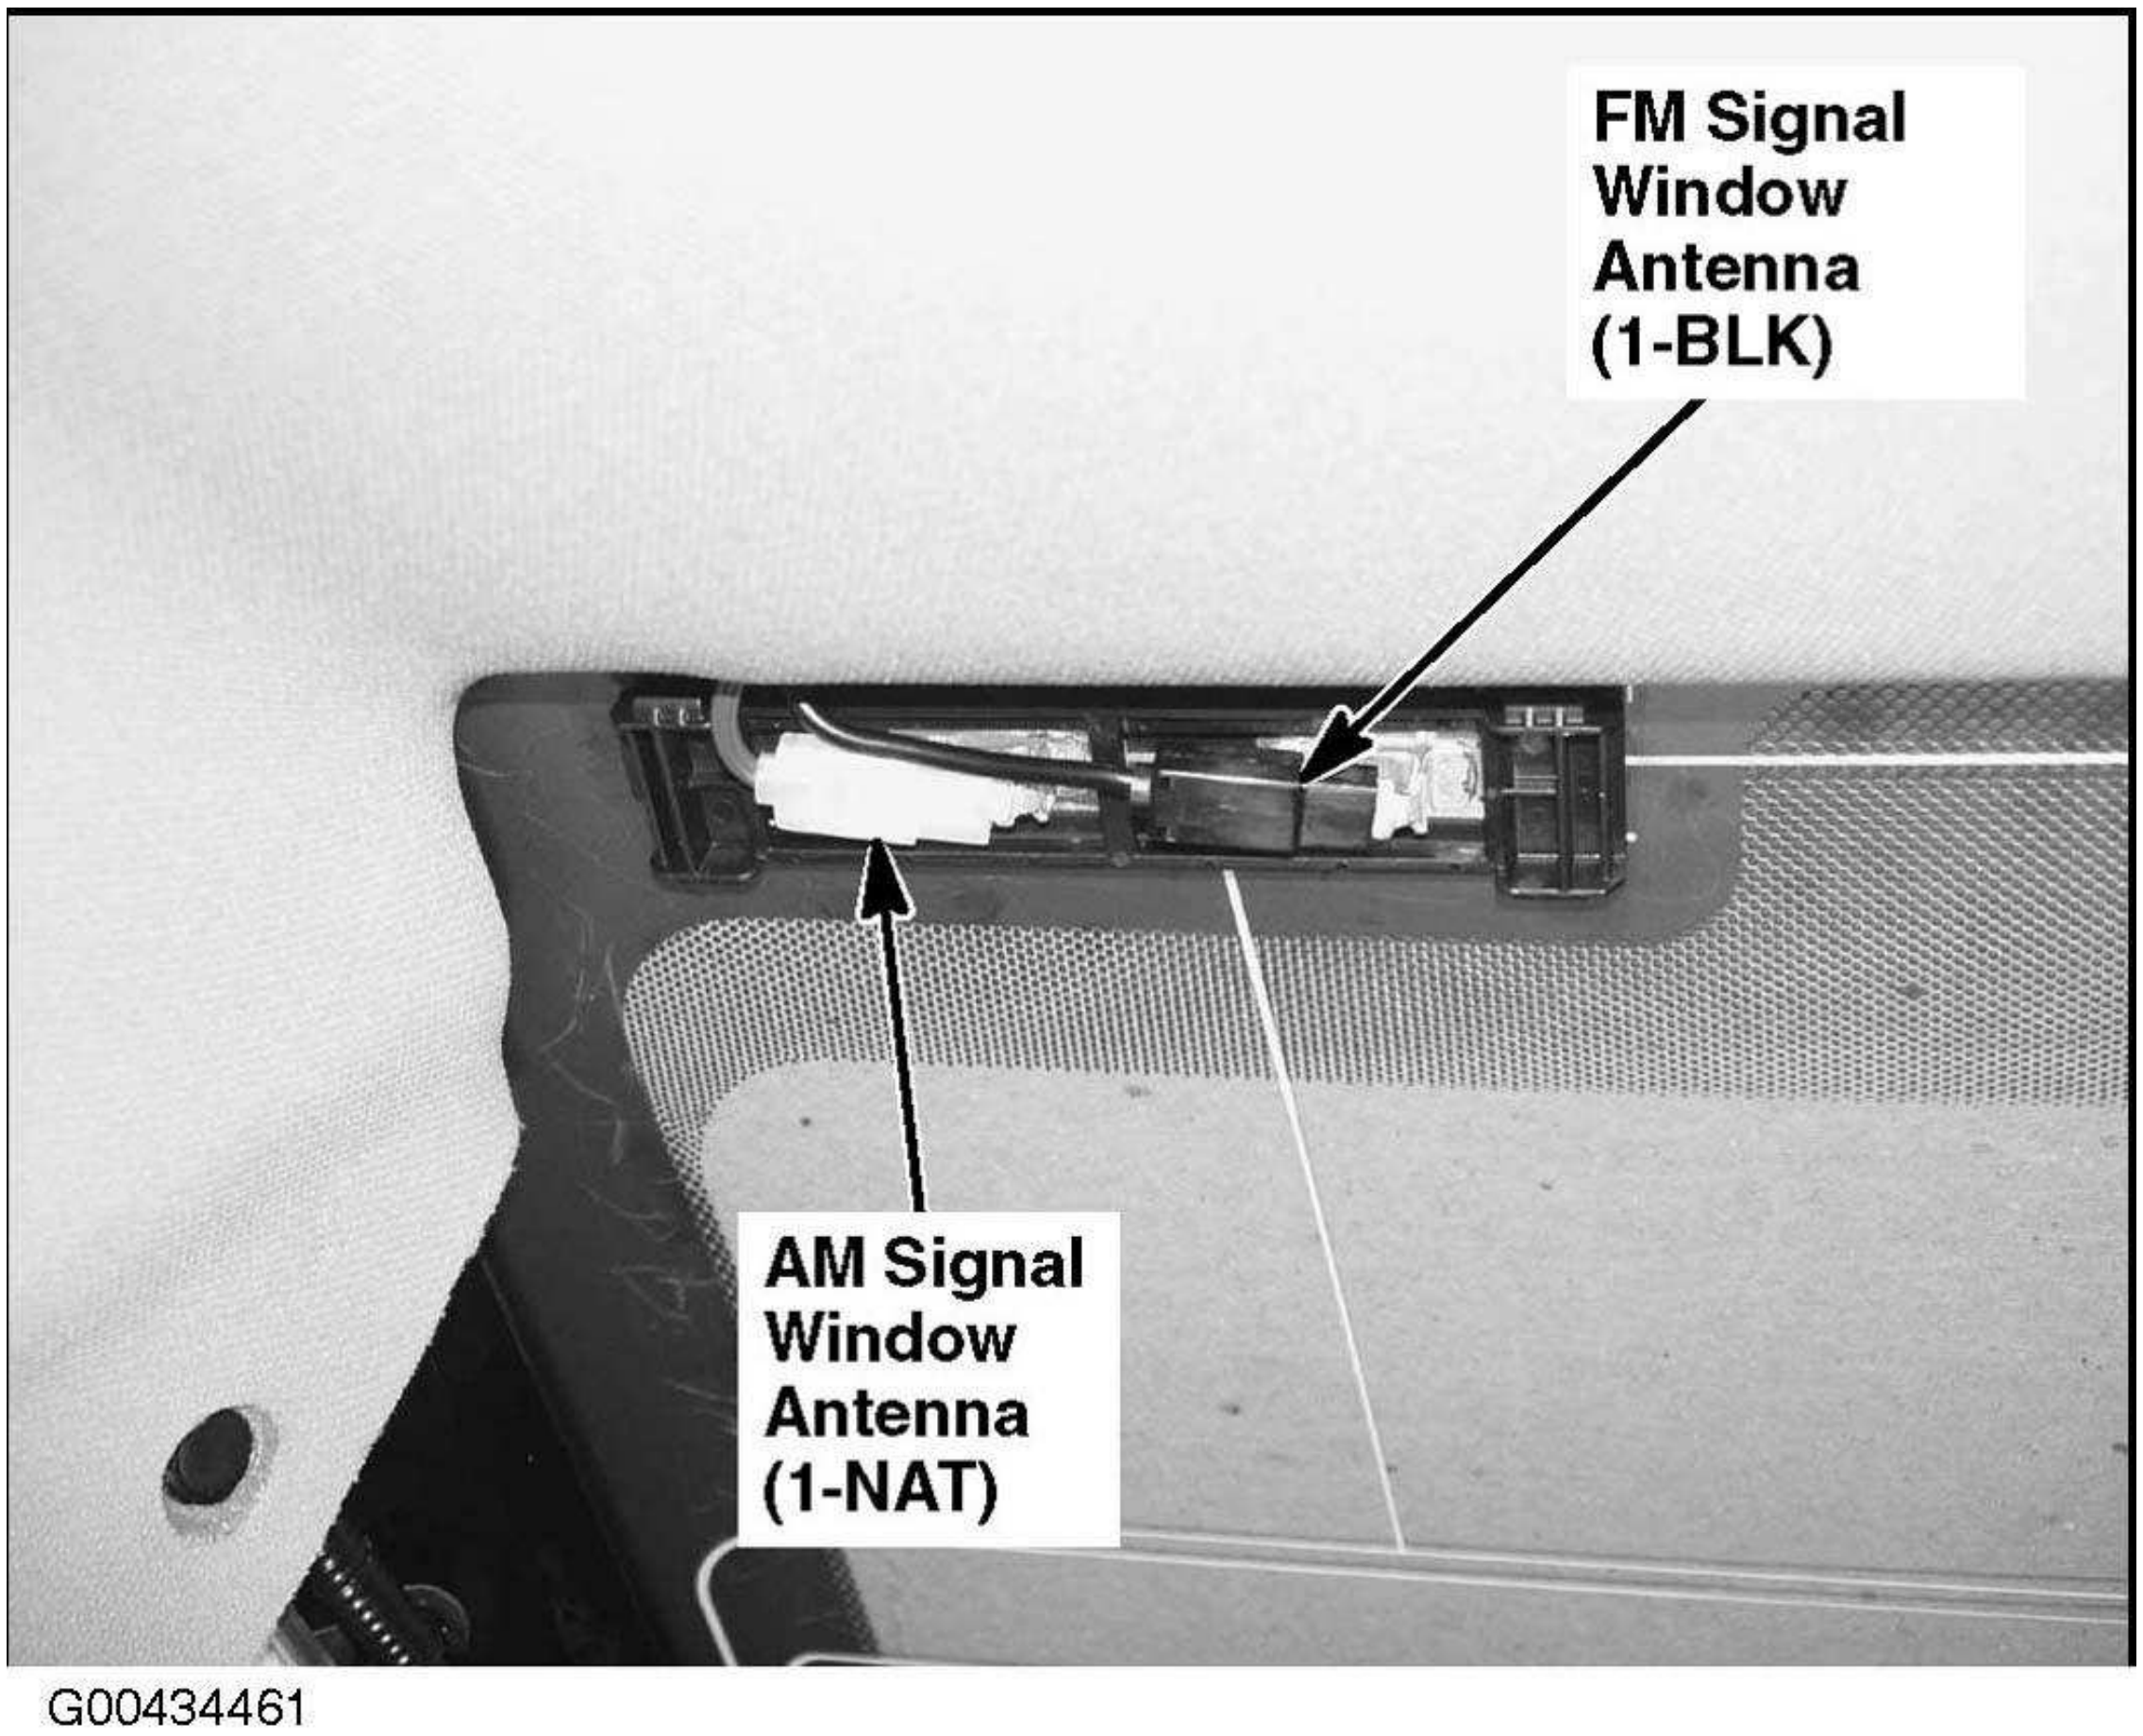
FM Signal Window Antenna (1-BLK)
AM Signal Window Antenna (1-NAT)
G00434461

Fig. 117: Right Rear Of Roof (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

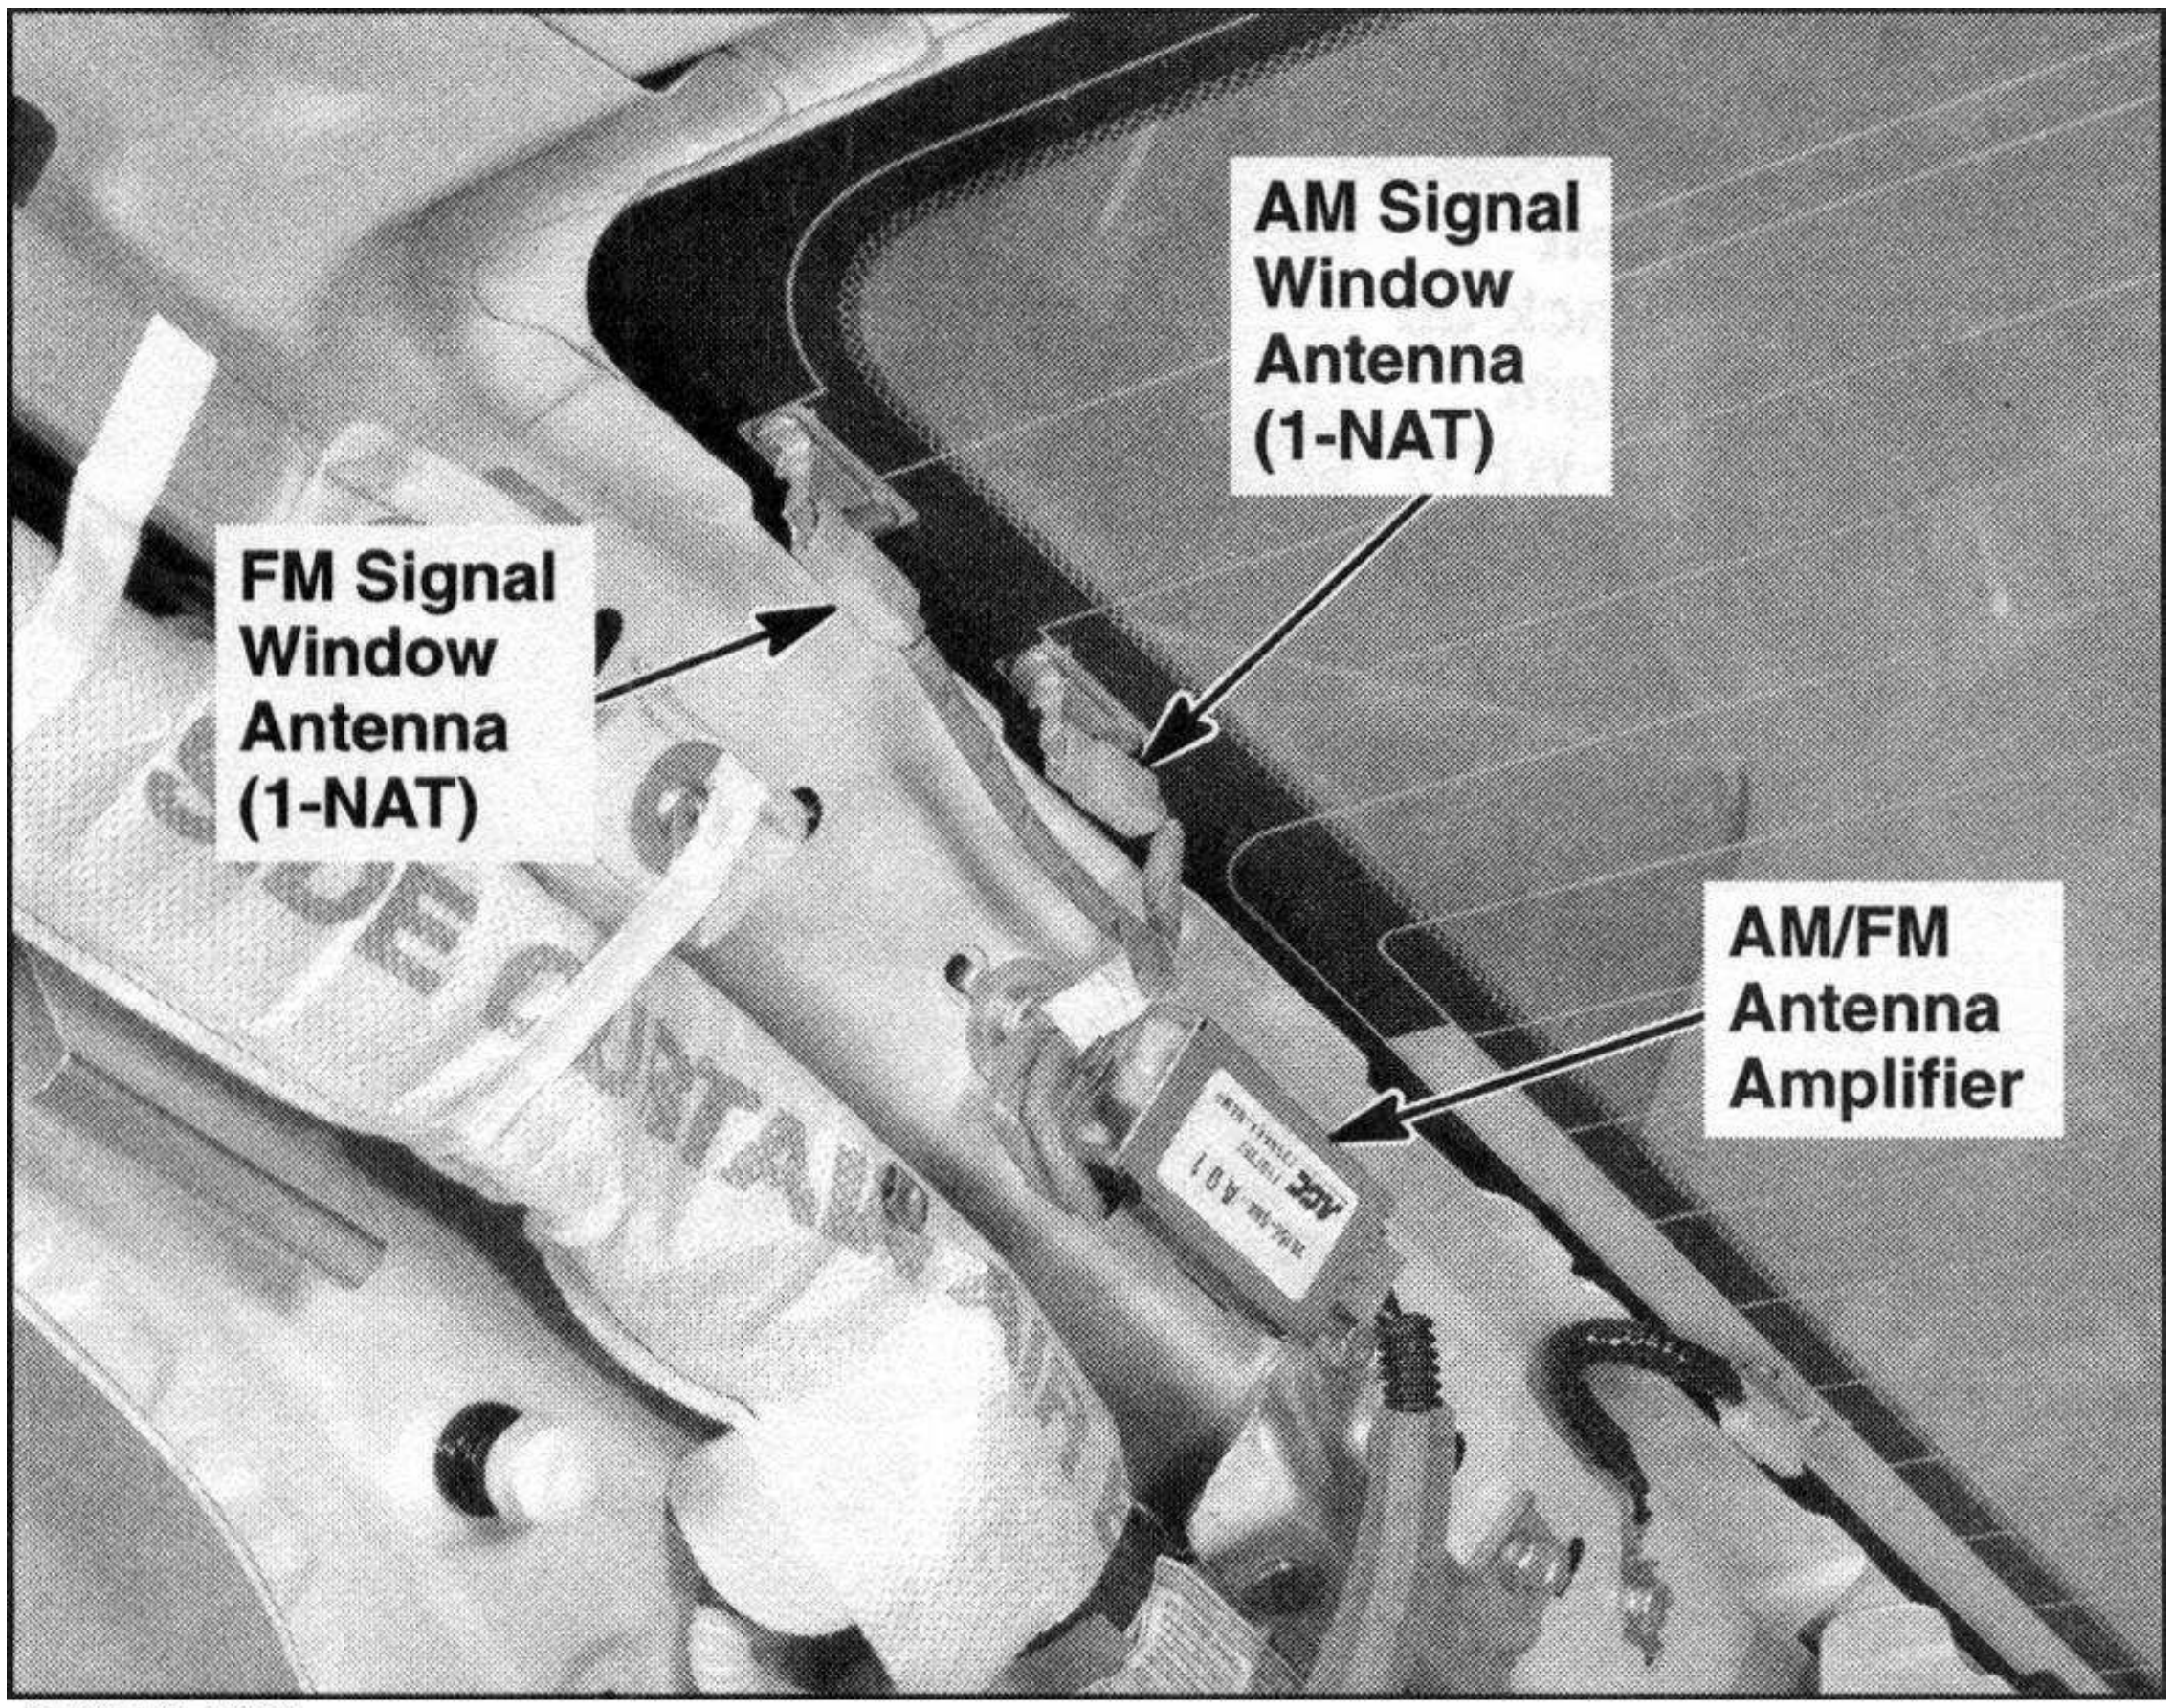
AM Signal Window Antenna (1-NAT)
FM Signal Window Antenna (1-NAT)
AM/FM Antenna Amplifier
G00447726

Fig. 118: Right "C" Pillar (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

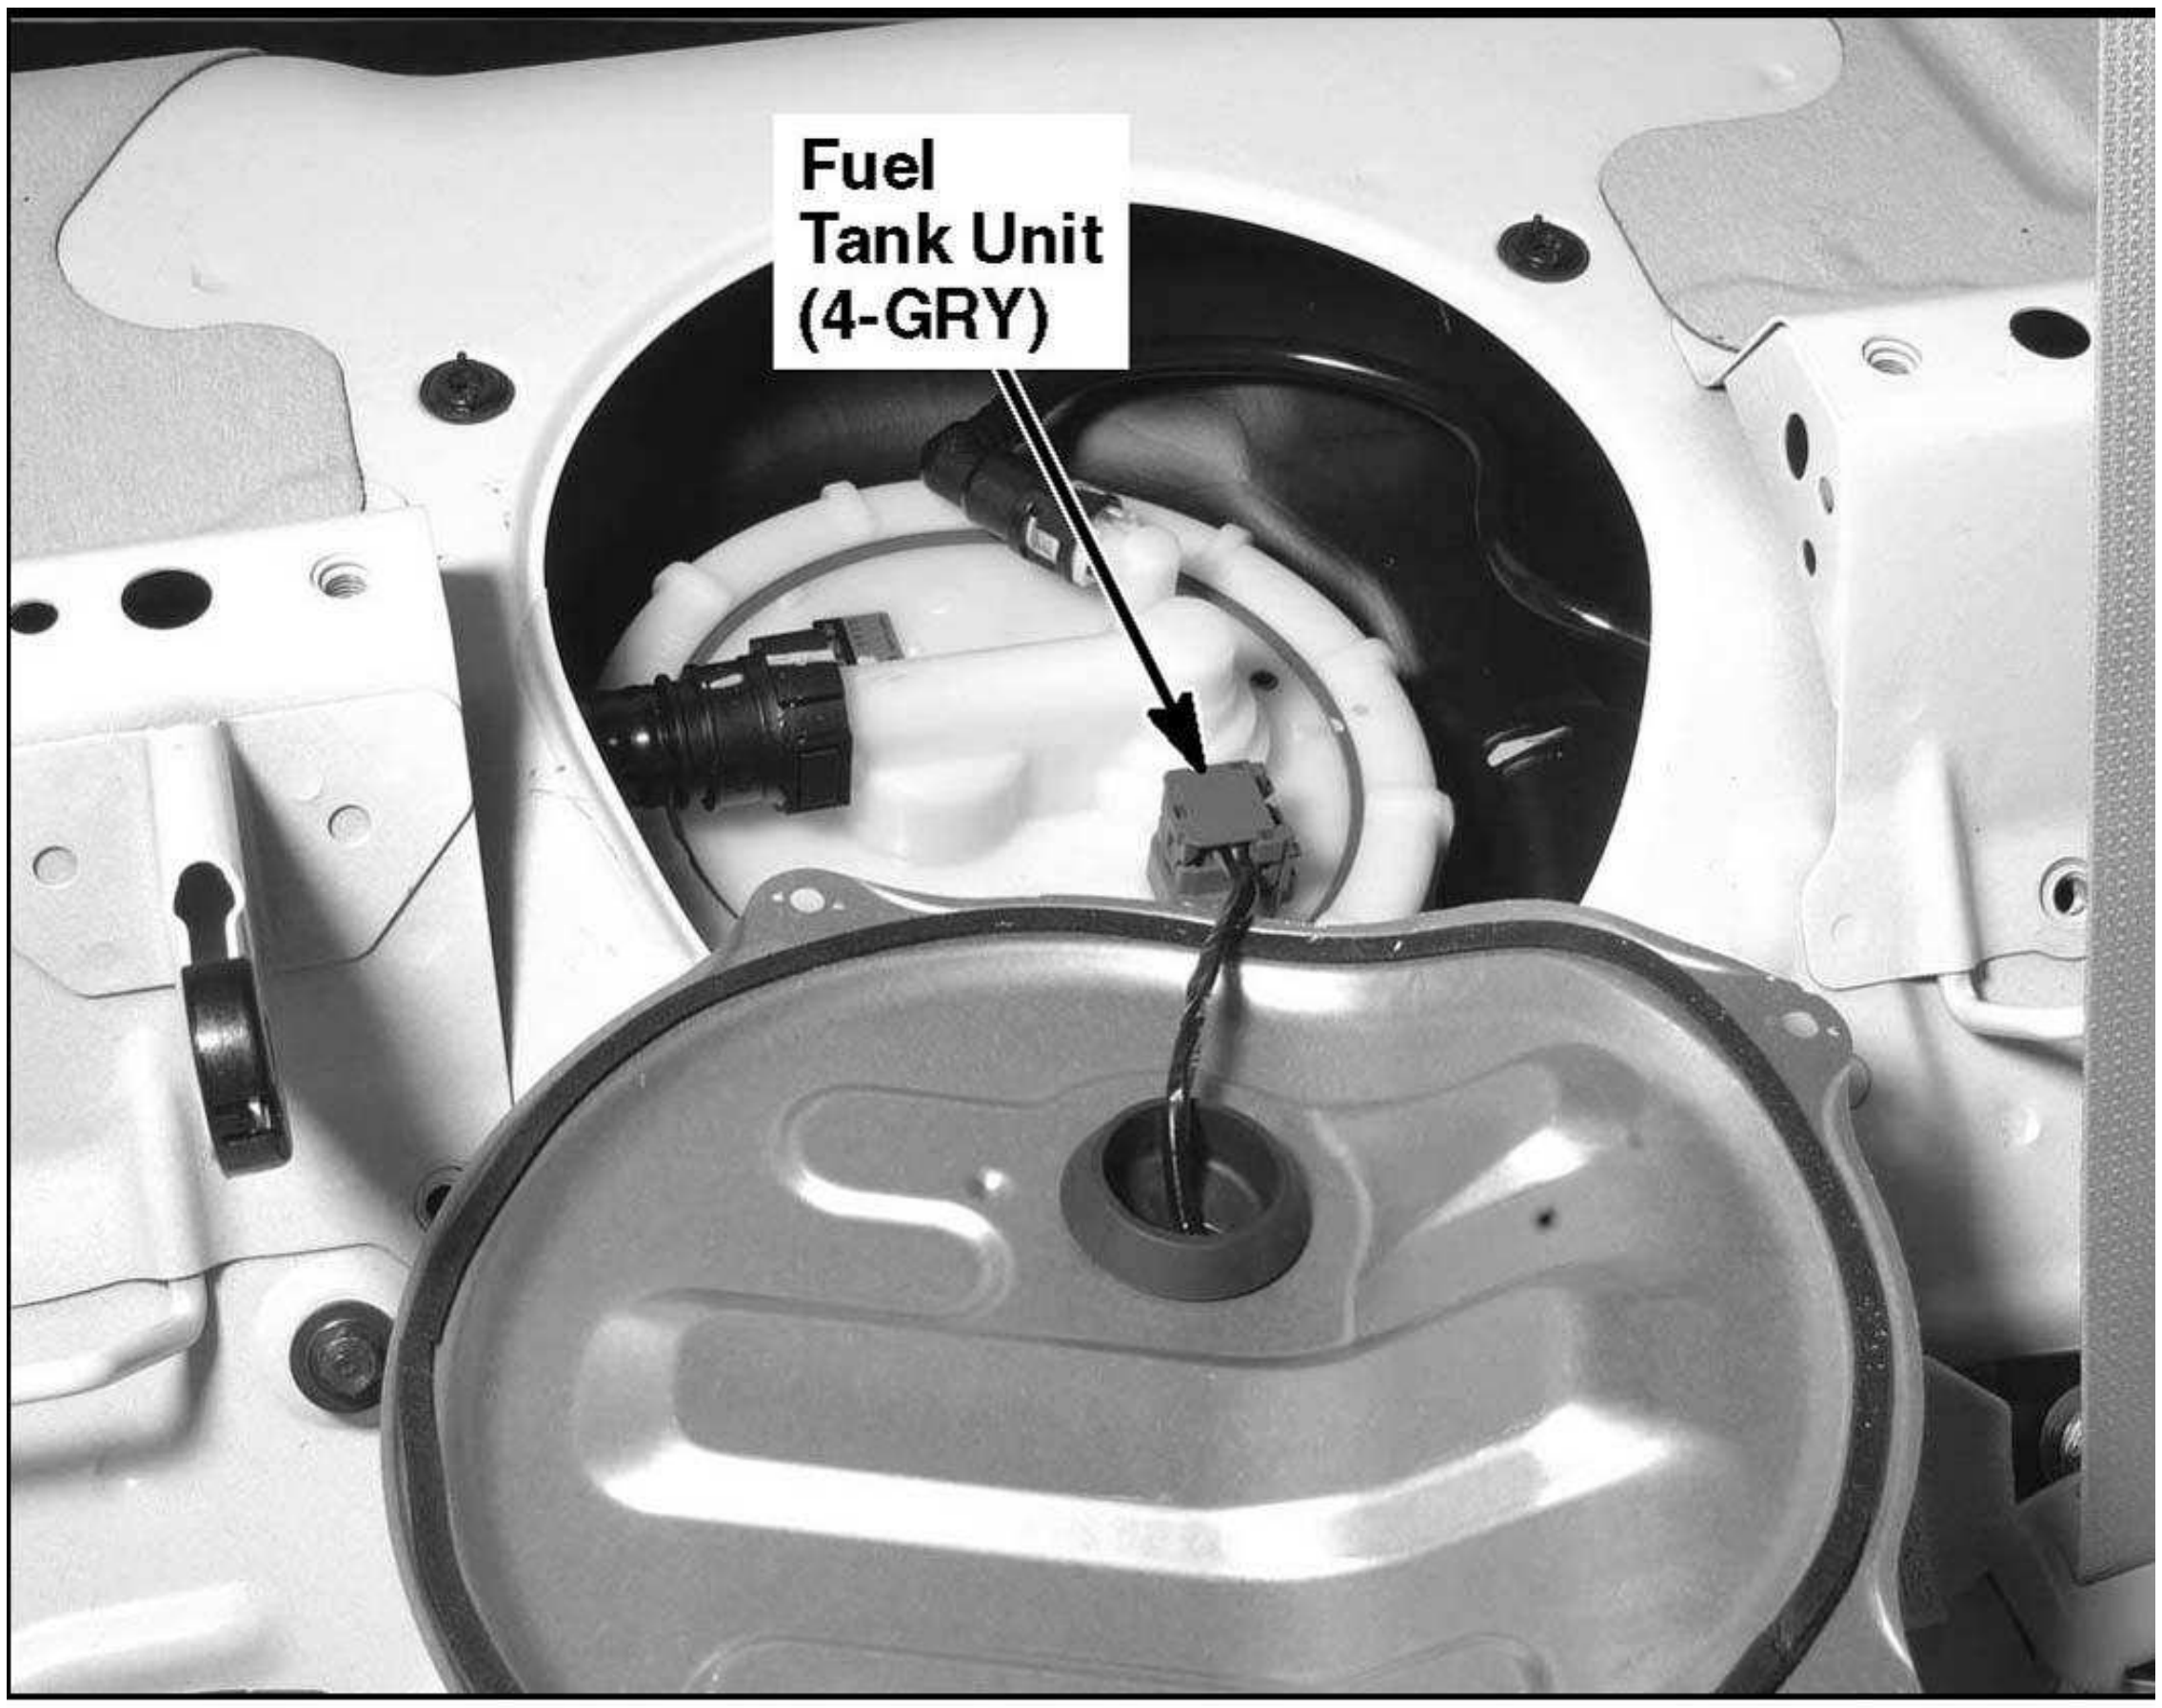
Fuel
Tank Unit
(4-GRY)
G00434464

Fig. 119: Middle Front Of Trunk
Courtesy of AMERICAN HONDA MOTOR CO., INC.

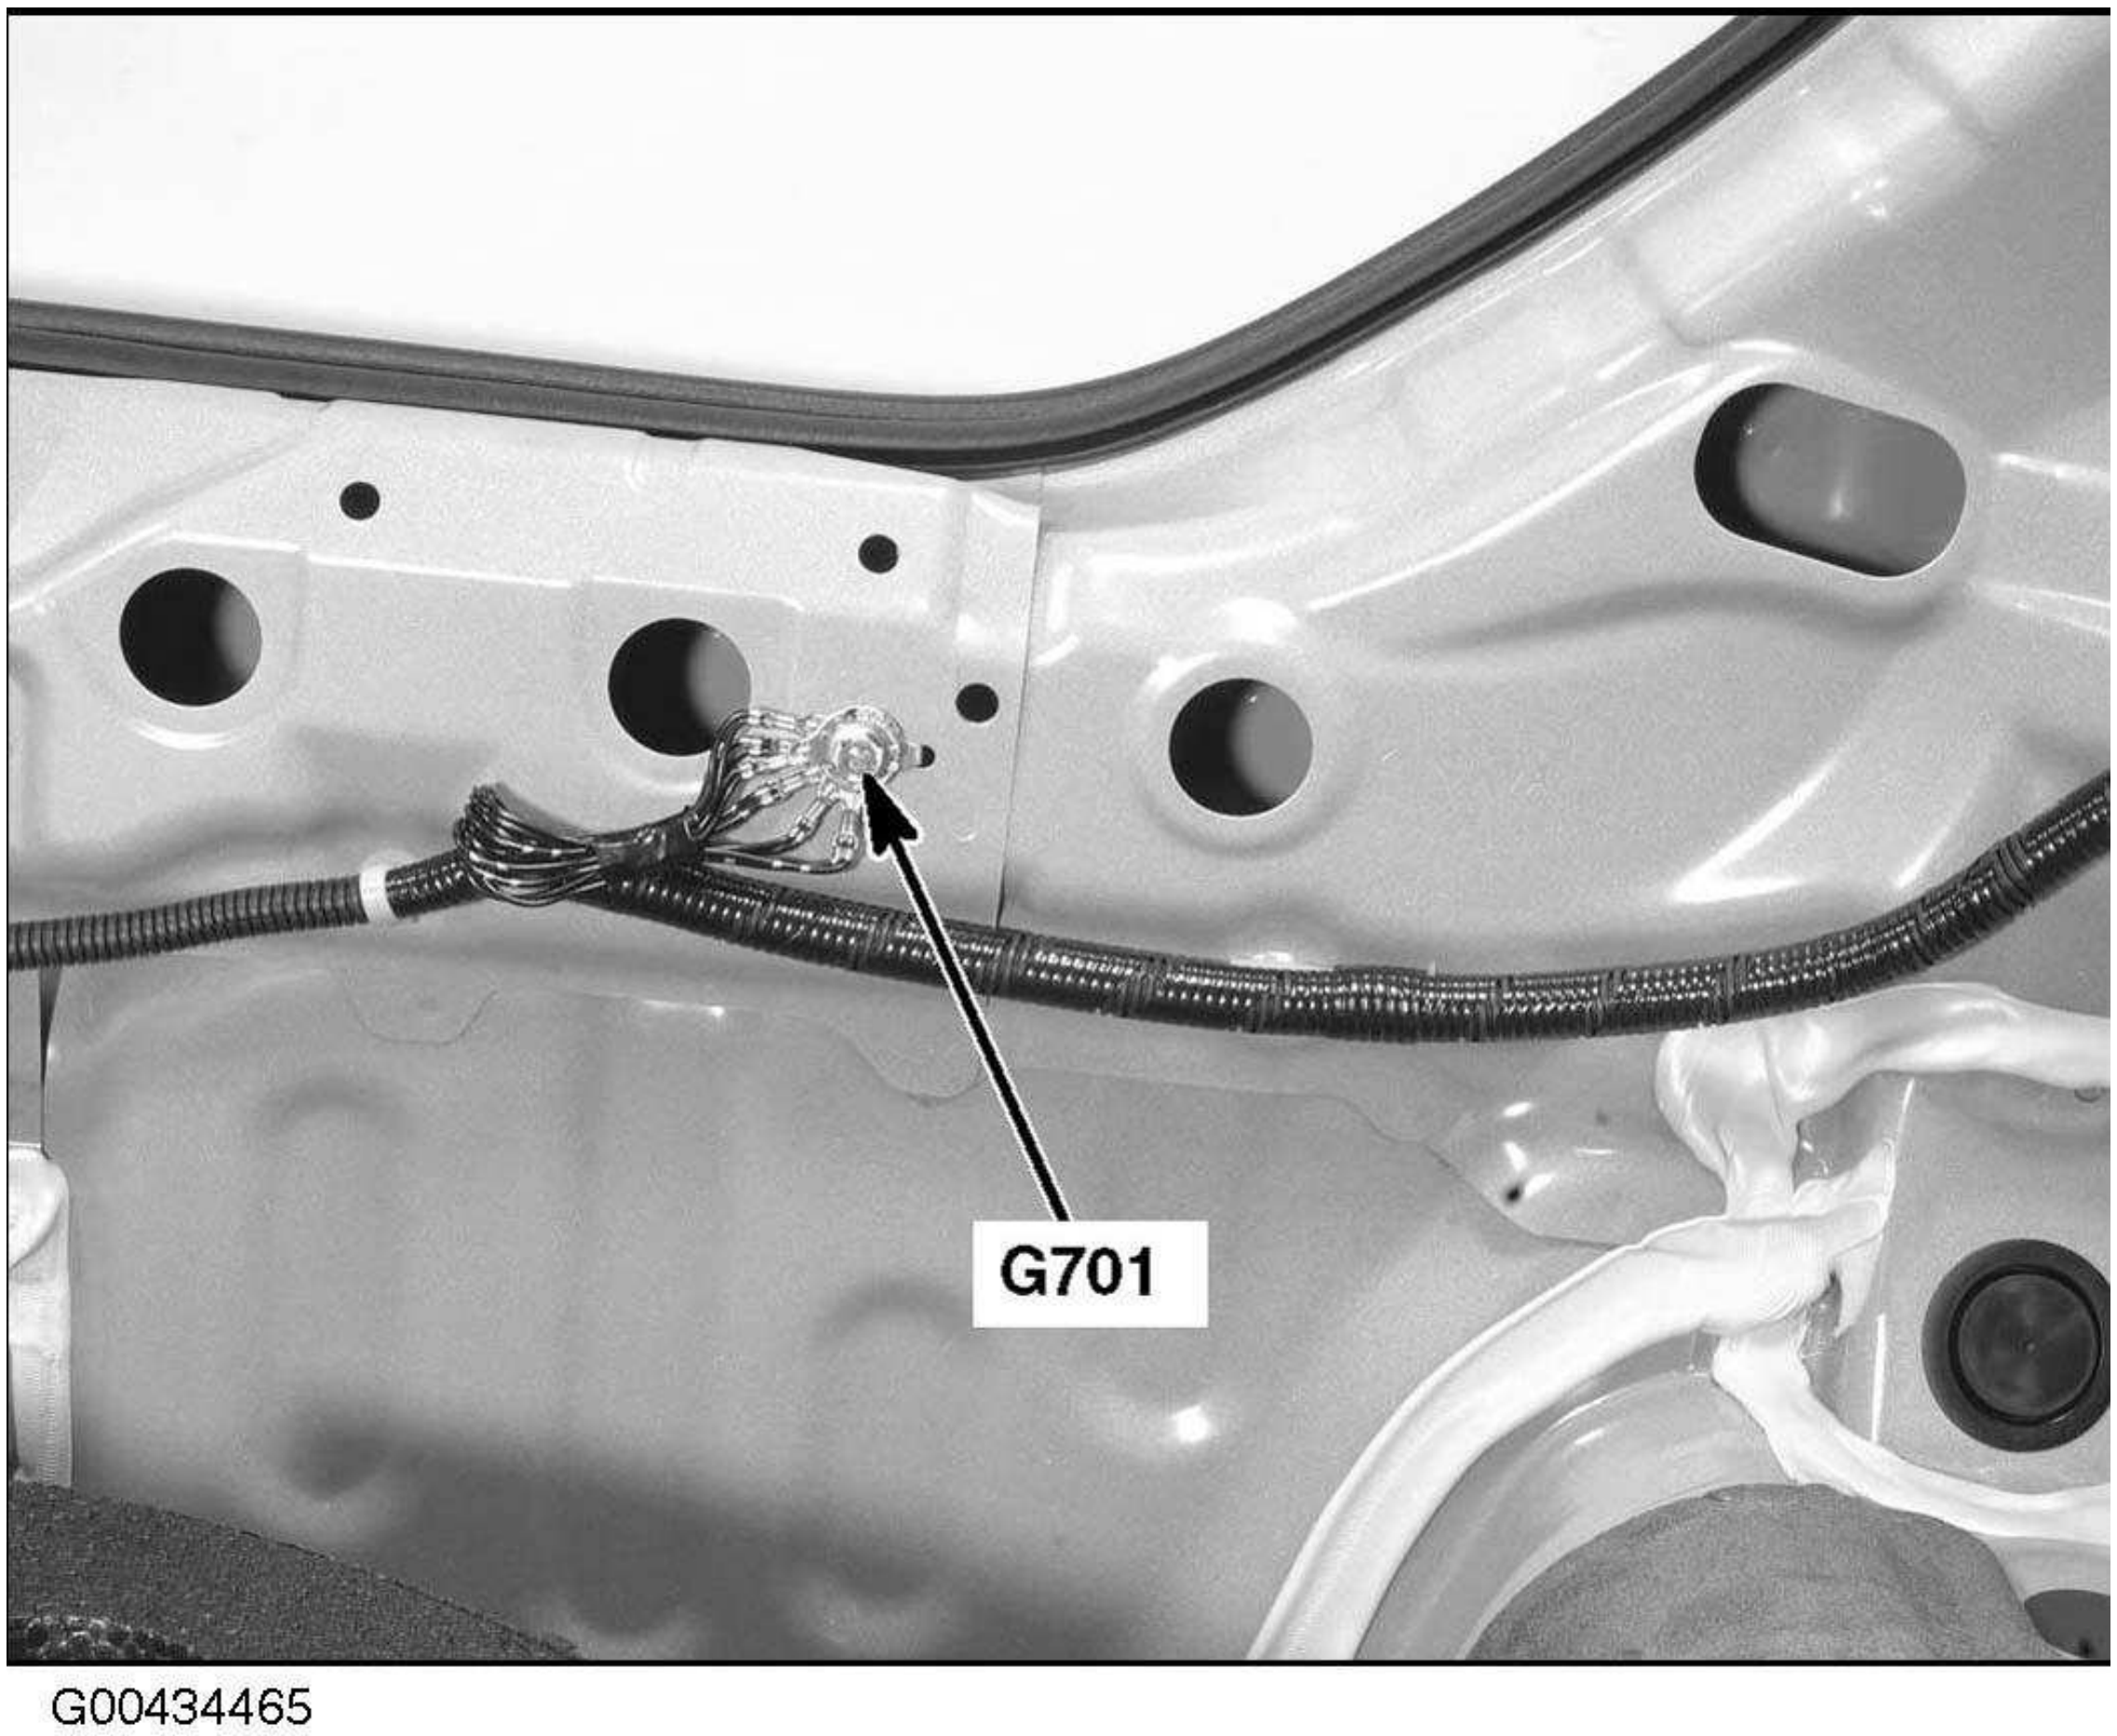

G701
G00434465

Fig. 120: Left Side Of Trunk (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

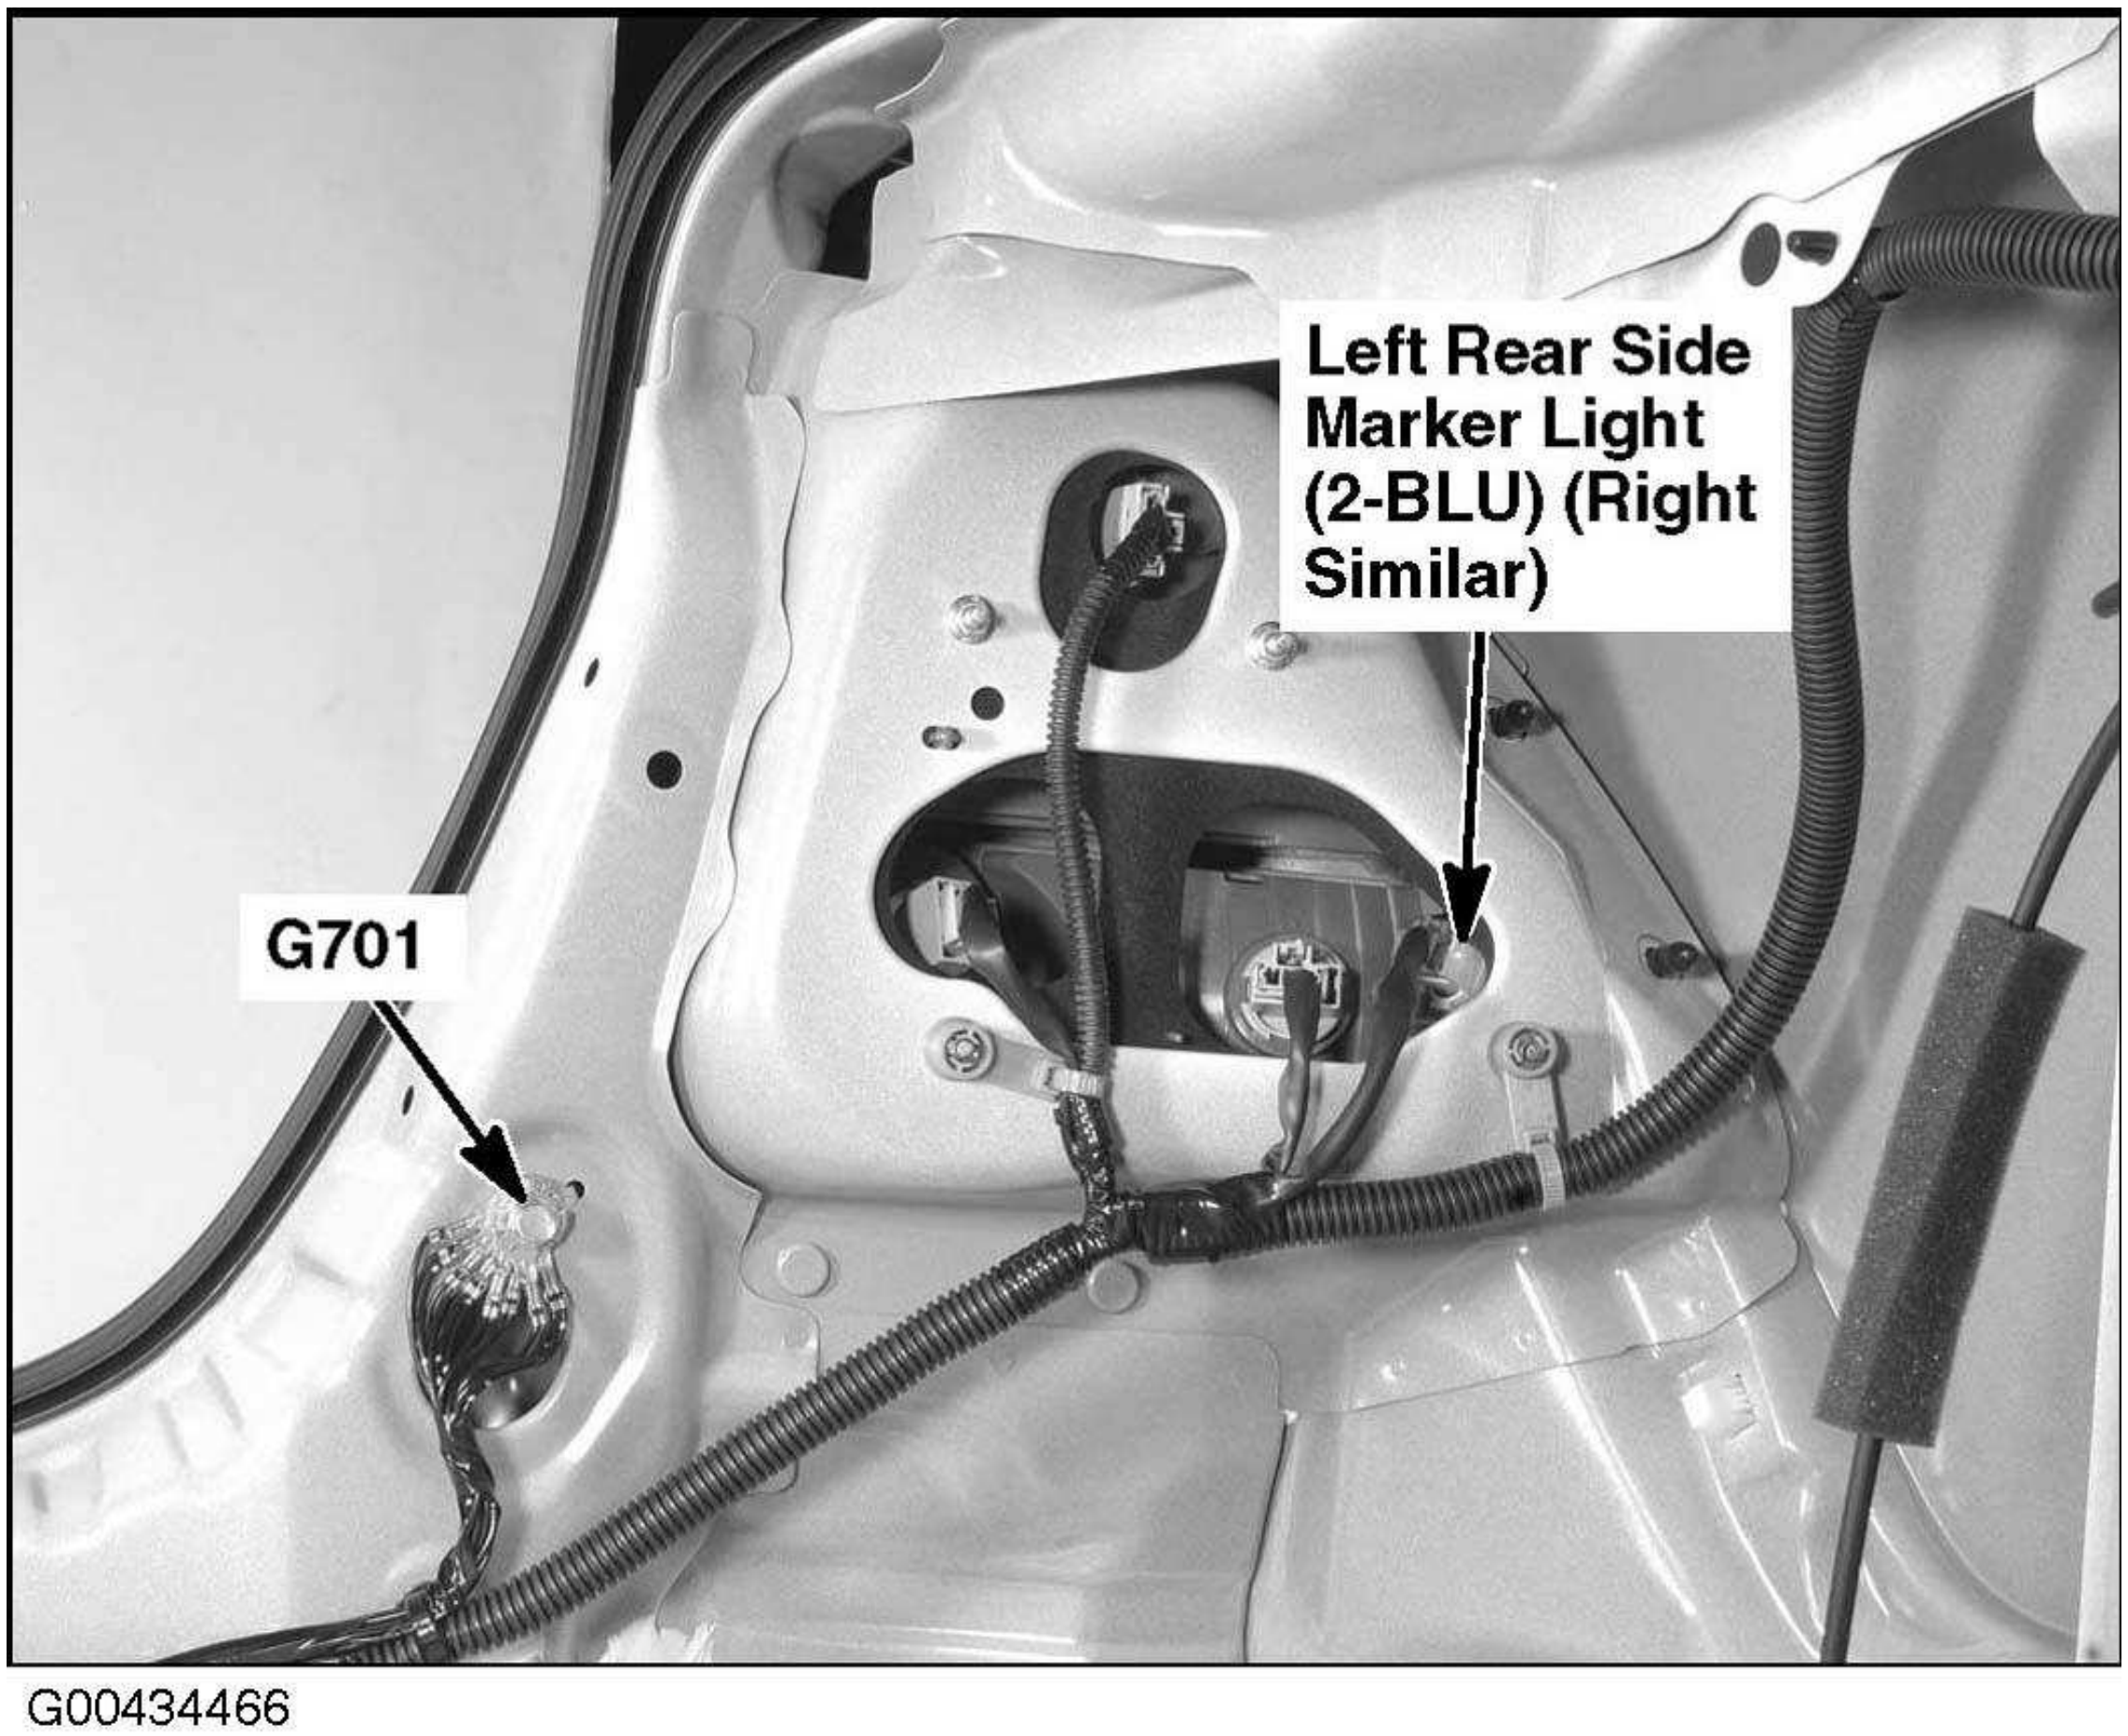
Left Rear Side Marker Light (2-BLU) (Right Similar)
G701
G00434466

Fig. 121: Left Rear Of Trunk (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

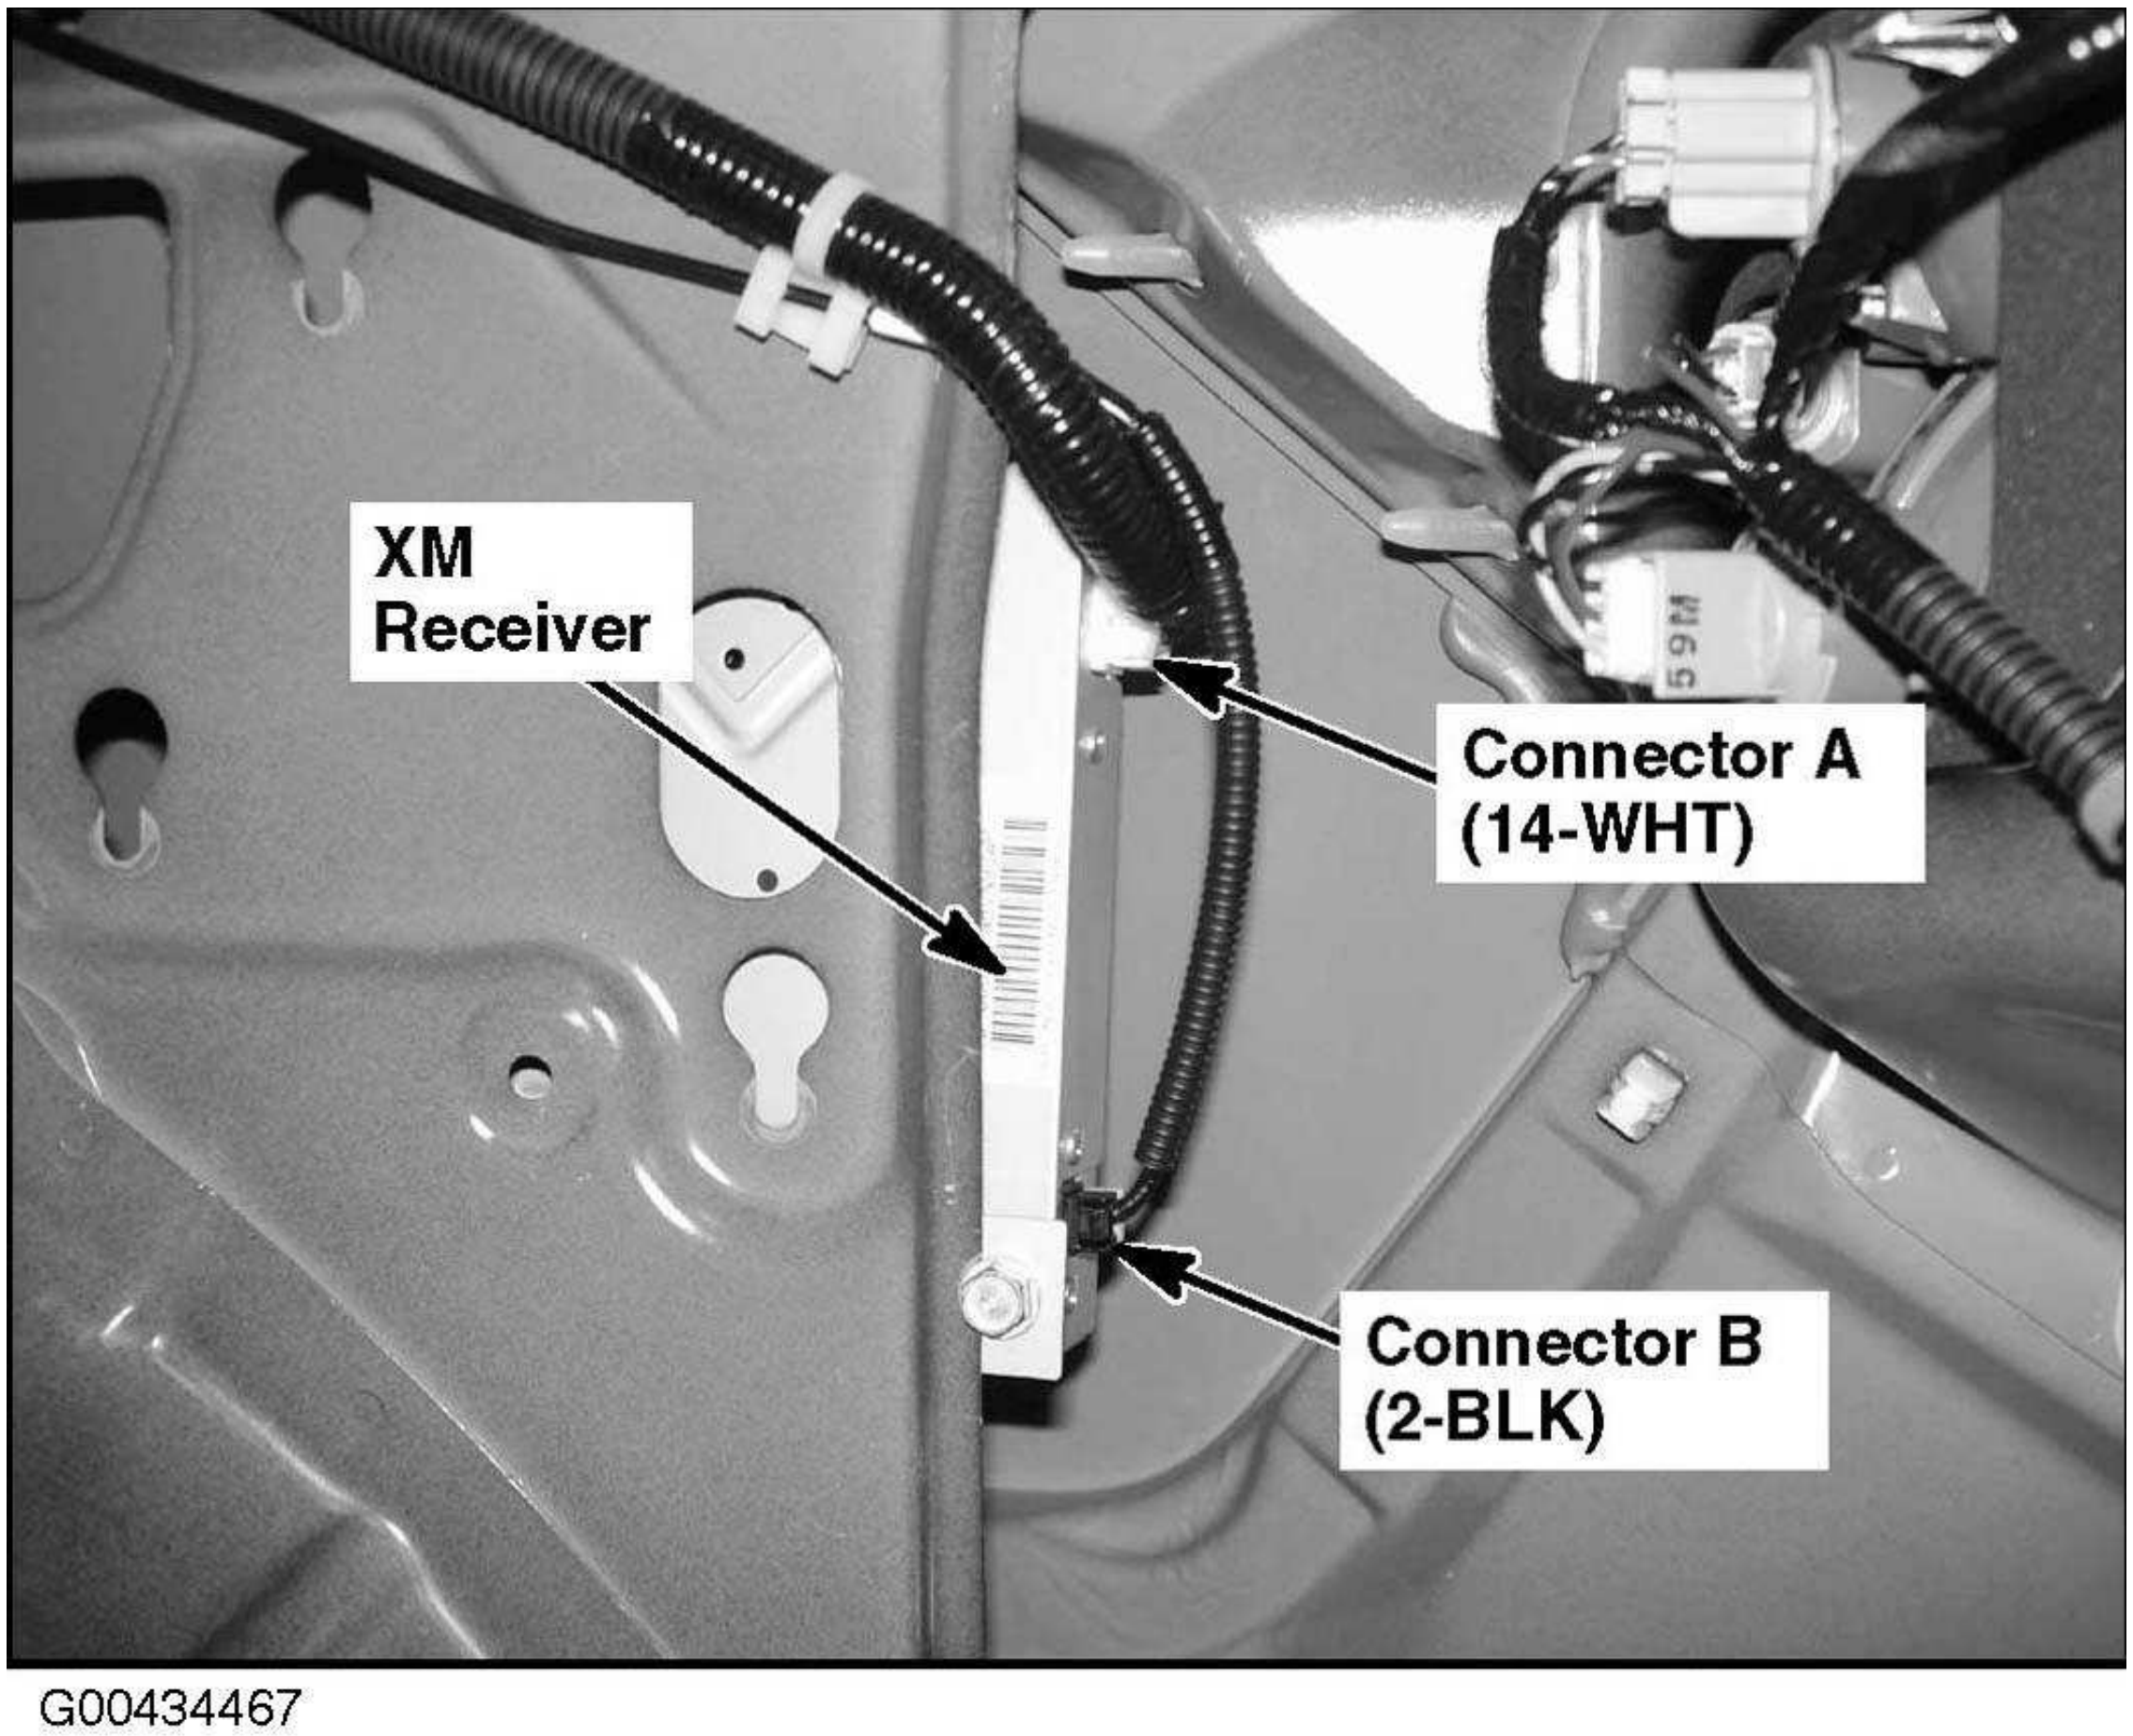

XM Receiver
Connector A (14-WHT)
Connector B (2-BLK)
59M
G00434467

Fig. 122: Right Side Of Trunk (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

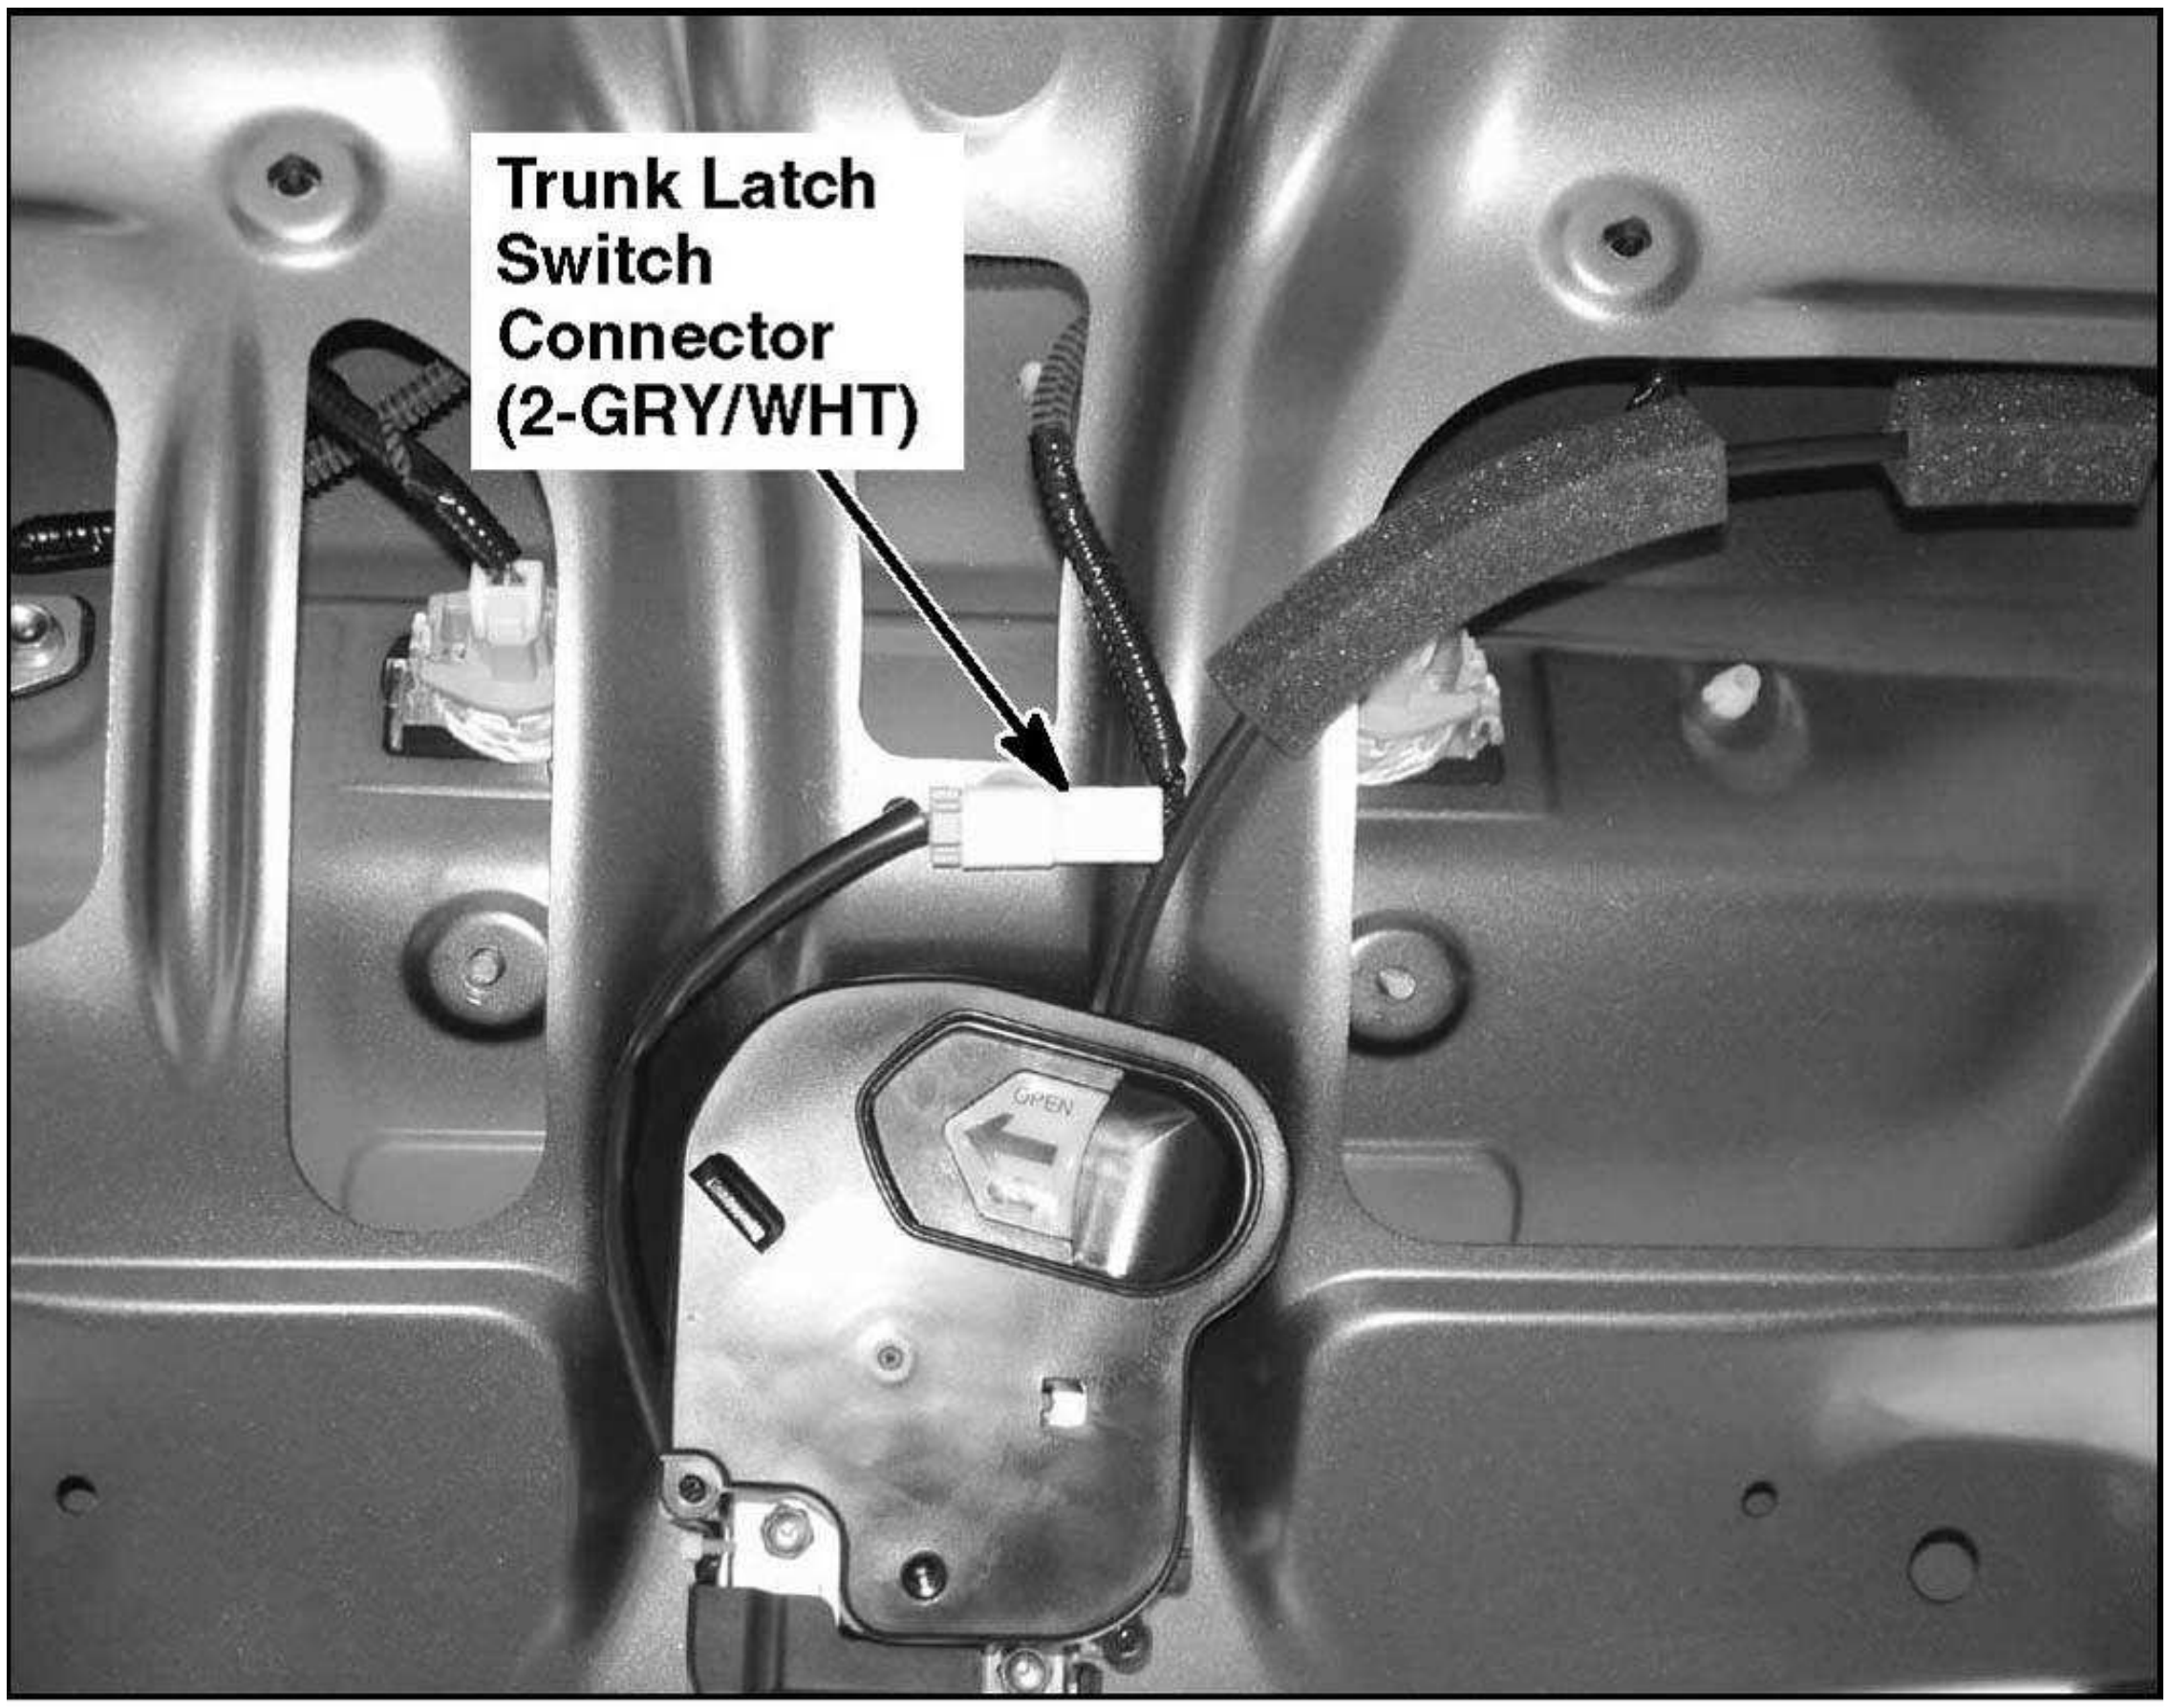
Trunk Latch Switch Connector (2-GRY/WHT)
OPEN

G00434468

Fig. 123: Middle Of Trunk Lid
Courtesy of AMERICAN HONDA MOTOR CO., INC.

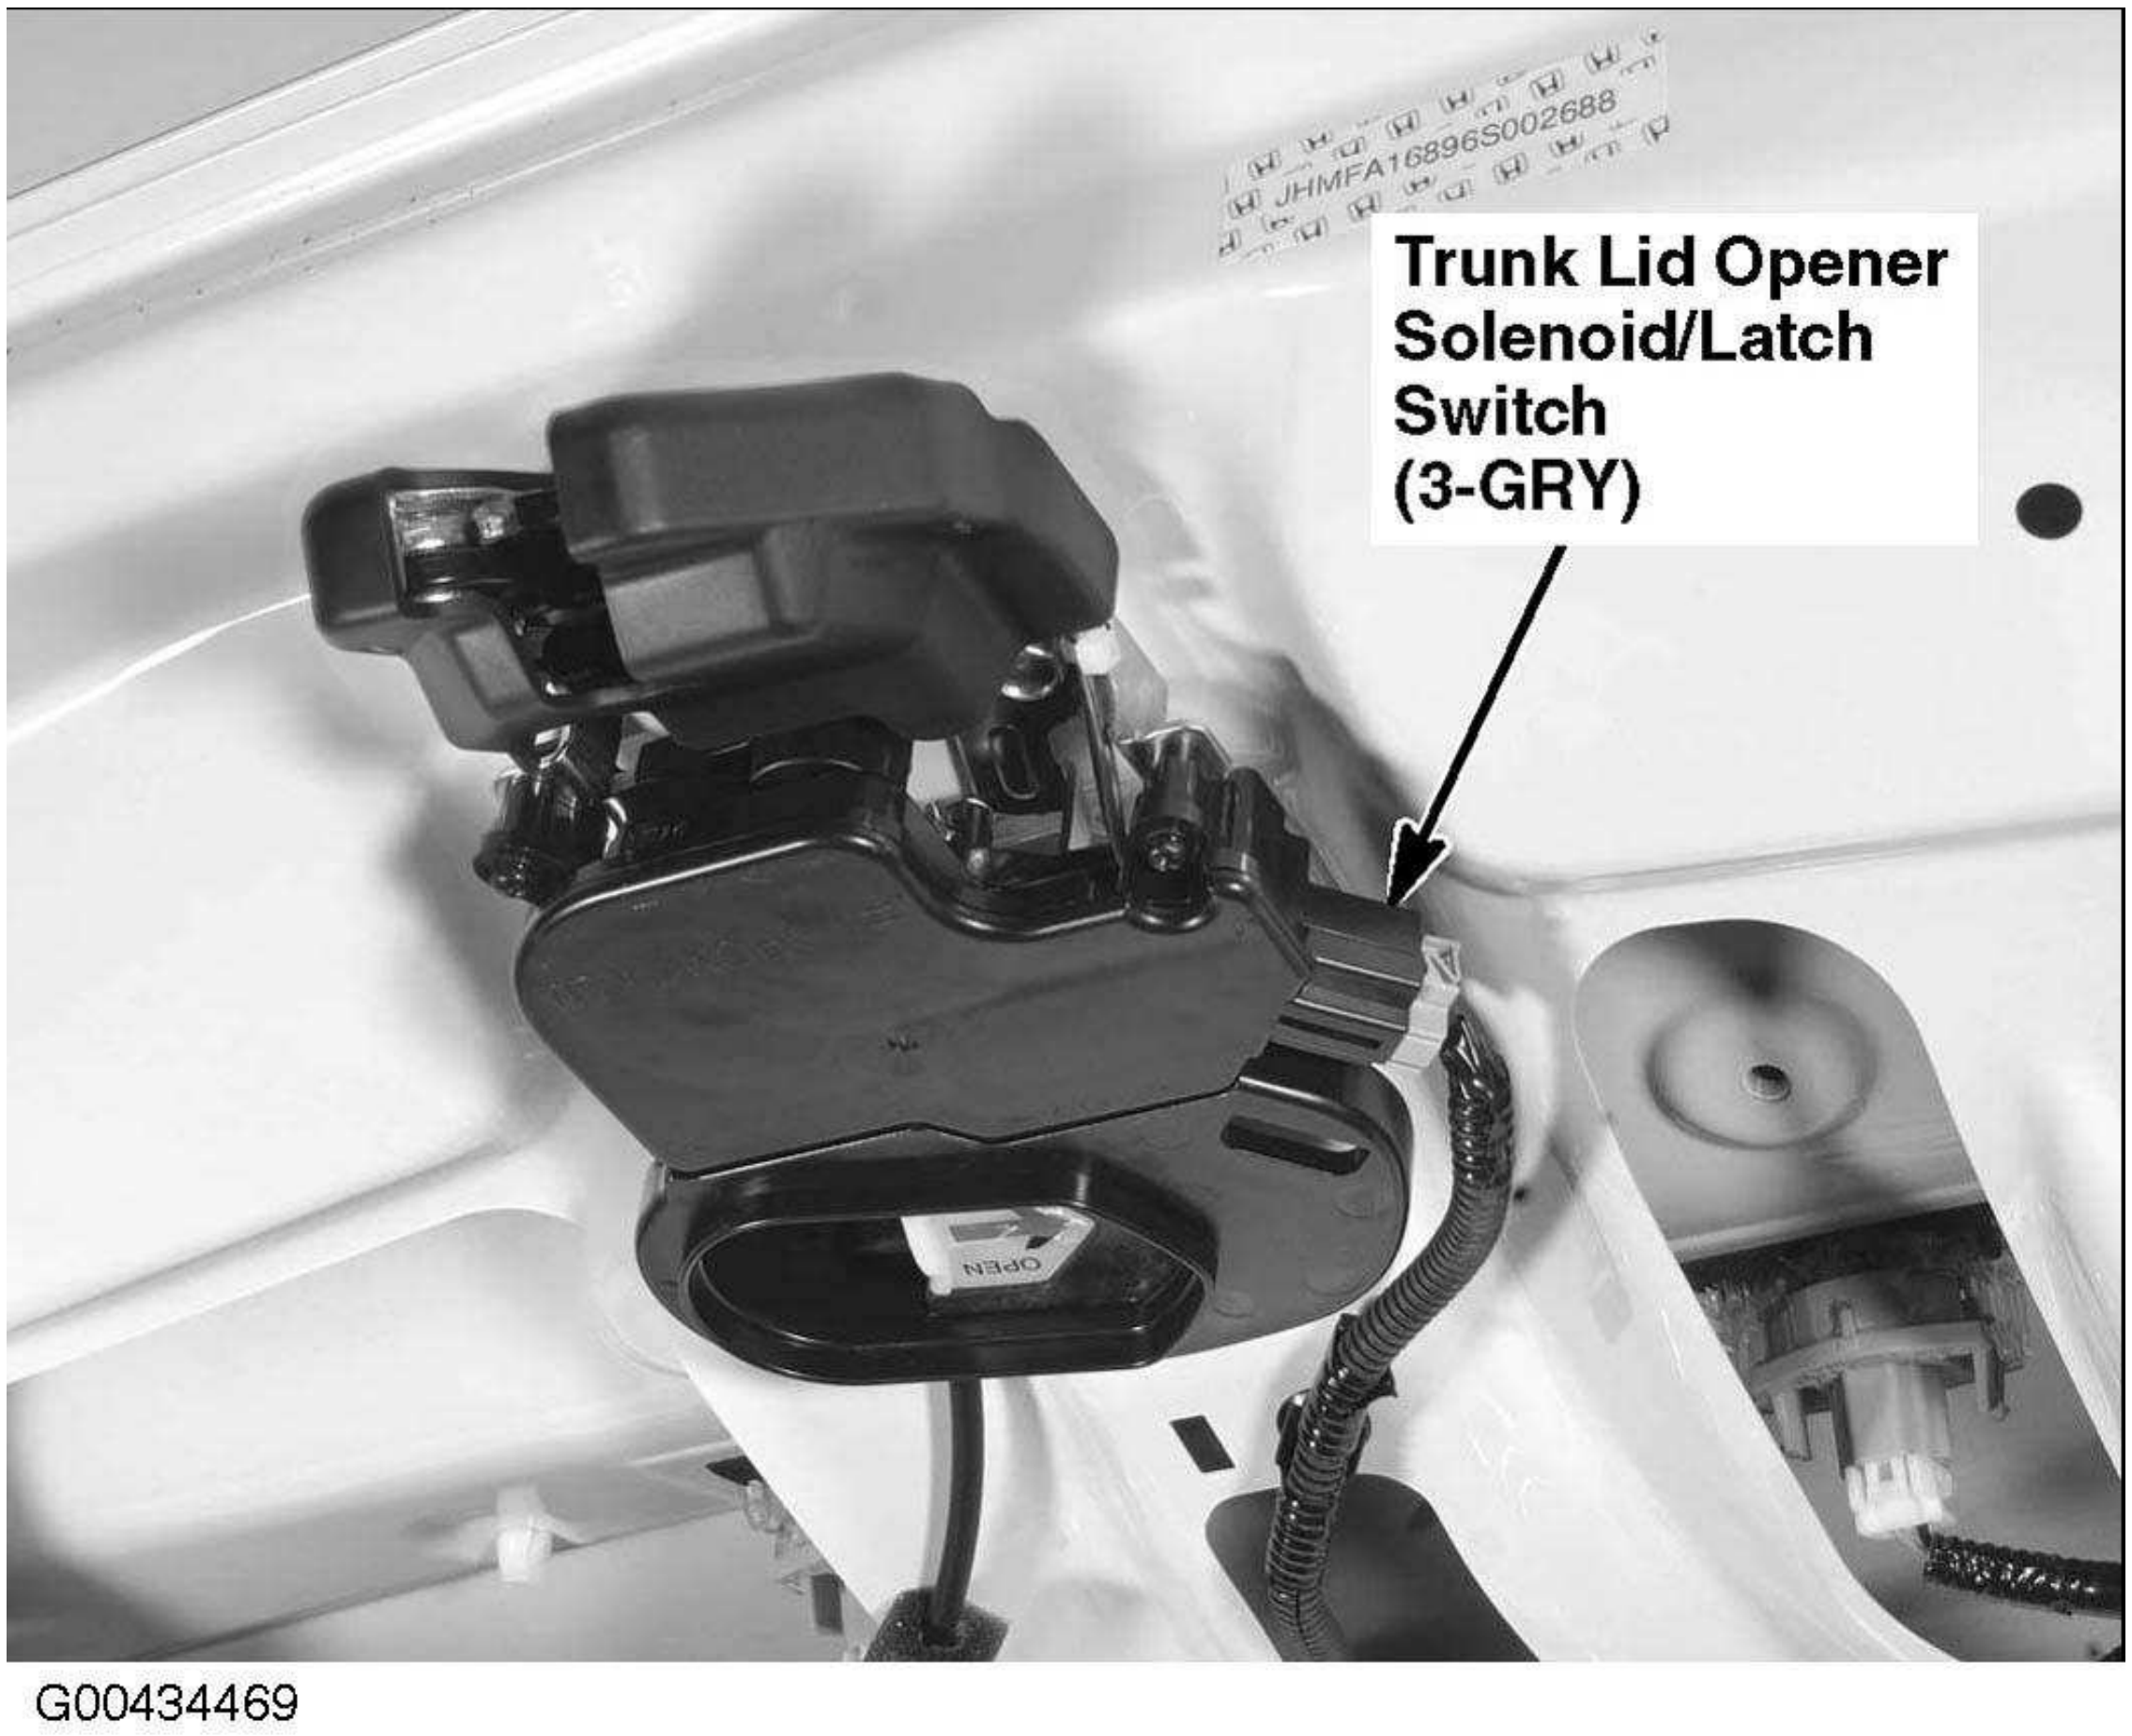

Trunk Lid Opener Solenoid/Latch Switch (3-GRY)
JHMFA16896S002688
OPEN
G00434469

Fig. 124: Middle Of Trunk Lid
Courtesy of AMERICAN HONDA MOTOR CO., INC.

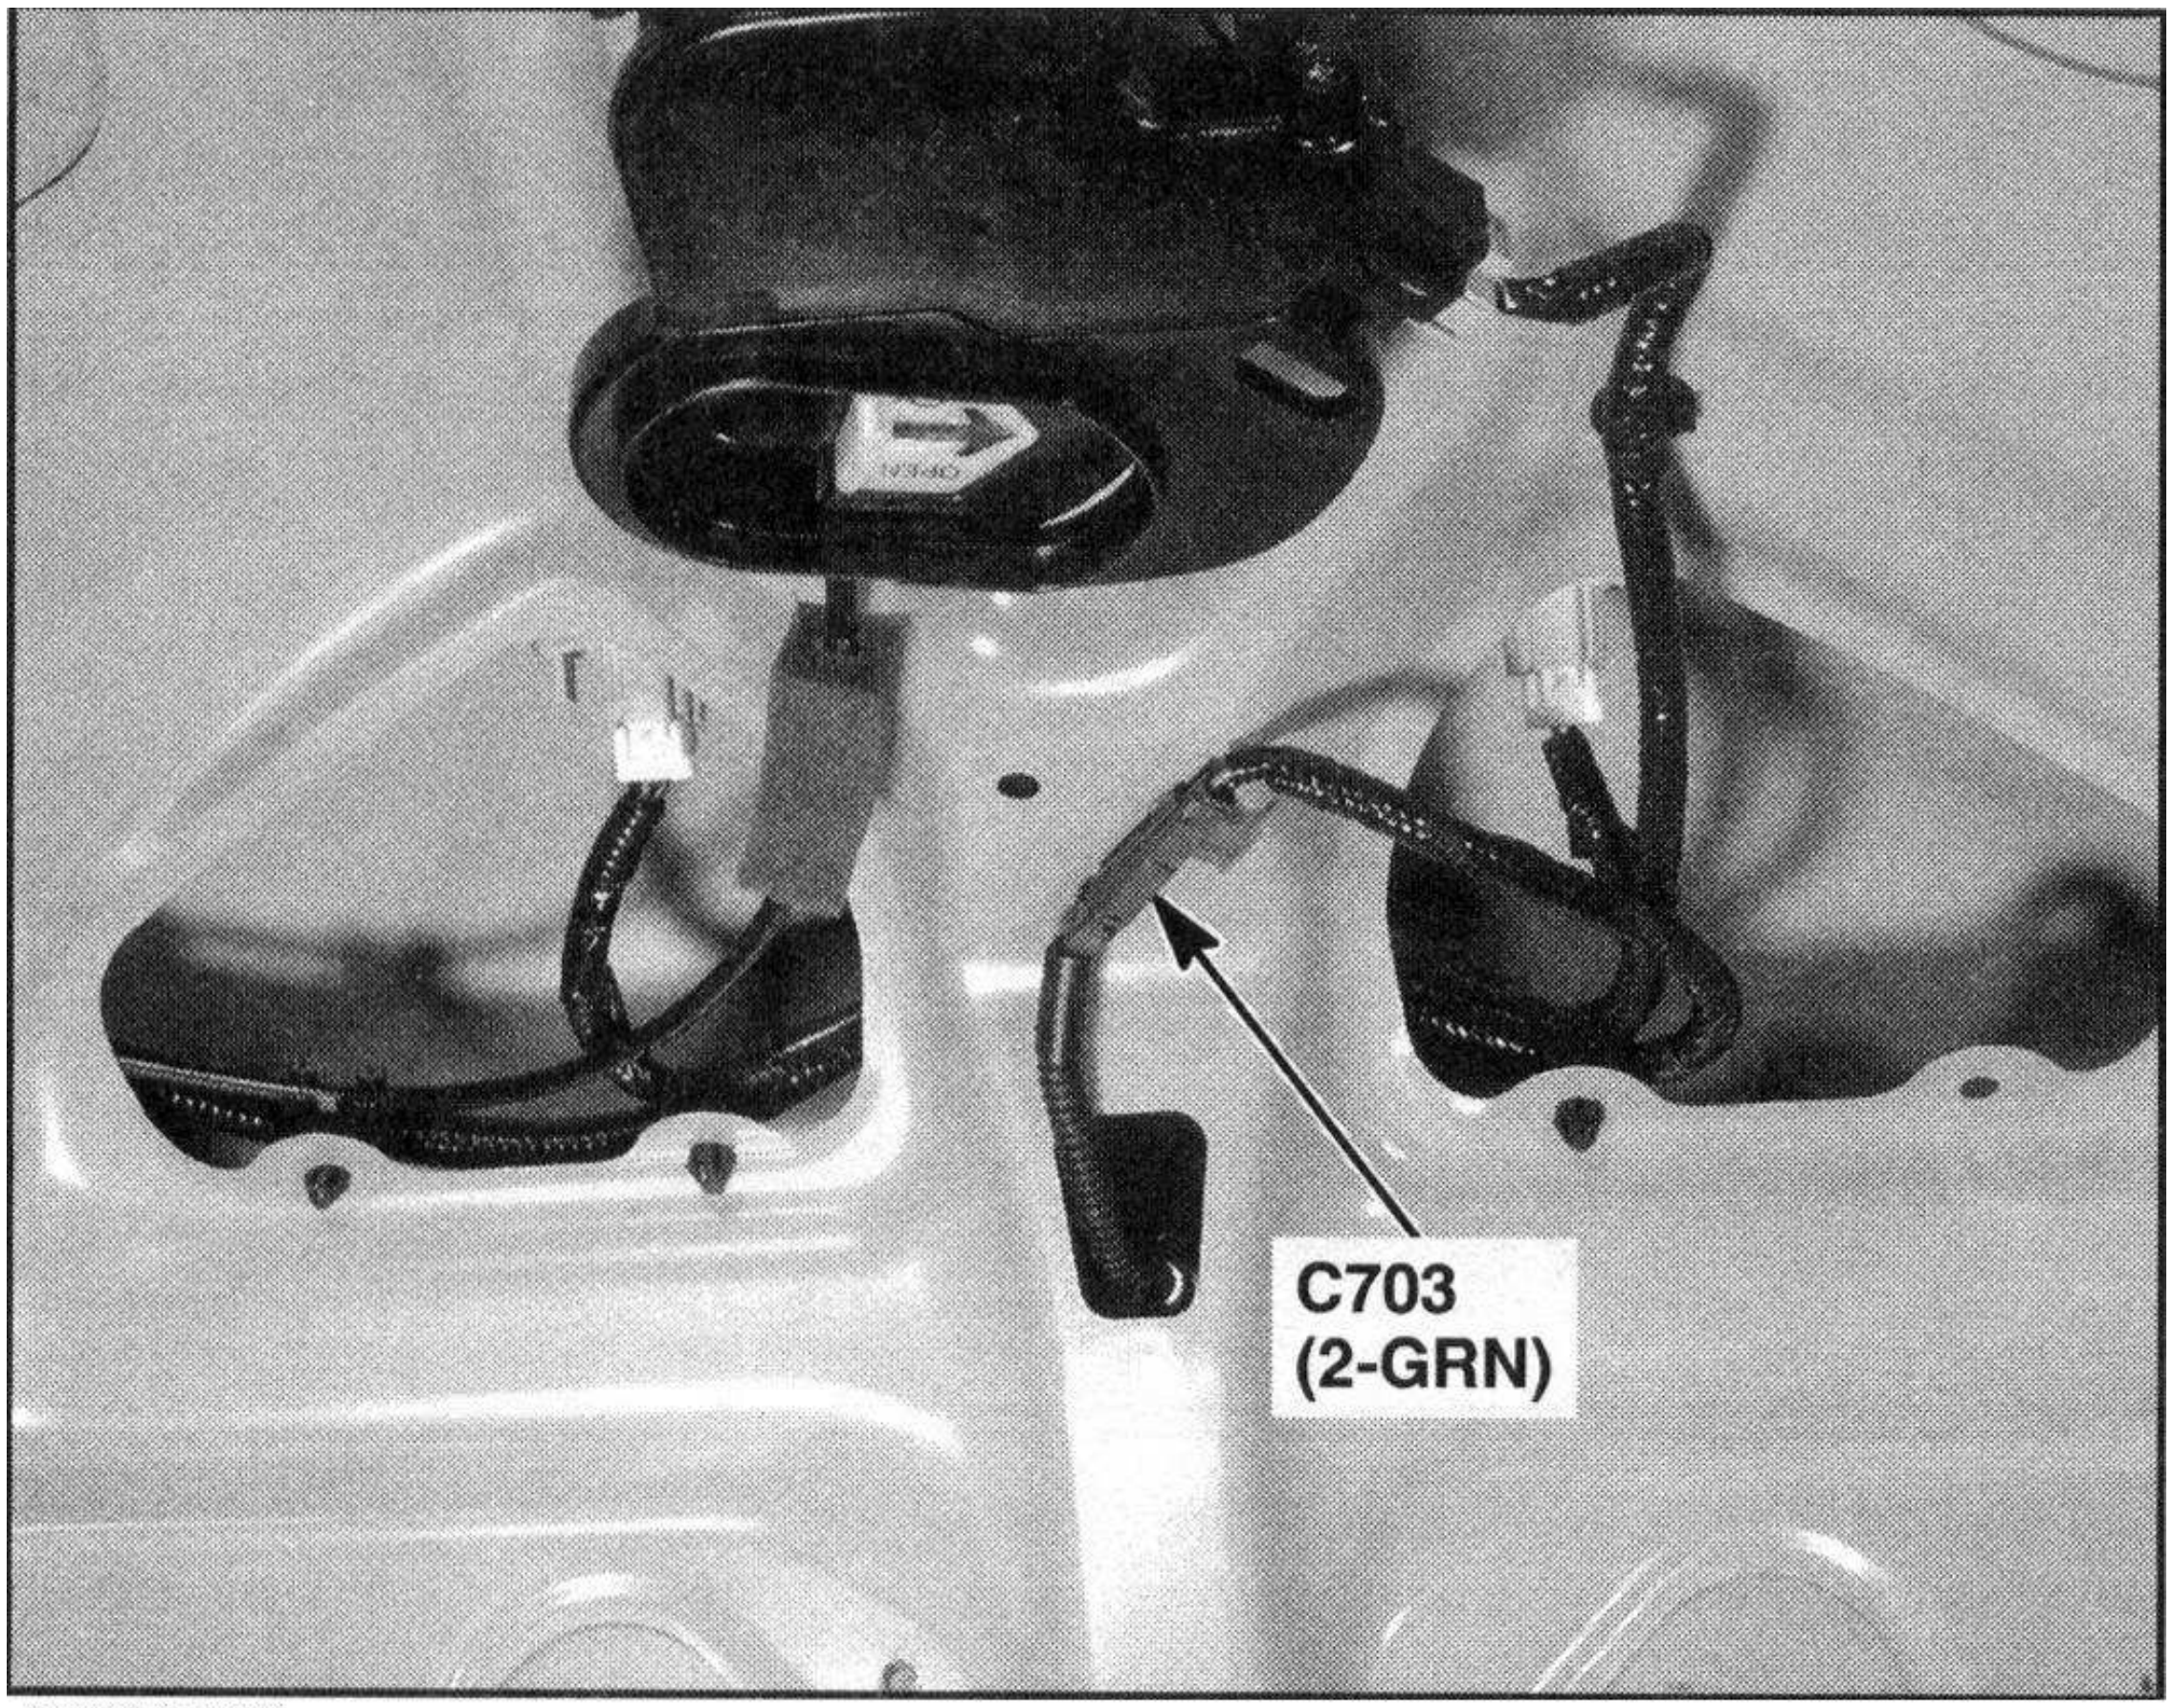
C703
(2-GRN)
G00447724

Fig. 125: Middle Of Trunk Lid
Courtesy of AMERICAN HONDA MOTOR CO., INC.

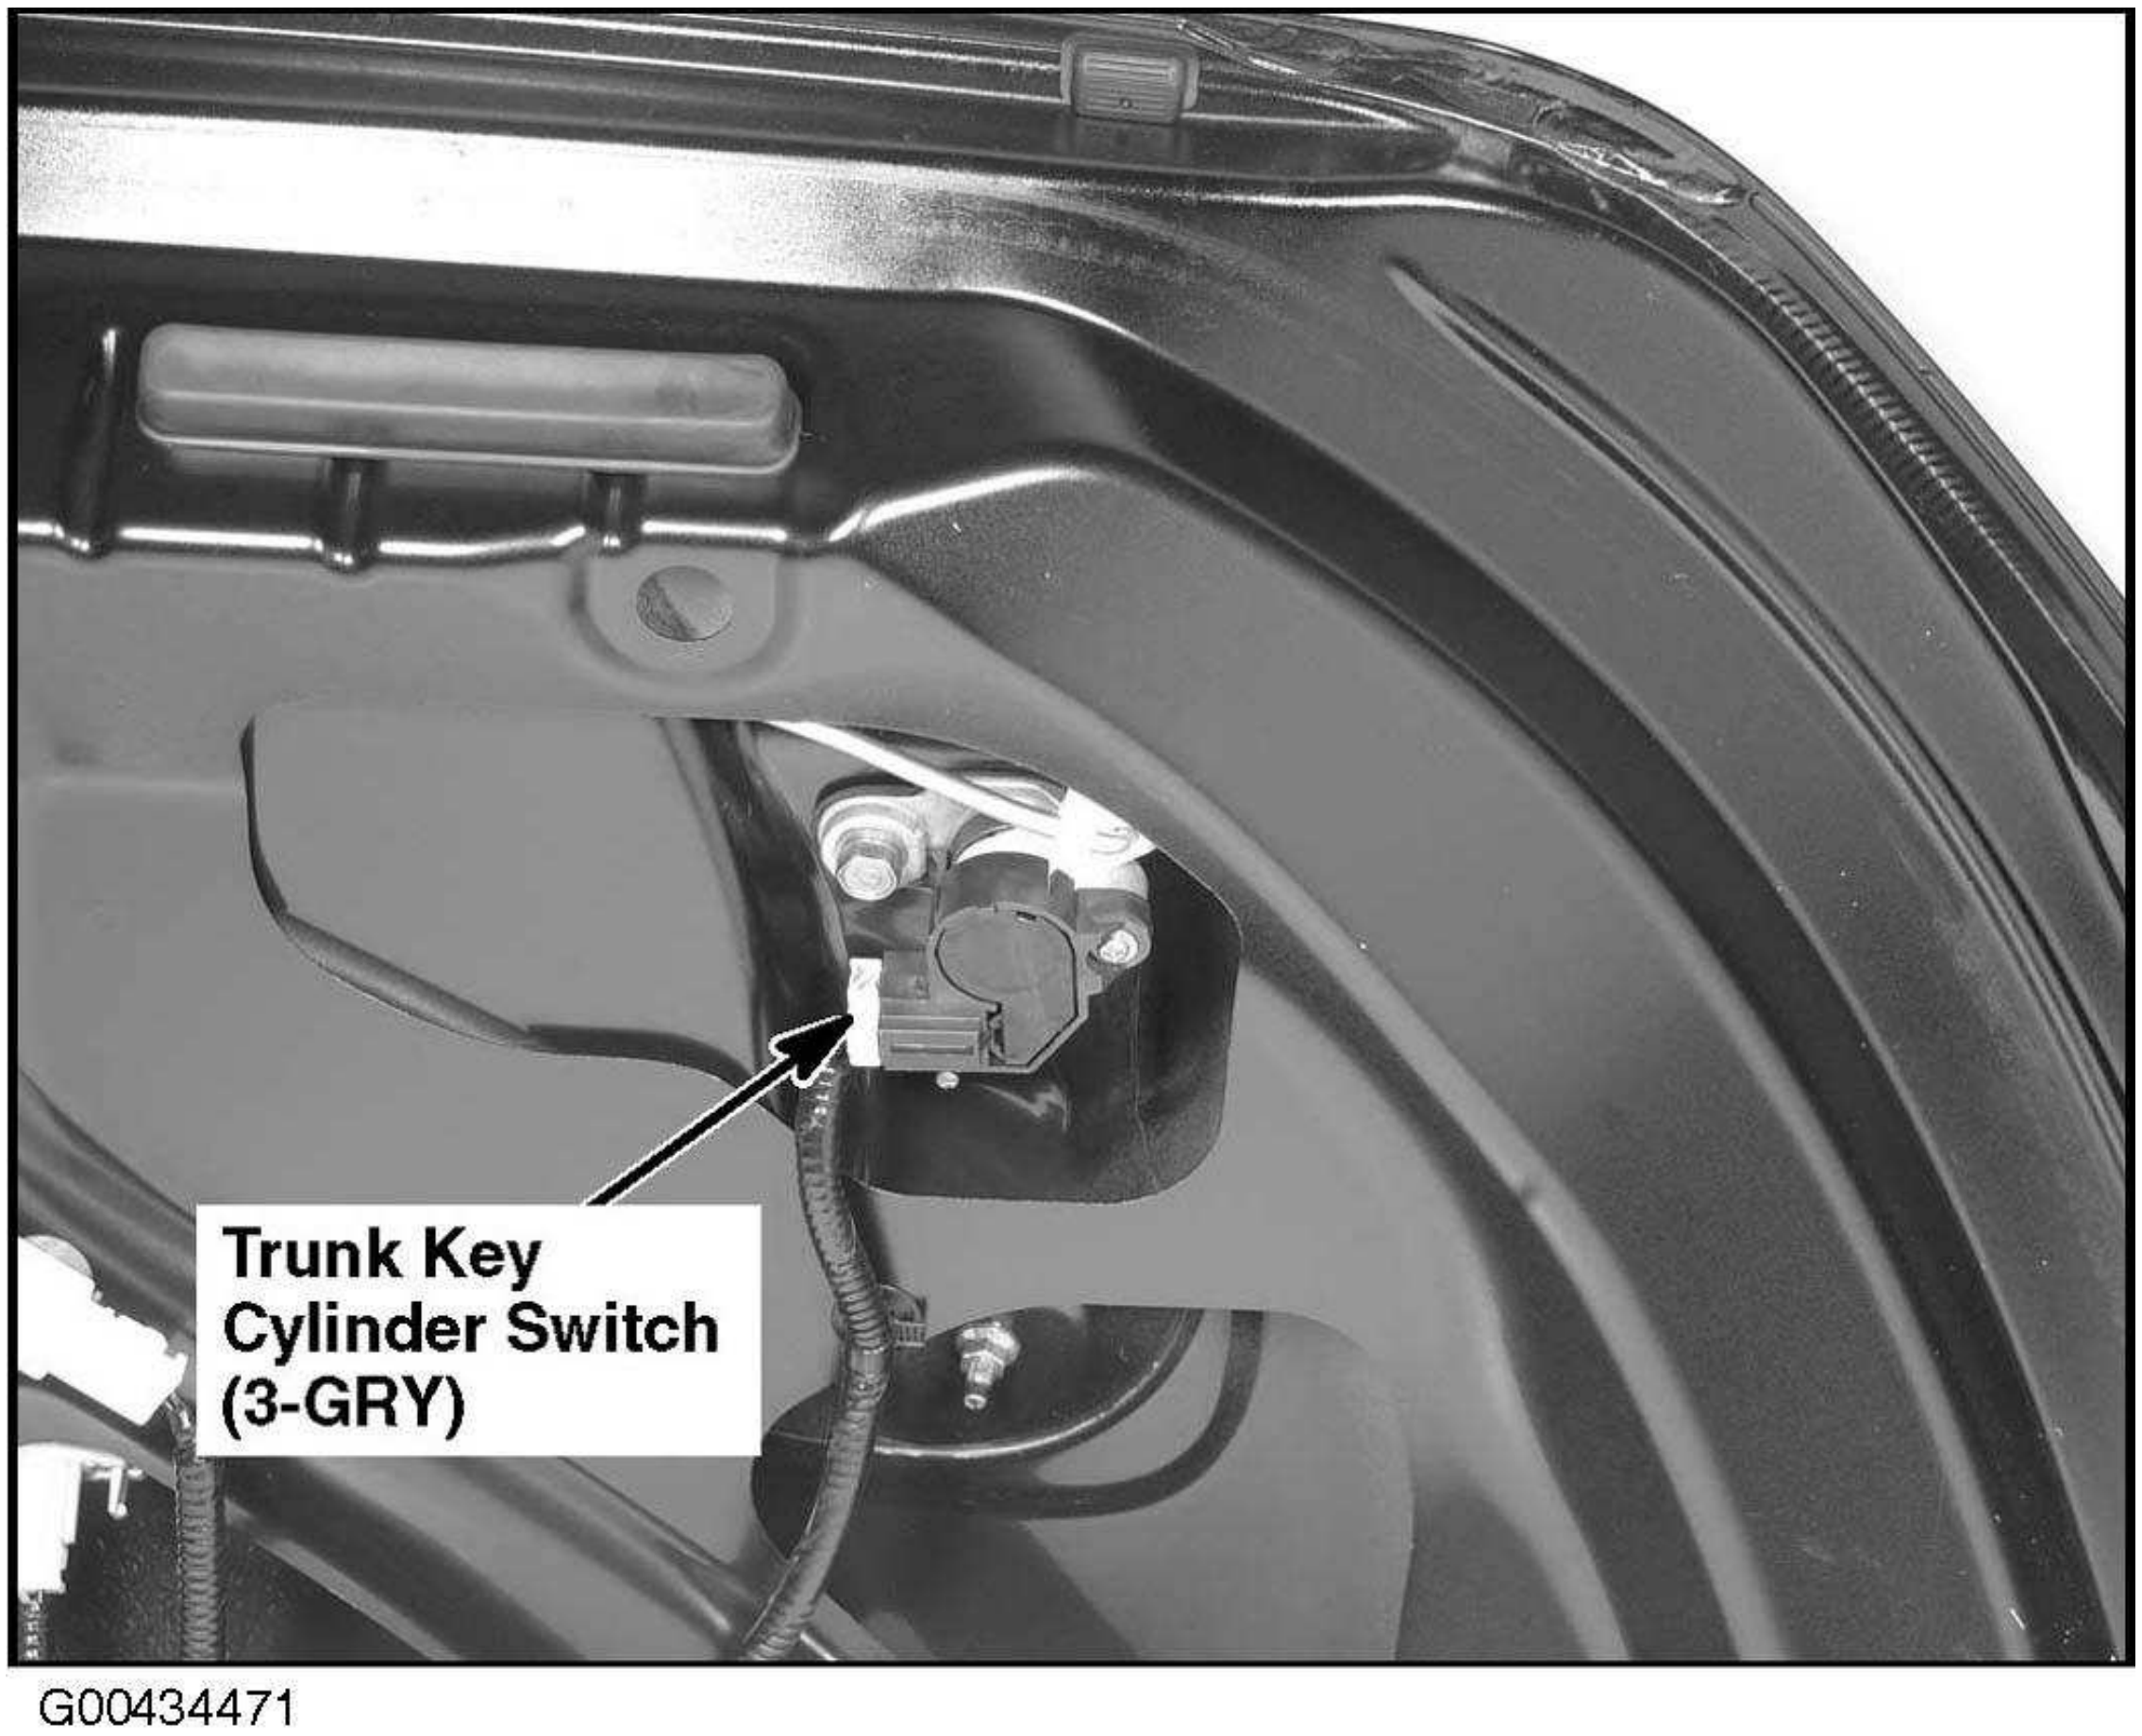
Trunk Key
Cylinder Switch
(3-GRY)
G00434471

Fig. 126: Right Side Of Trunk Lid
Courtesy of AMERICAN HONDA MOTOR CO., INC.

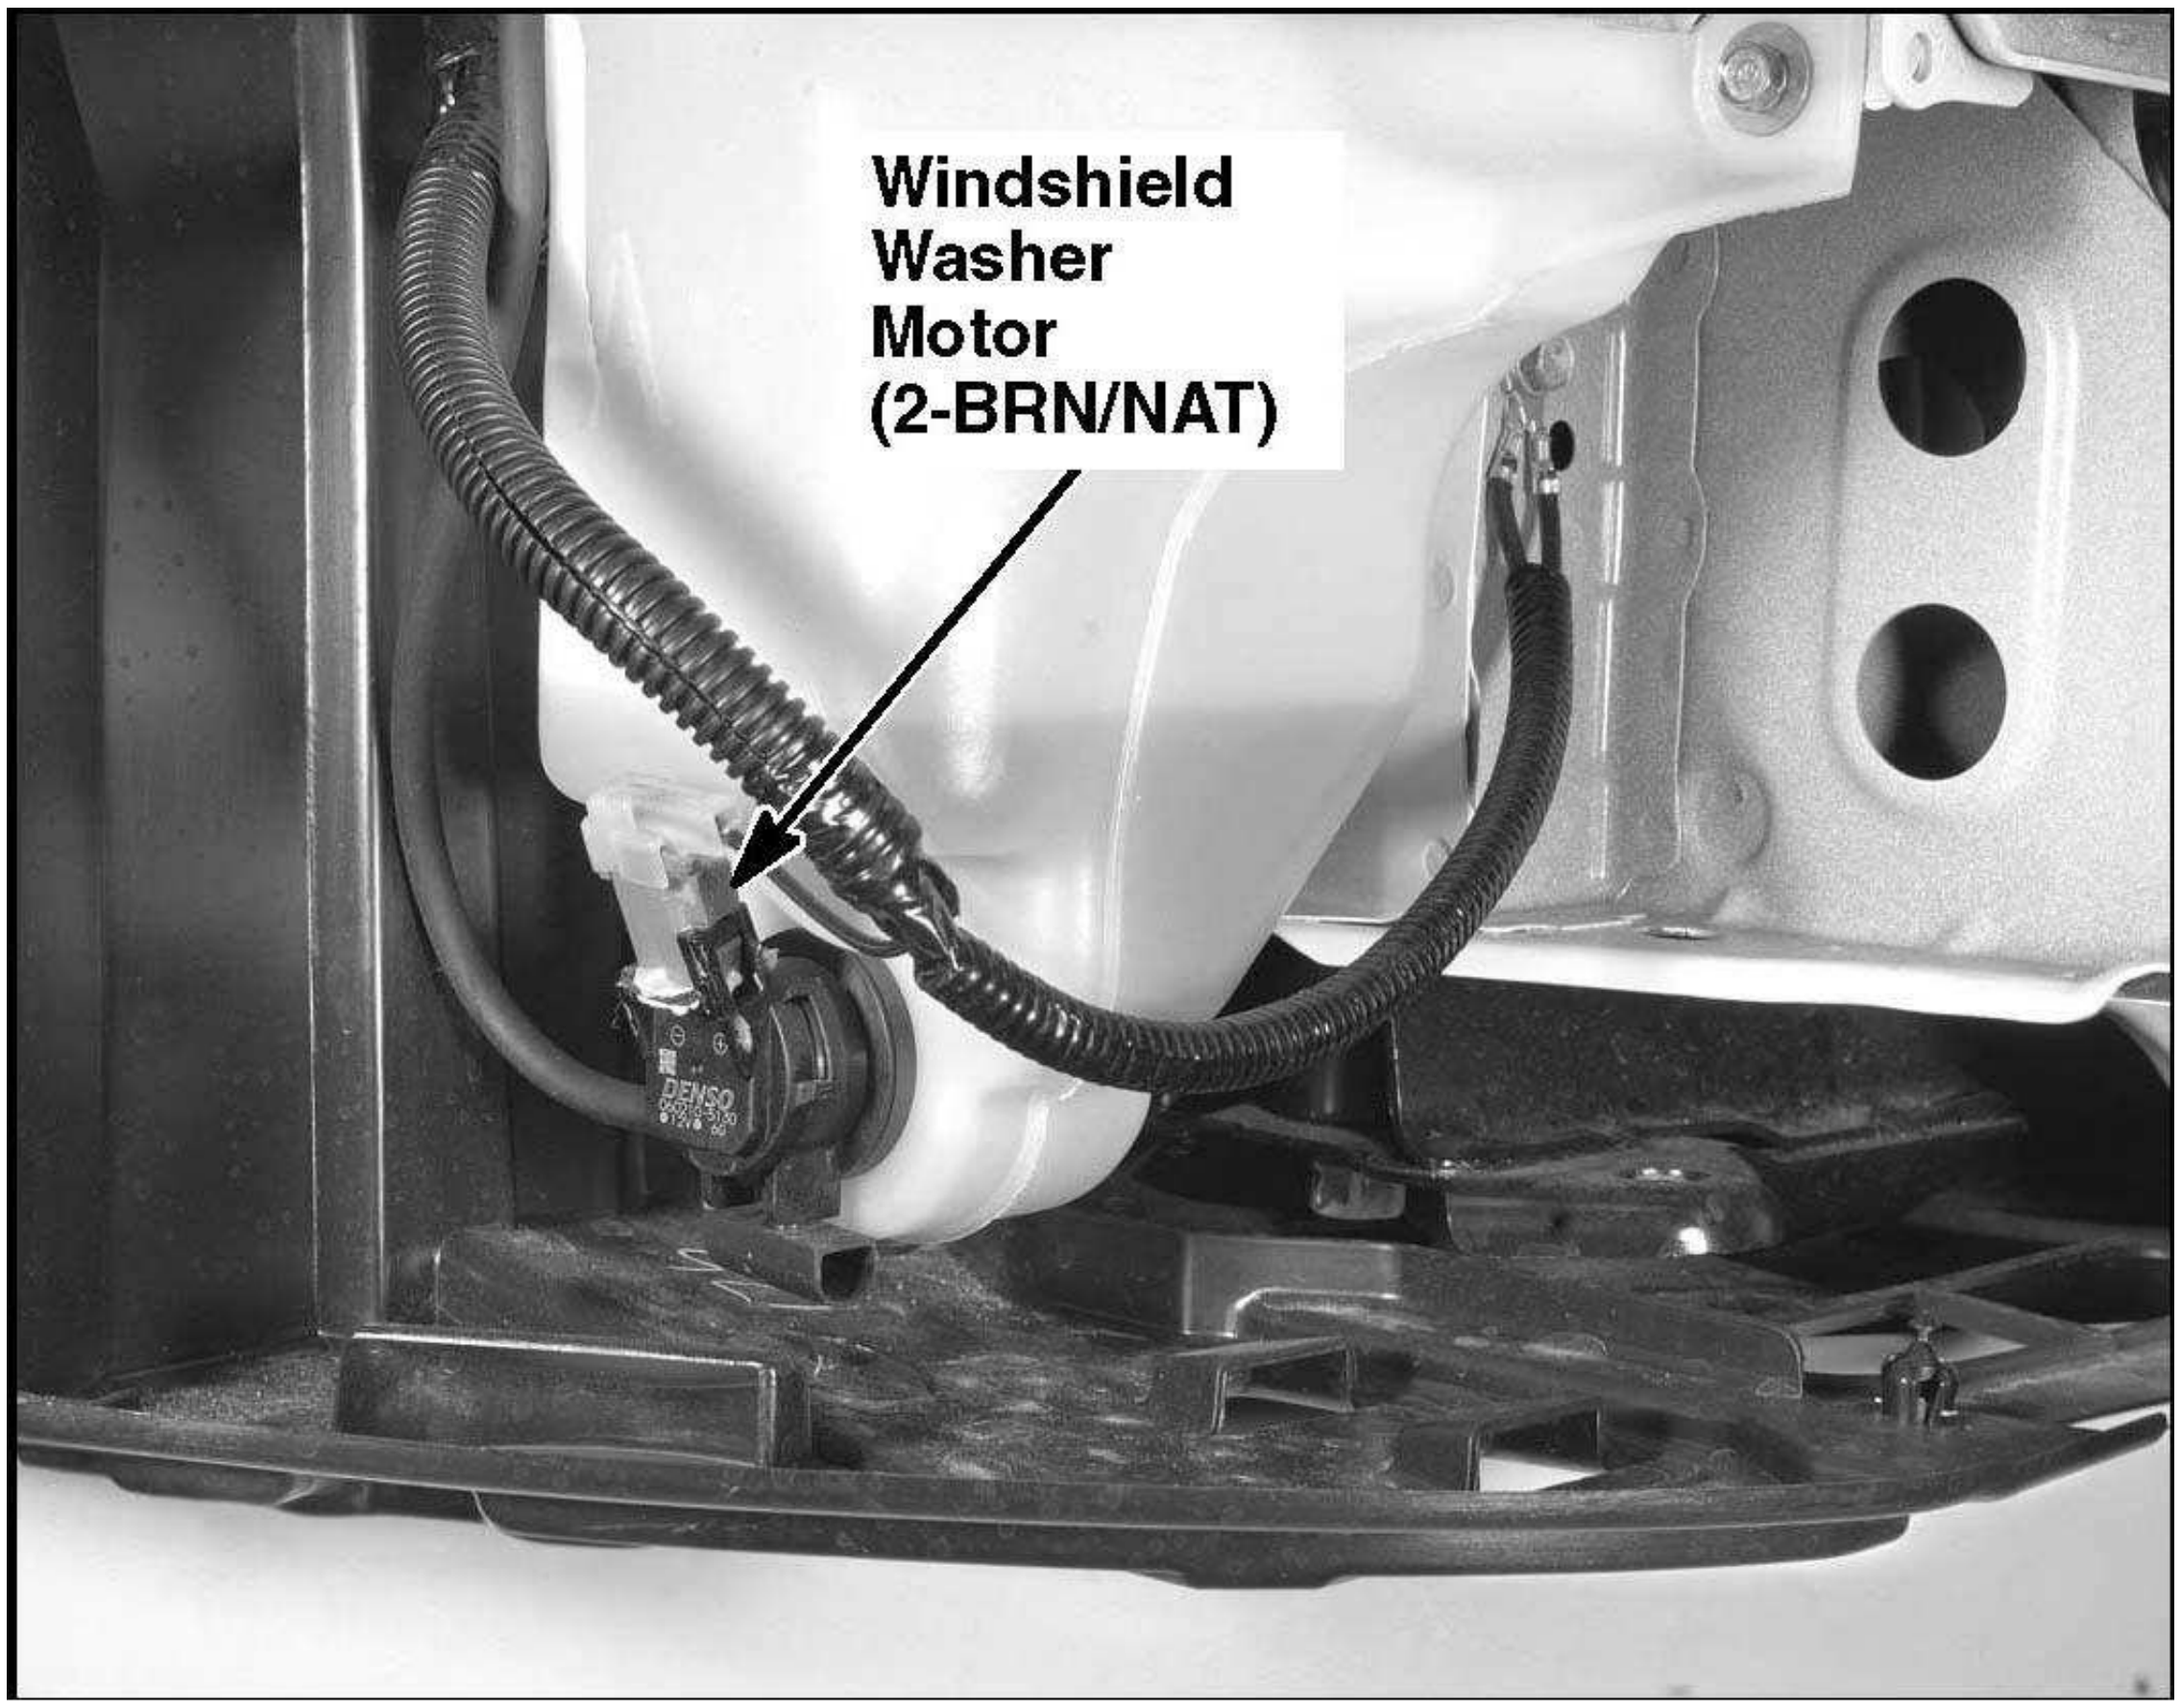
Windshield
Washer
Motor
(2-BRN/NAT)
G00434472

Fig. 127: Behind Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

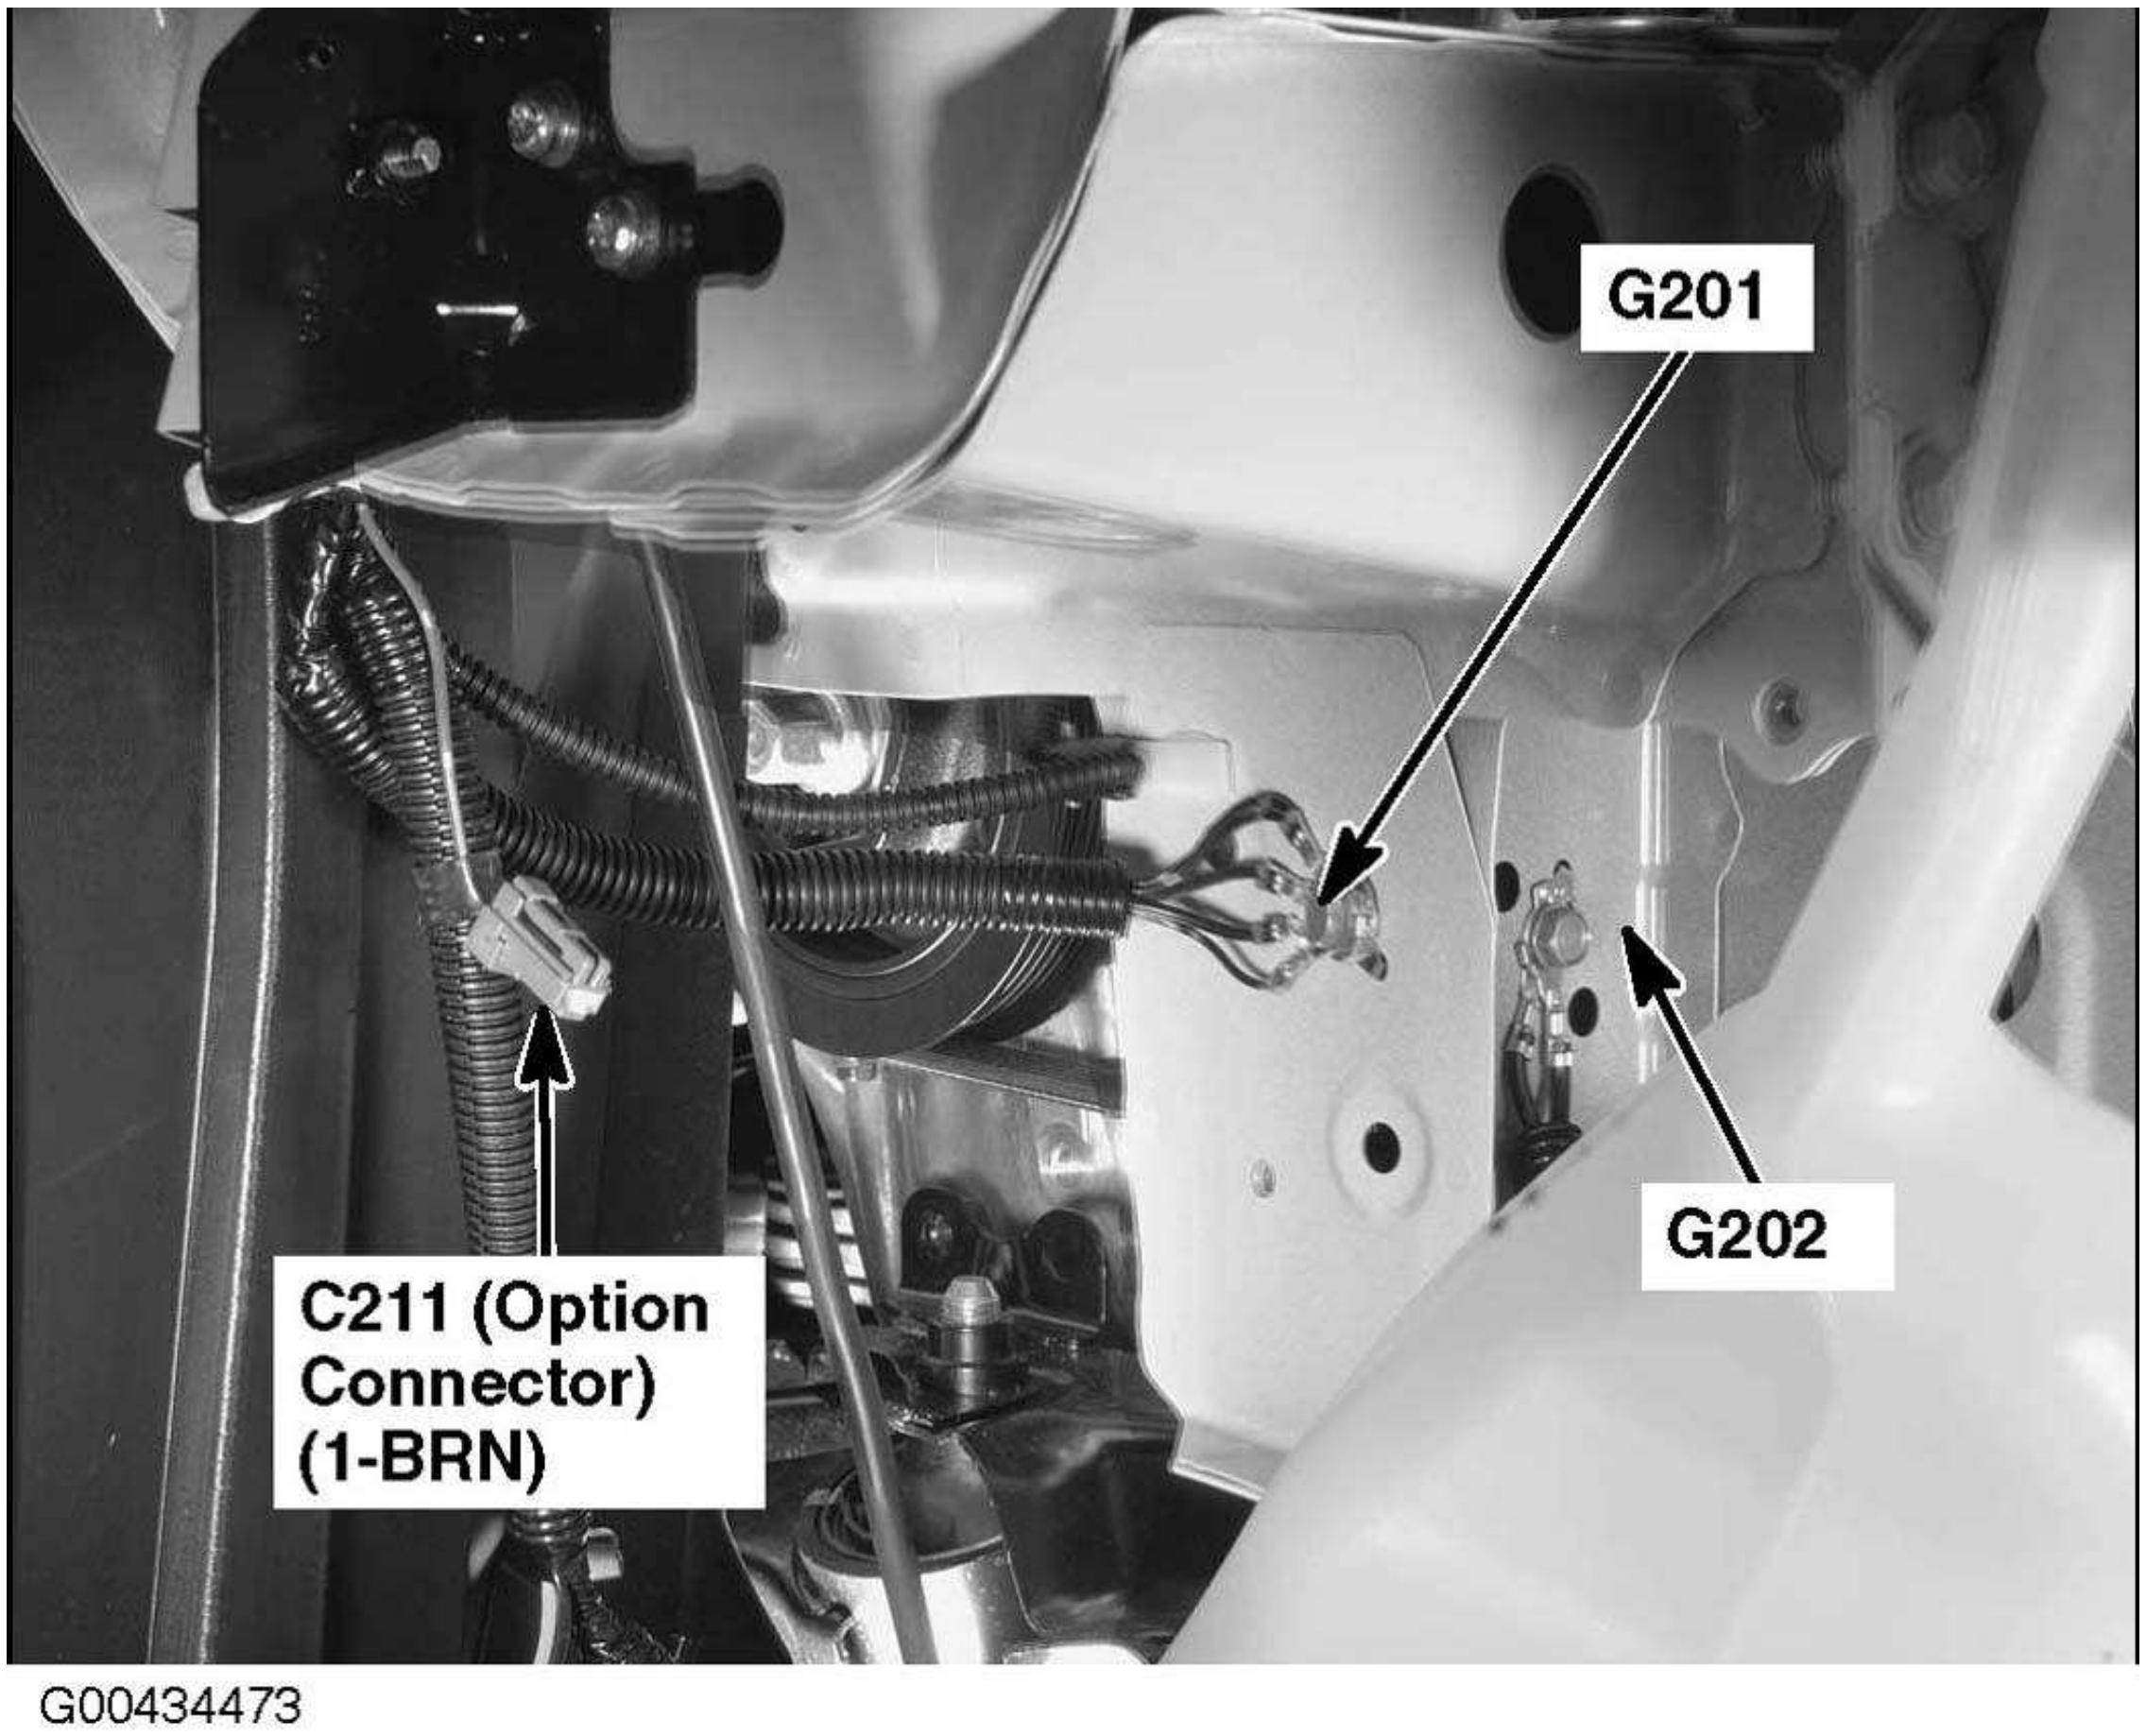
G201
G202
C211 (Option Connector) (1-BRN)
G00434473

Fig. 128: Behind Right Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

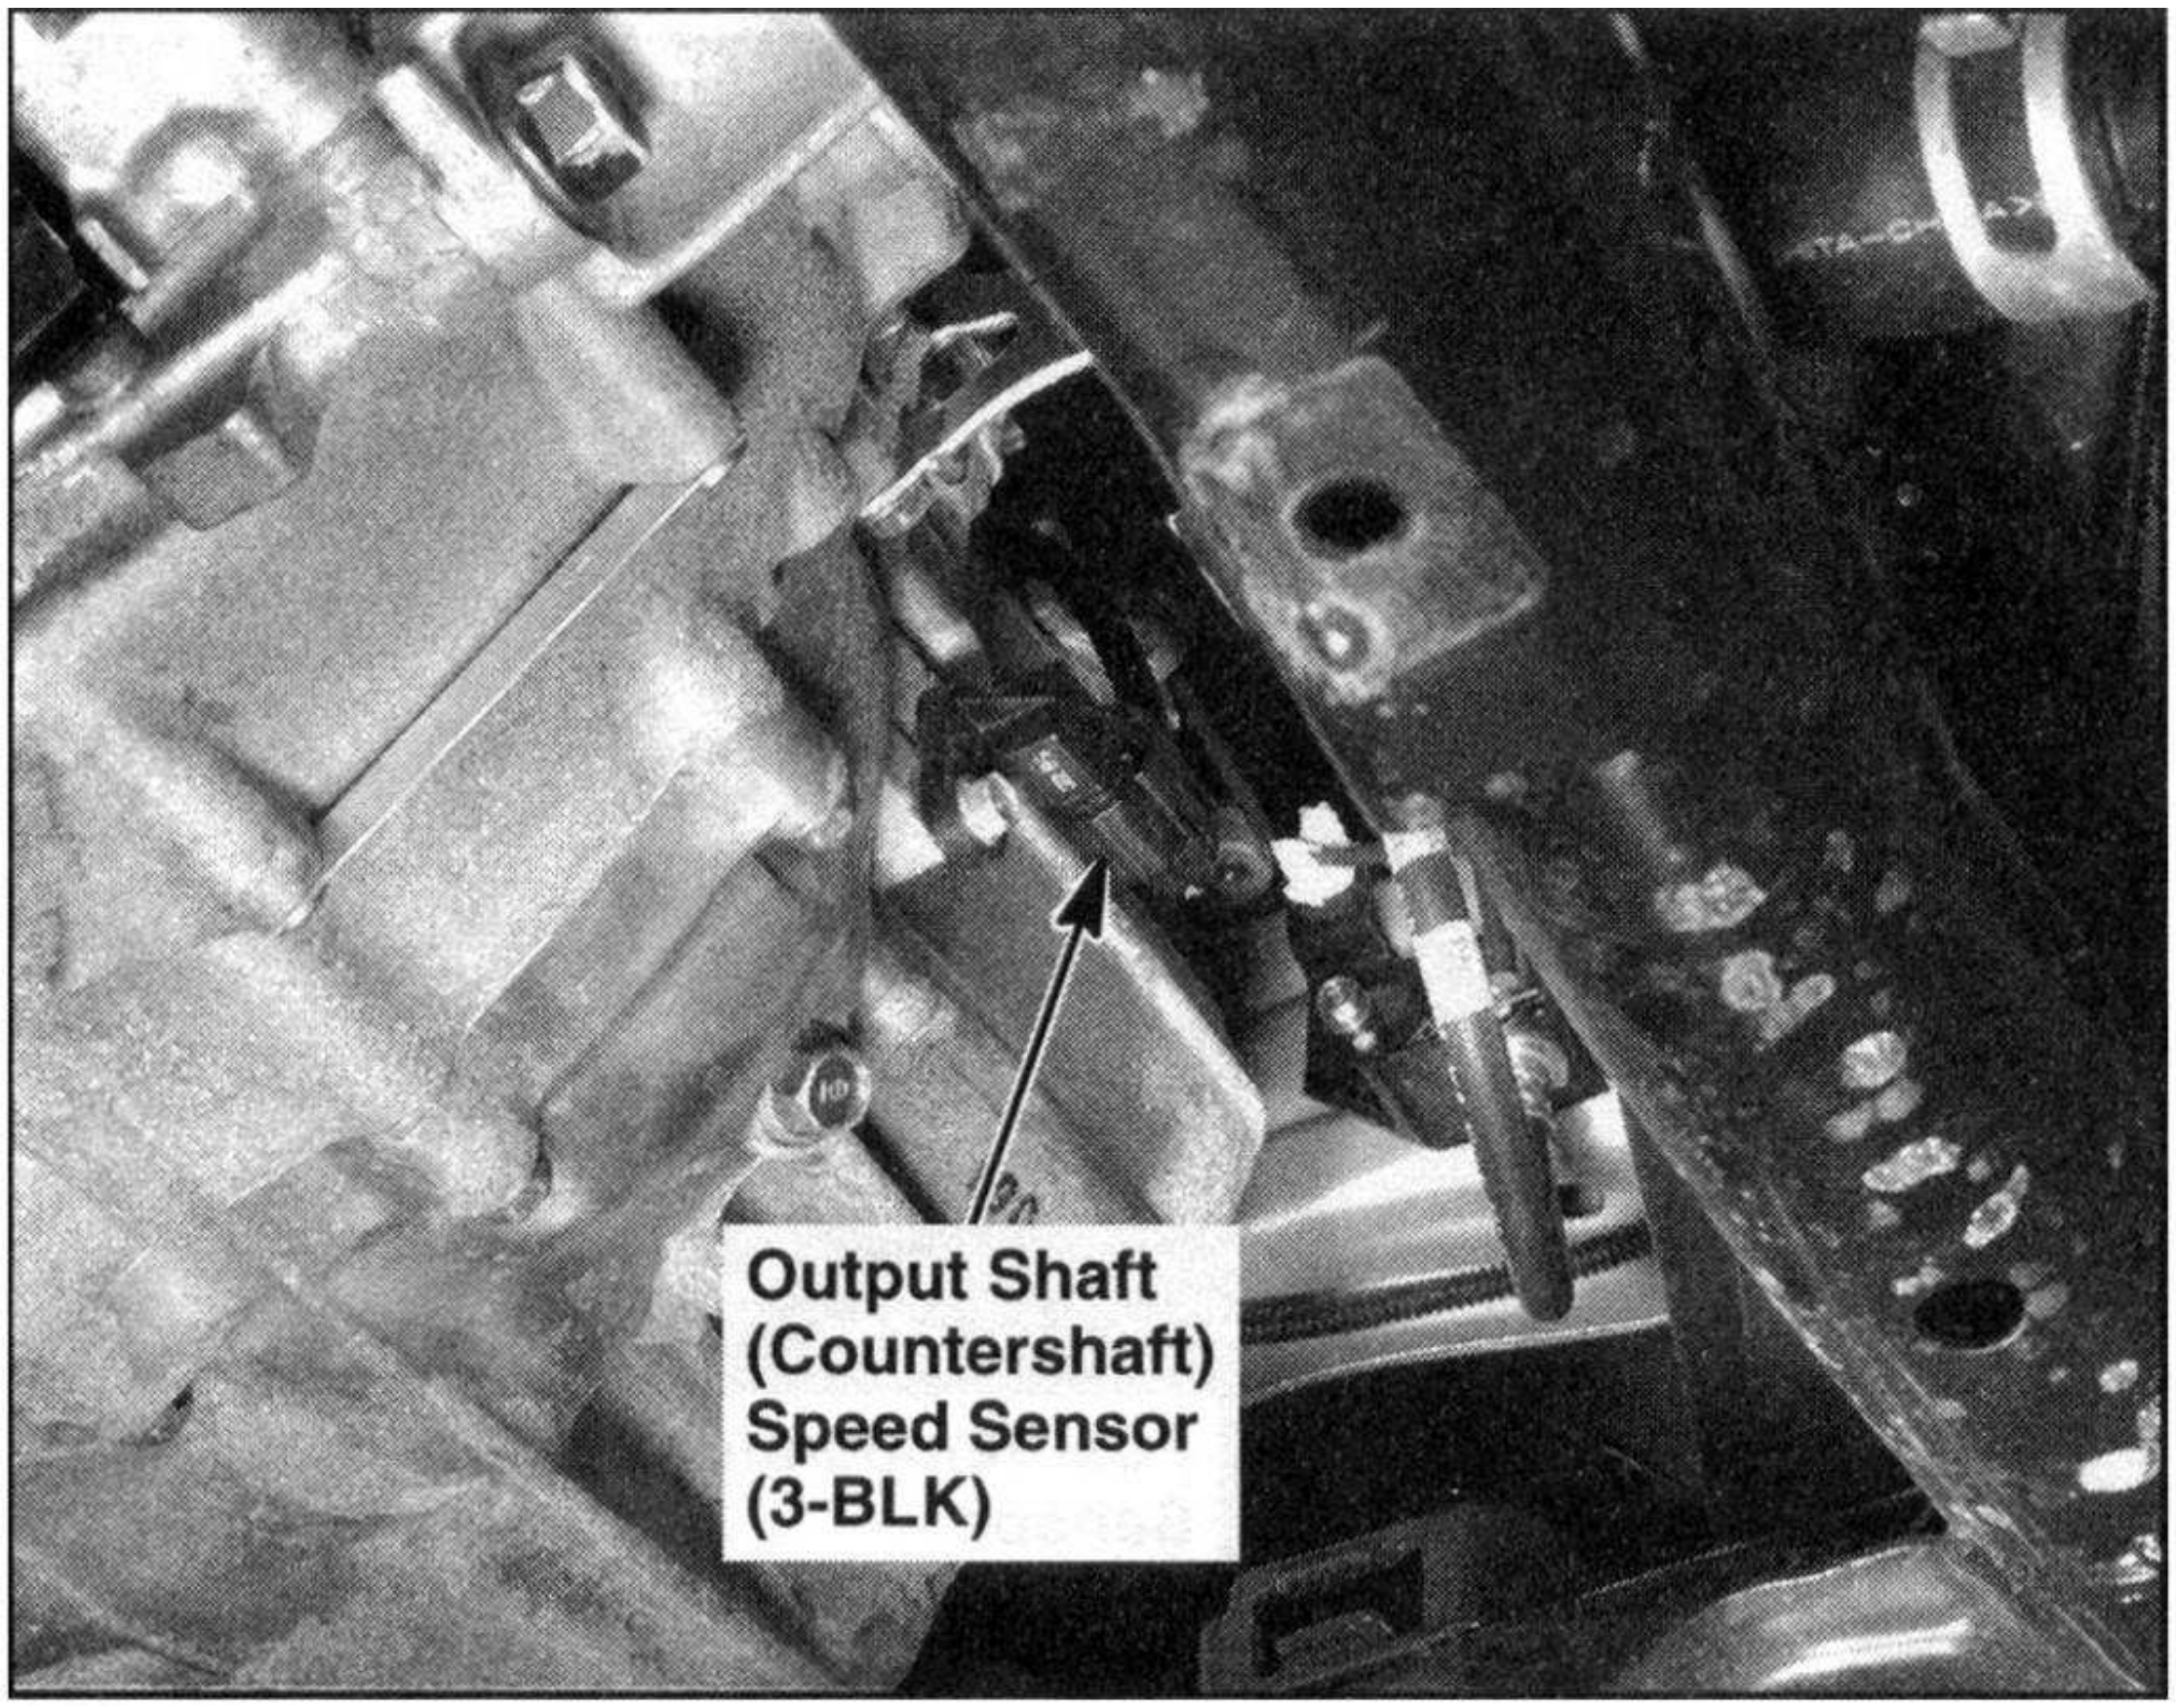
Output Shaft
(Countershaft)
Speed Sensor
(3-BLK)

Fig. 129: Under Transmission Housing (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

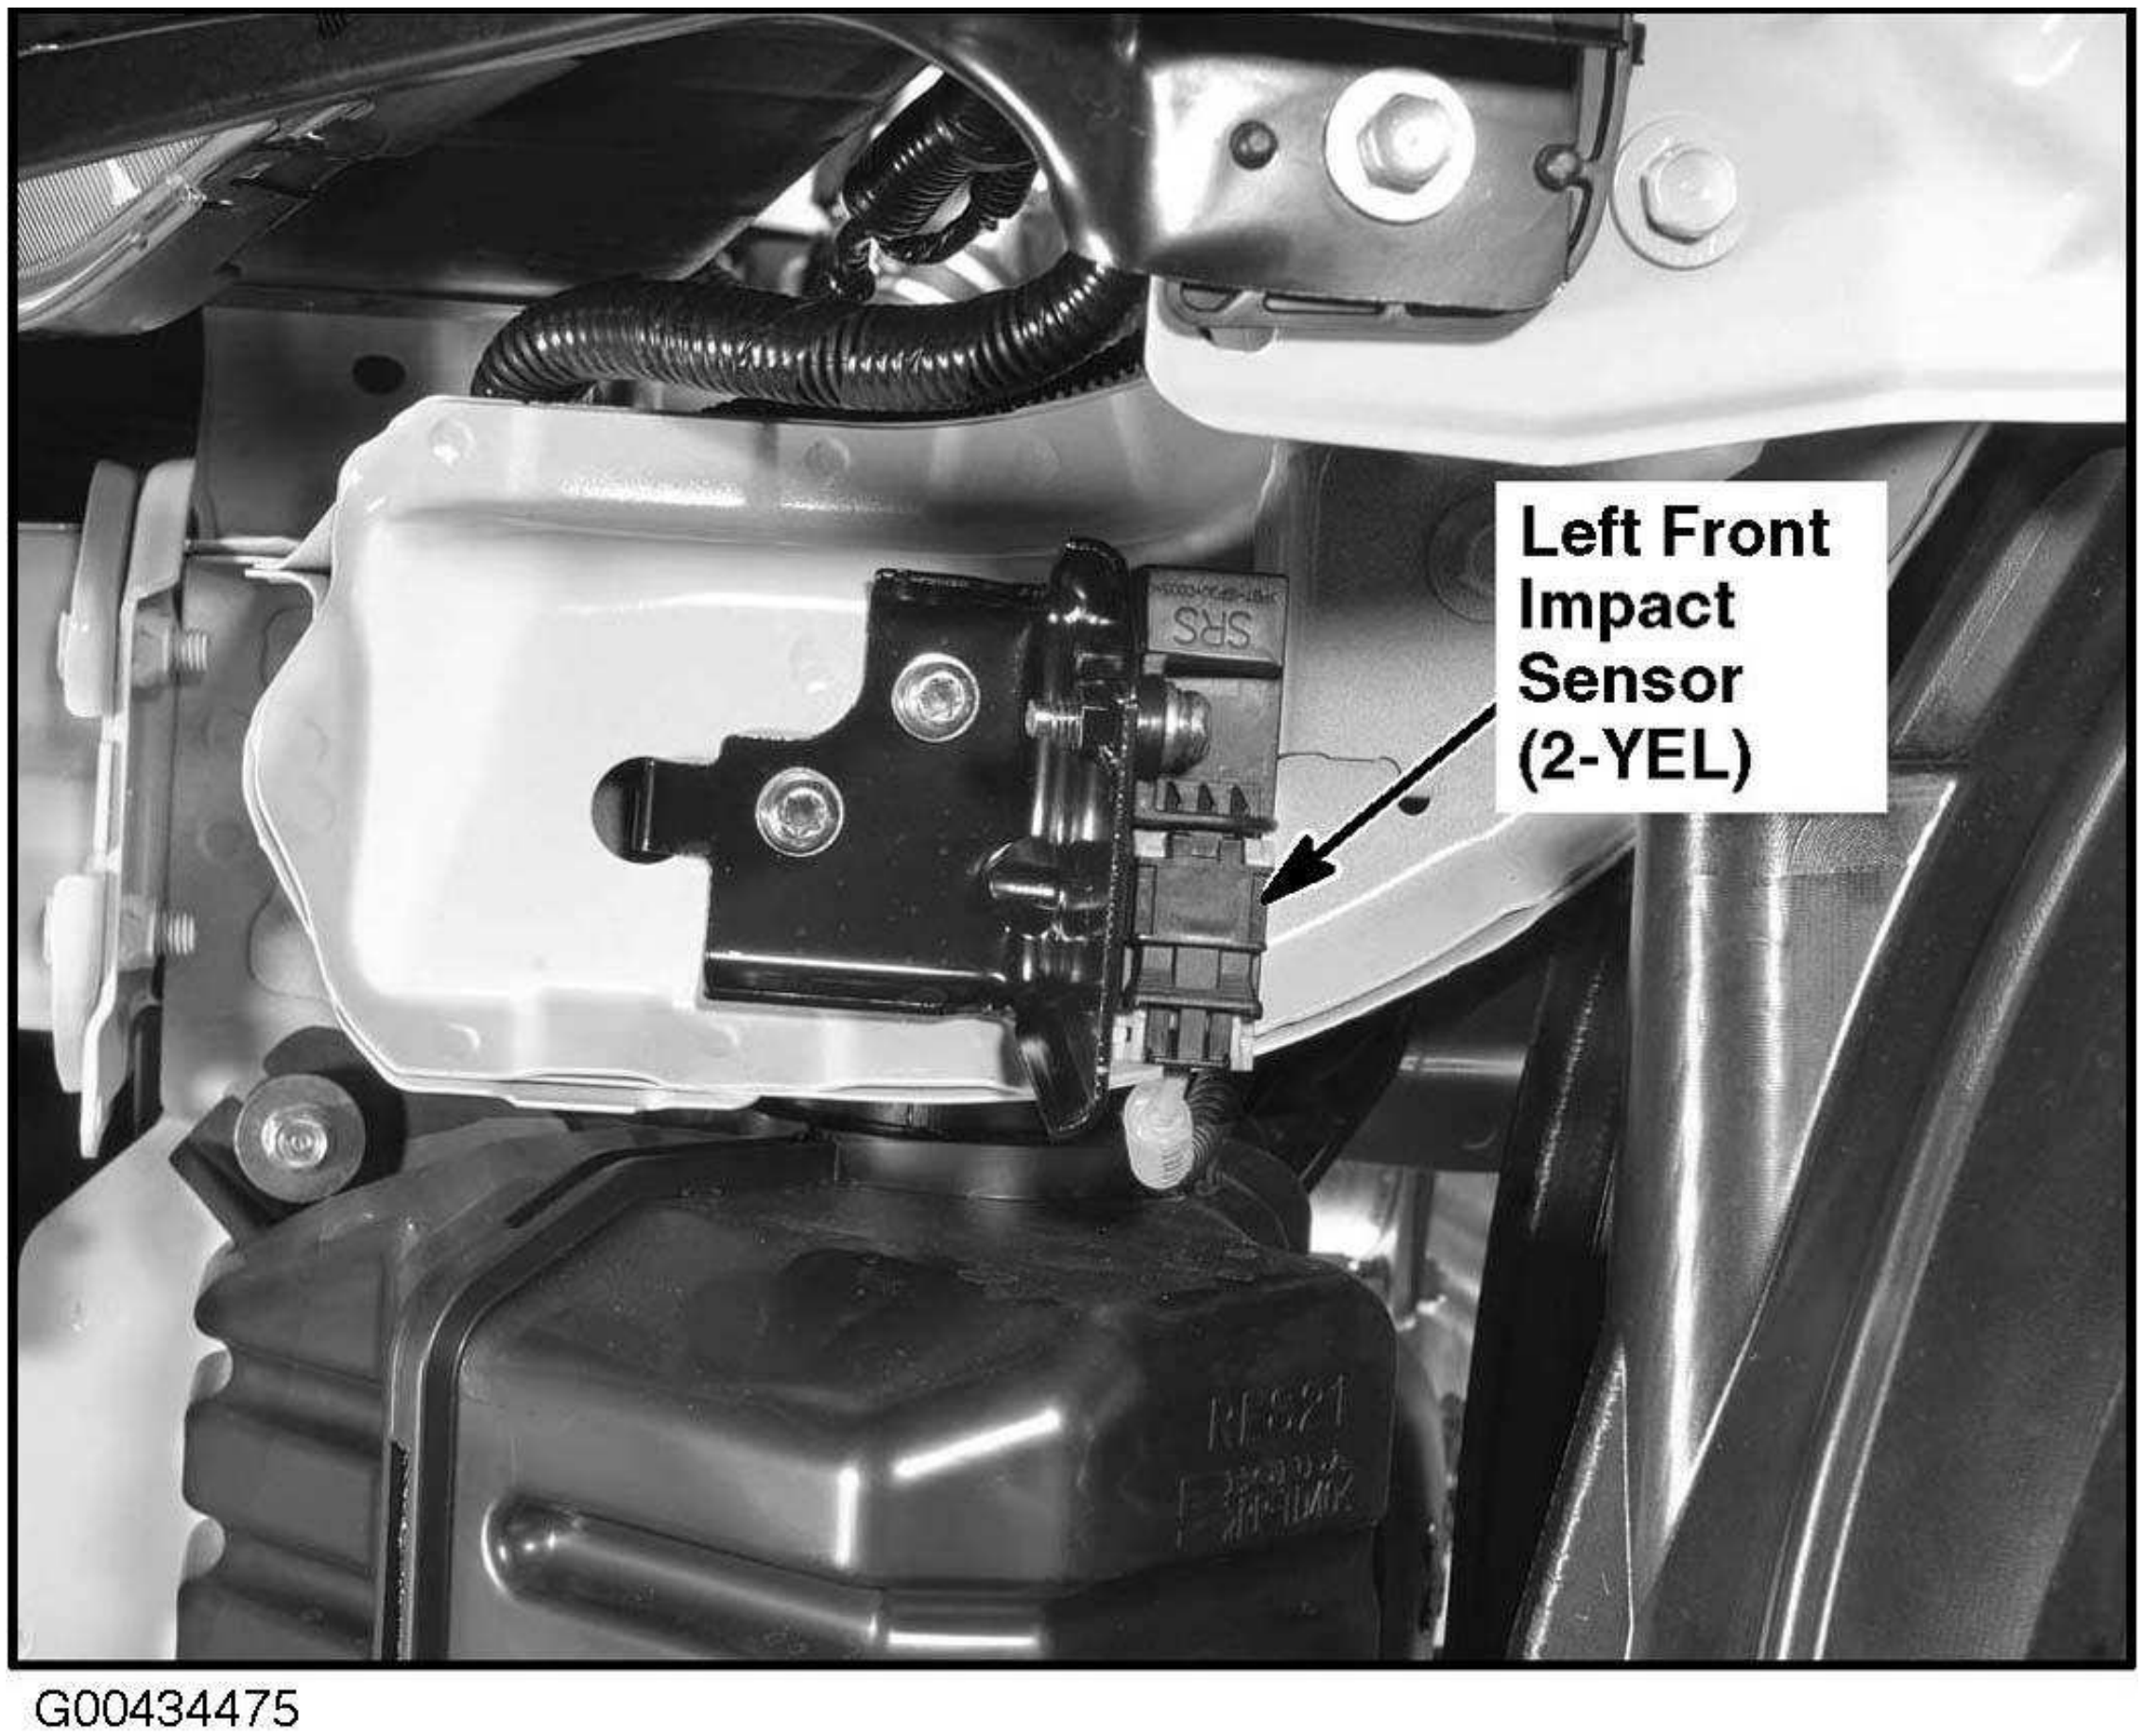
Left Front Impact Sensor (2-YEL)
SRS
G00434475

Fig. 130: Behind Left Side Of Front Bumper (Right Side Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

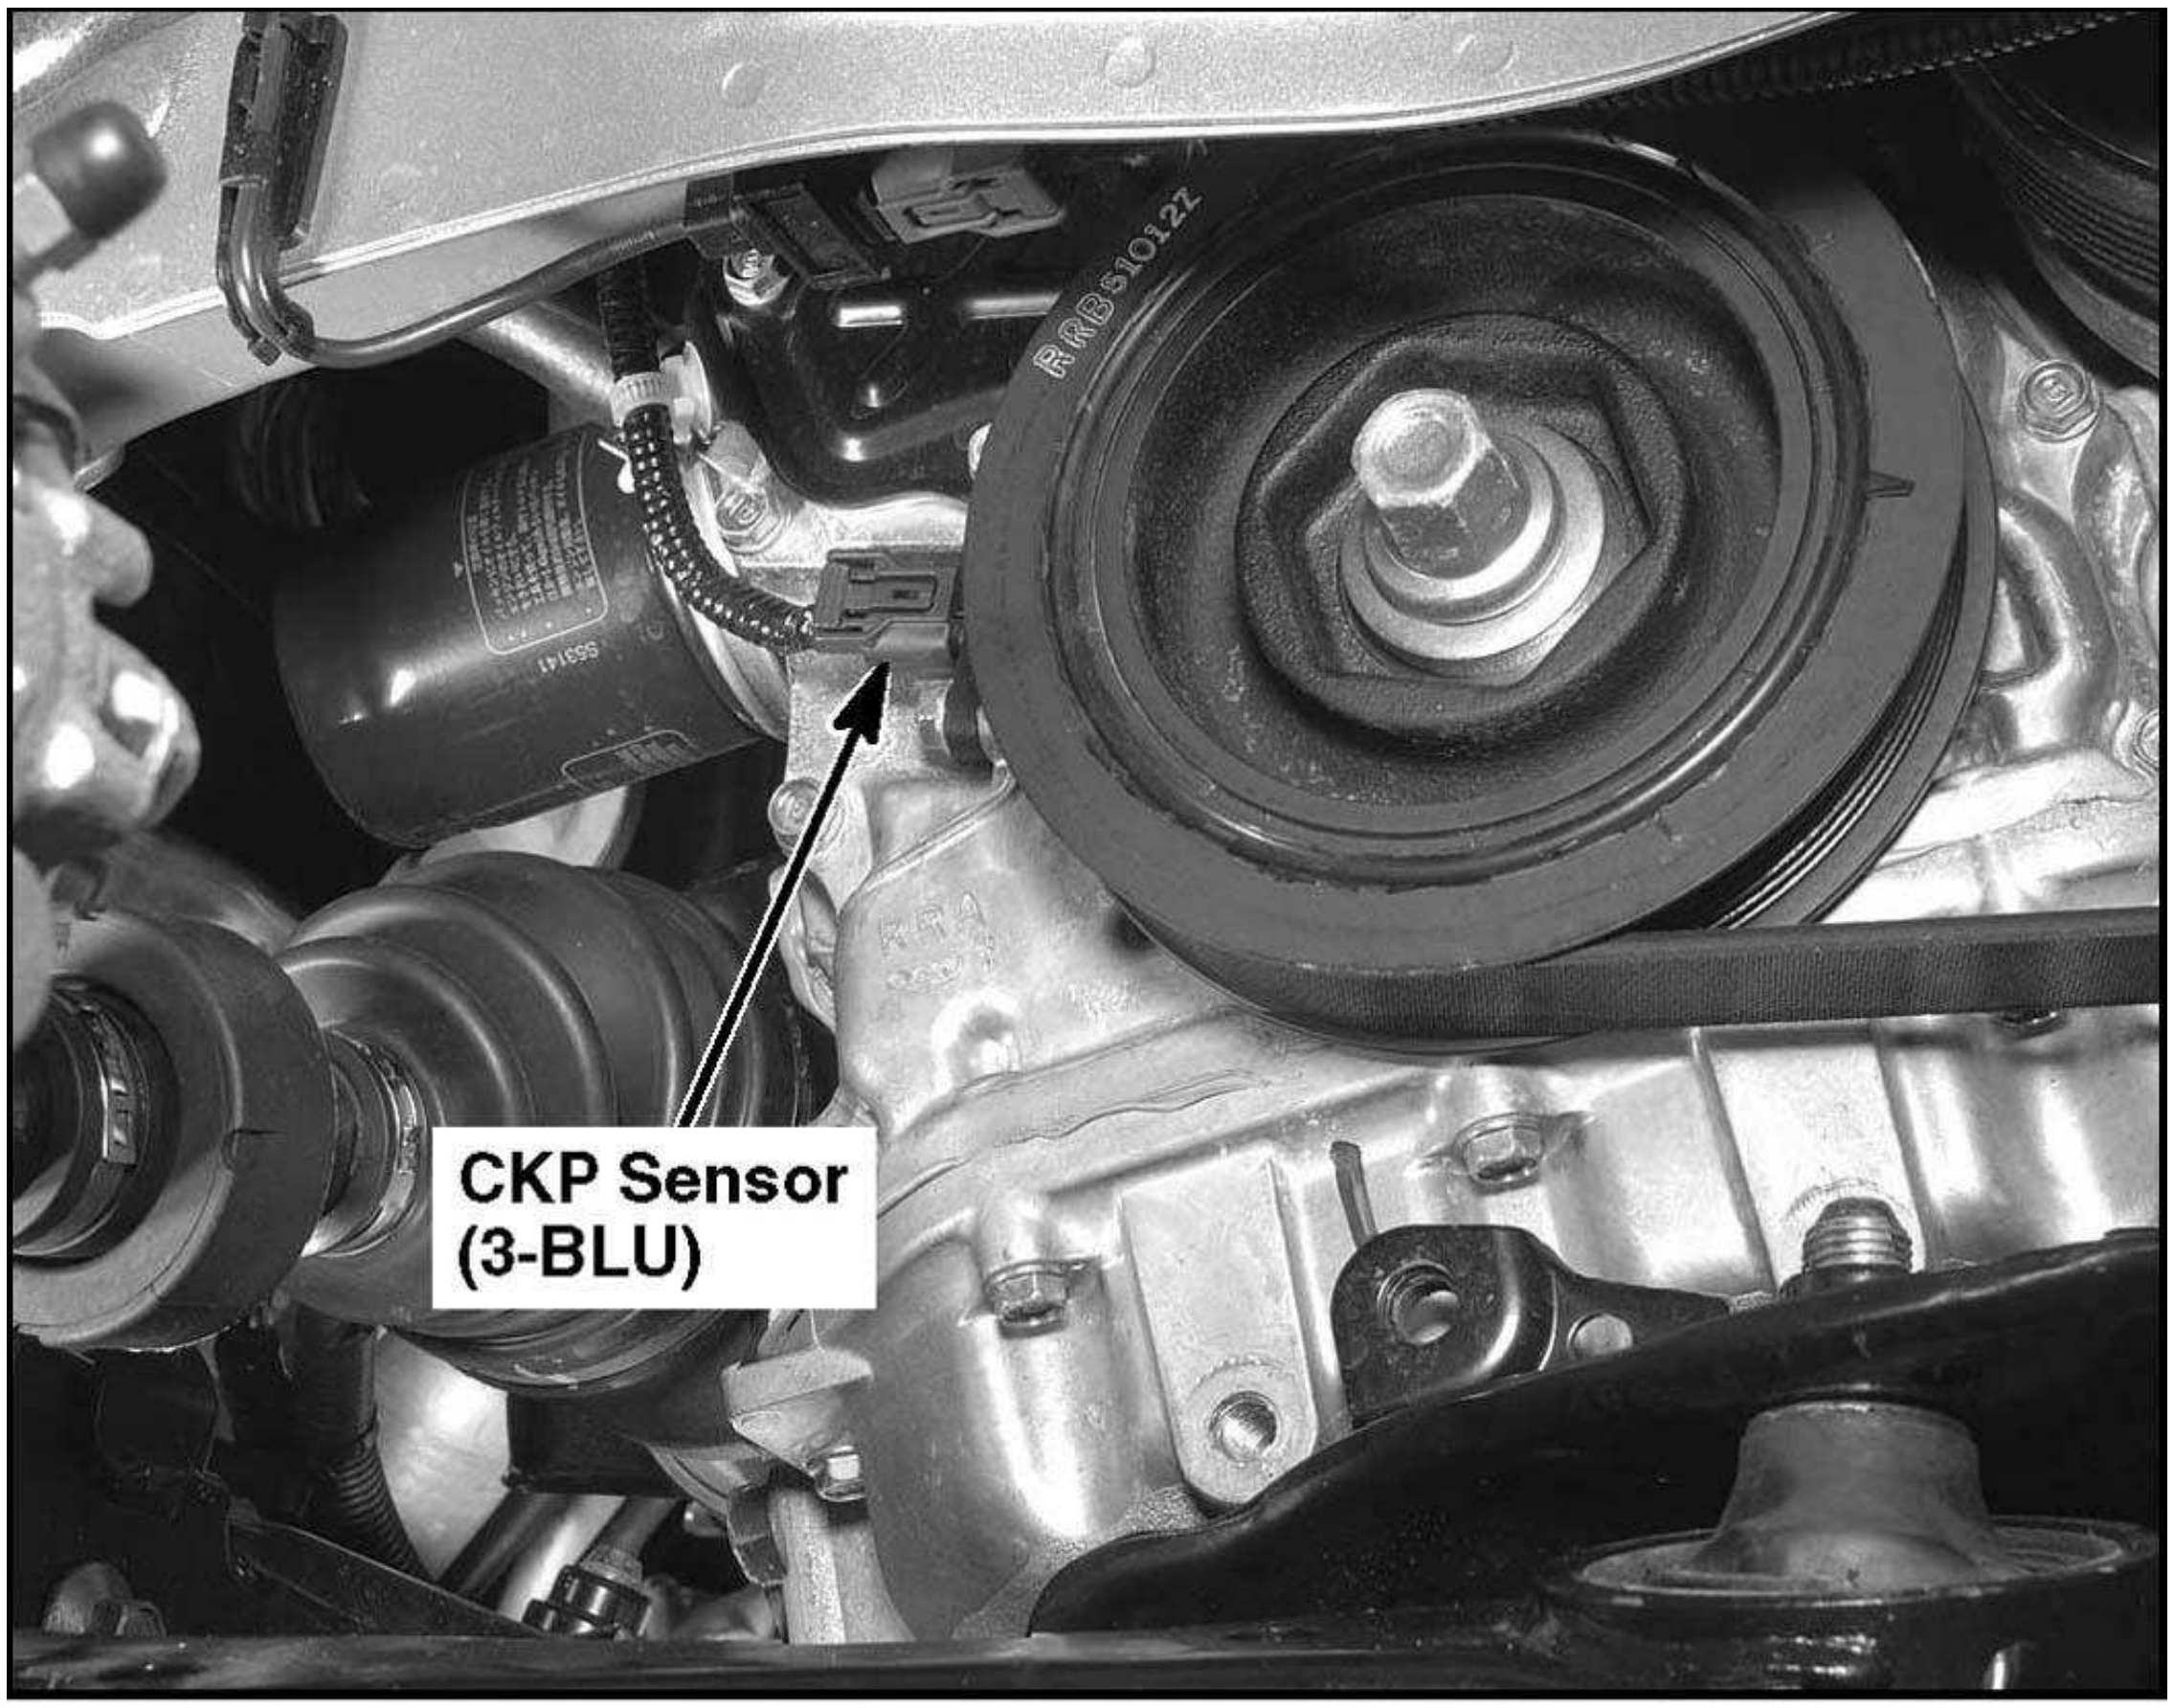
CKP Sensor
(3-BLU)
G00434476

Fig. 131: Front Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

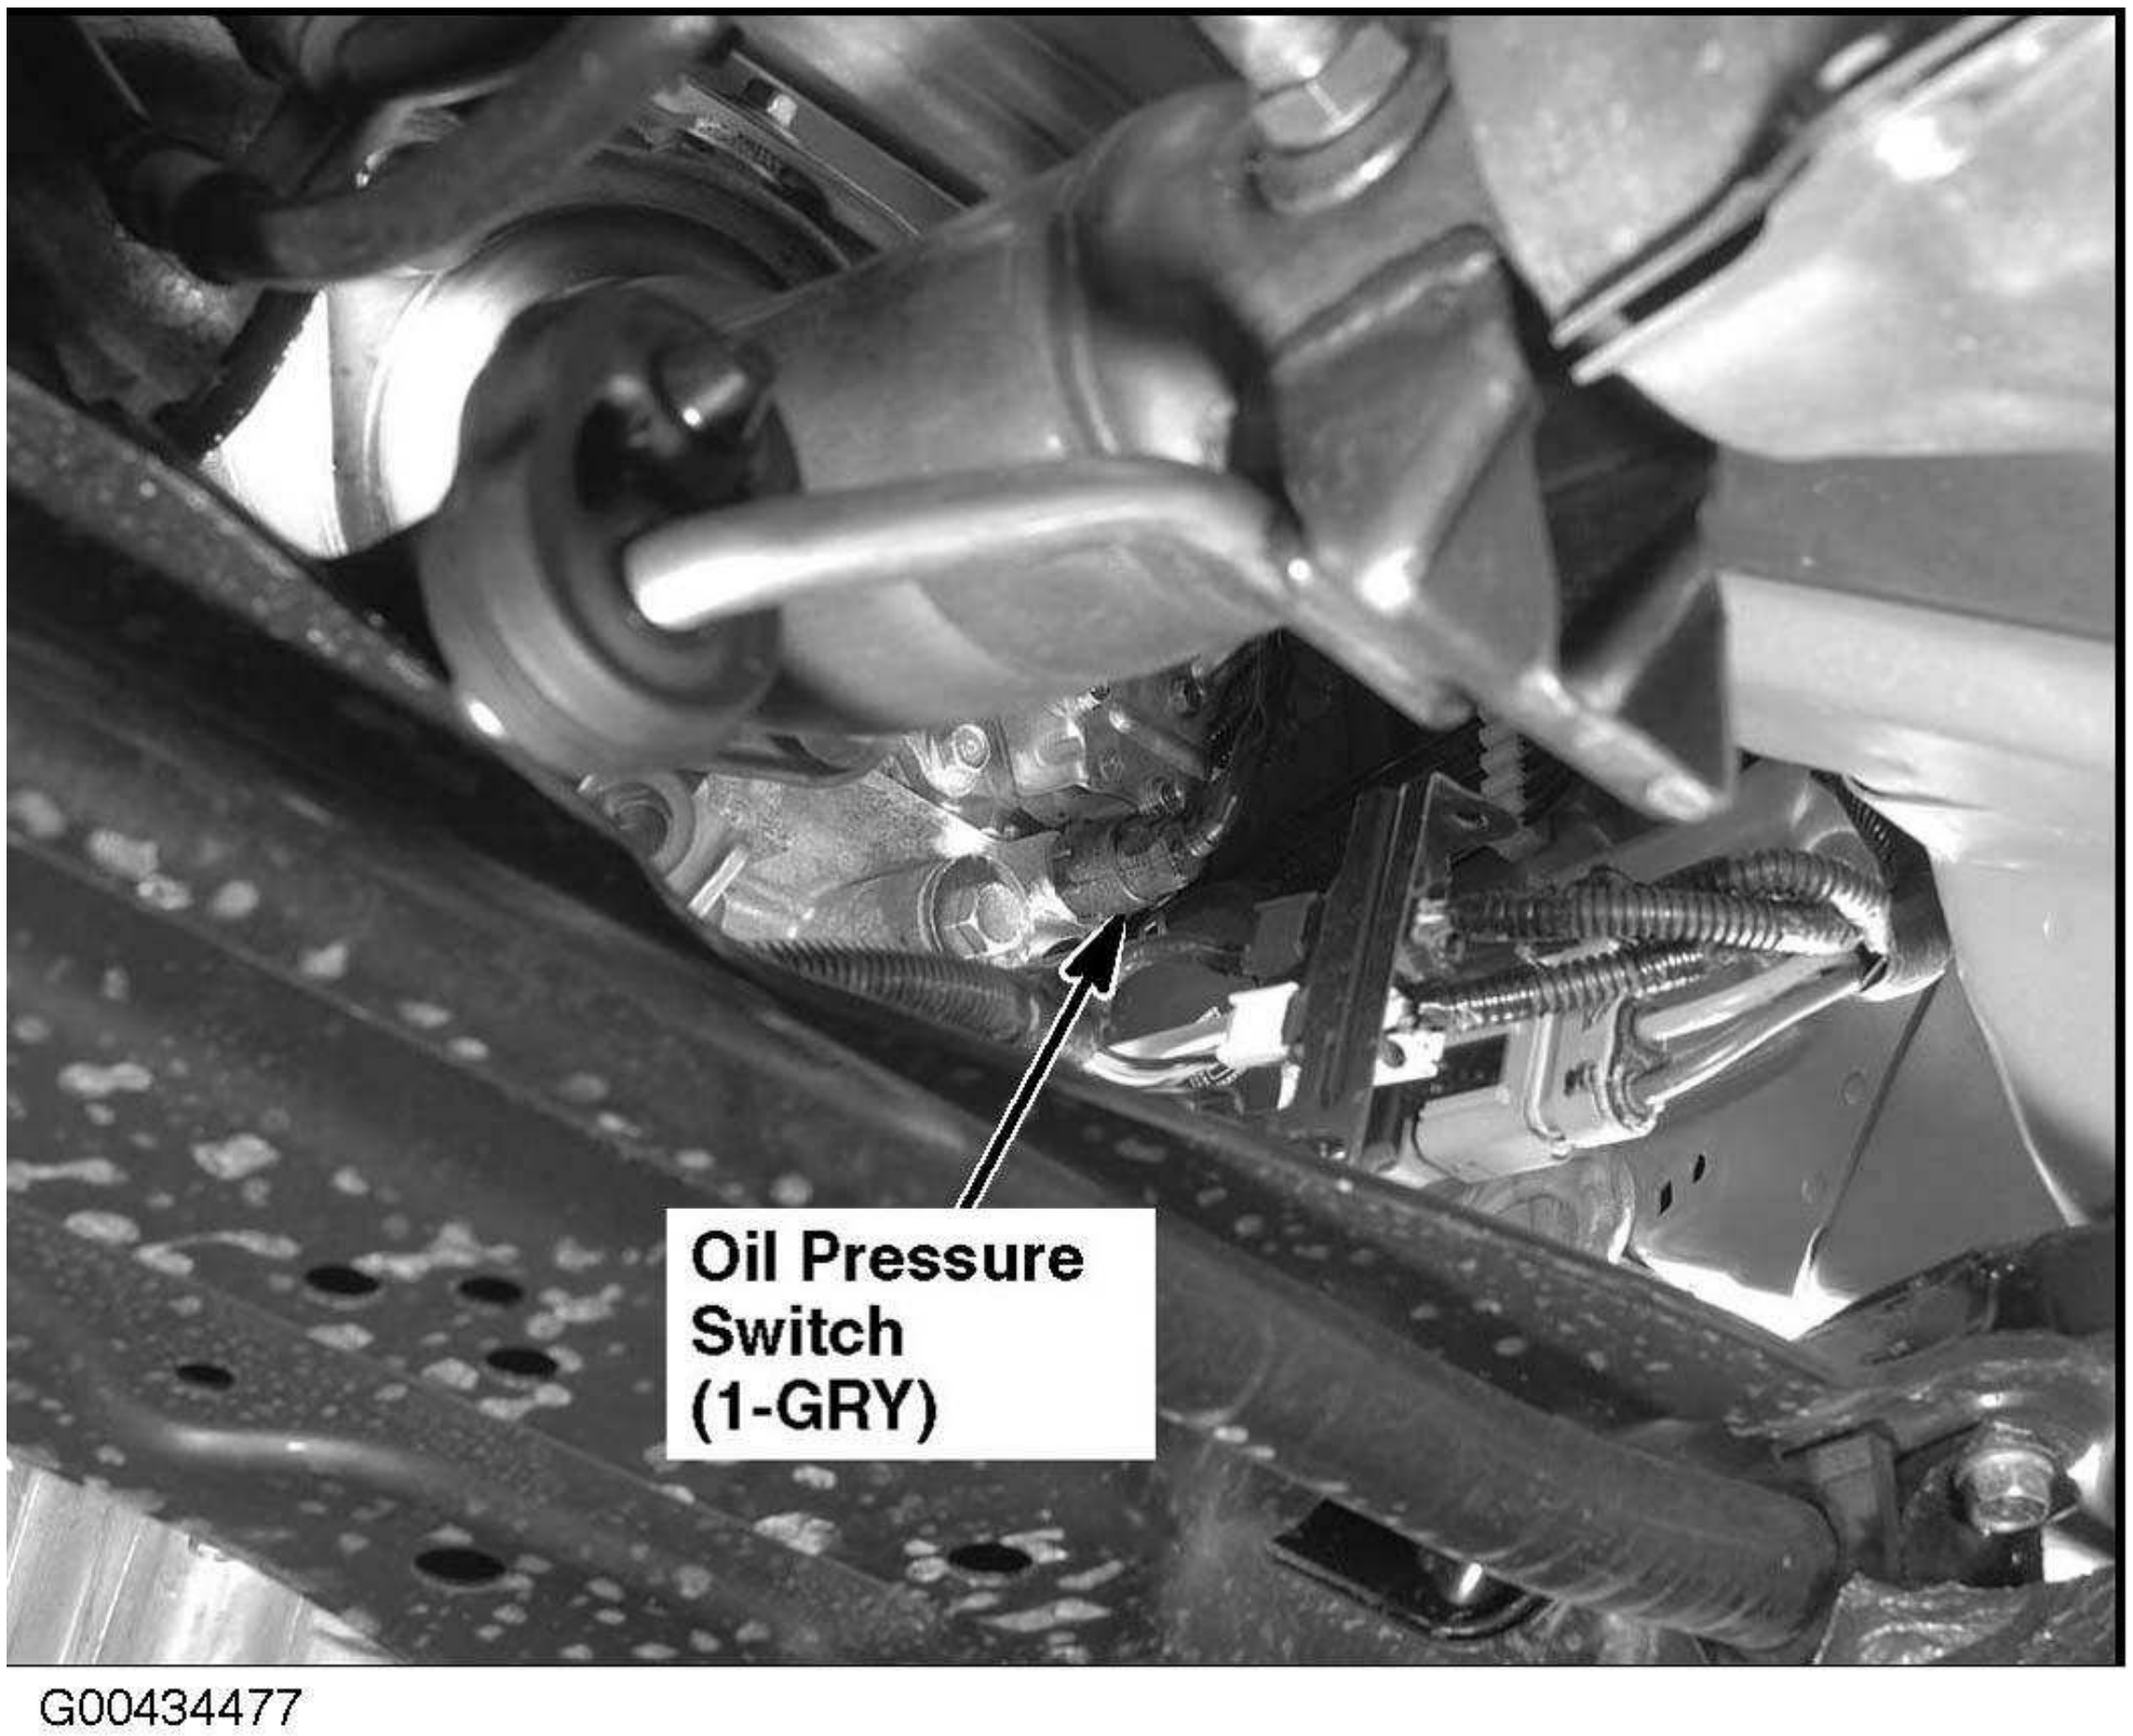
Oil Pressure Switch (1-GRY)
G00434477

Fig. 132: Lower Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

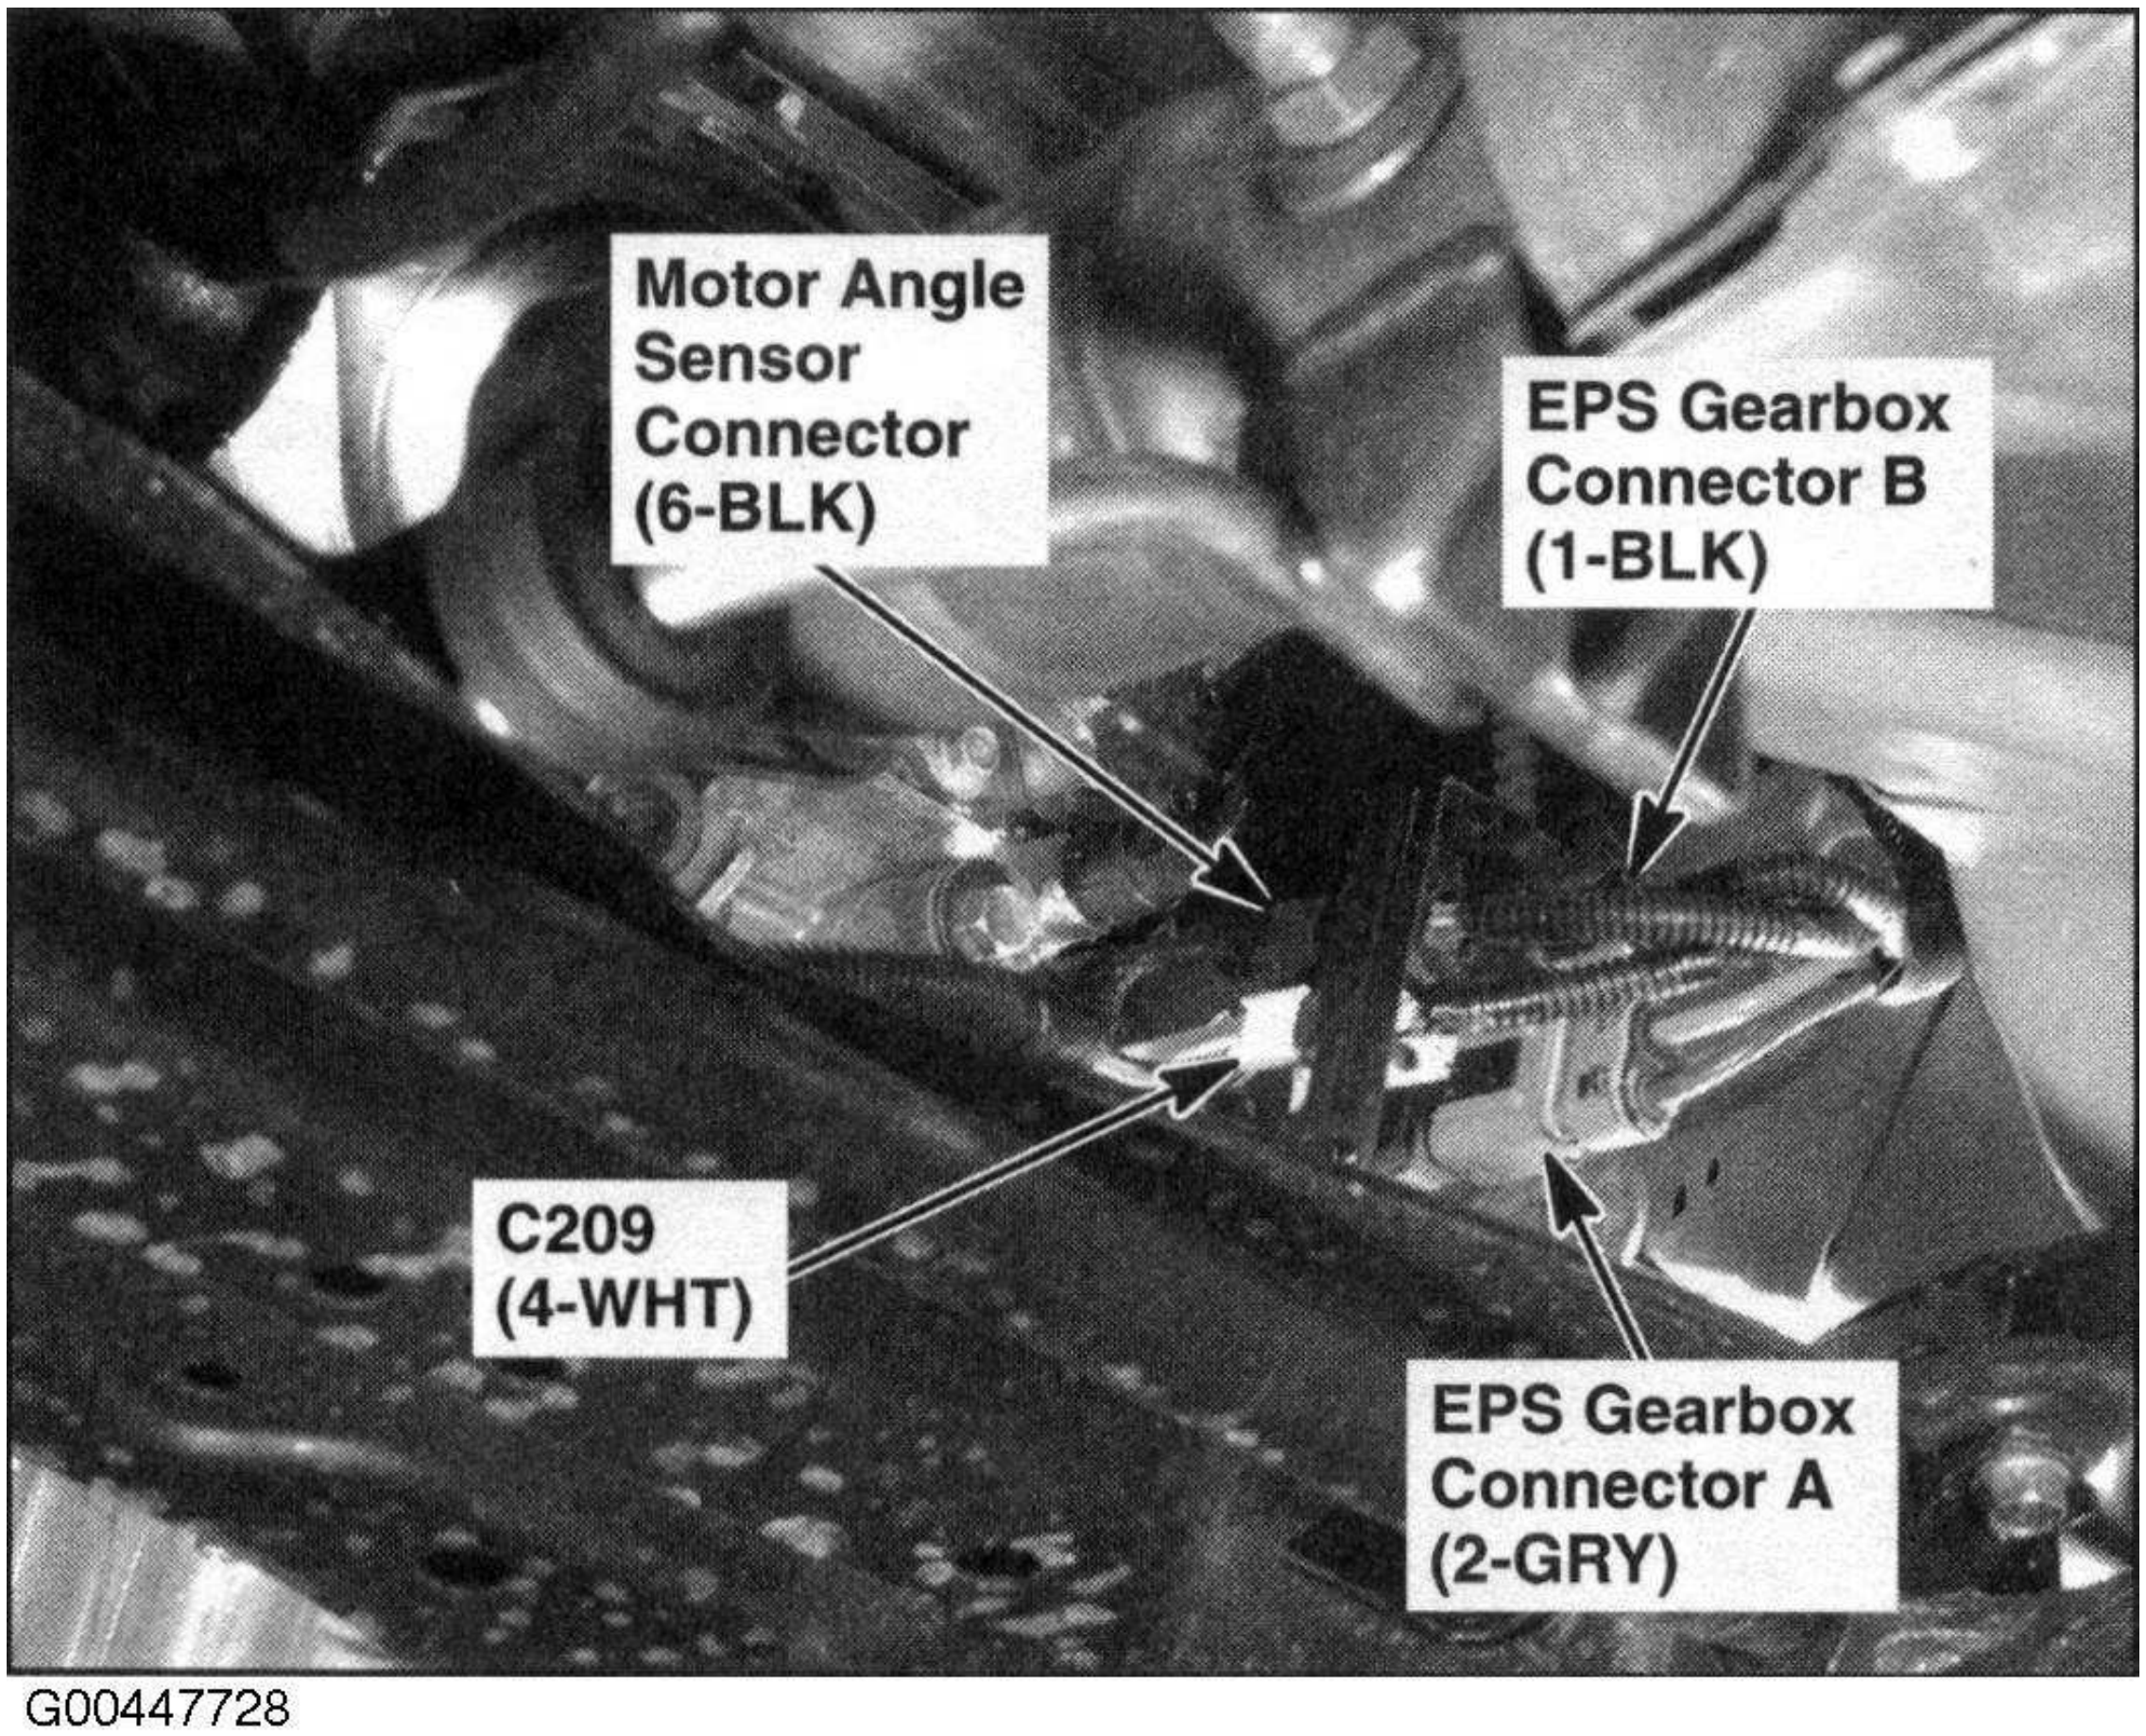
Motor Angle Sensor Connector (6-BLK)
EPS Gearbox Connector B (1-BLK)
C209 (4-WHT)
EPS Gearbox Connector A (2-GRY)
G00447728

Fig. 133: Lower Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

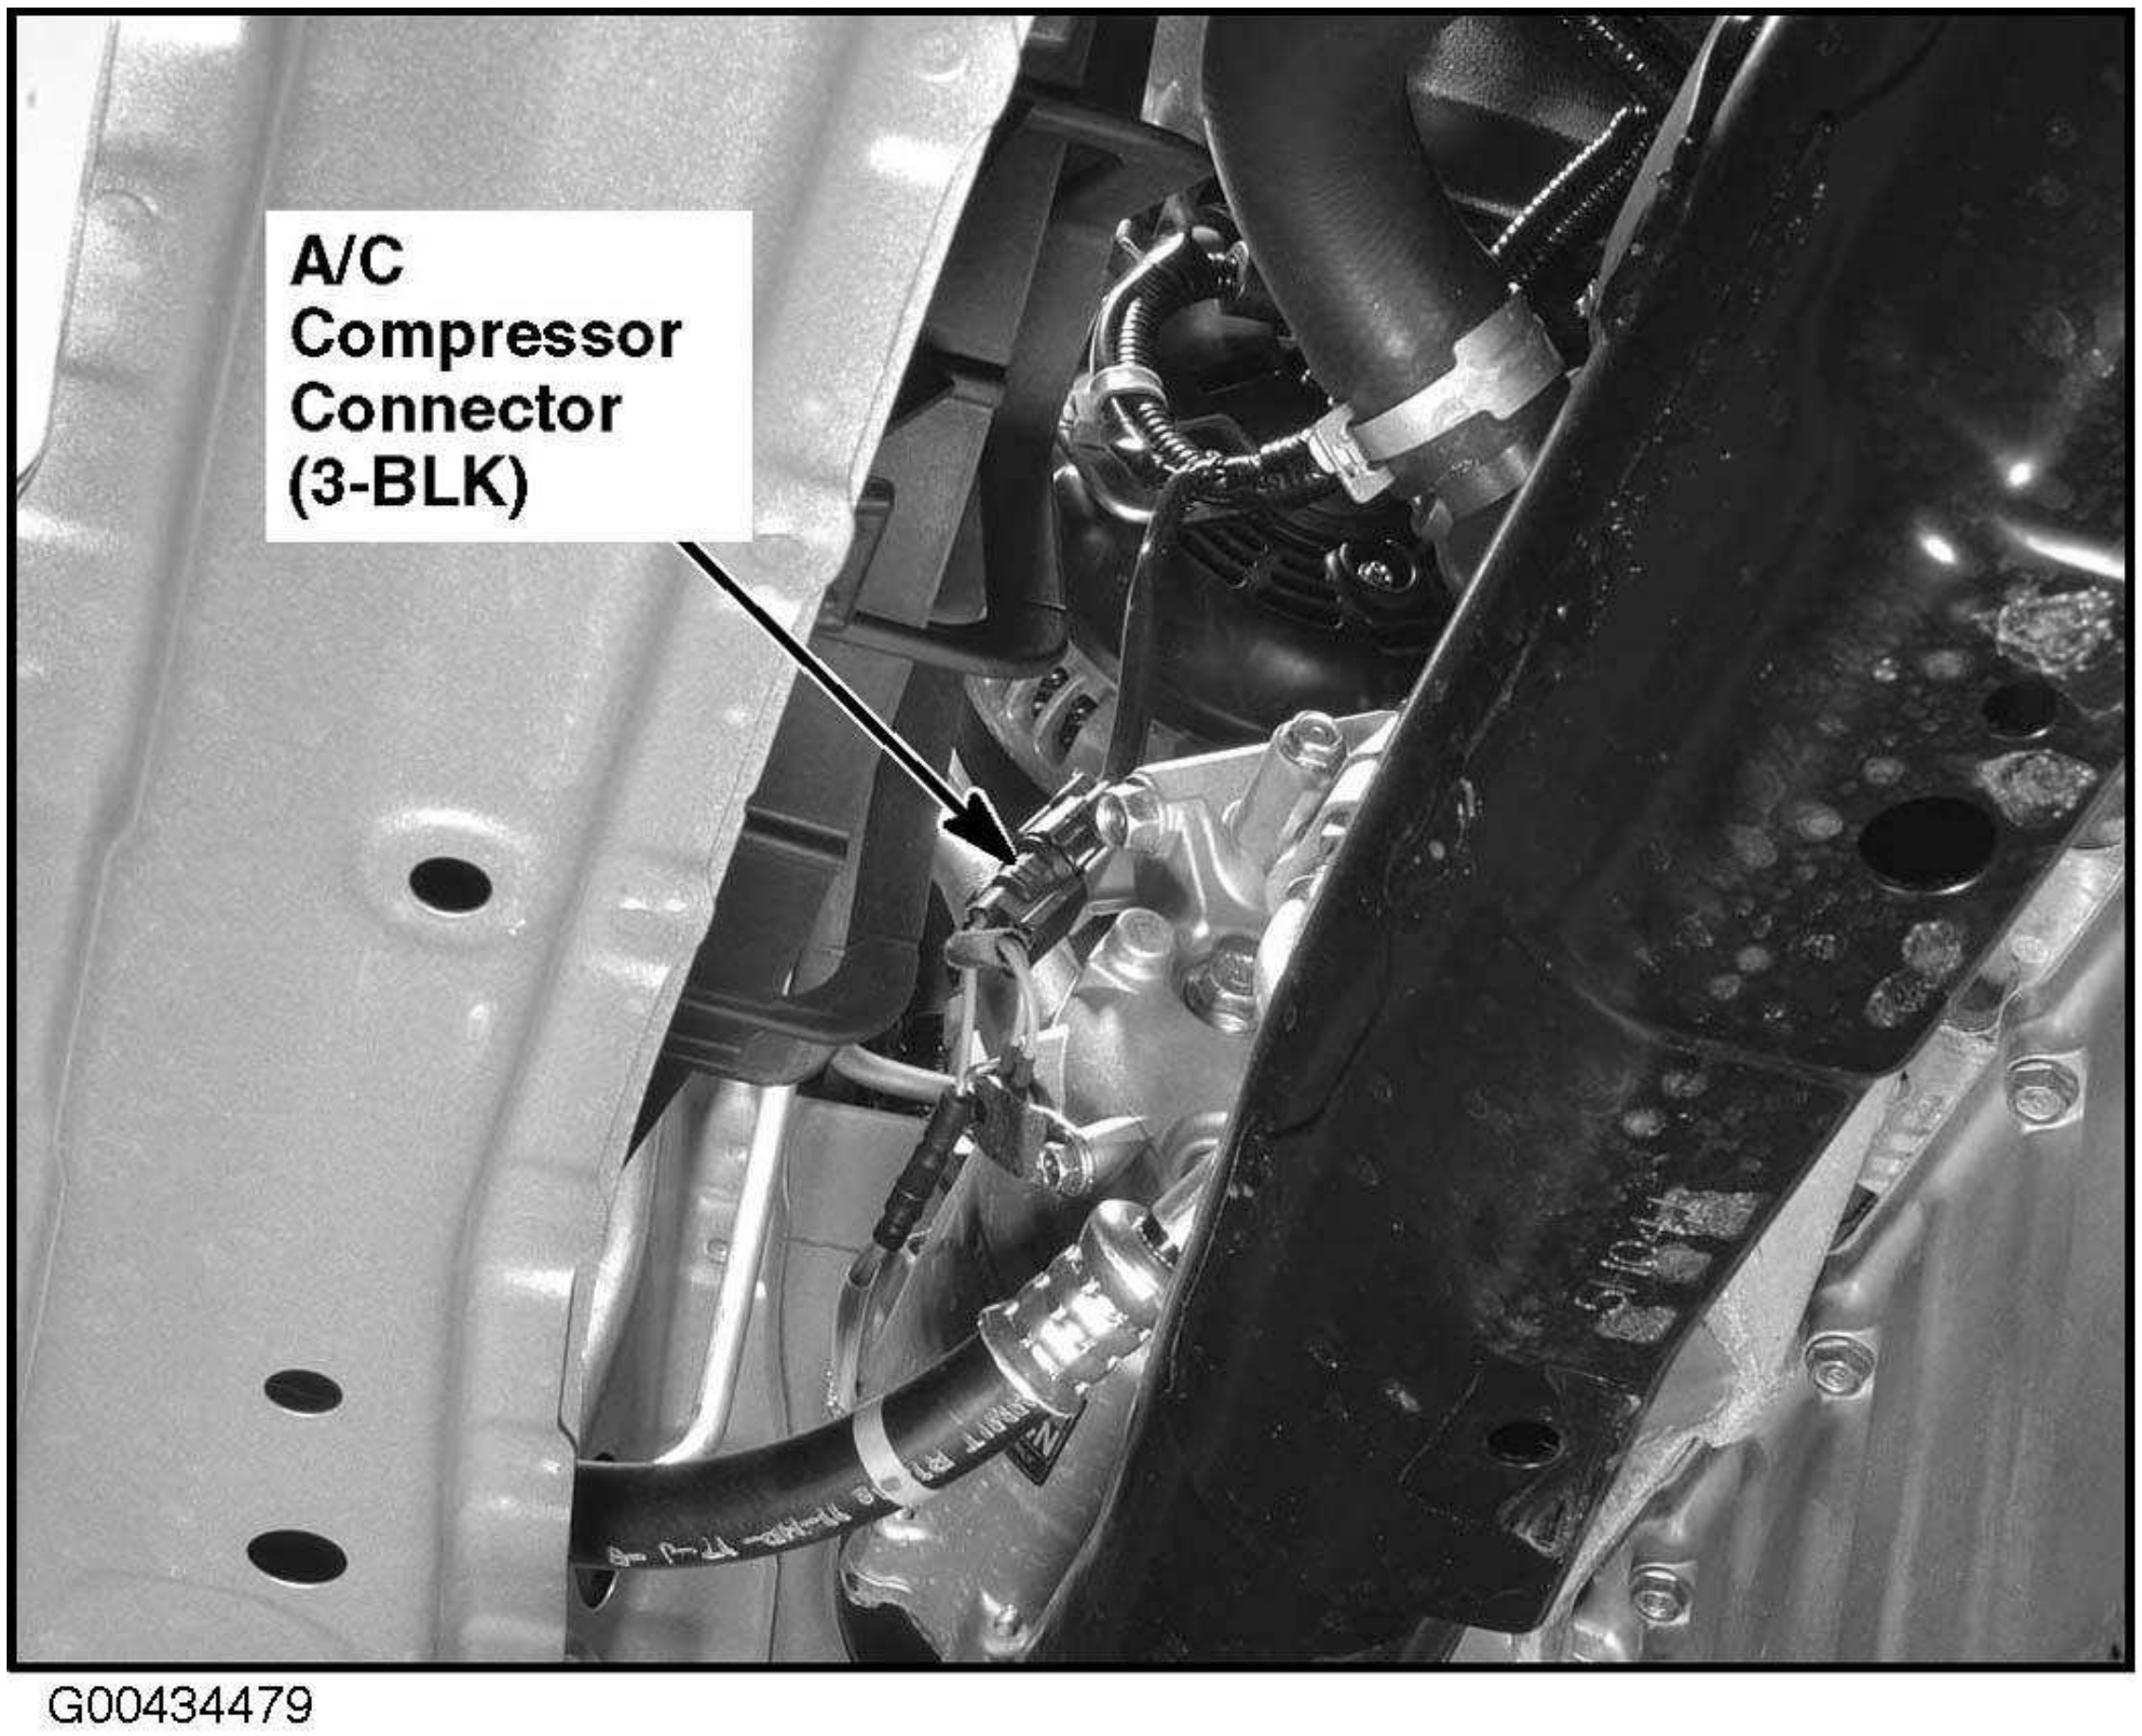
A/C Compressor Connector (3-BLK)
G00434479

Fig. 134: Lower Front Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

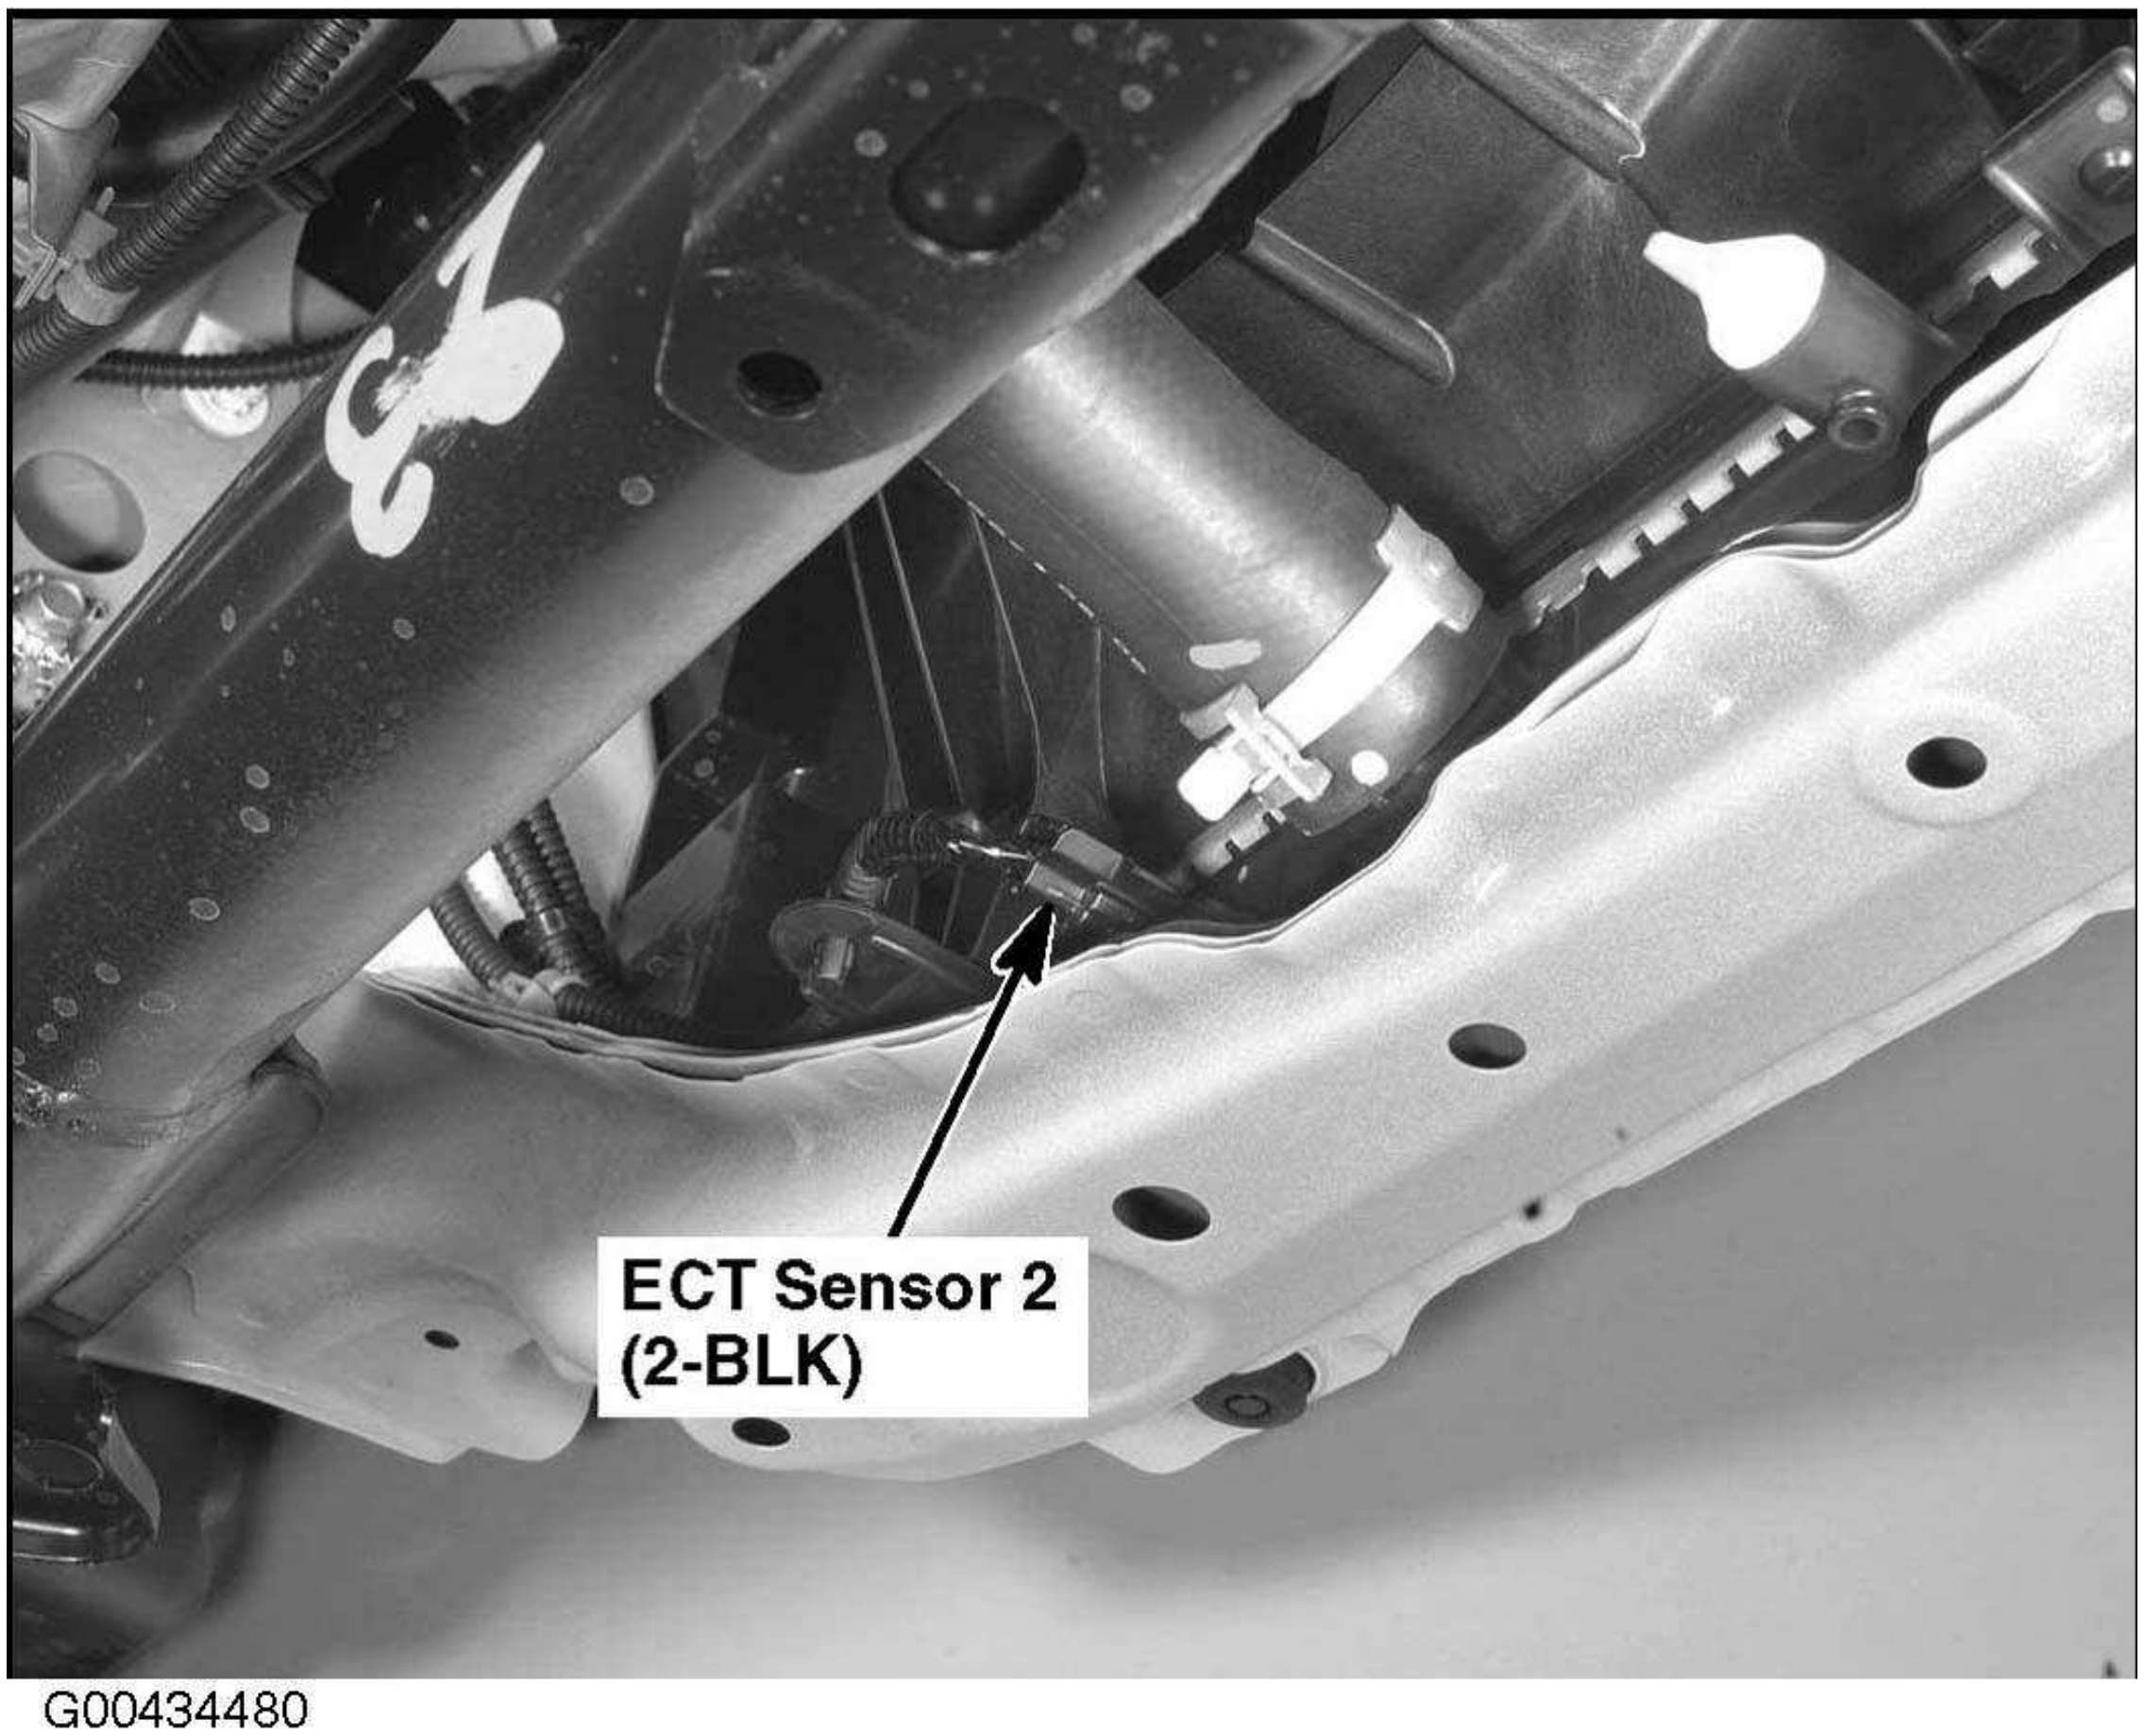

ECT Sensor 2
(2-BLK)
G00434480

Fig. 135: Lower Left Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

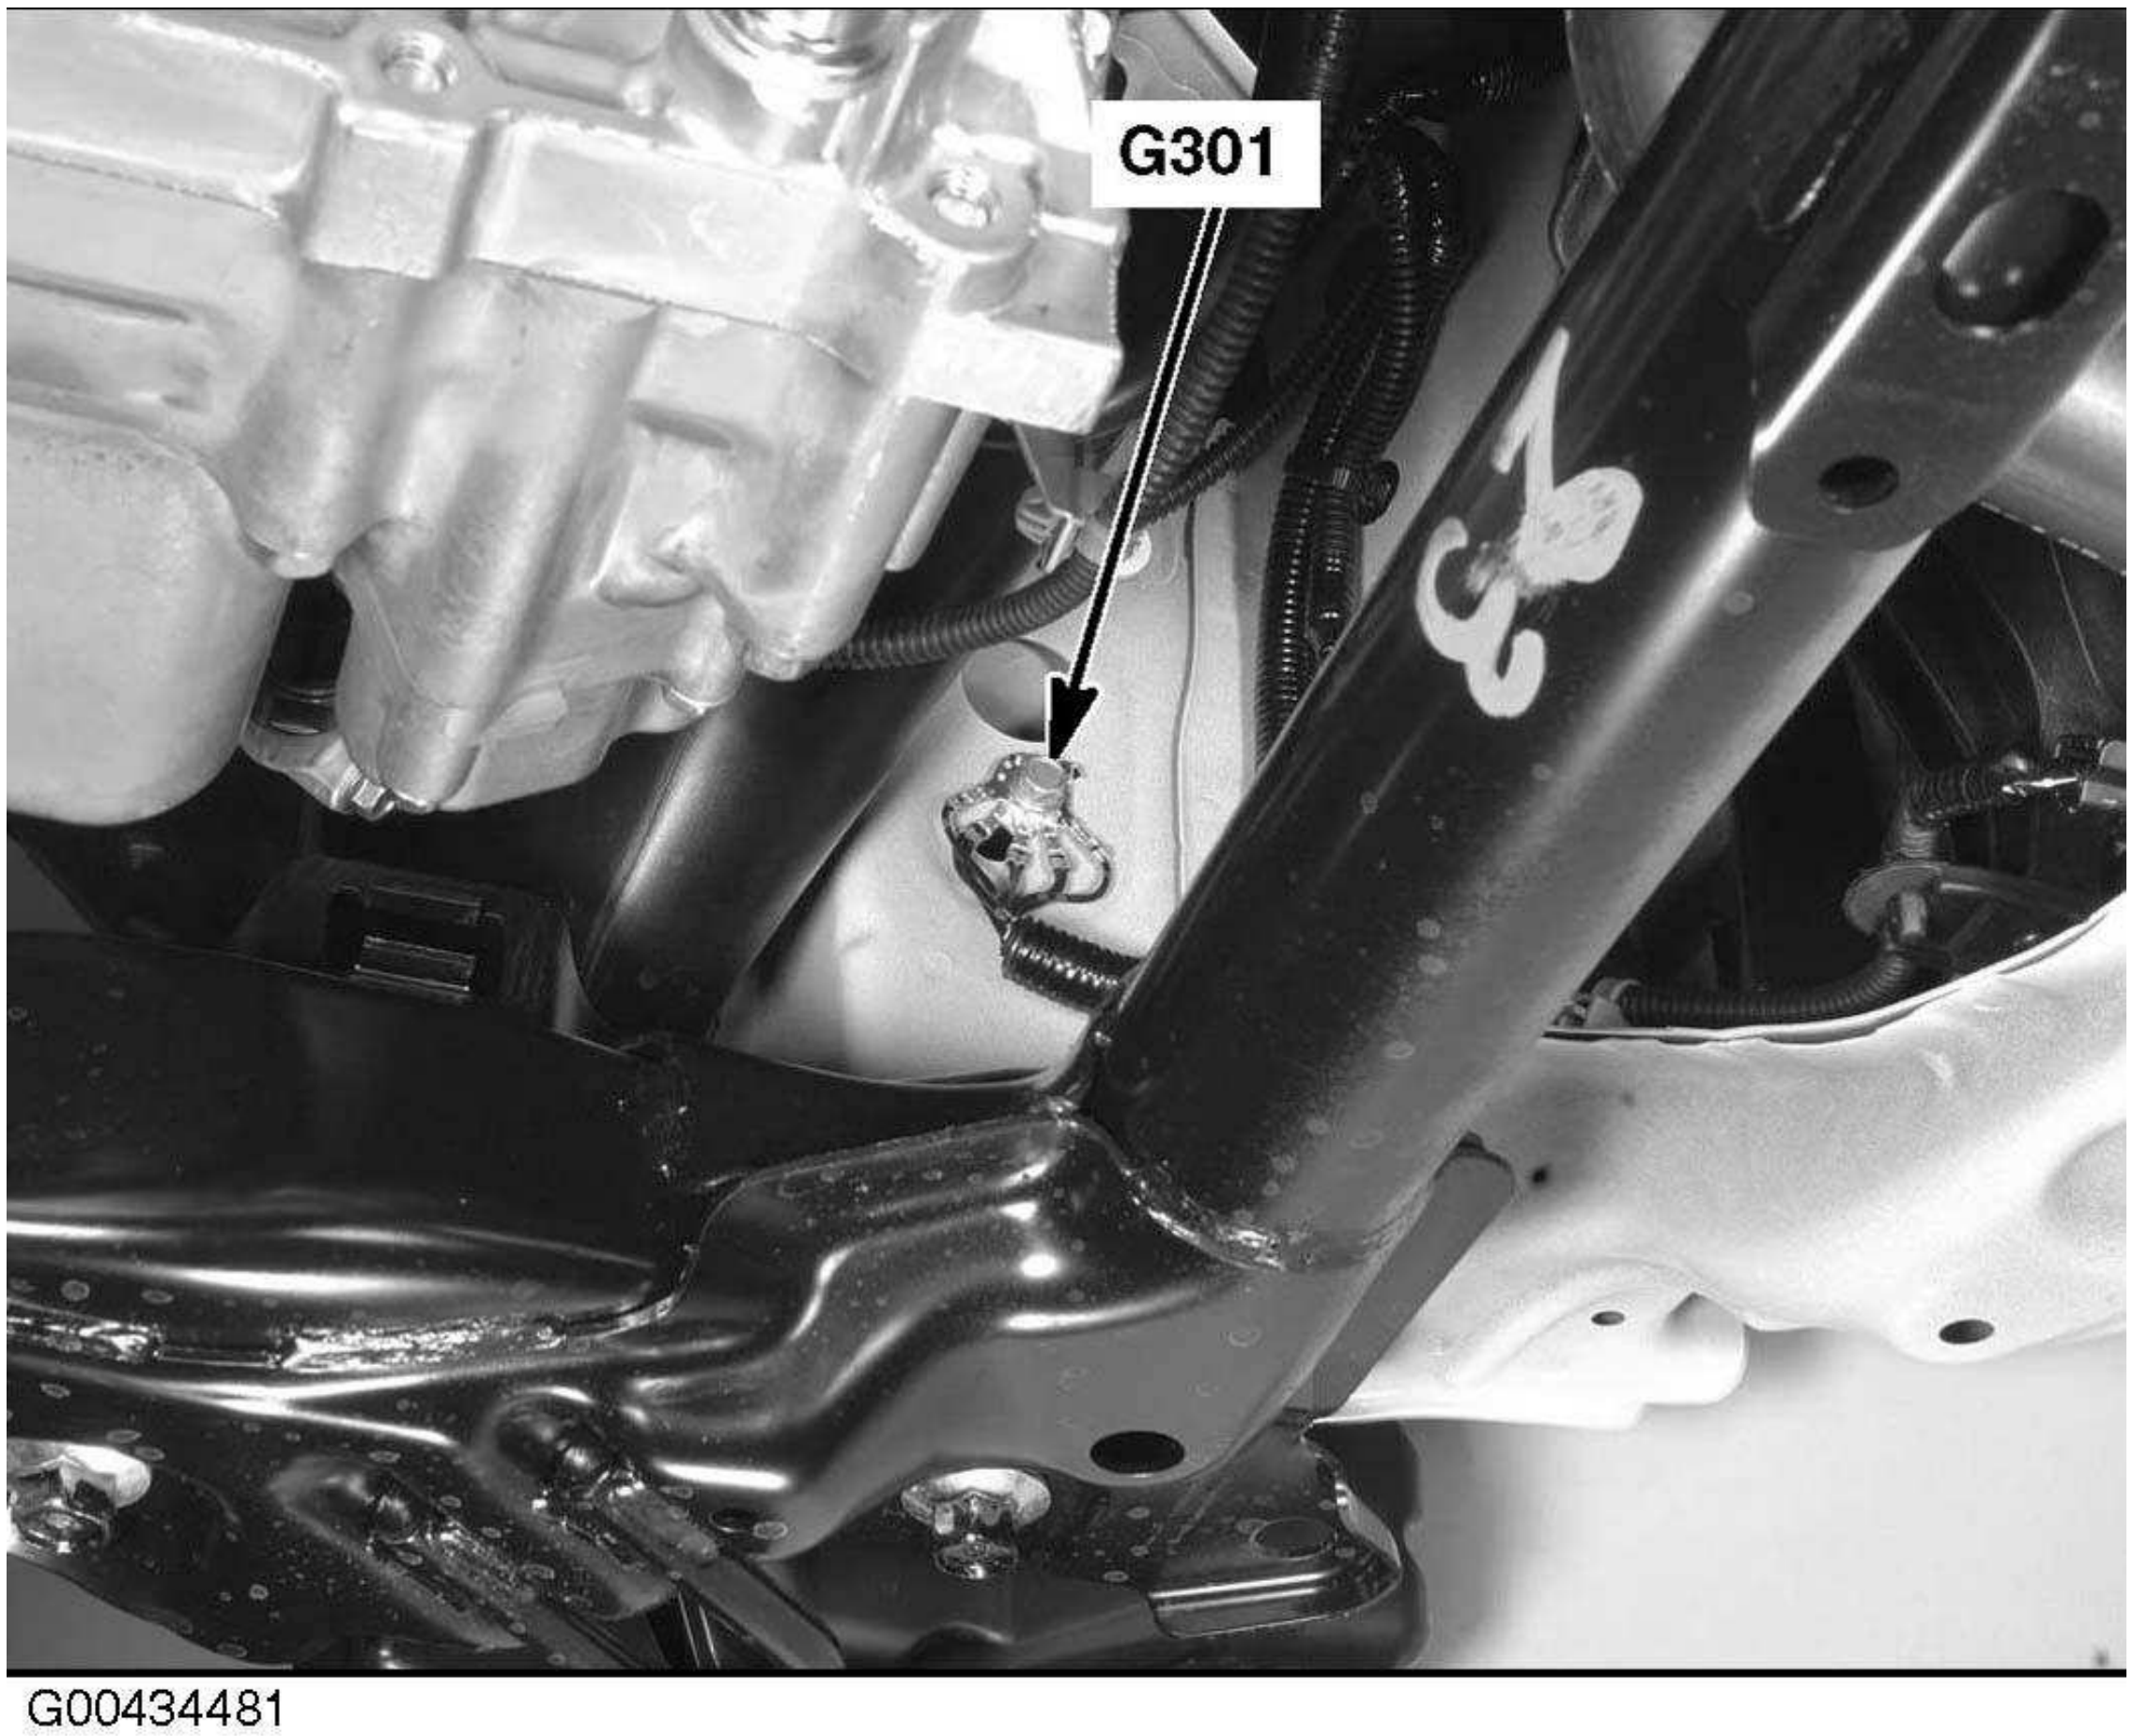
G301
G00434481

Fig. 136: Lower Left Side Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

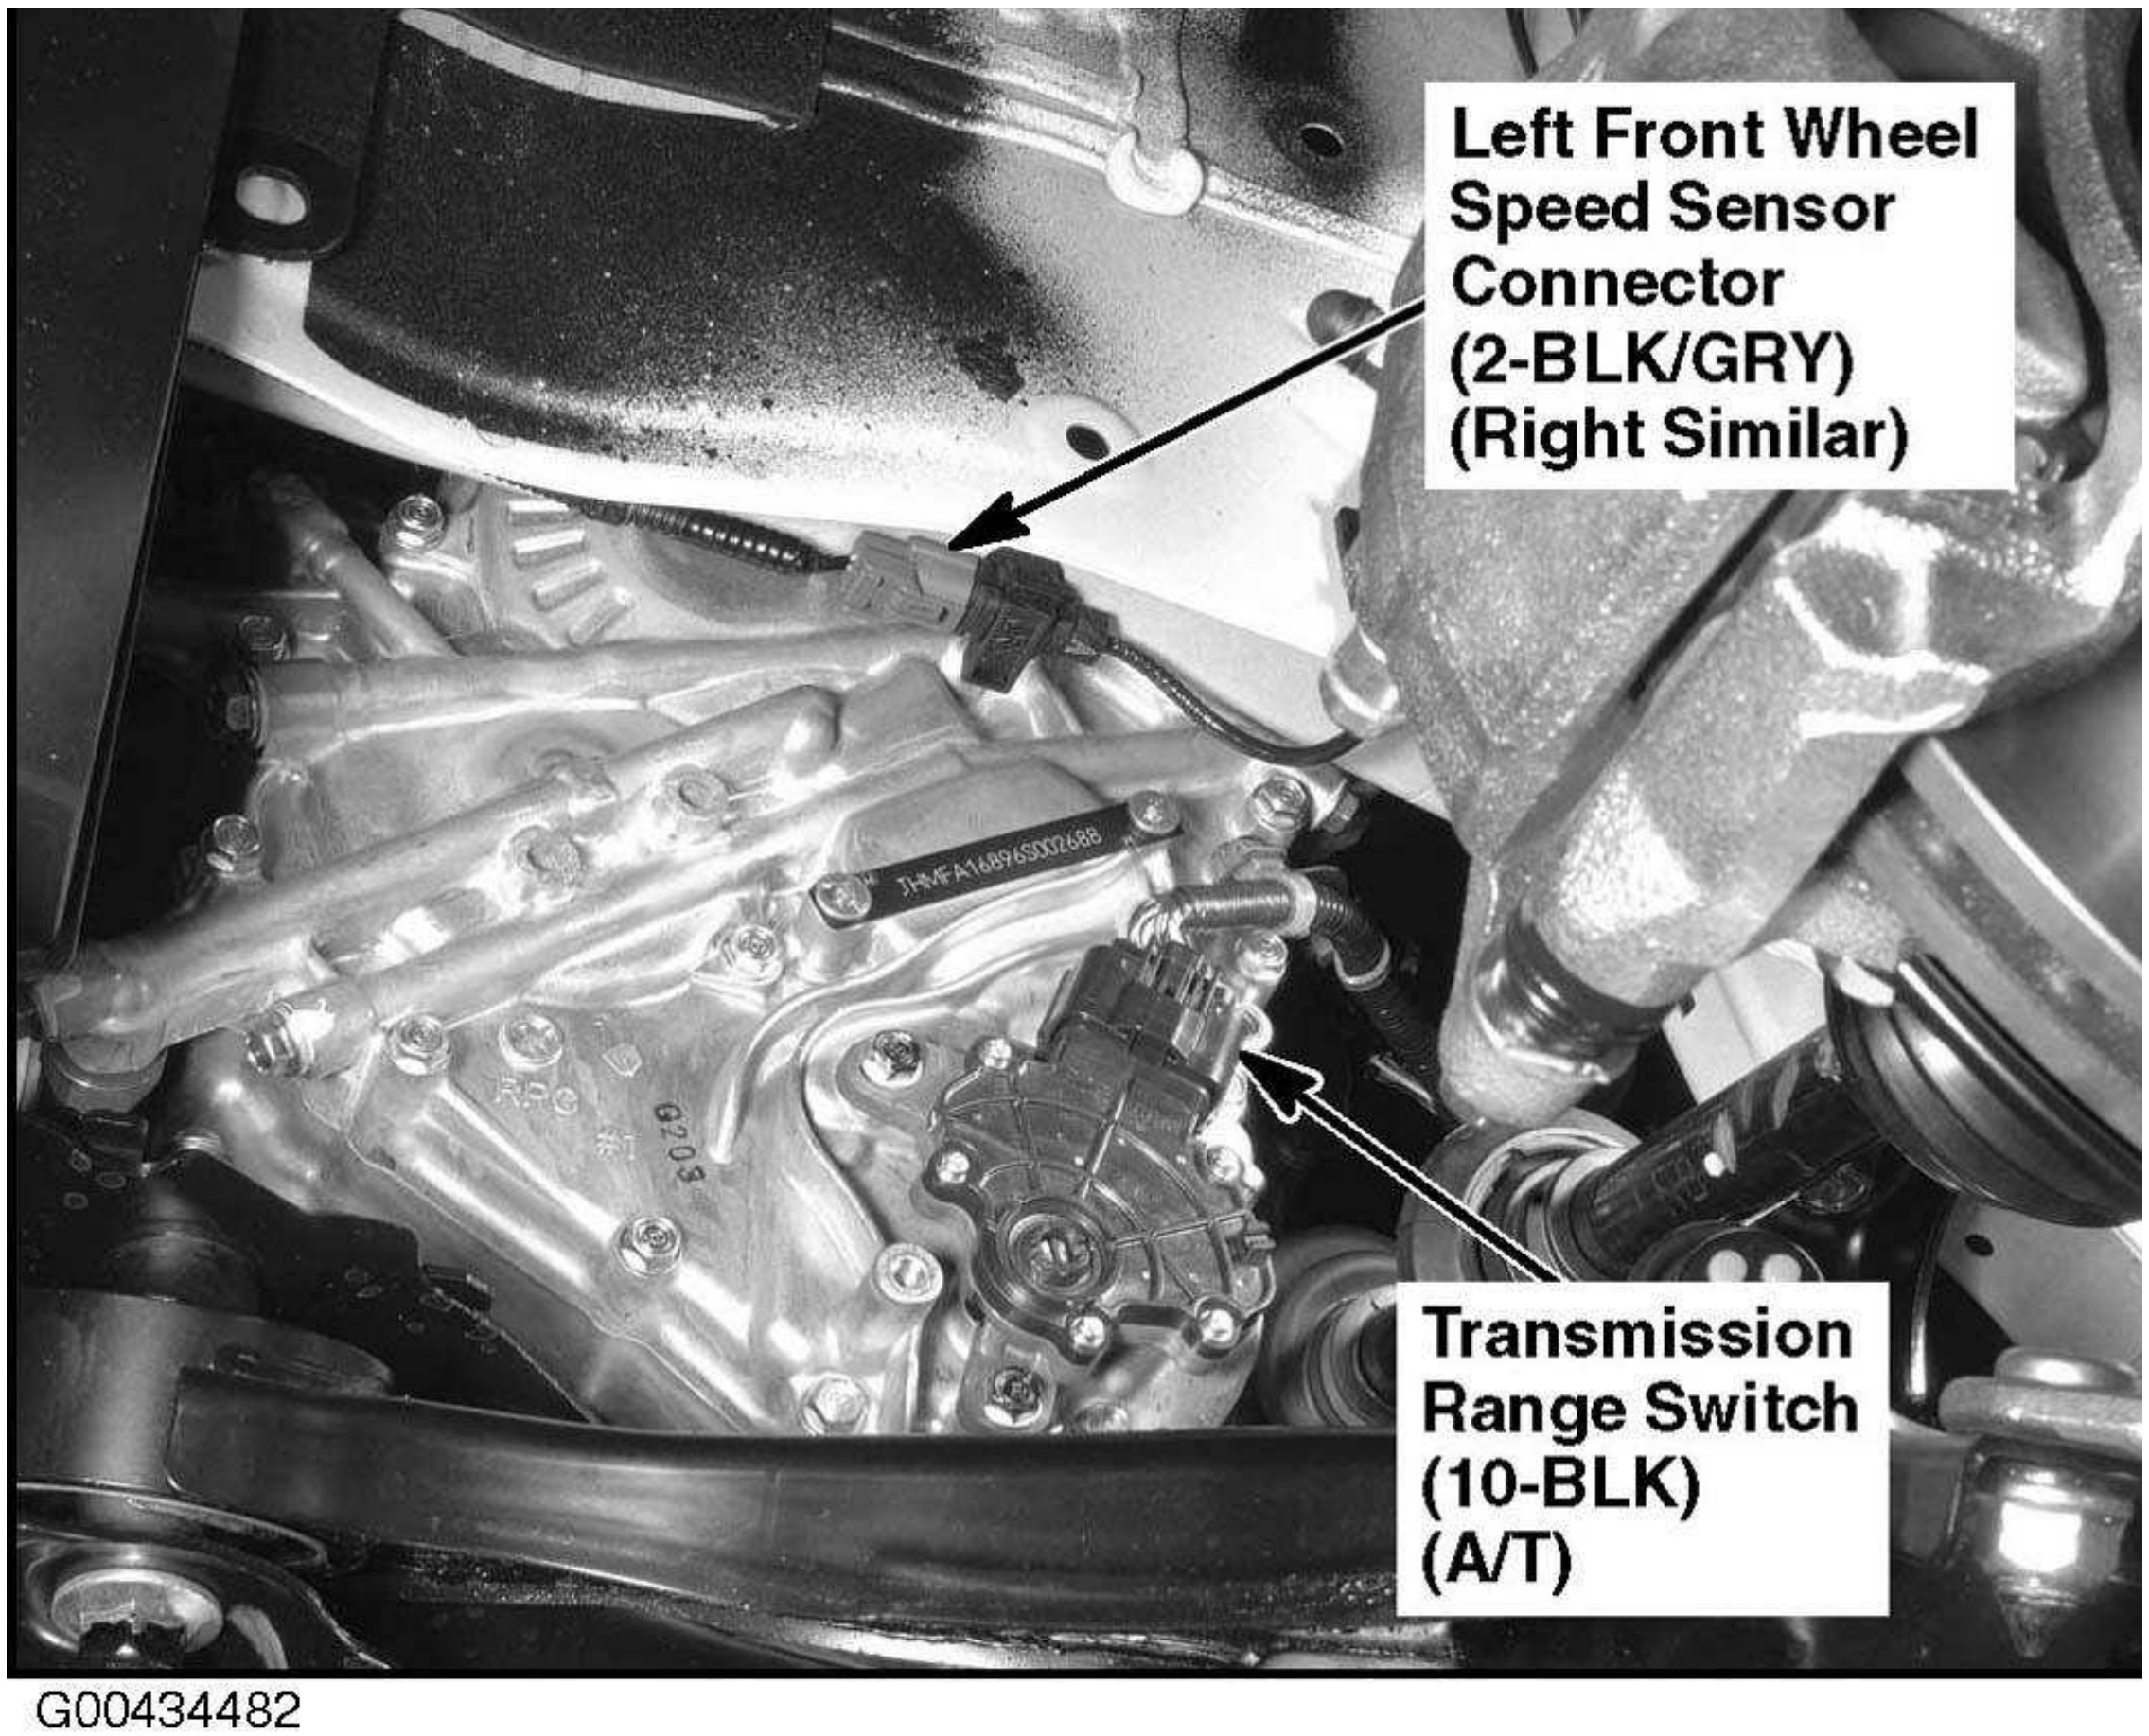
Left Front Wheel Speed Sensor Connector (2-BLK/GRY) (Right Similar)
Transmission Range Switch (10-BLK) (A/T)
G00434482

Fig. 137: Lower Left Side Of Engine Compartment (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

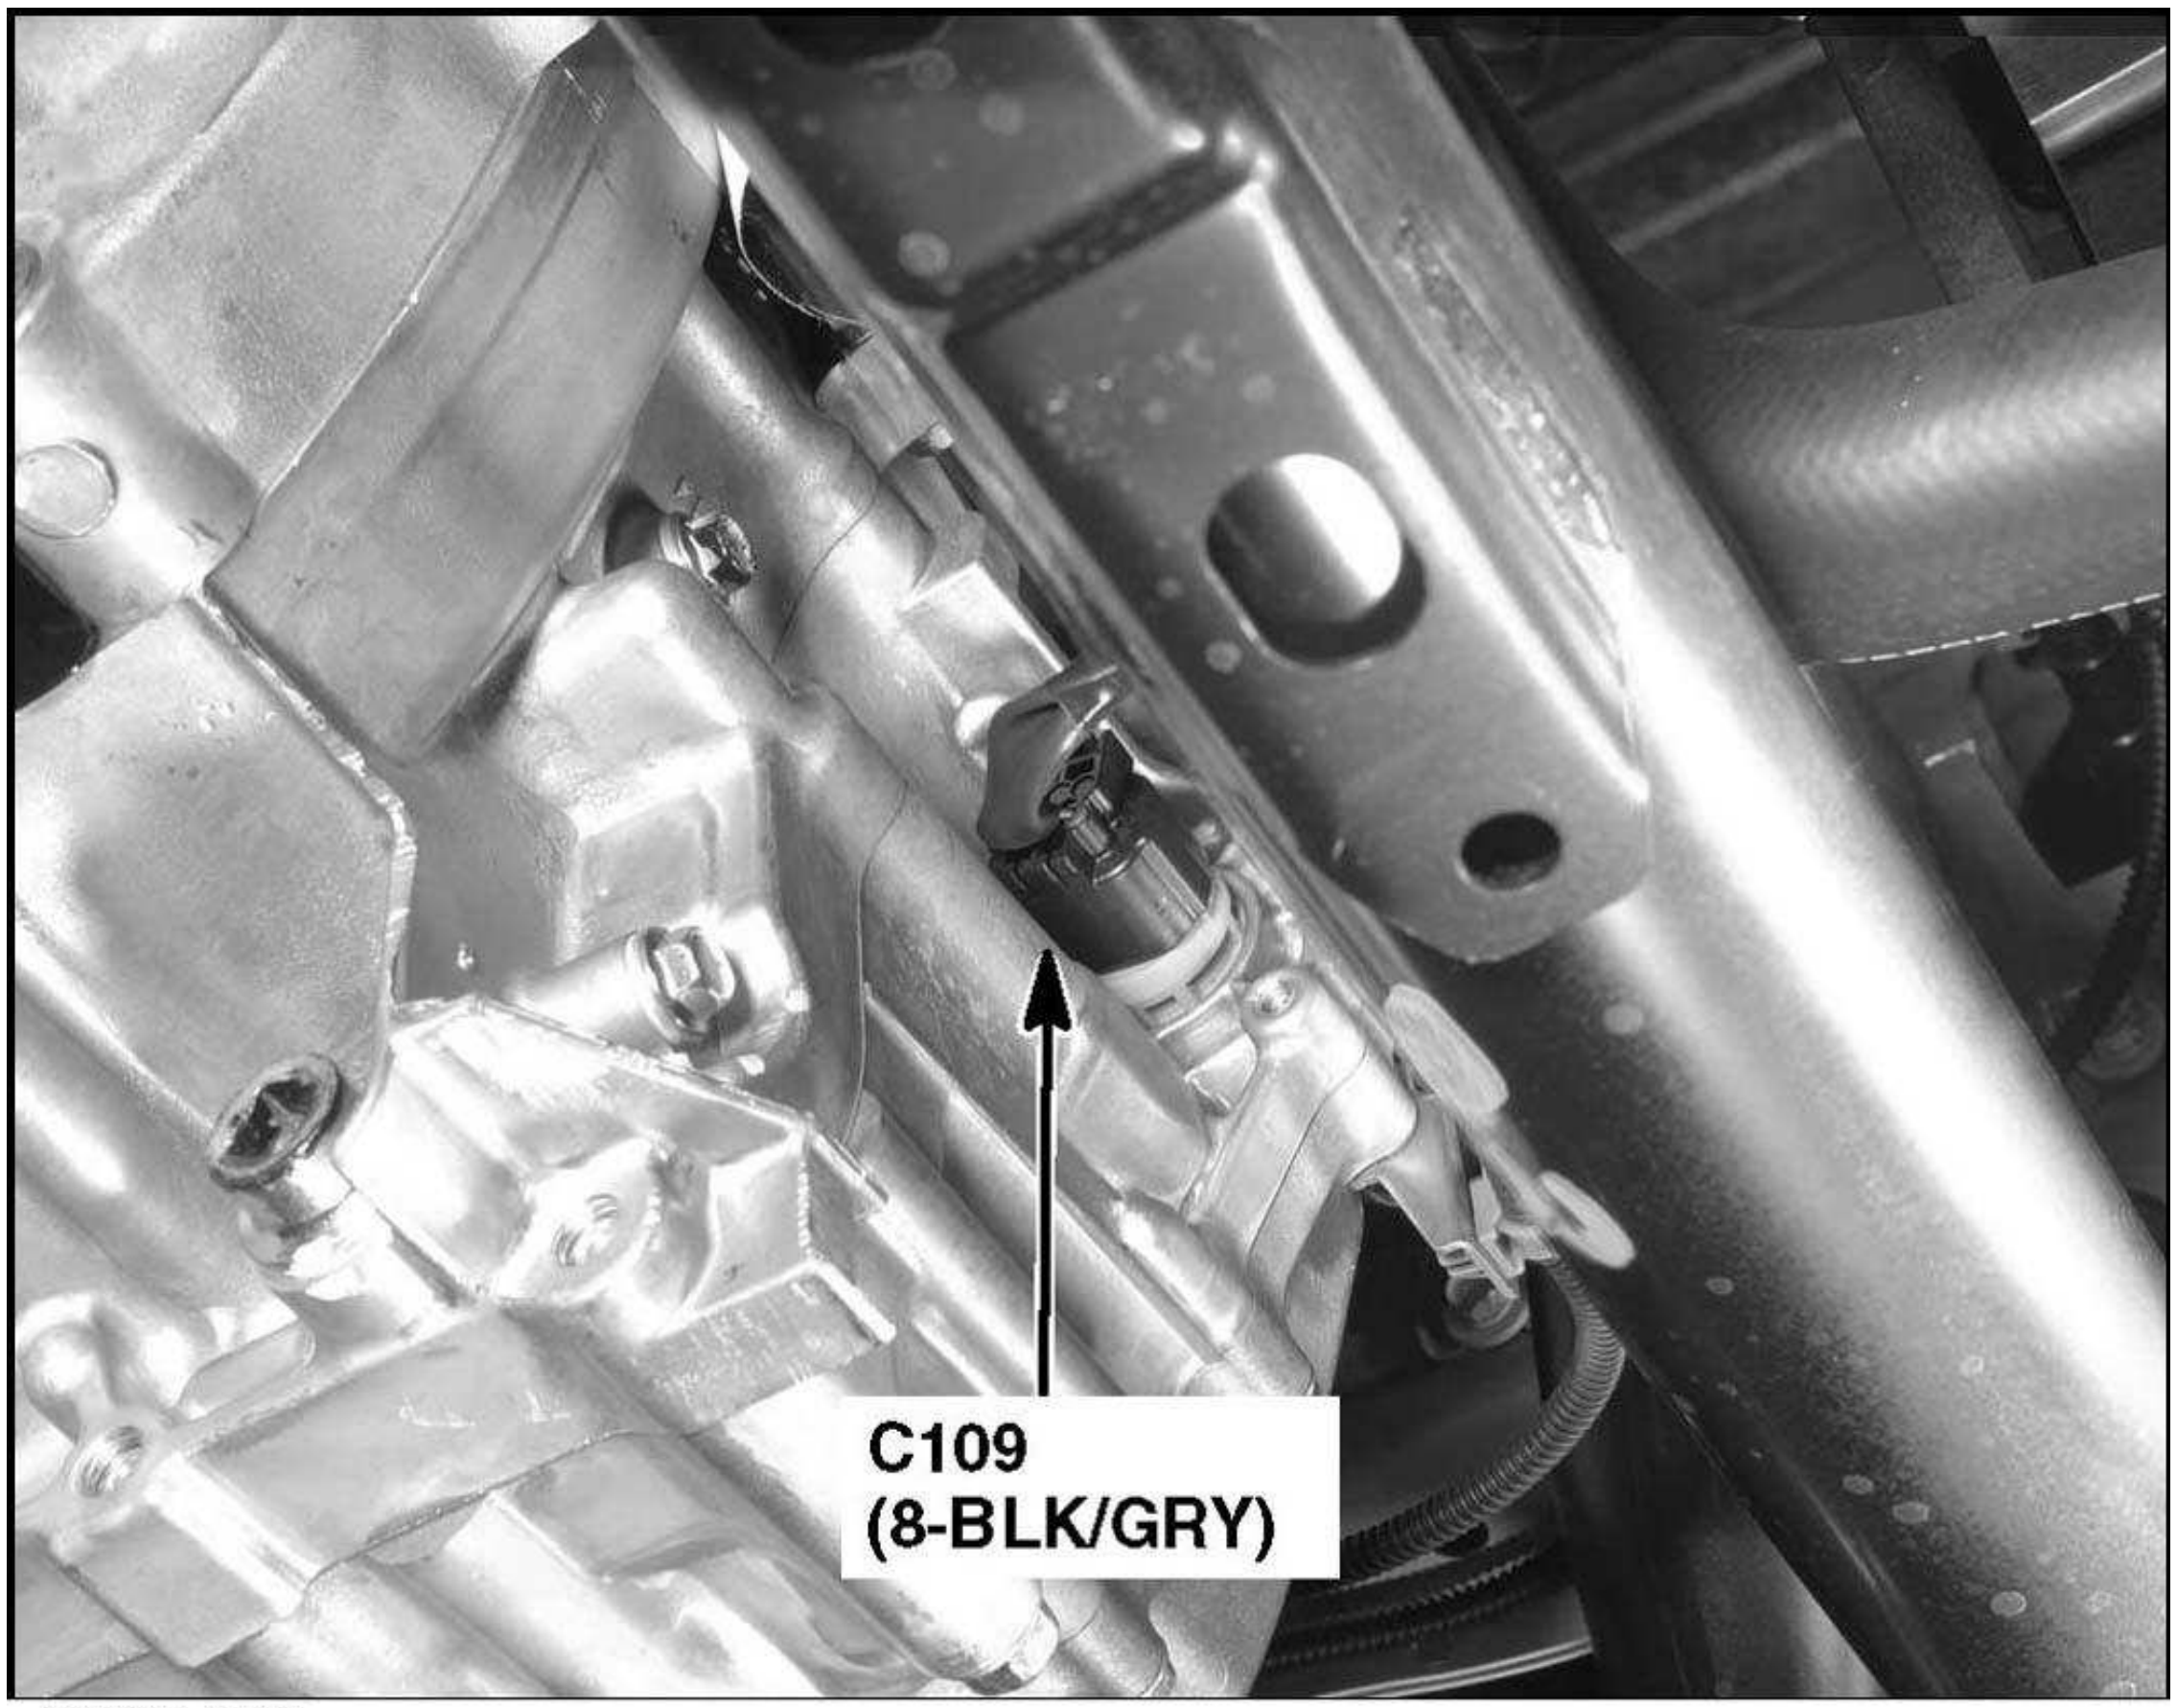
C109
(8-BLK/GRY)
G00434483

Fig. 138: Transmission Housing (A/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

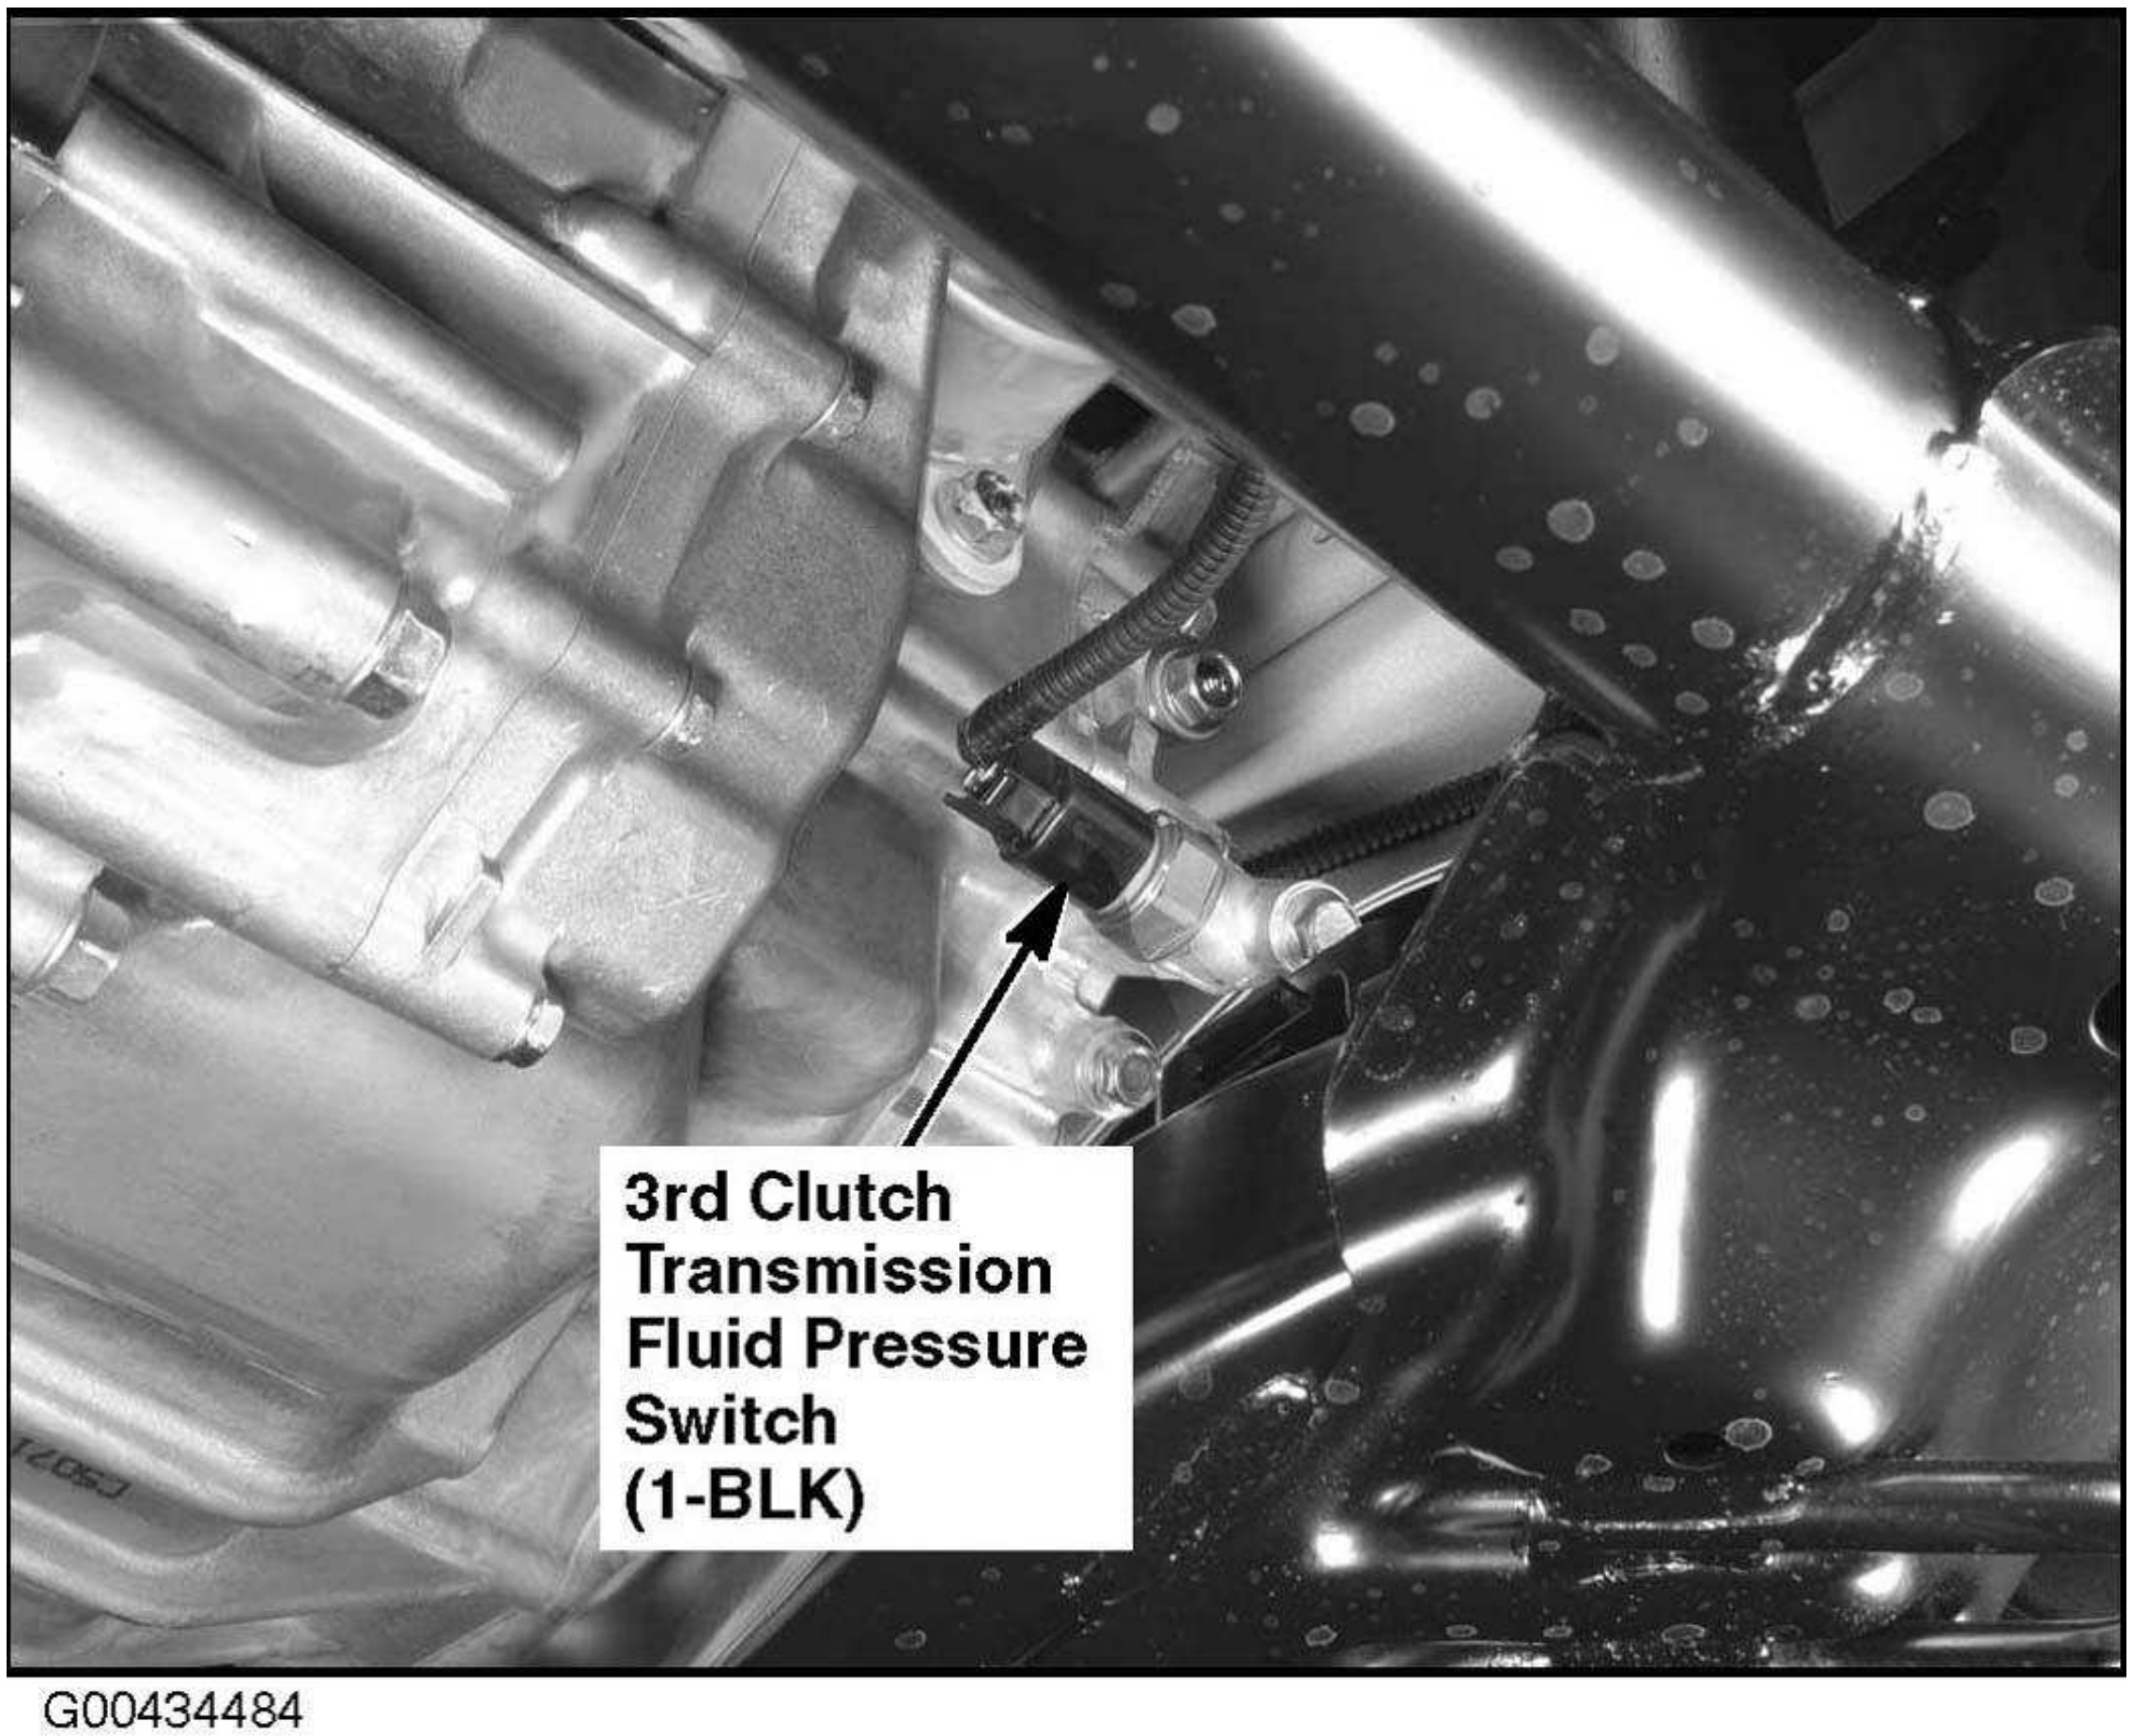
3rd Clutch Transmission Fluid Pressure Switch (1-BLK)
G00434484

Fig. 139: Transmission Housing (A/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

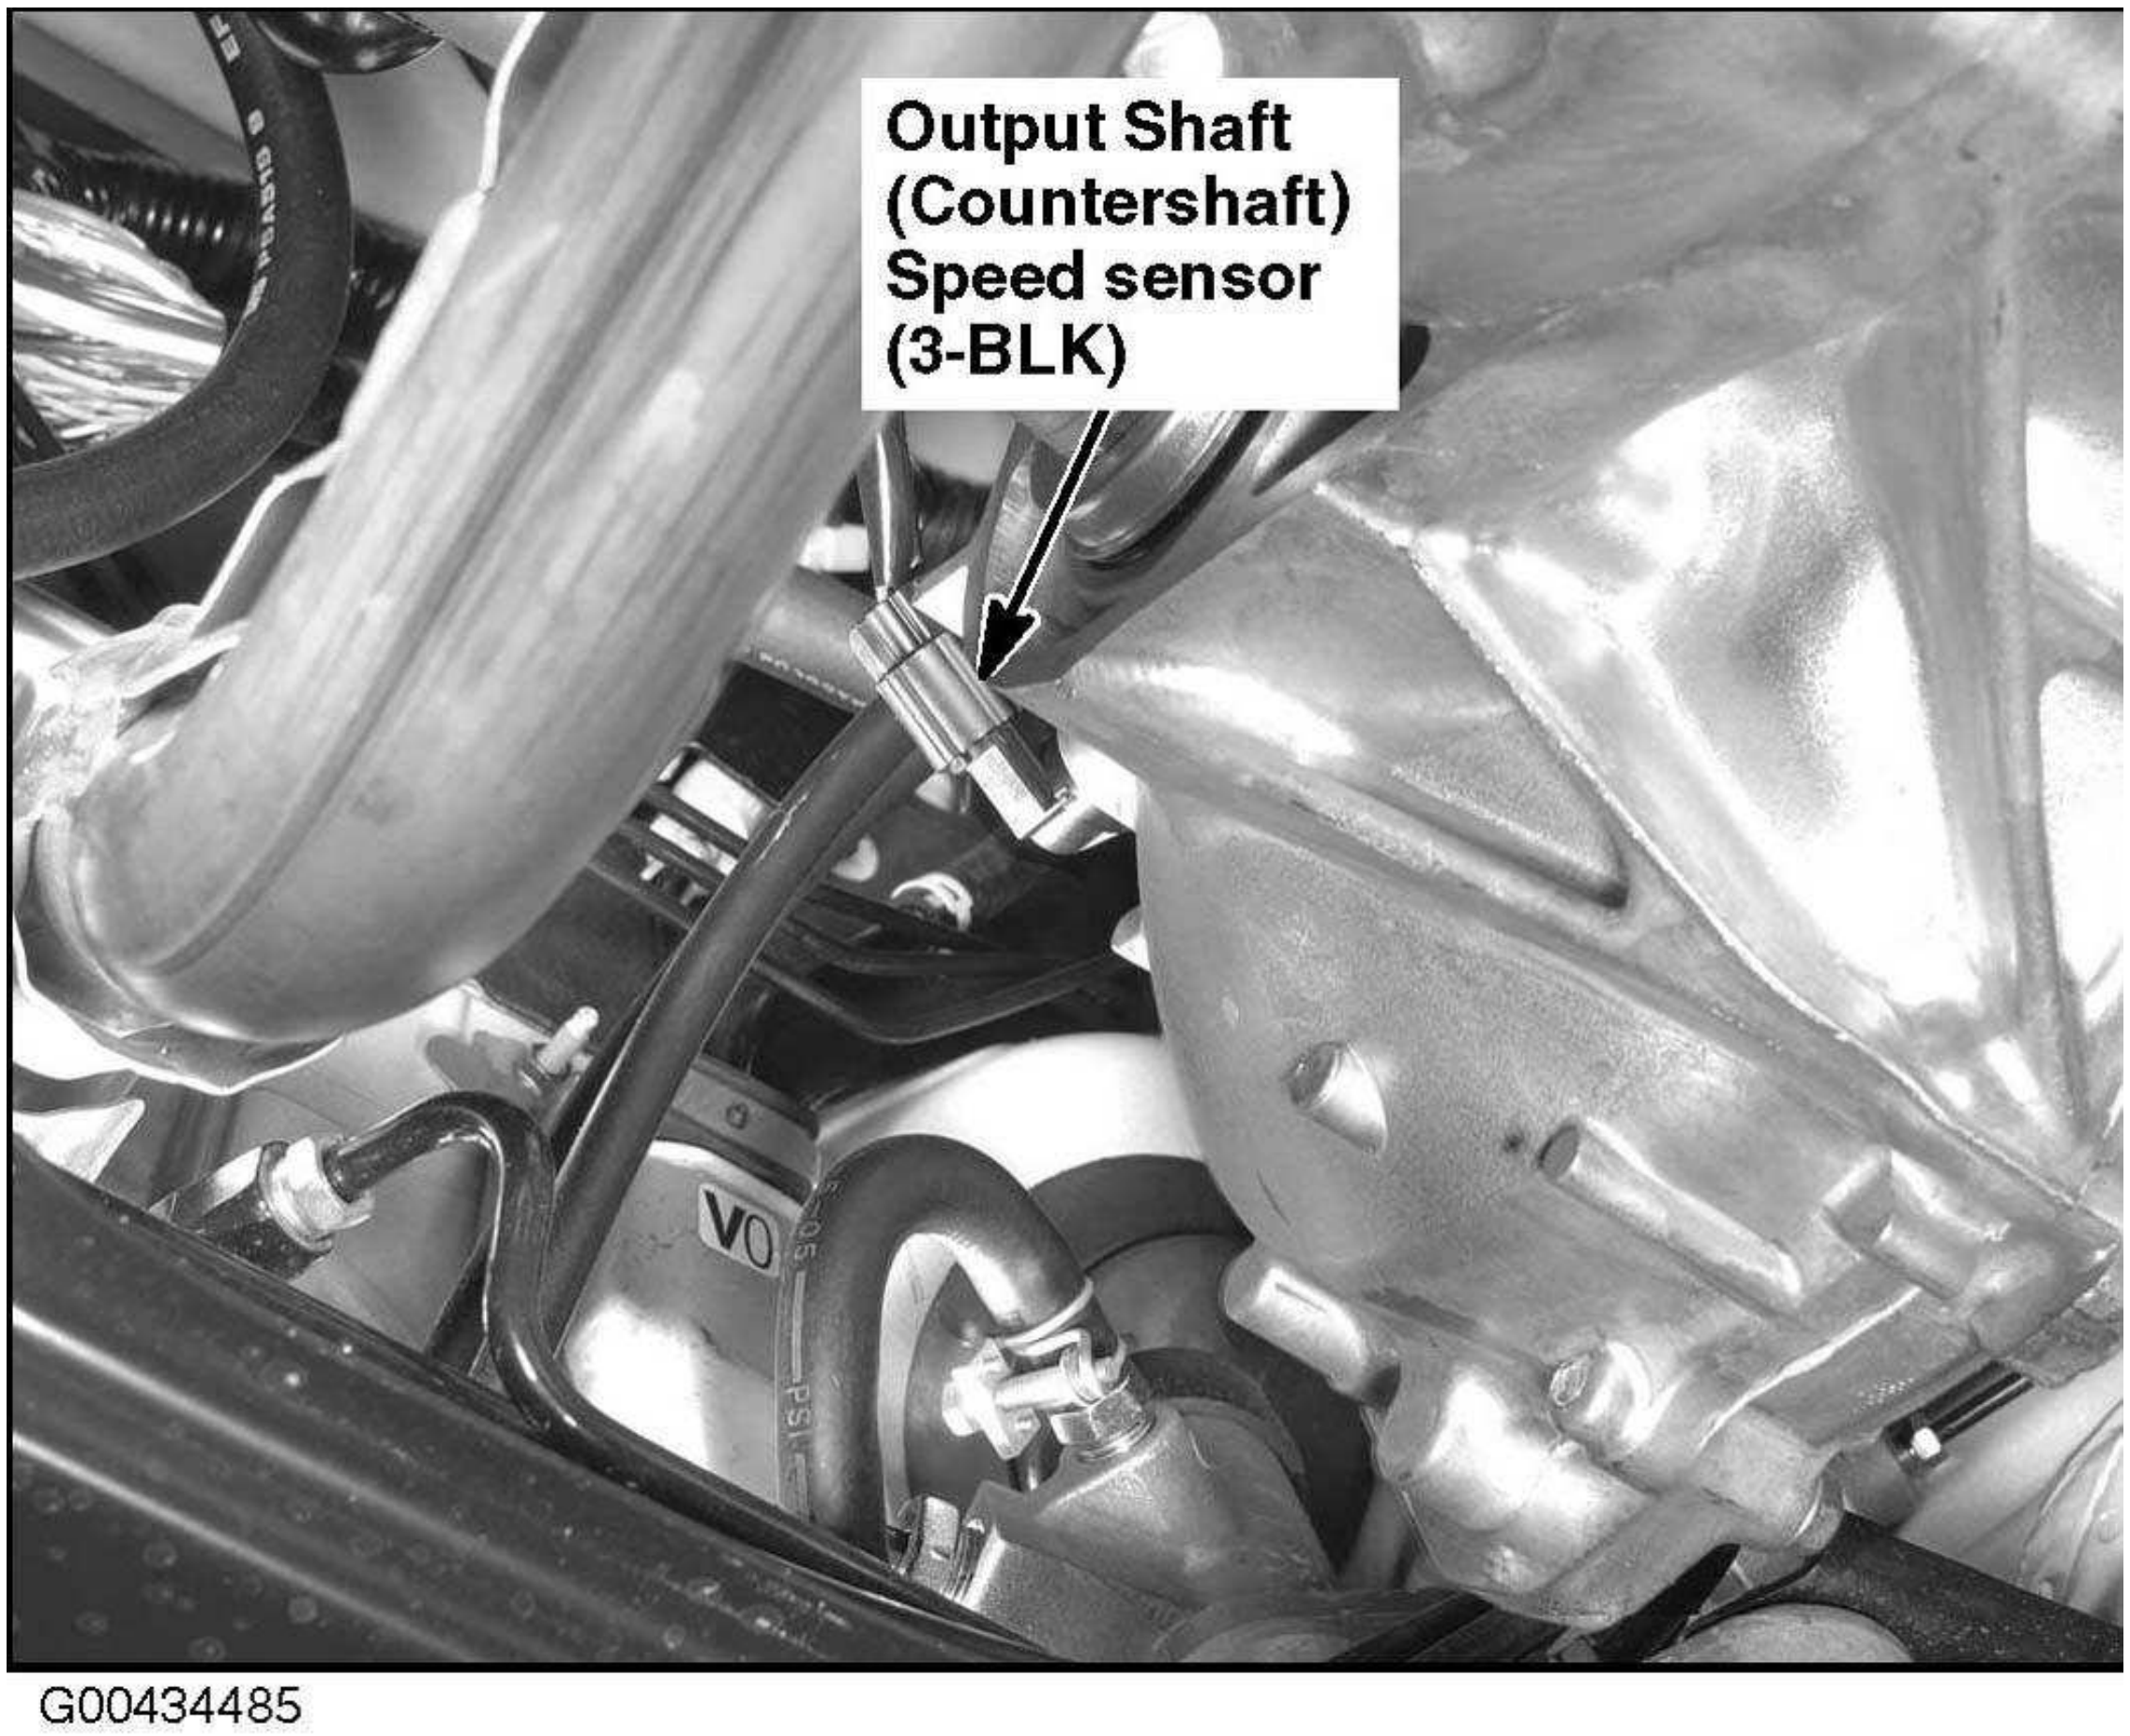
Output Shaft
(Countershaft)
Speed sensor
(3-BLK)
G00434485

Fig. 140: Transmission Housing (M/T) (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

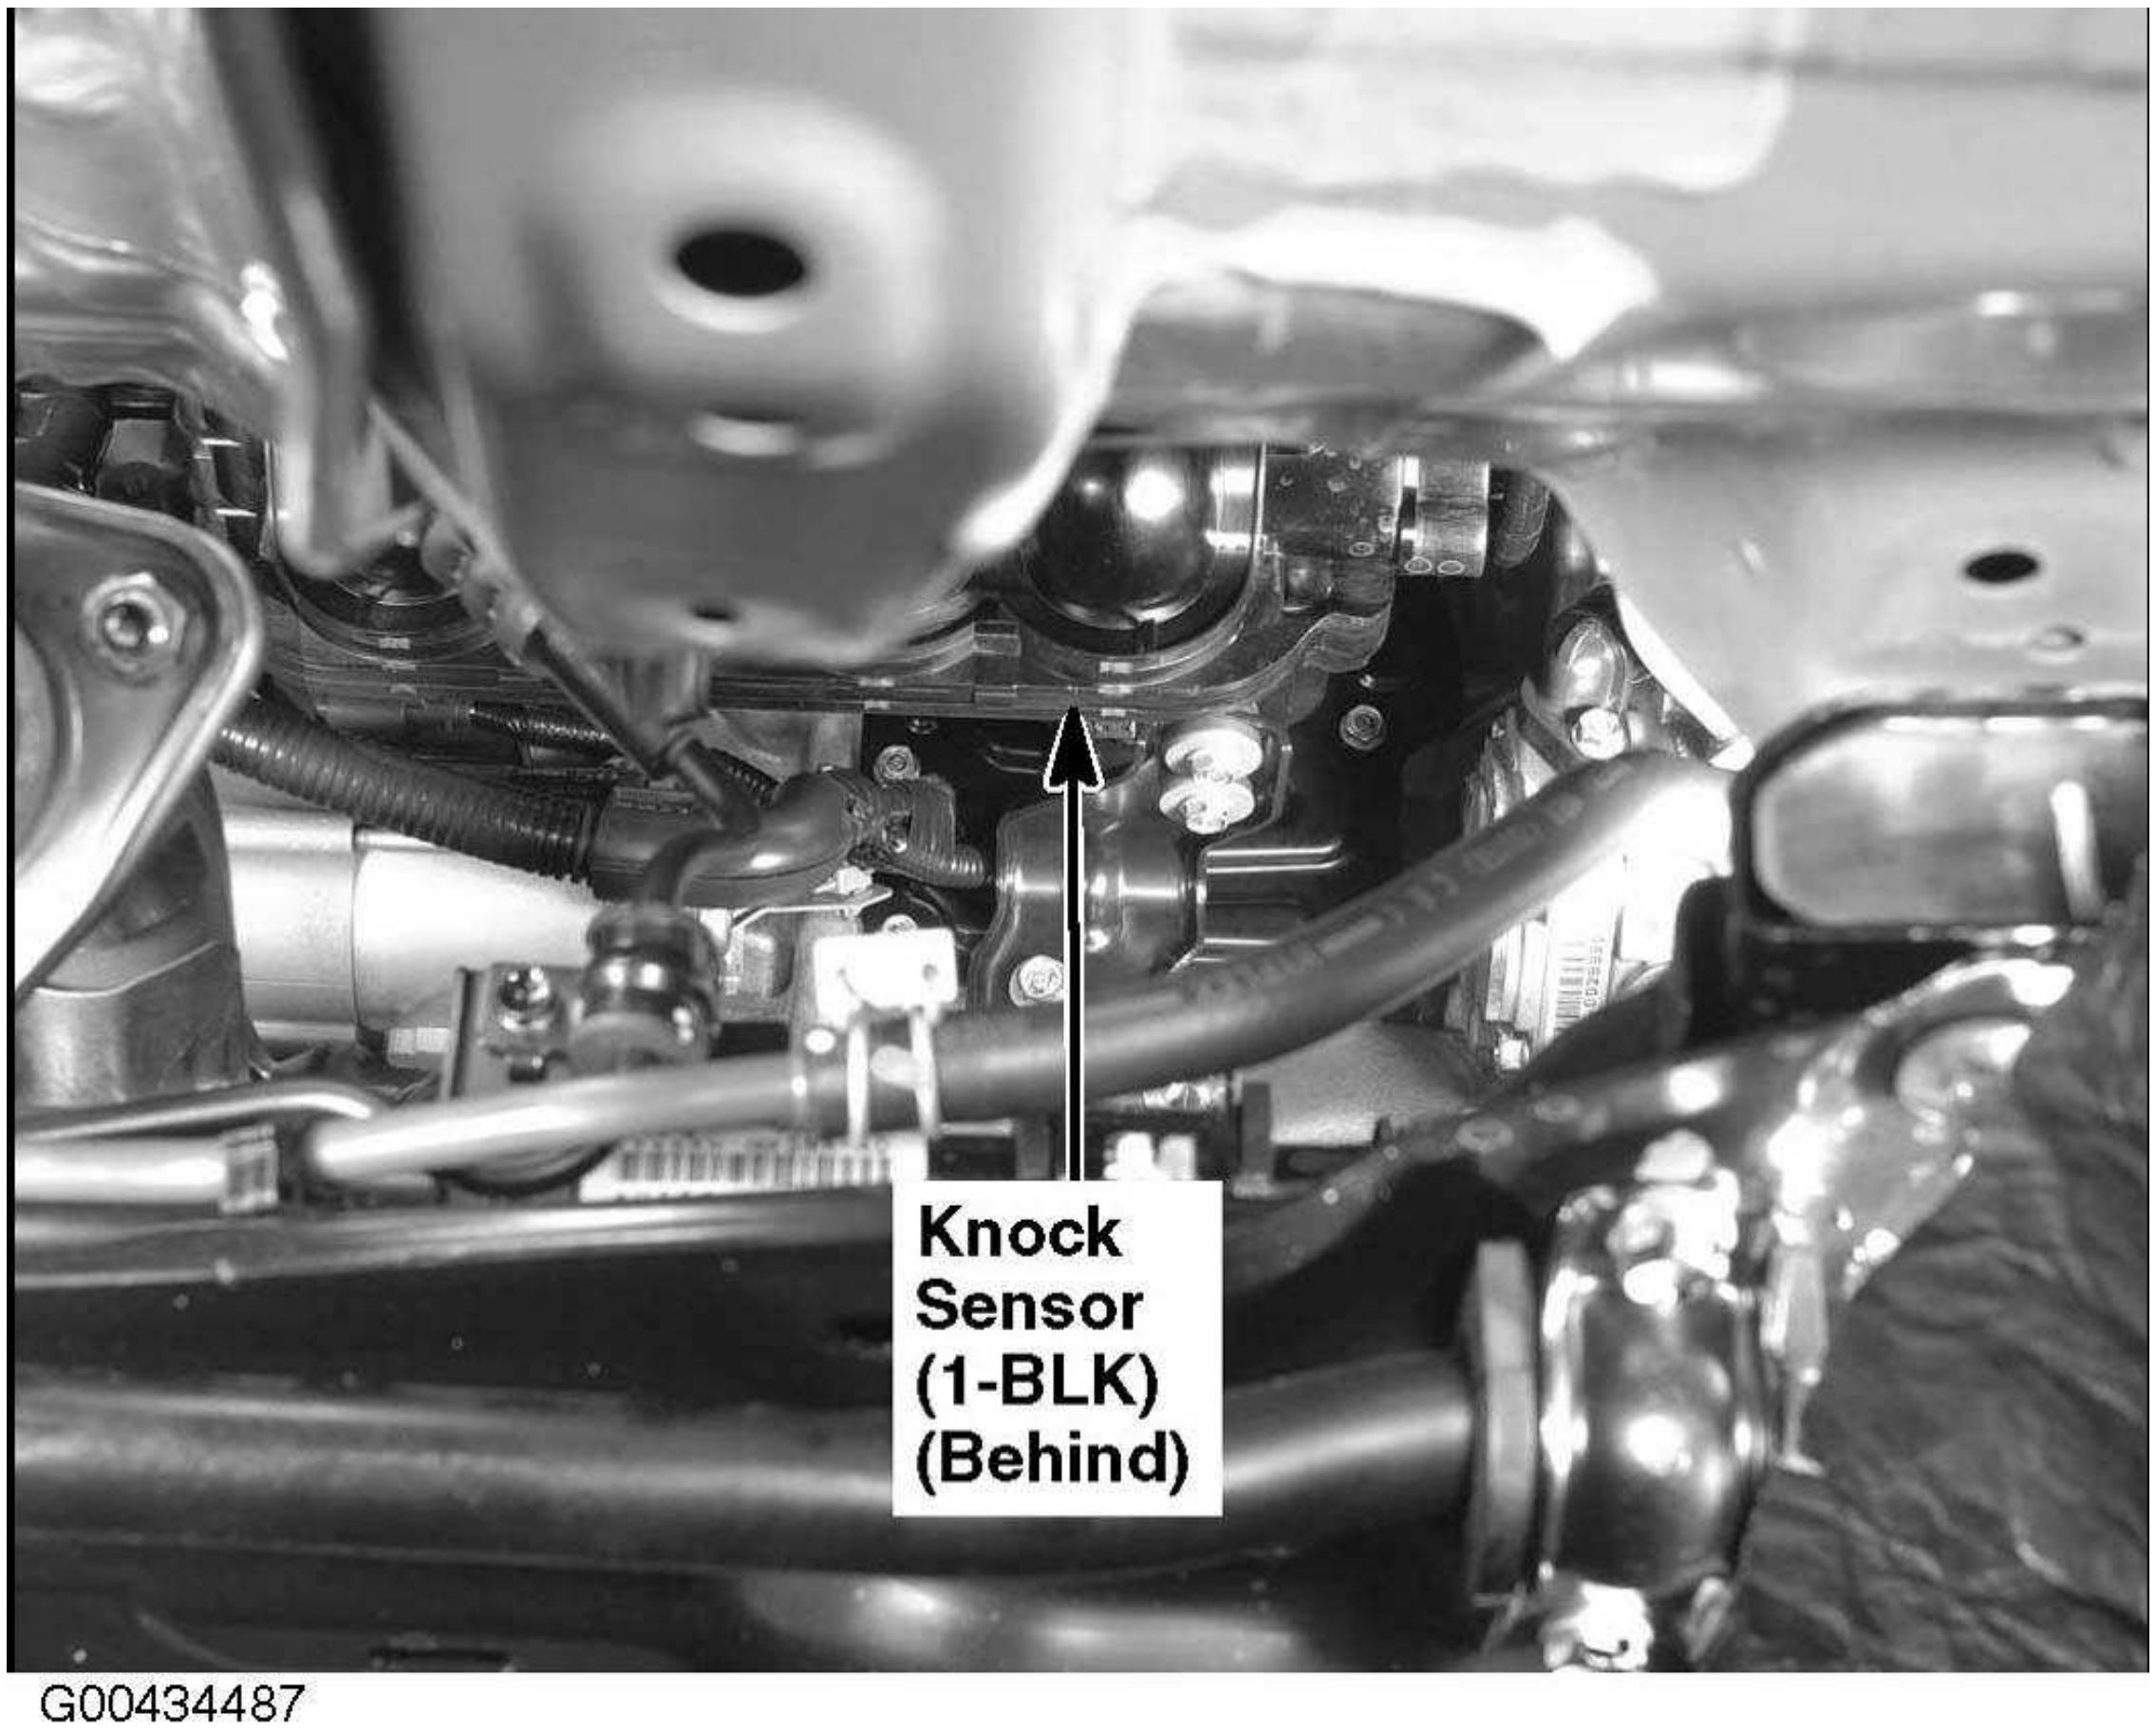
Knock
Sensor
(1-BLK)
(Behind)
G00434487

Fig. 141: Lower Right Rear Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

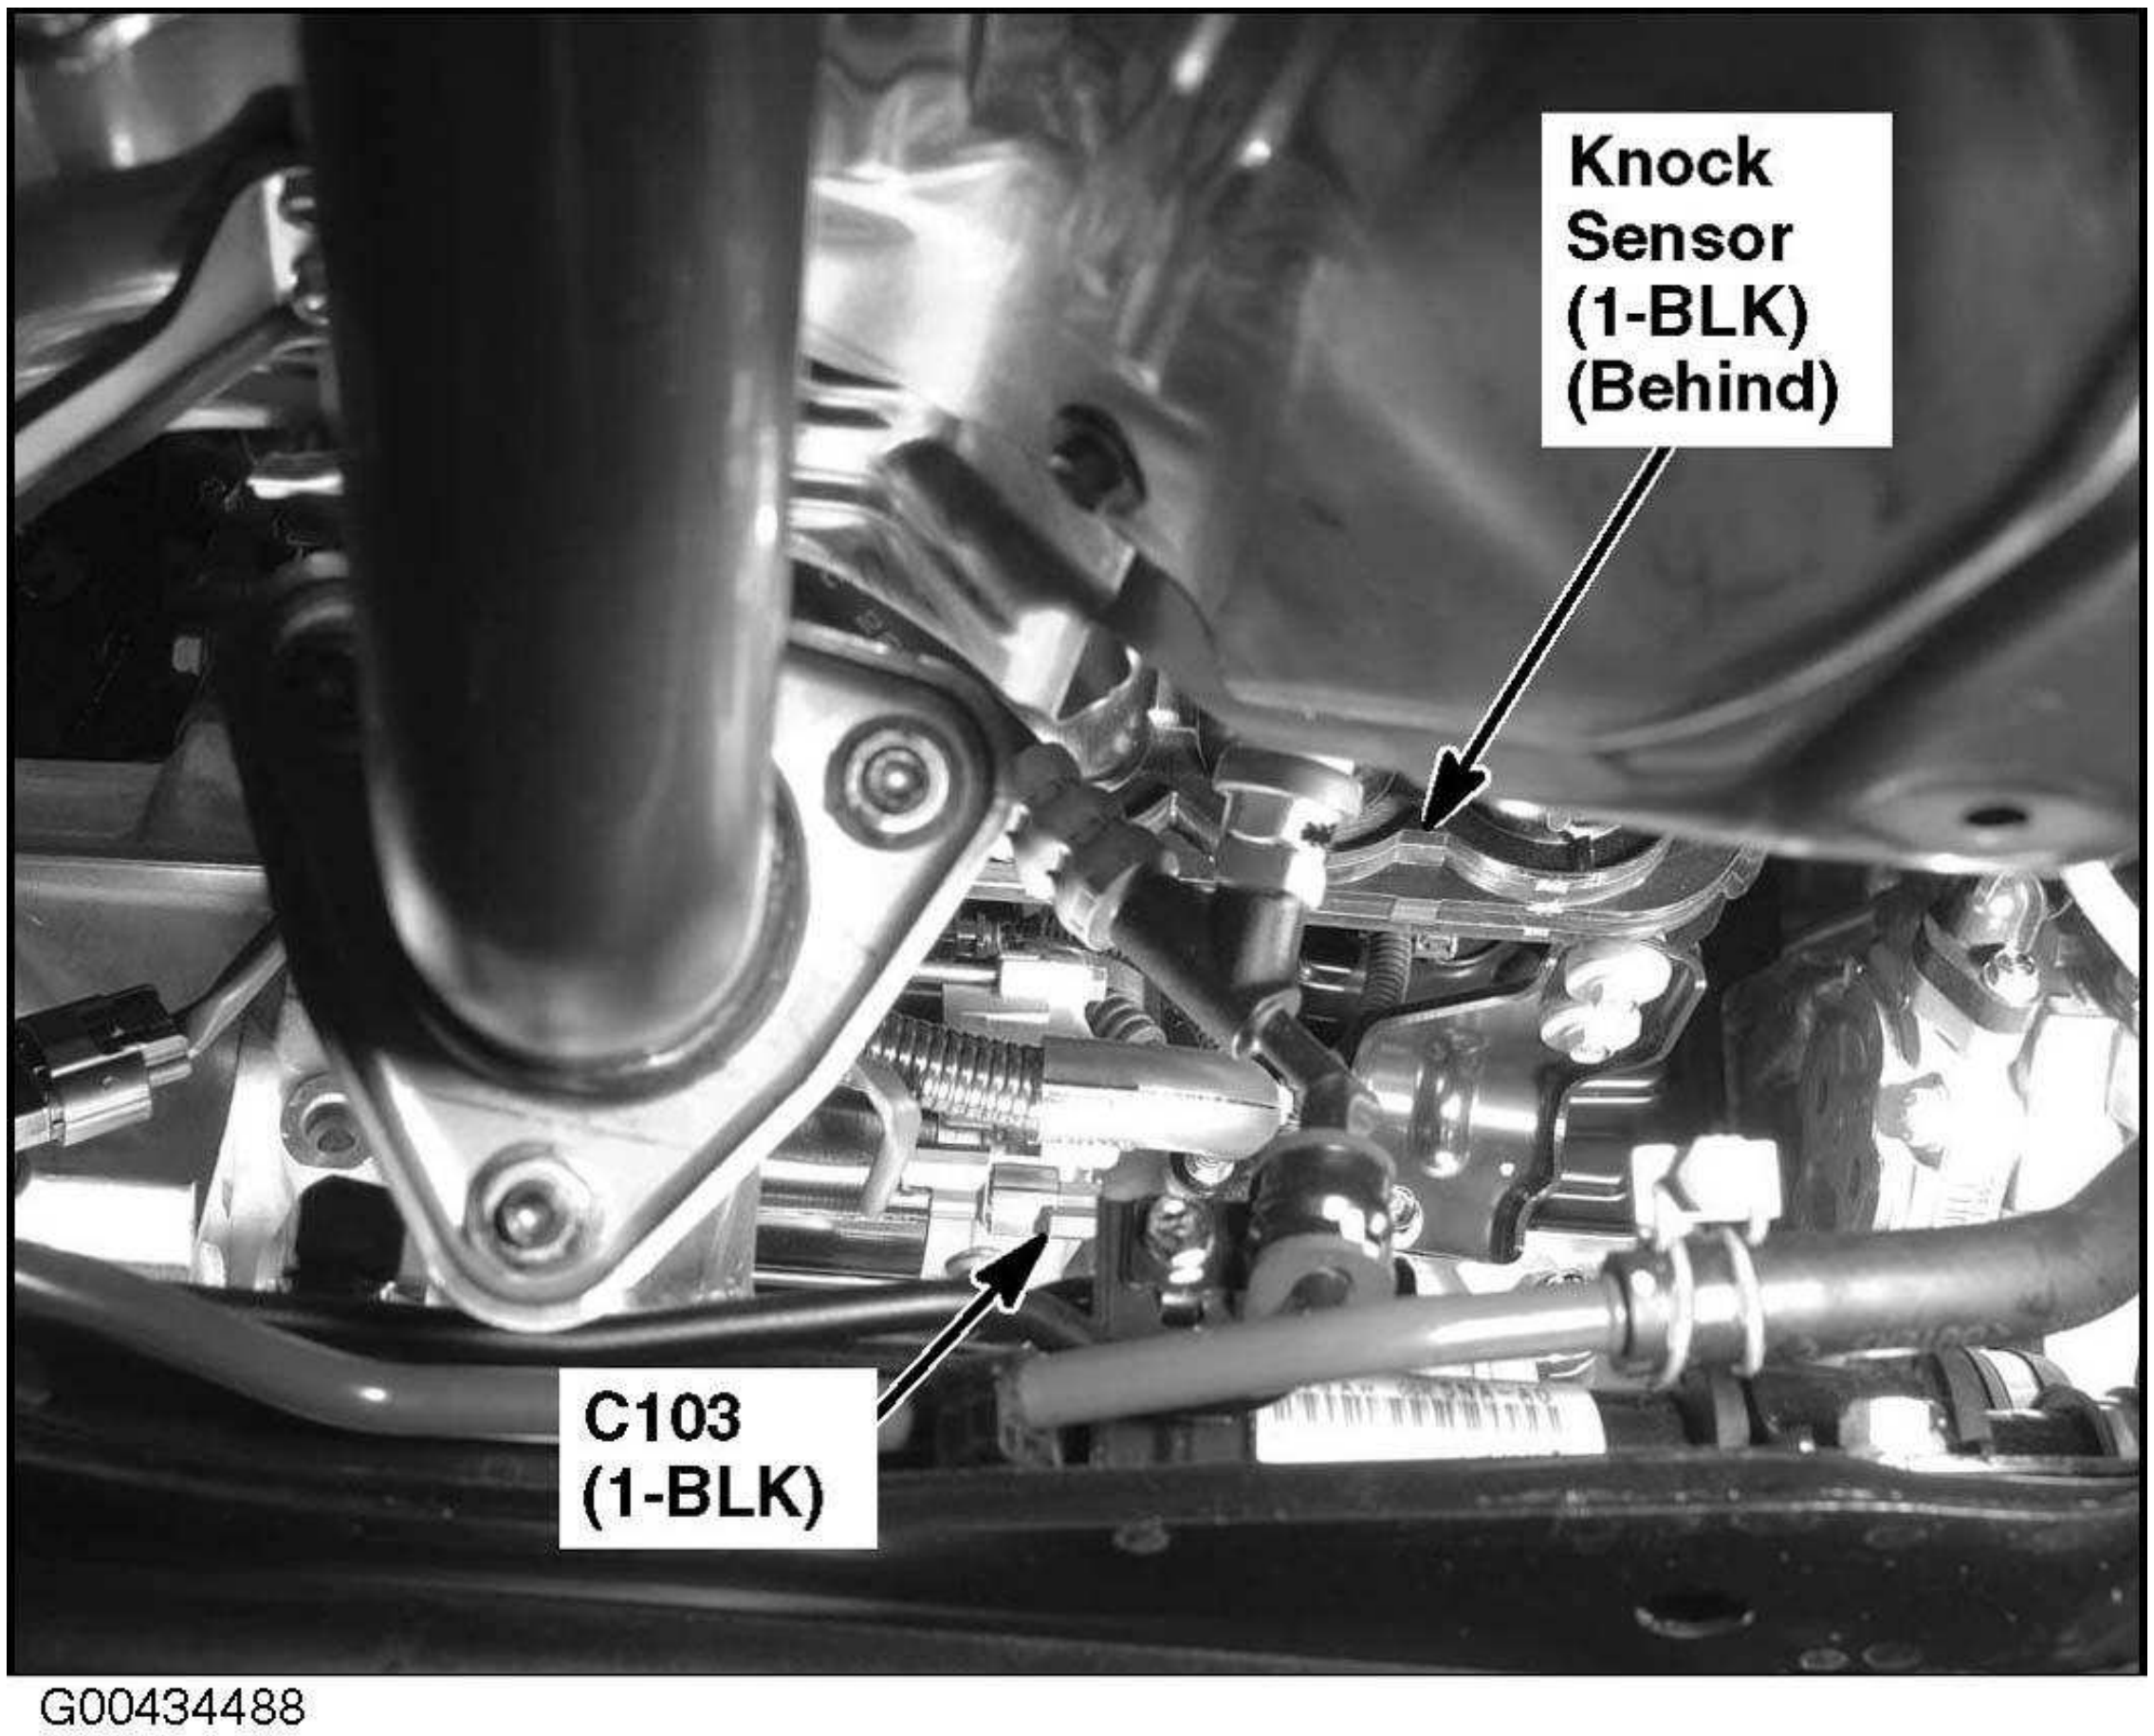
Knock Sensor (1-BLK) (Behind)
C103 (1-BLK)
G00434488

Fig. 142: Rear Of Engine (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

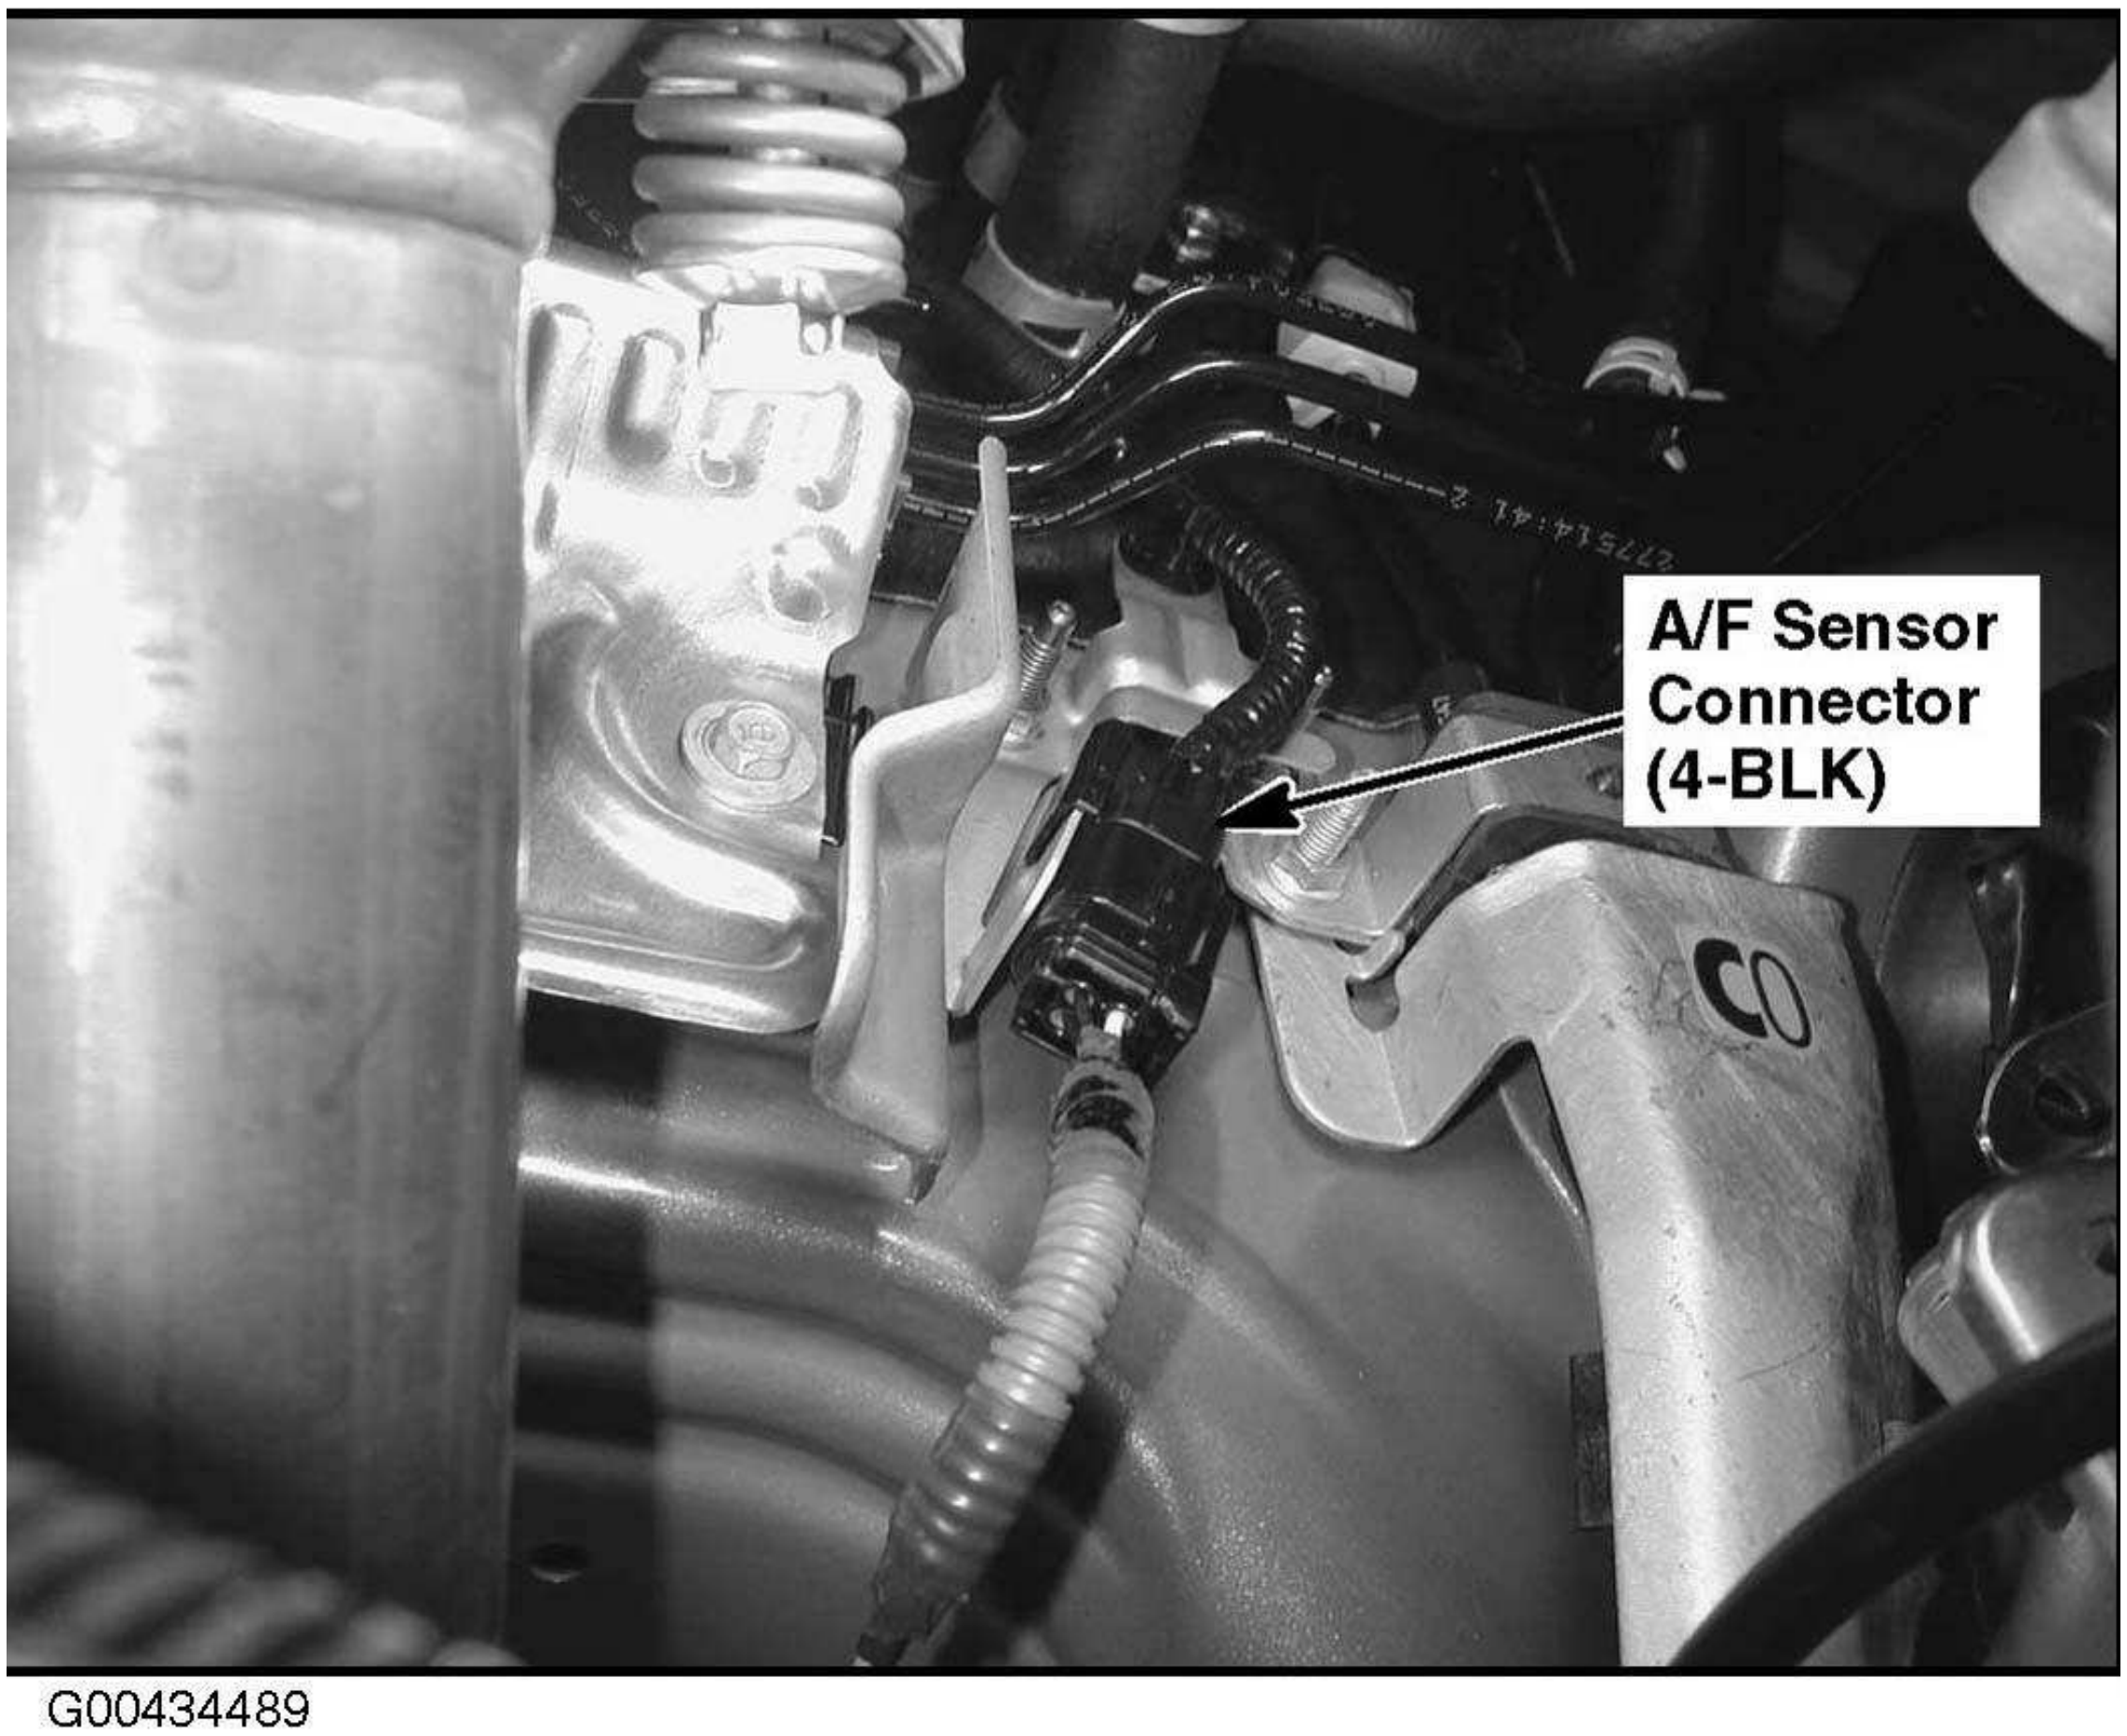
A/F Sensor
Connector
(4-BLK)
G00434489

Fig. 143: Rear Of Engine Compartment (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

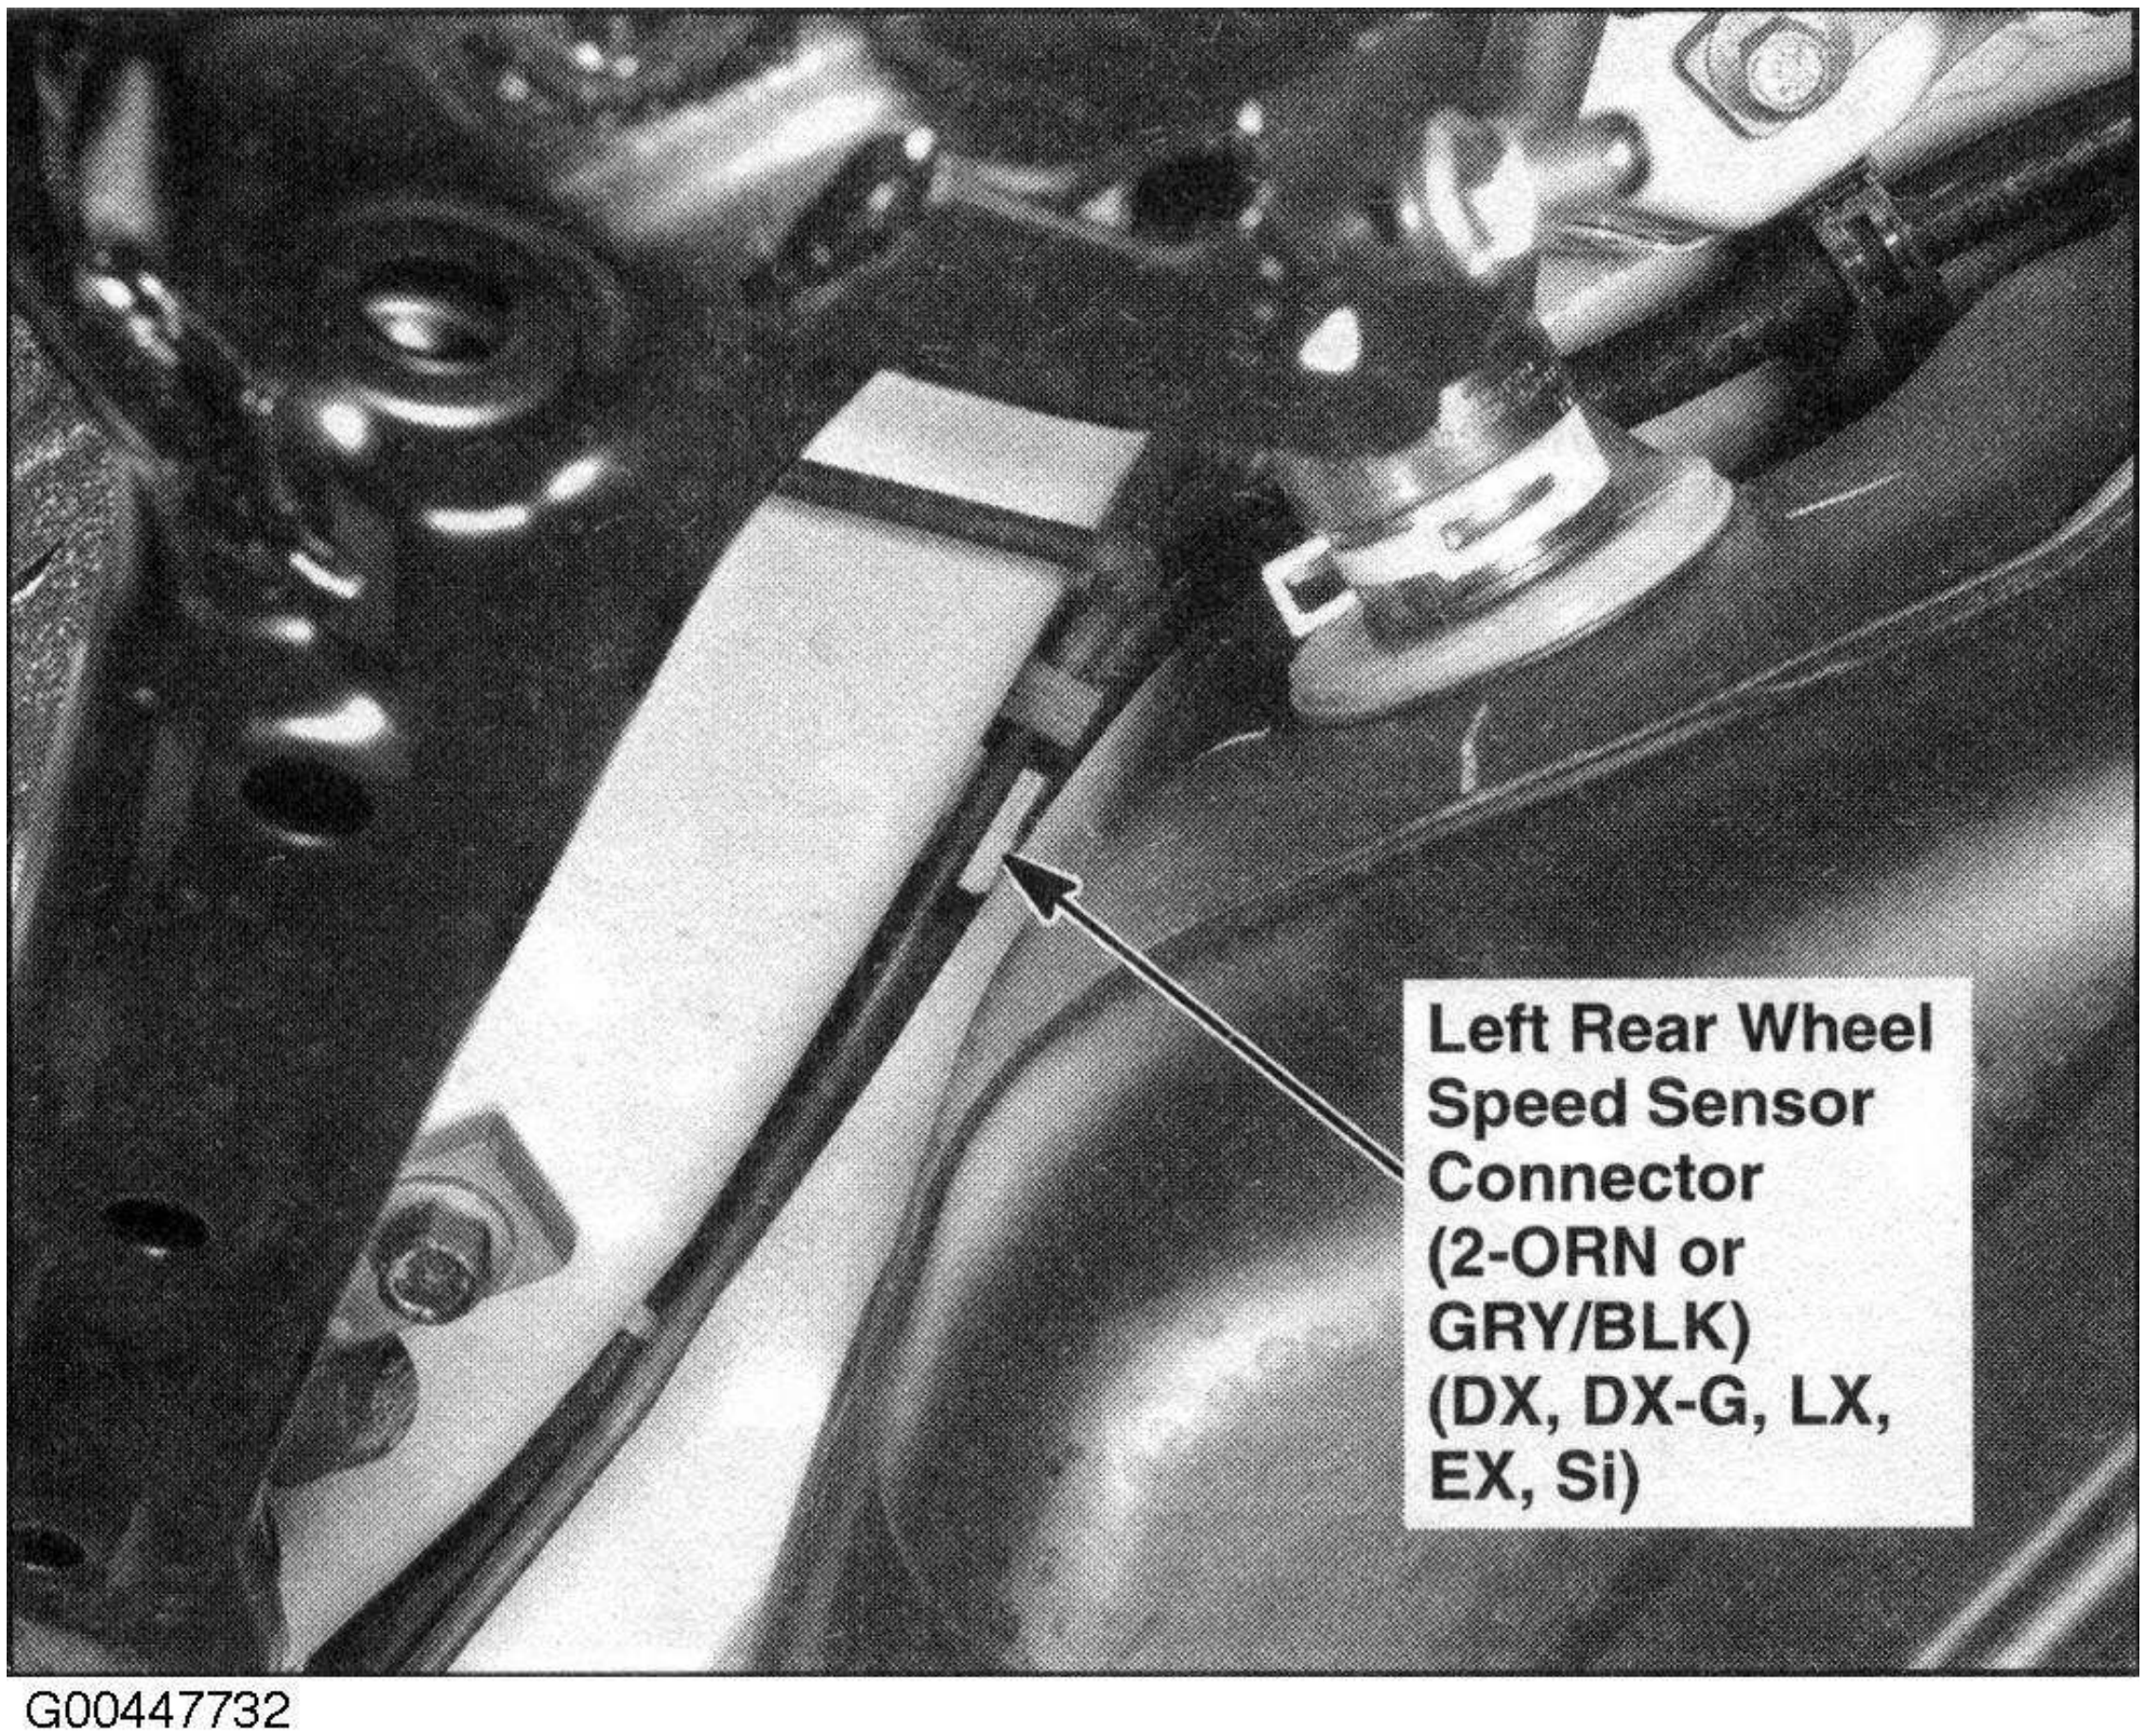
Left Rear Wheel Speed Sensor Connector (2-ORN or GRY/BLK) (DX, DX-G, LX, EX, Si)
G00447732

Fig. 144: Under Left Rear Of Vehicle (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

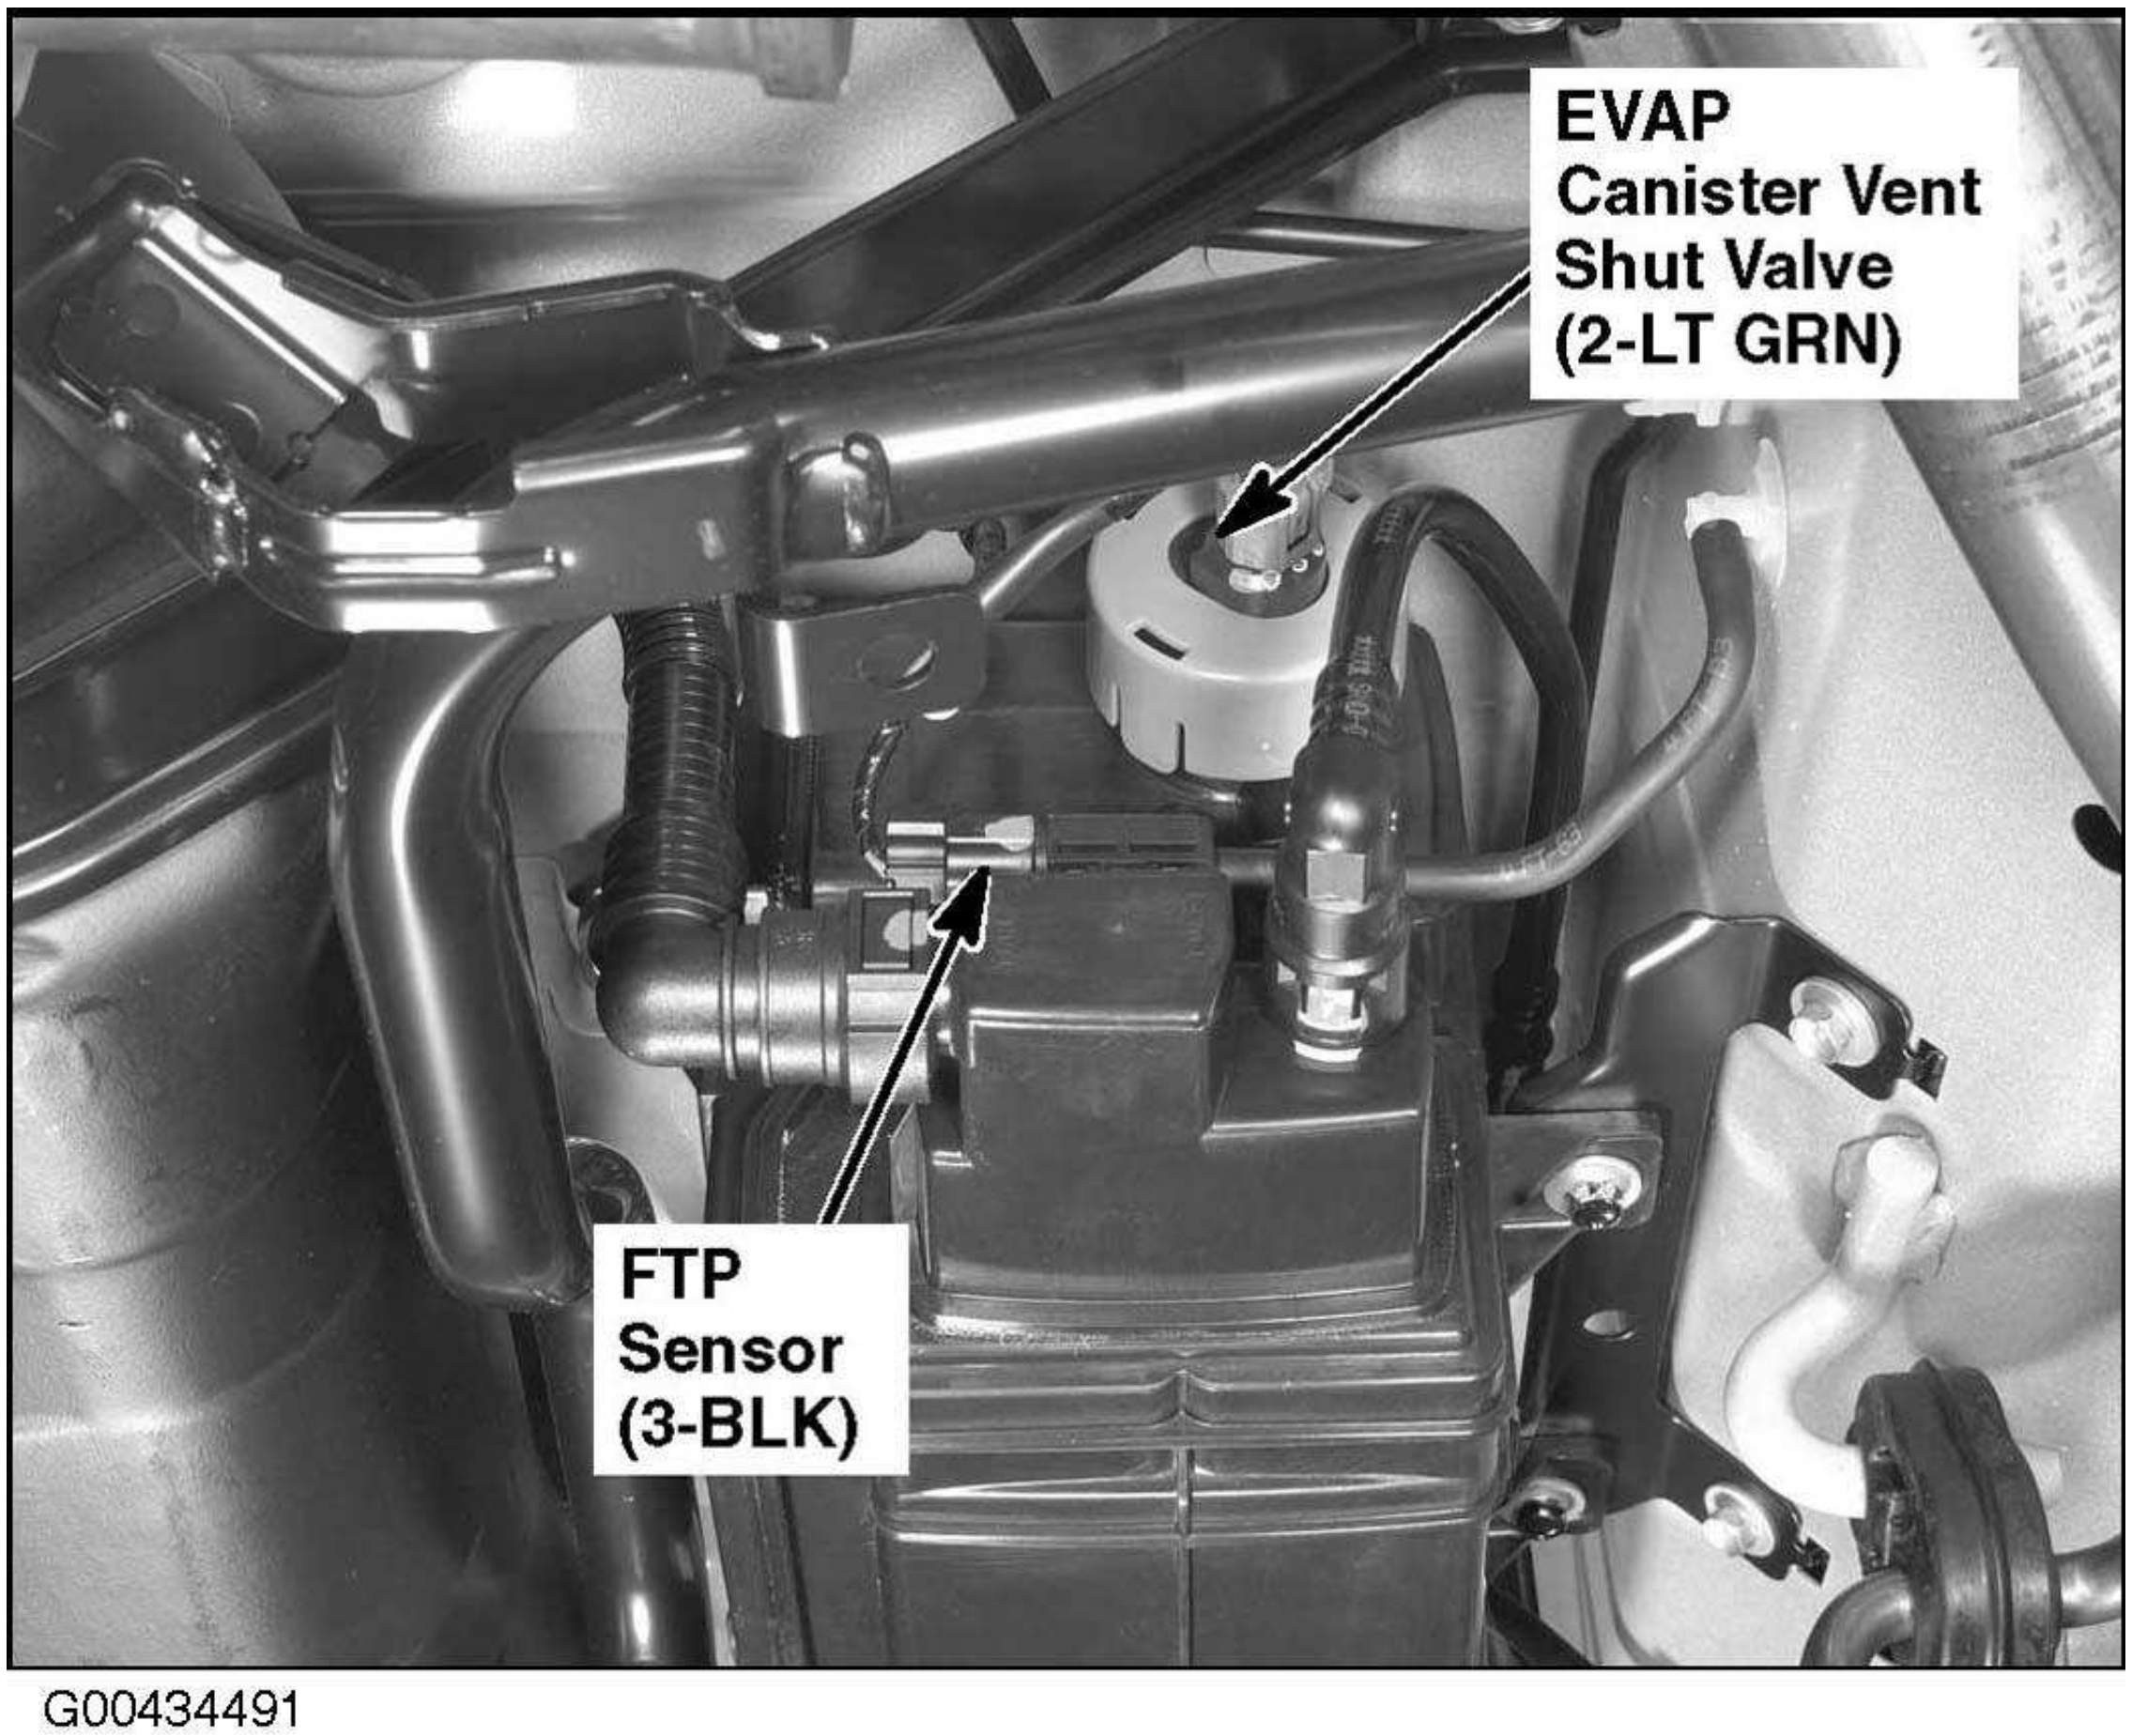
EVAP Canister Vent Shut Valve (2-LT GRN)
FTP Sensor (3-BLK)
G00434491

Fig. 145: Under Middle Of Vehicle
Courtesy of AMERICAN HONDA MOTOR CO., INC.

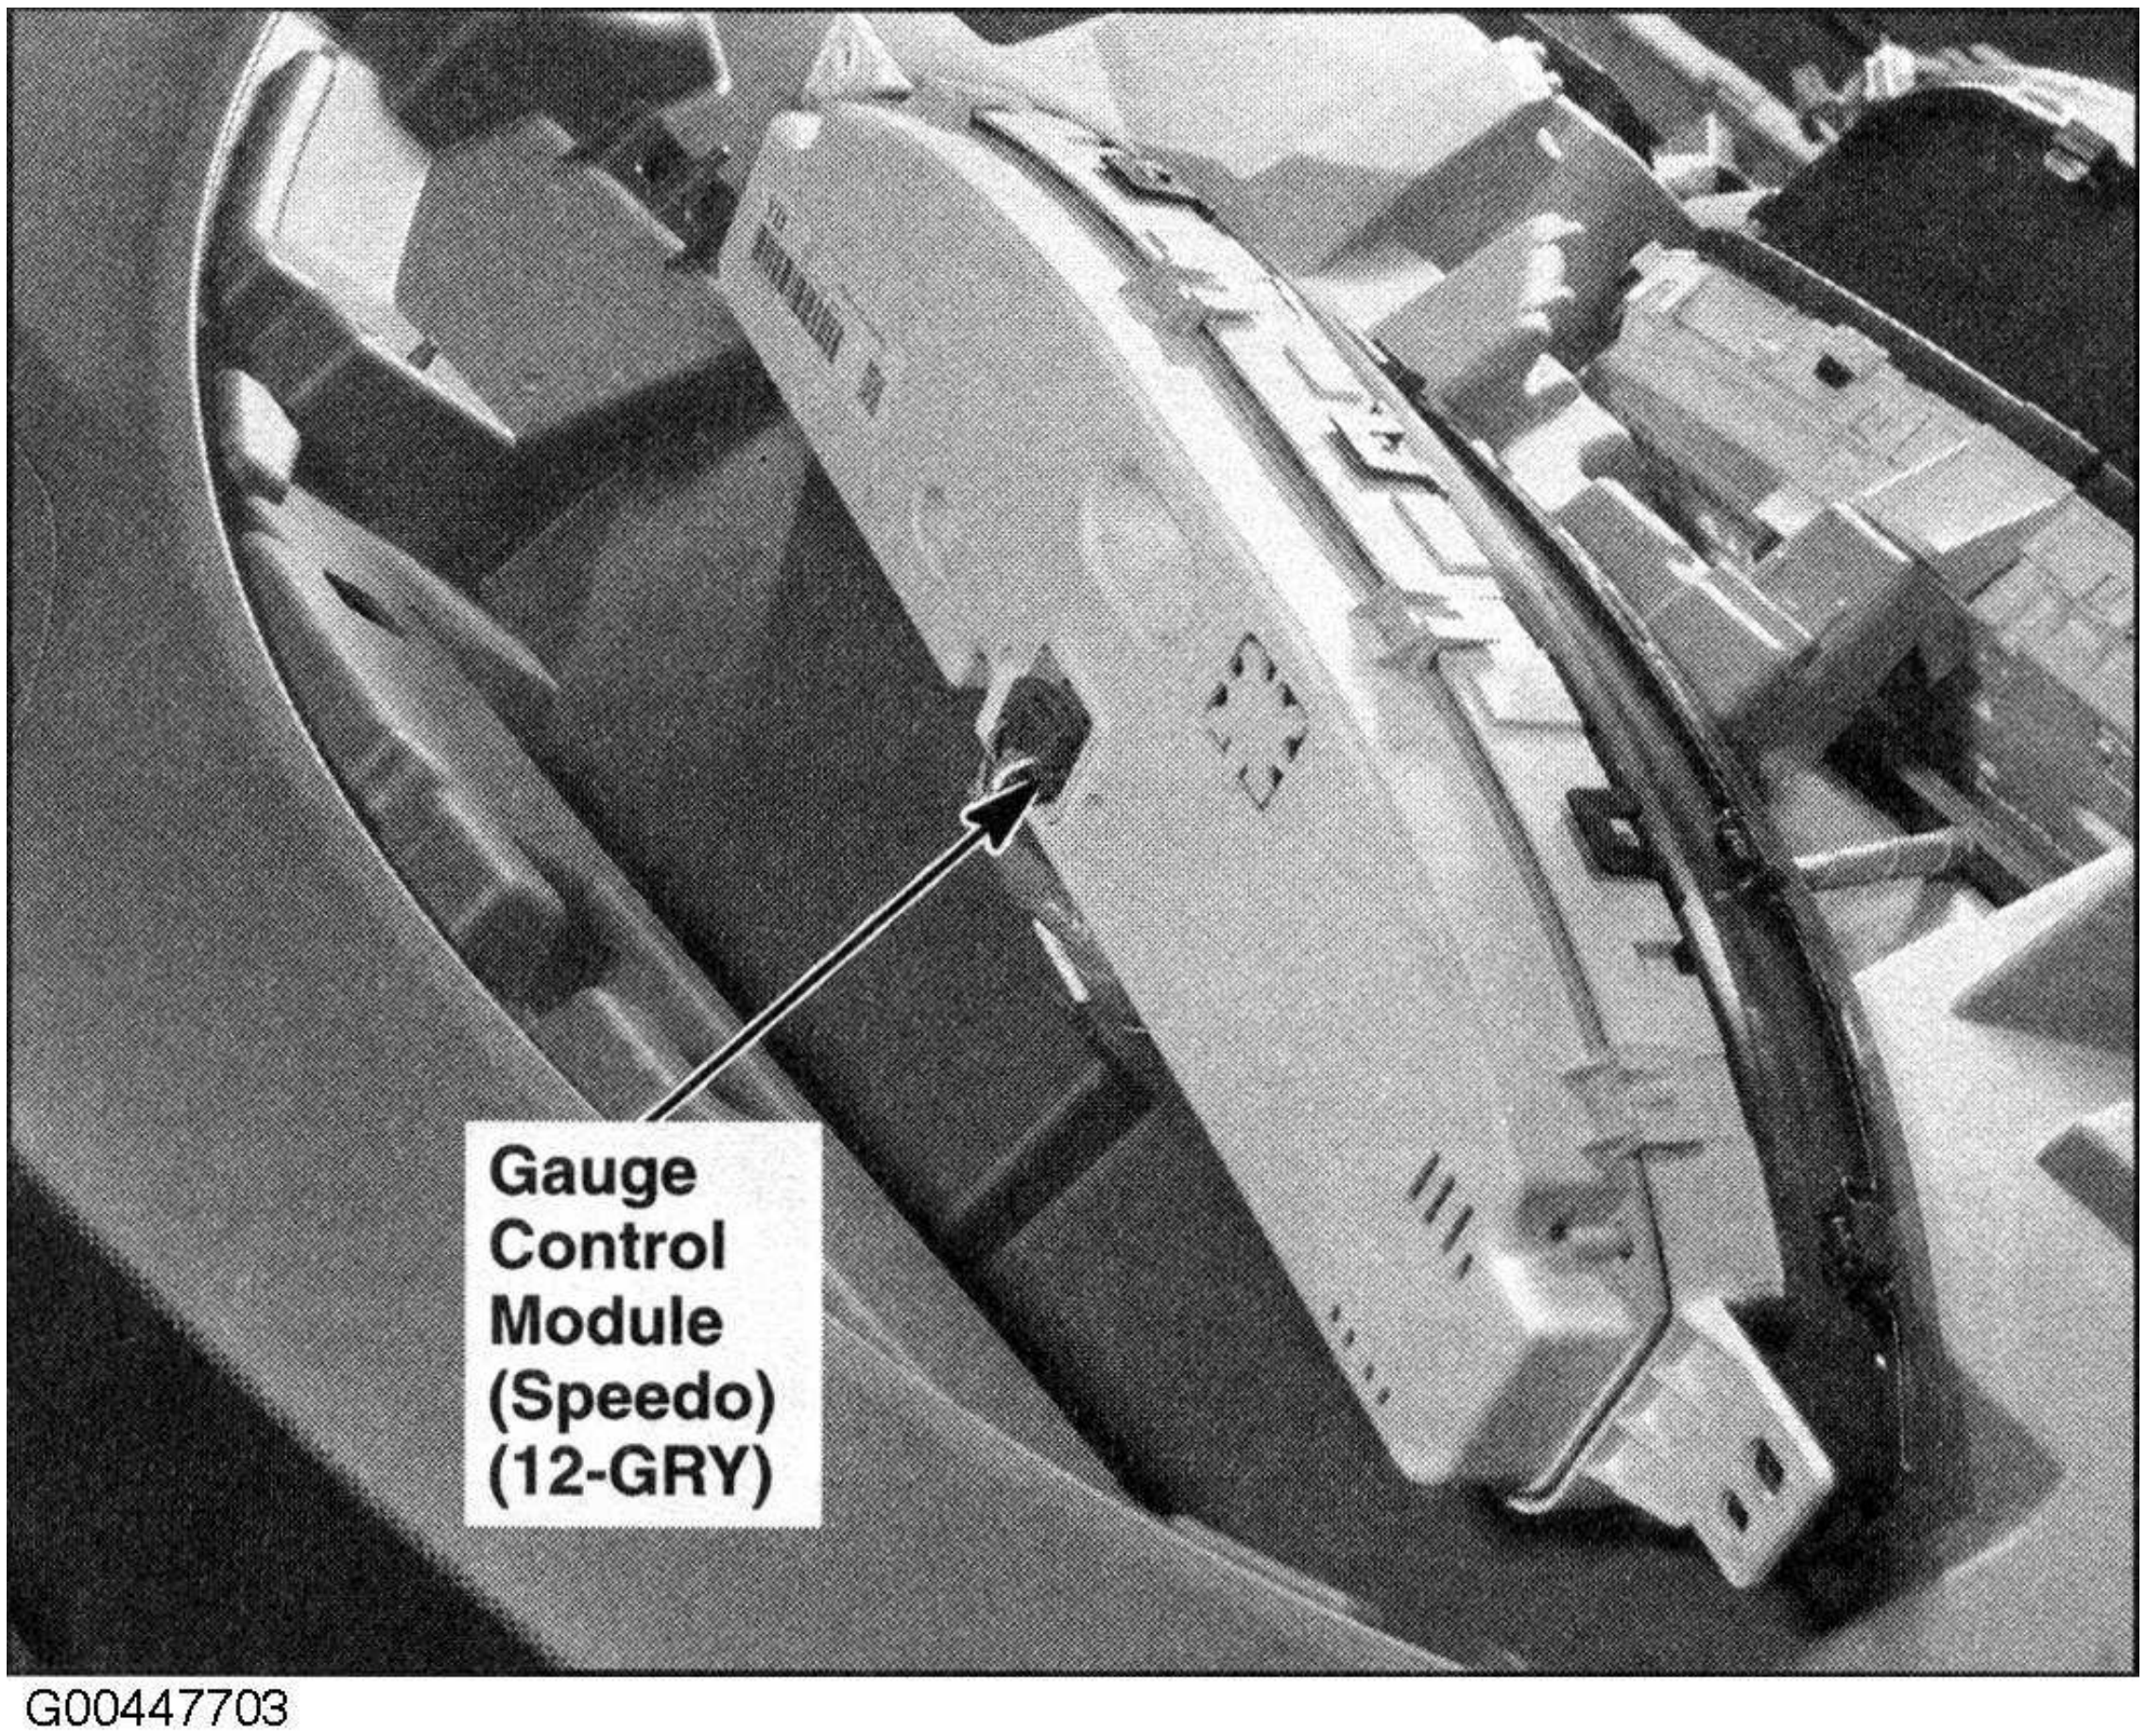
Gauge
Control
Module
(Speedo)
(12-GRY)
G00447703

Fig. 146: Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

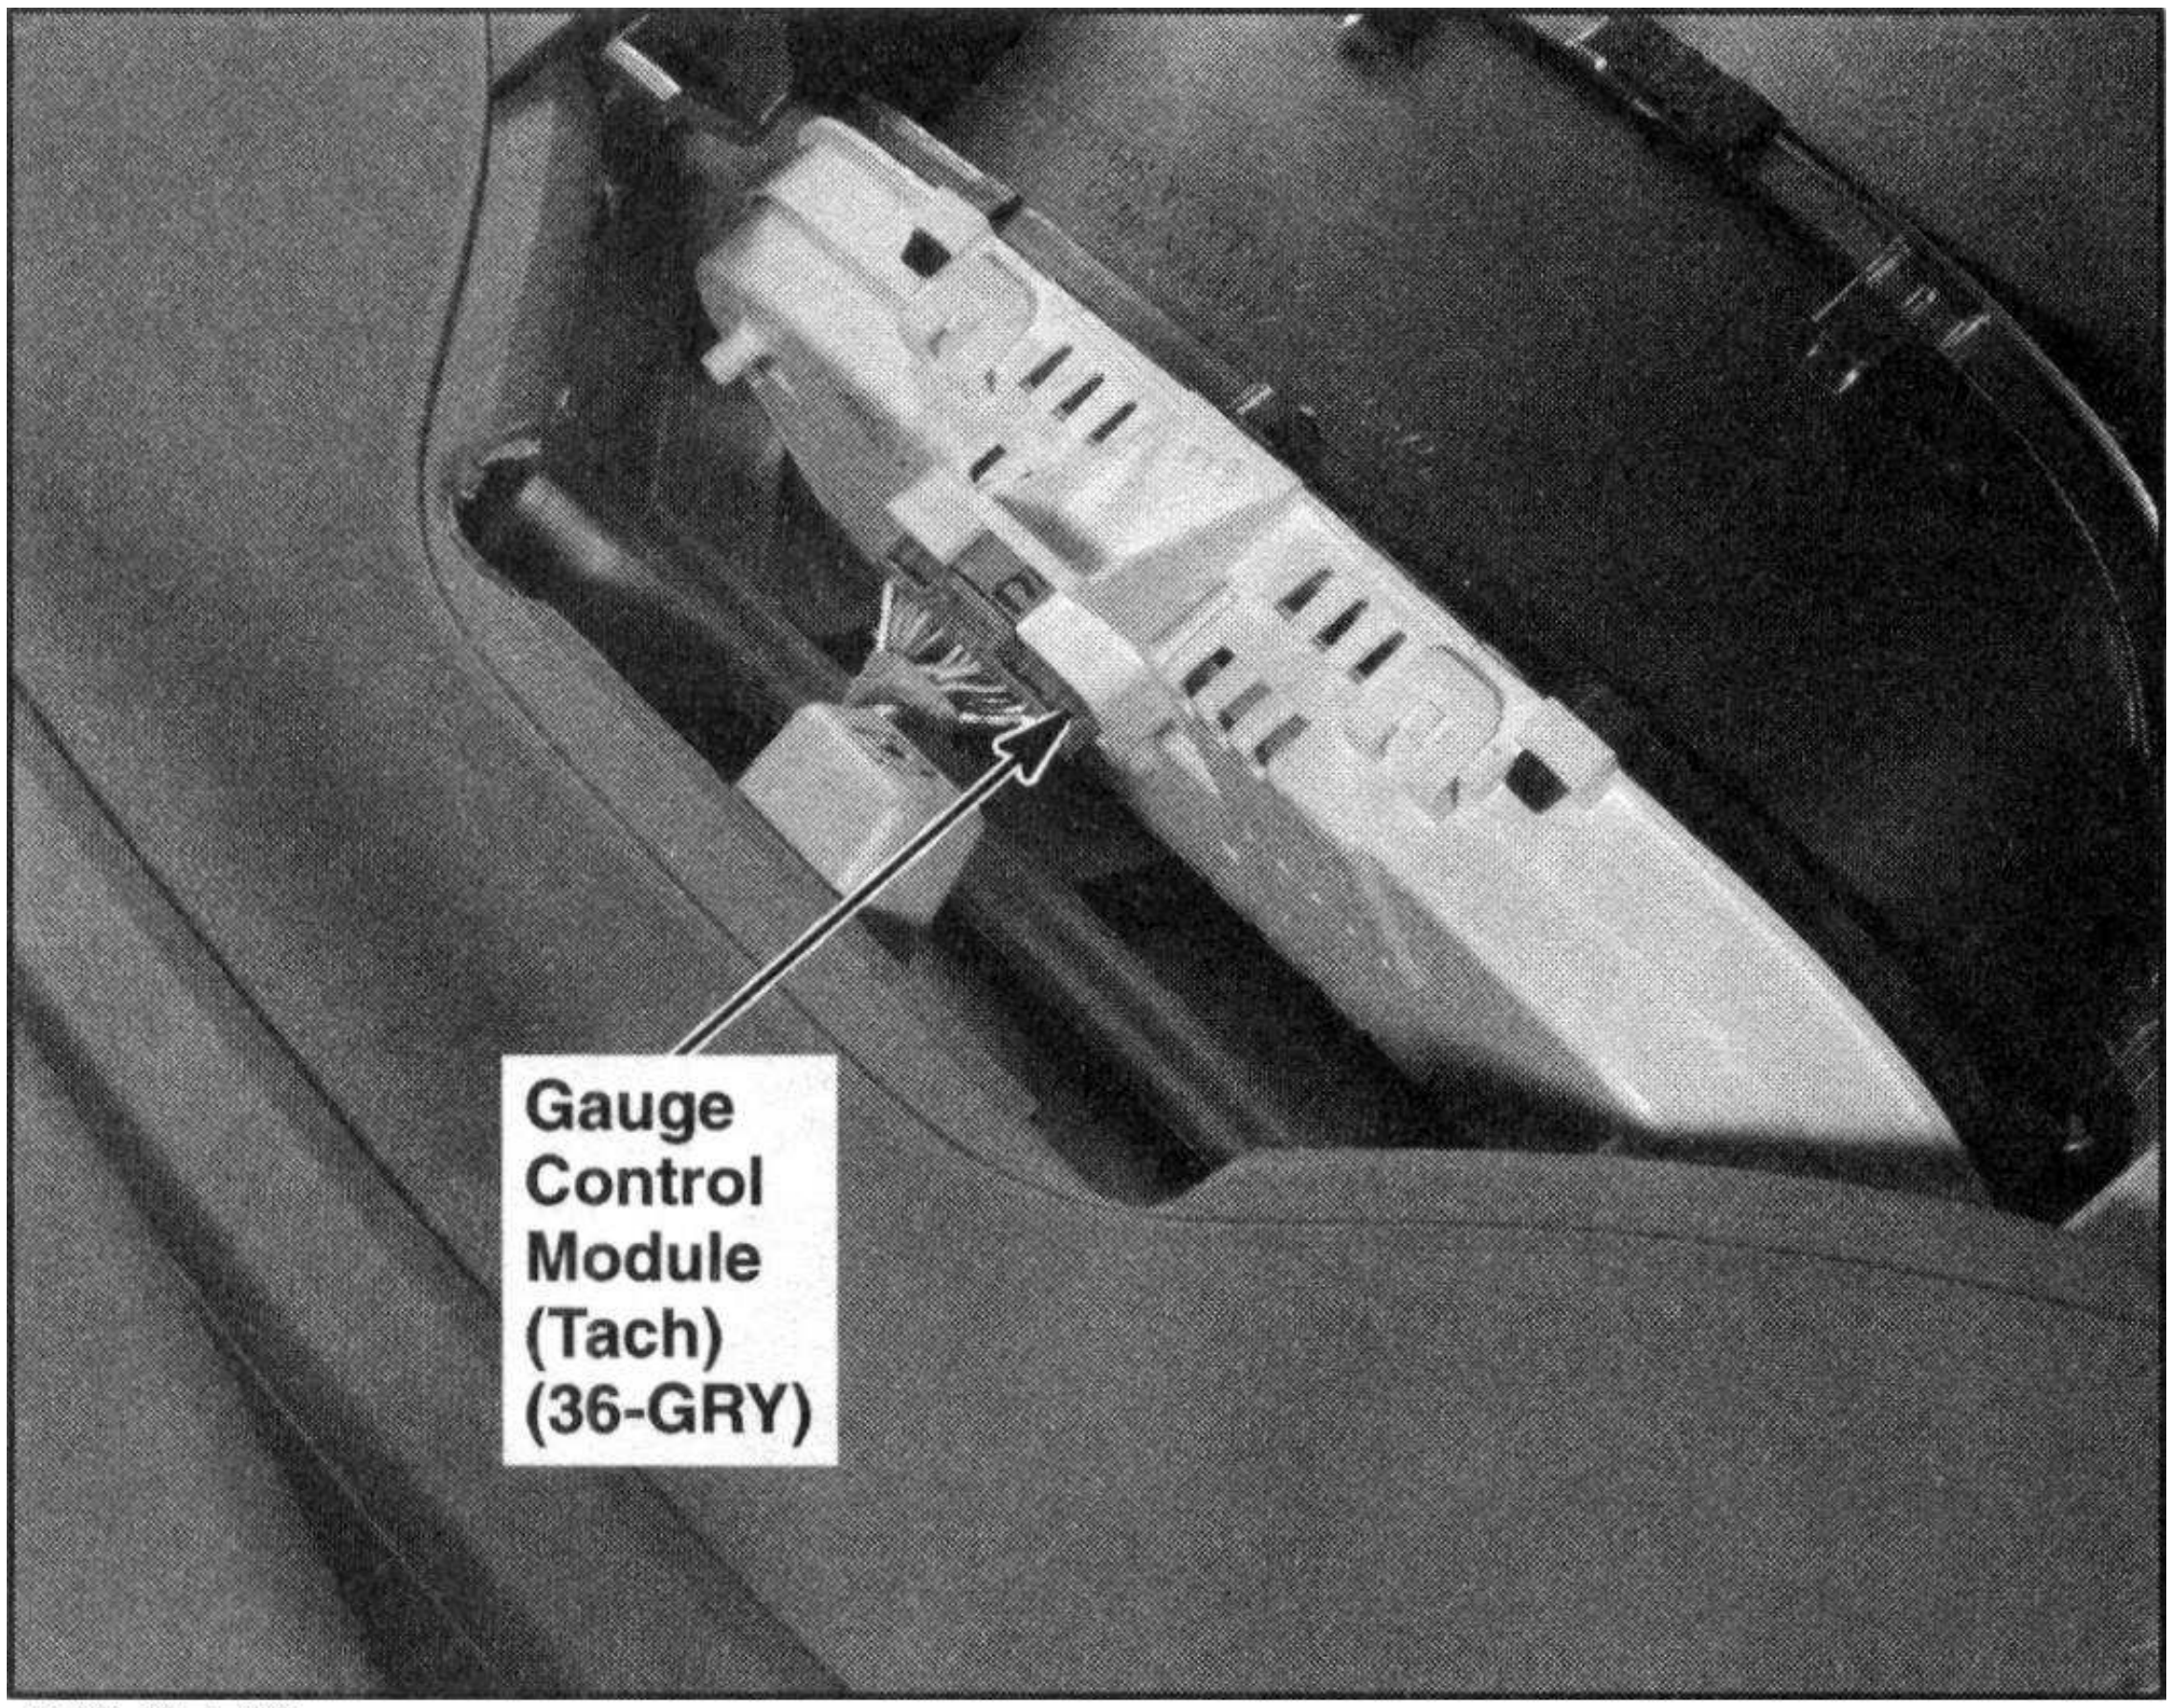
Gauge
Control
Module
(Tach)
(36-GRY)
G00447704

Fig. 147: Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

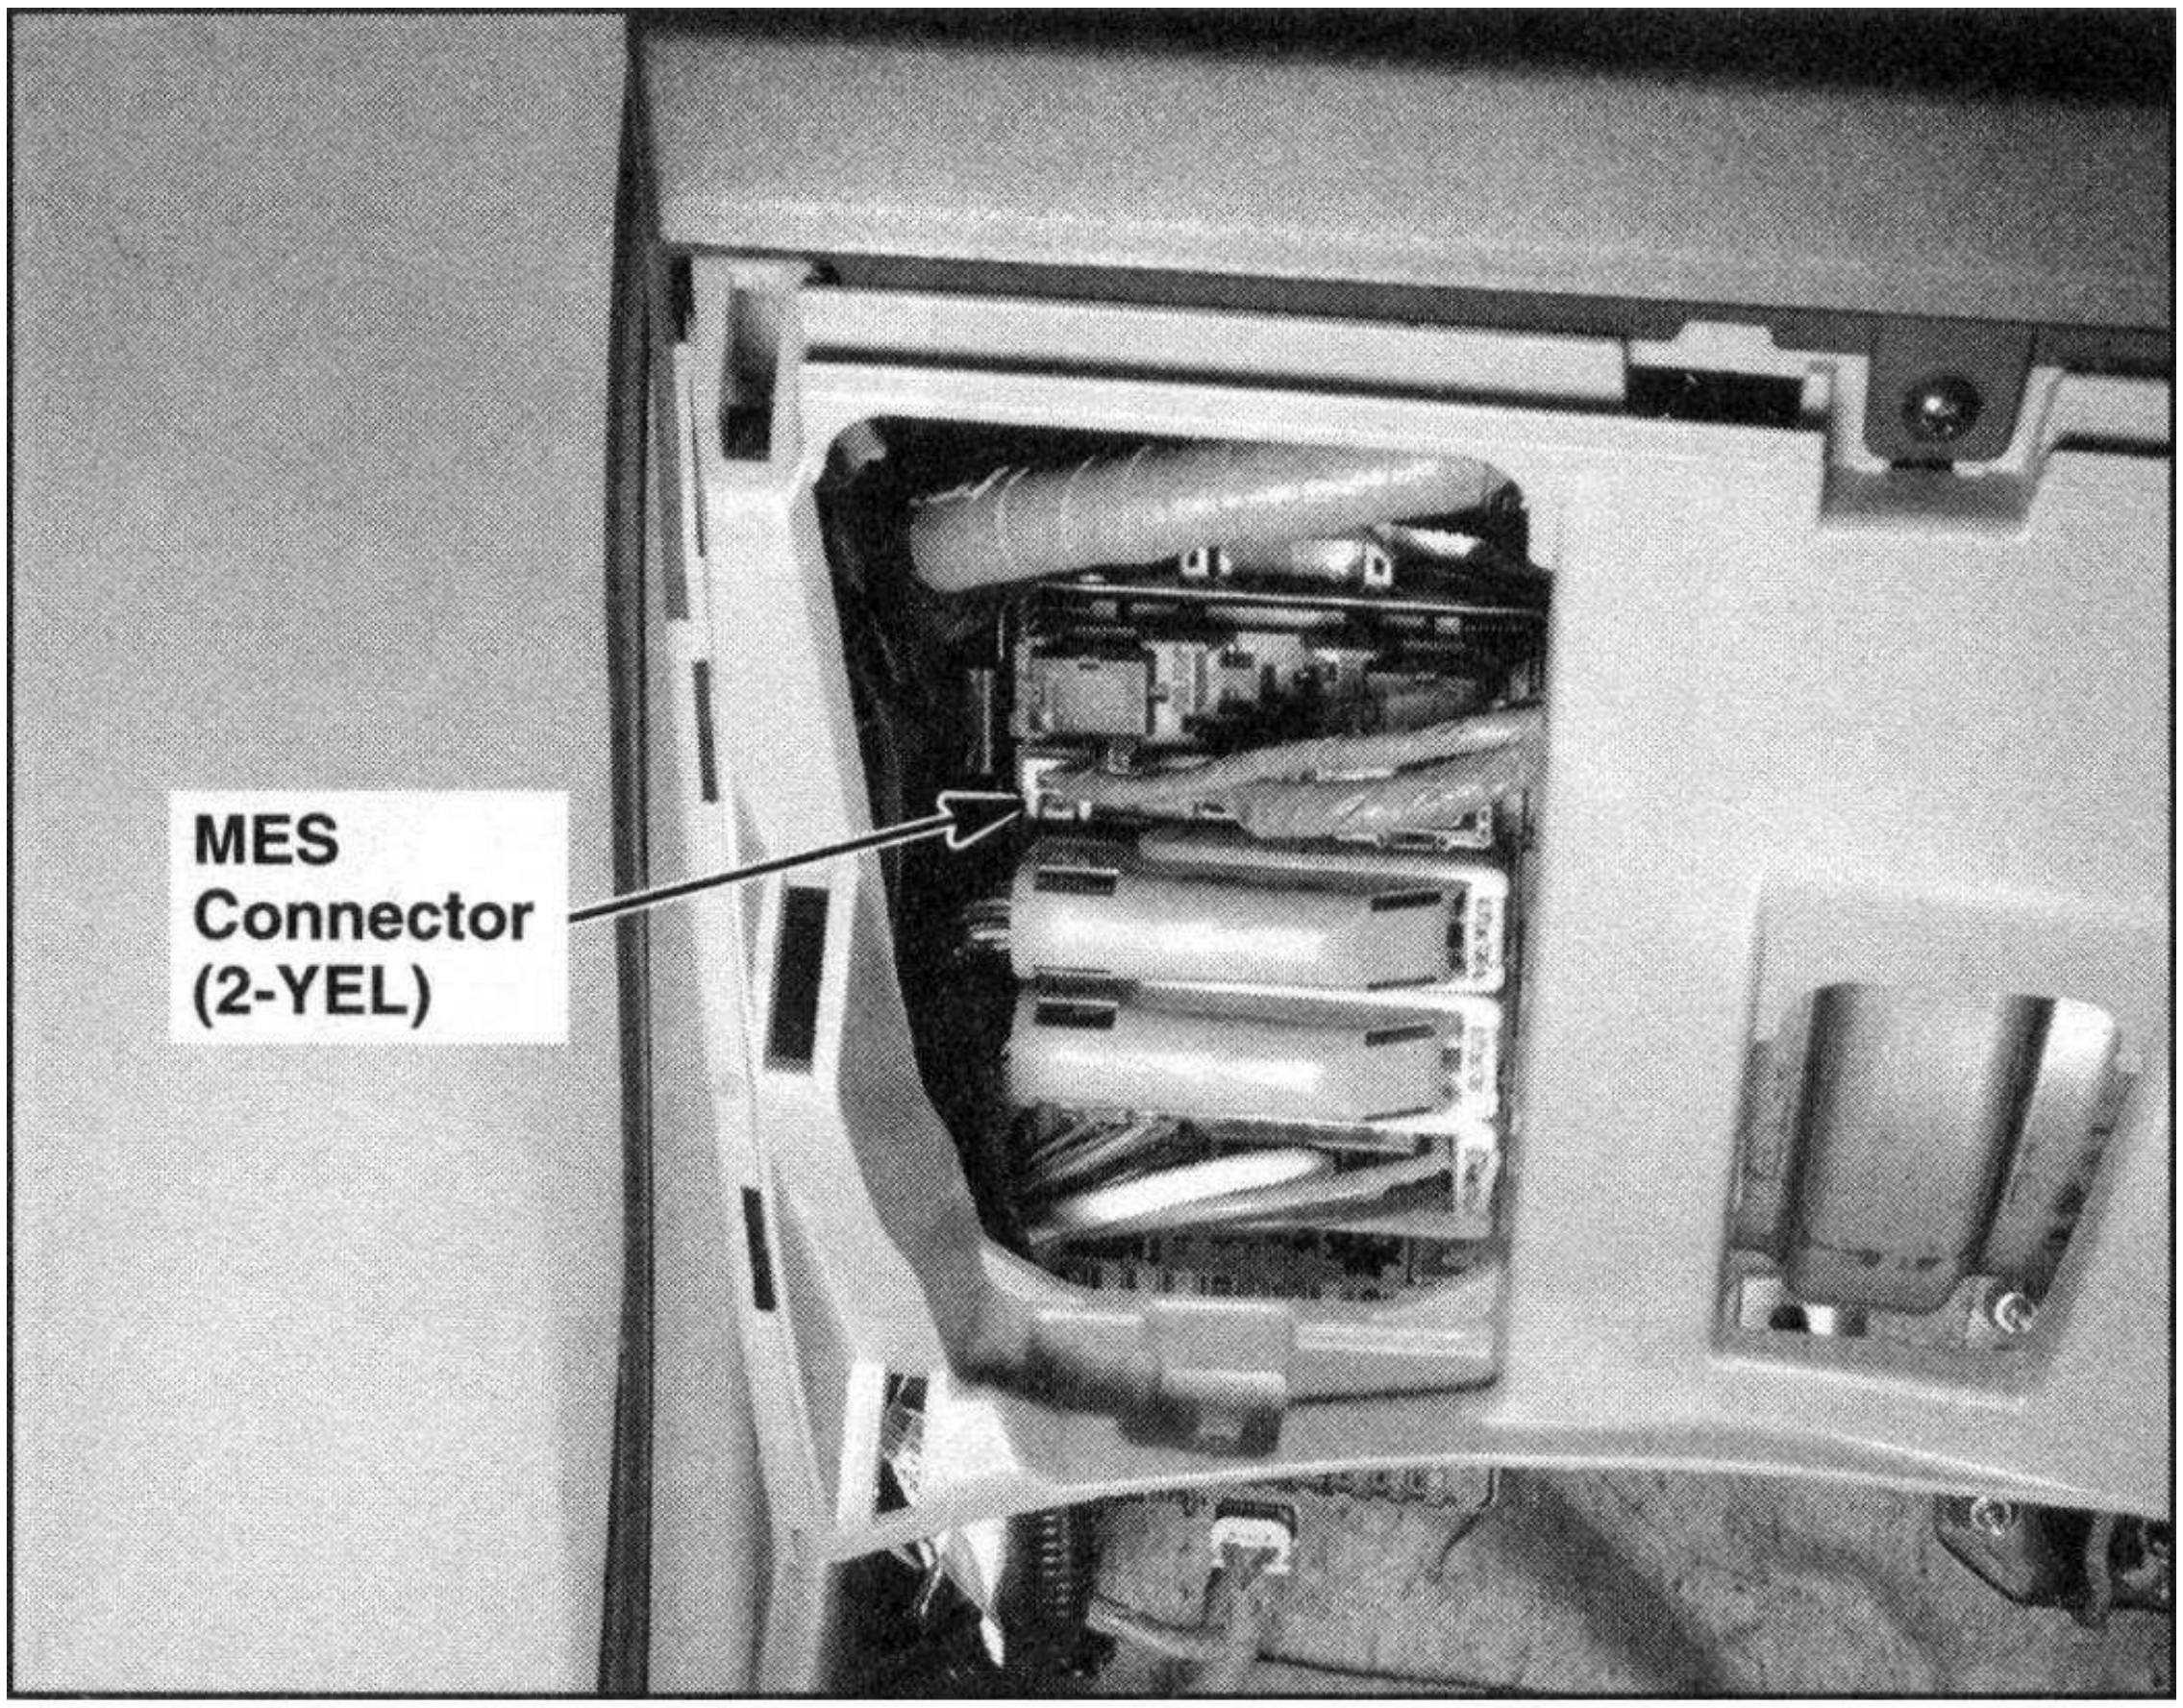
MES
Connector
(2-YEL)
G00447705

Fig. 148: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

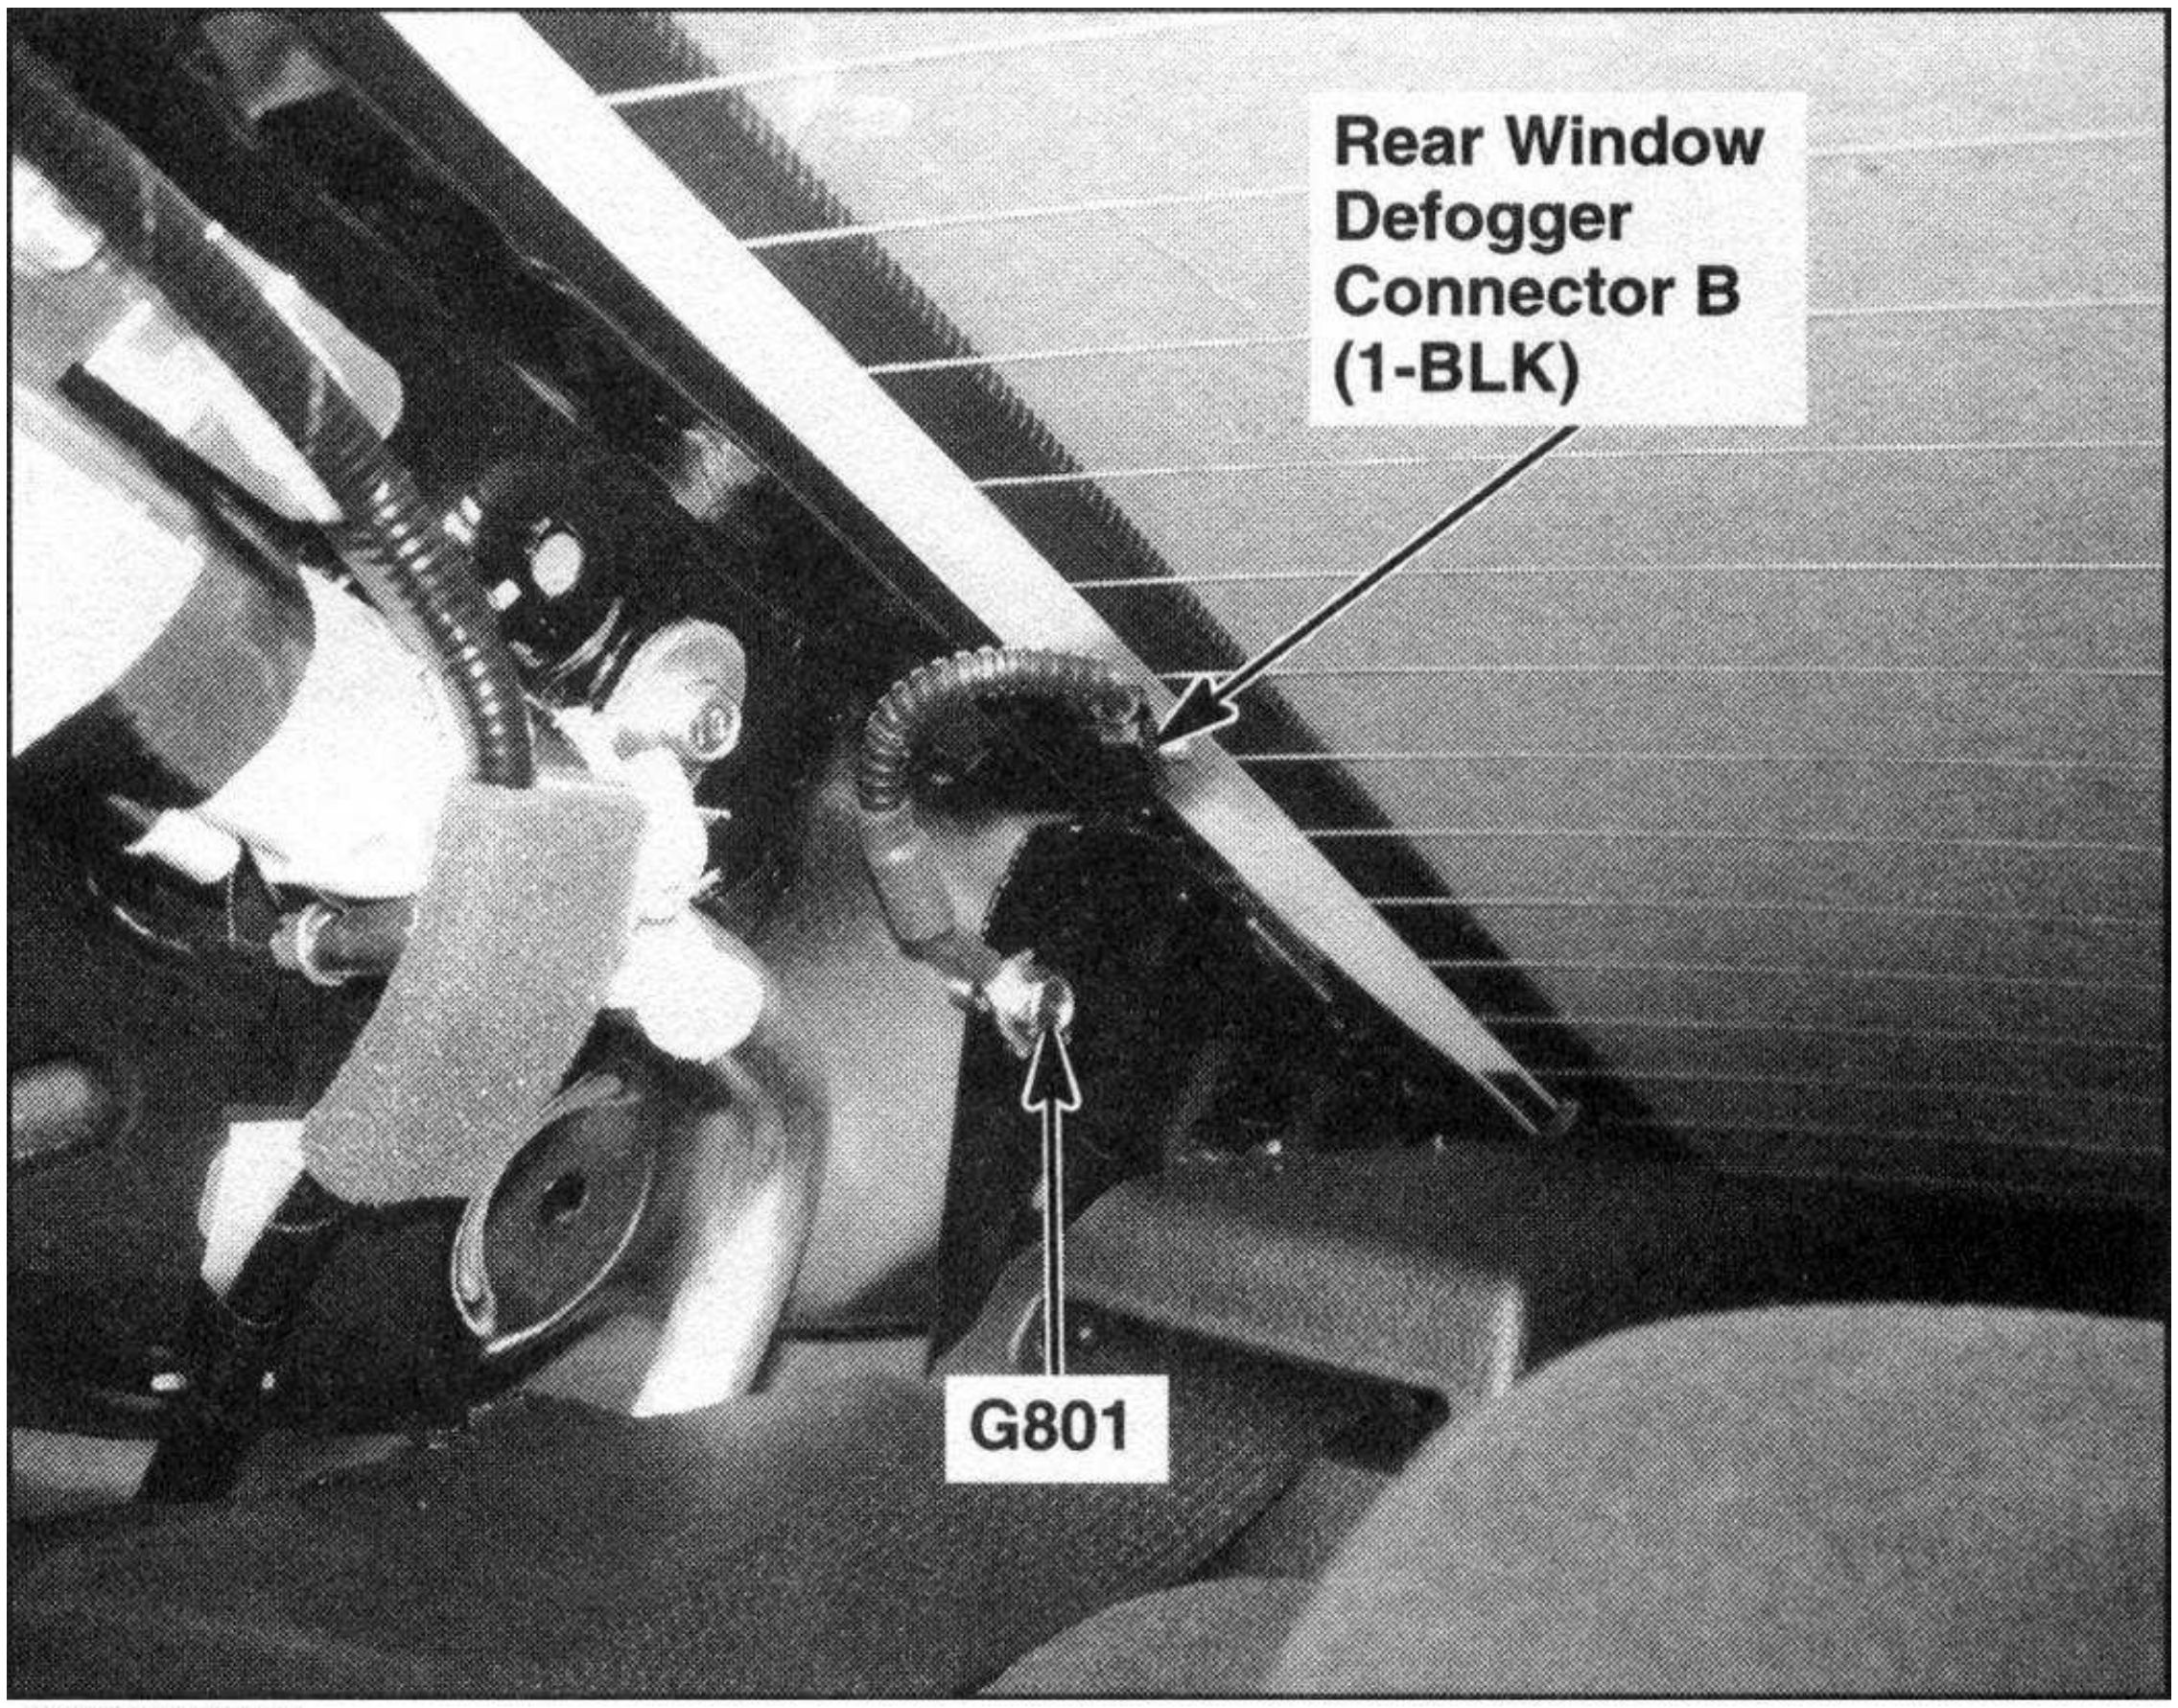
Rear Window Defogger Connector B (1-BLK)
G801
G00447722

Fig. 149: Right "C" Pillar (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

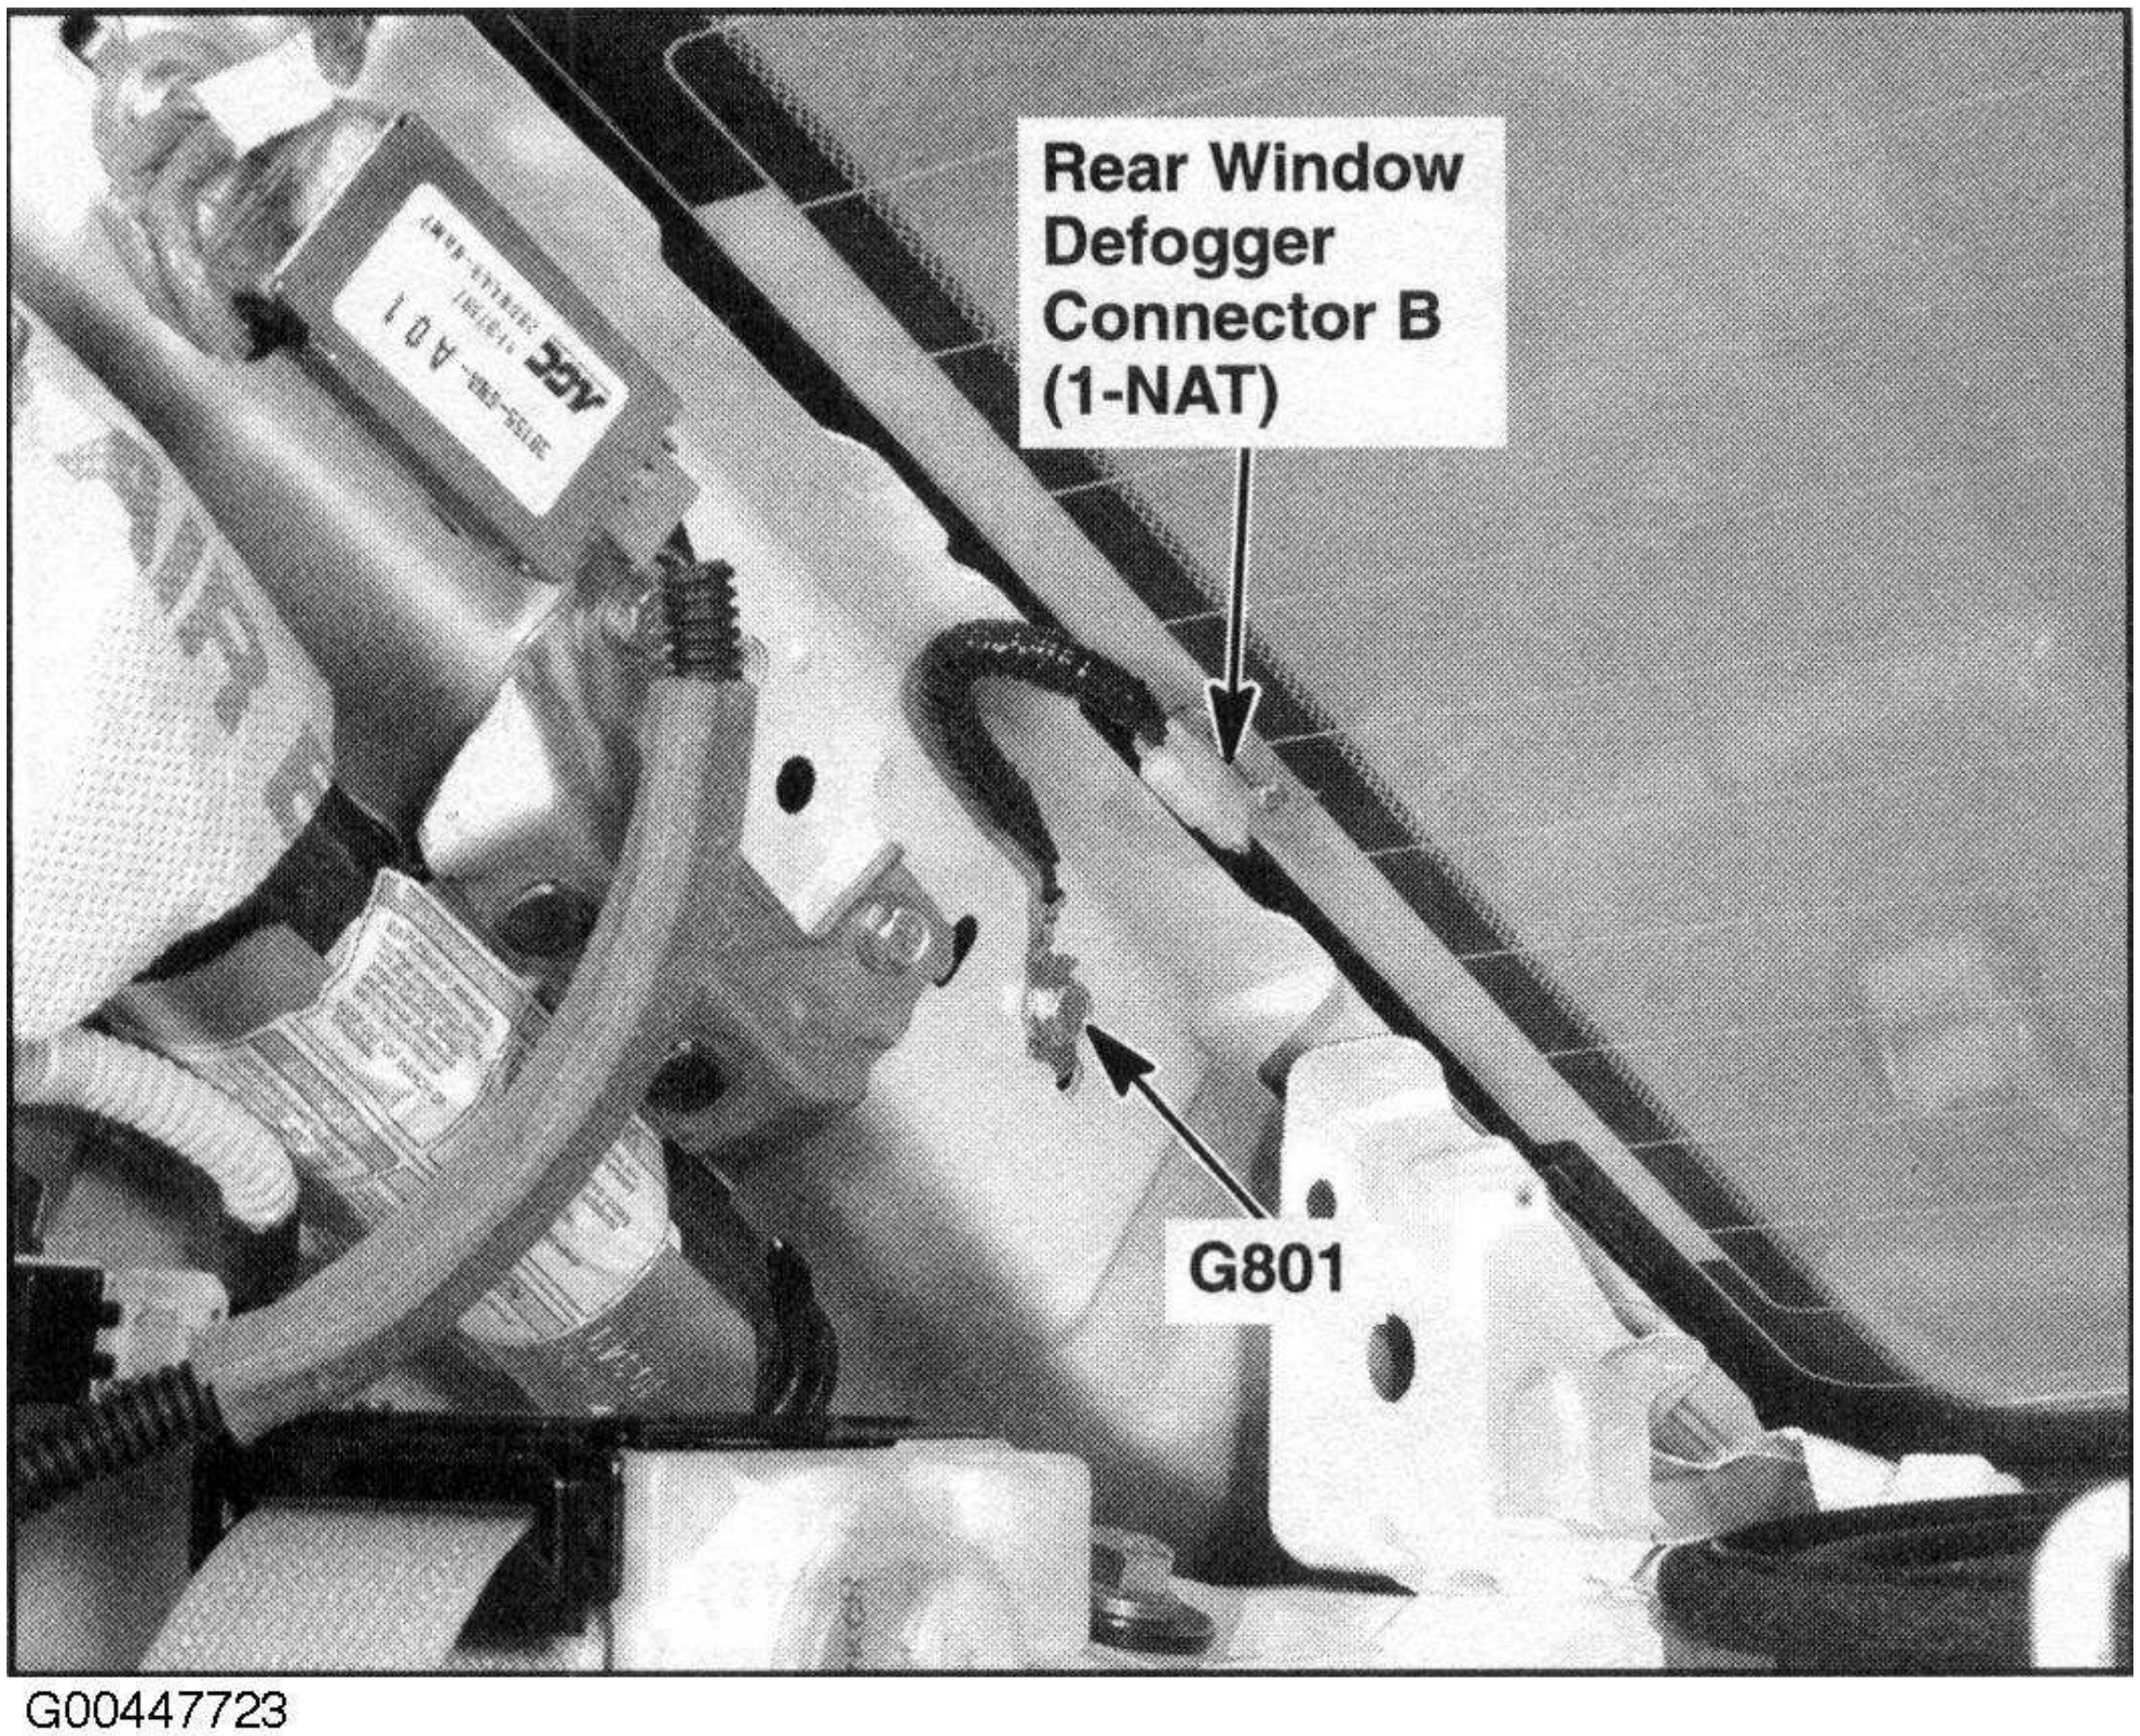
Rear Window Defogger Connector B (1-NAT)
G801
G00447723

Fig. 150: Right "C" Pillar (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

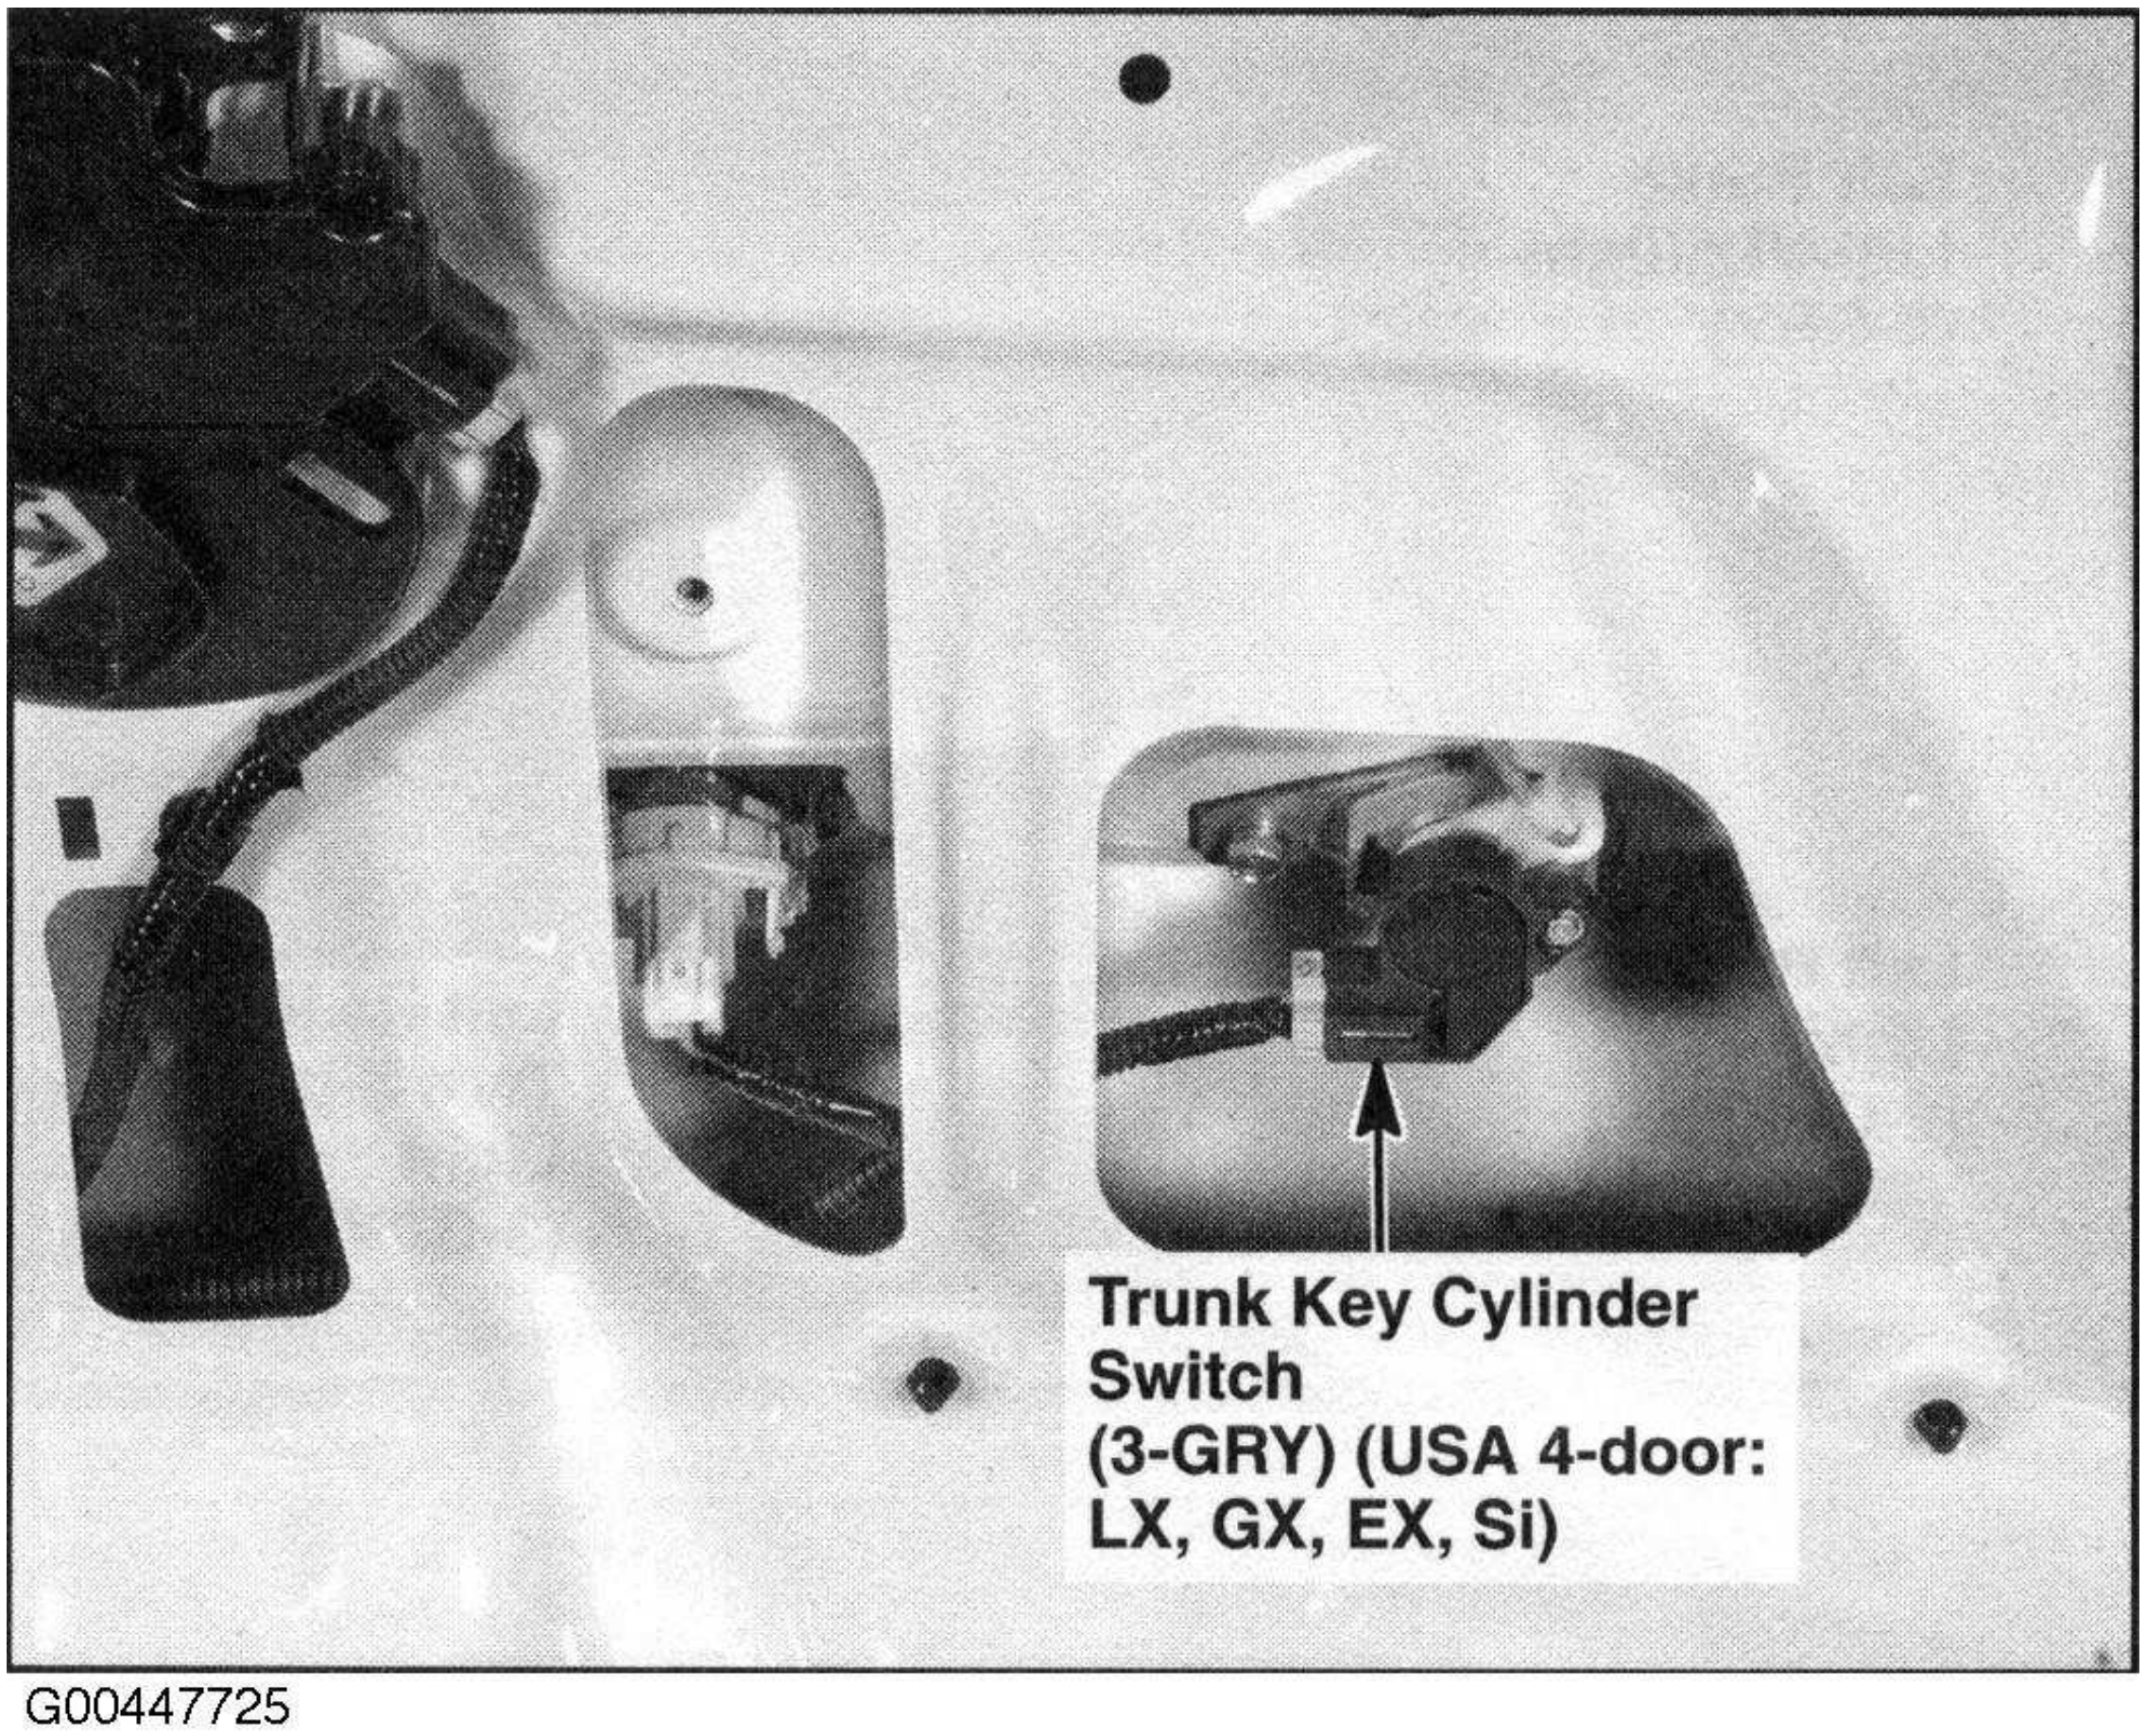
Trunk Key Cylinder Switch
(3-GRY) (USA 4-door: LX, GX, EX, Si)
G00447725

Fig. 151: Right Side Of Trunk Lid (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

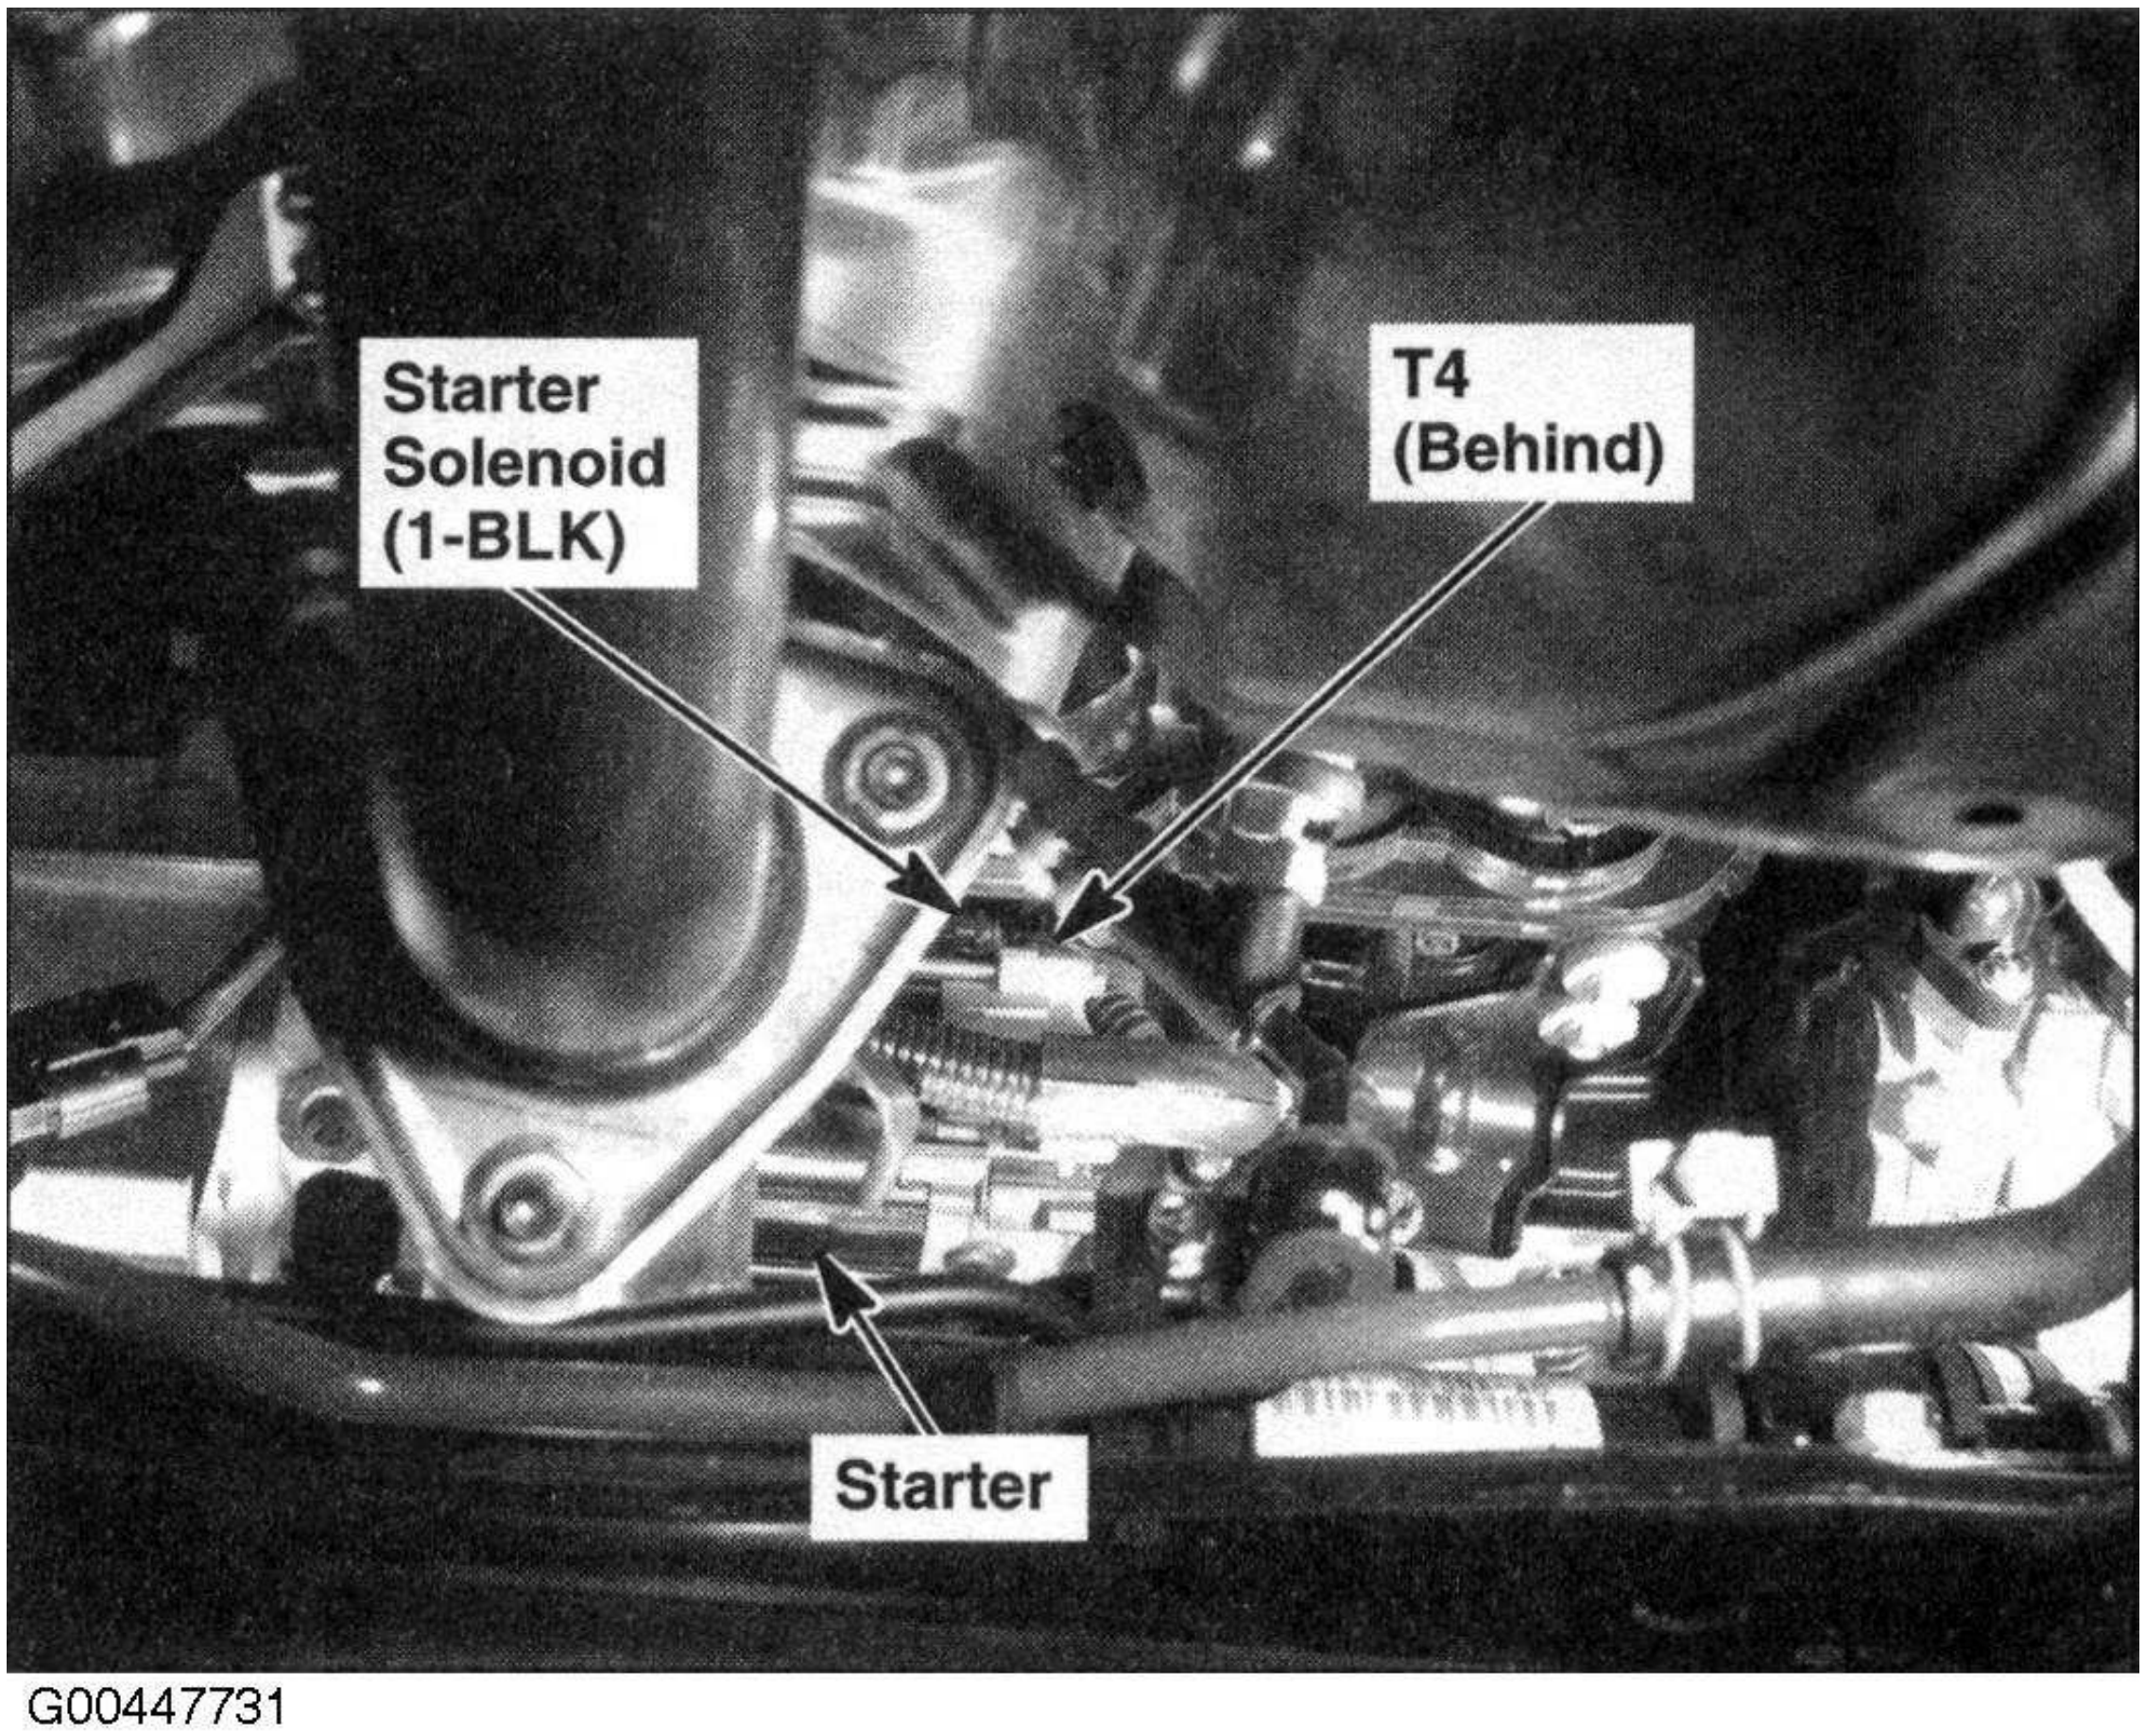
Starter
Solenoid
(1-BLK)
T4
(Behind)
Starter
G00447731

Fig. 152: Under Rear Of Engine (M/T)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

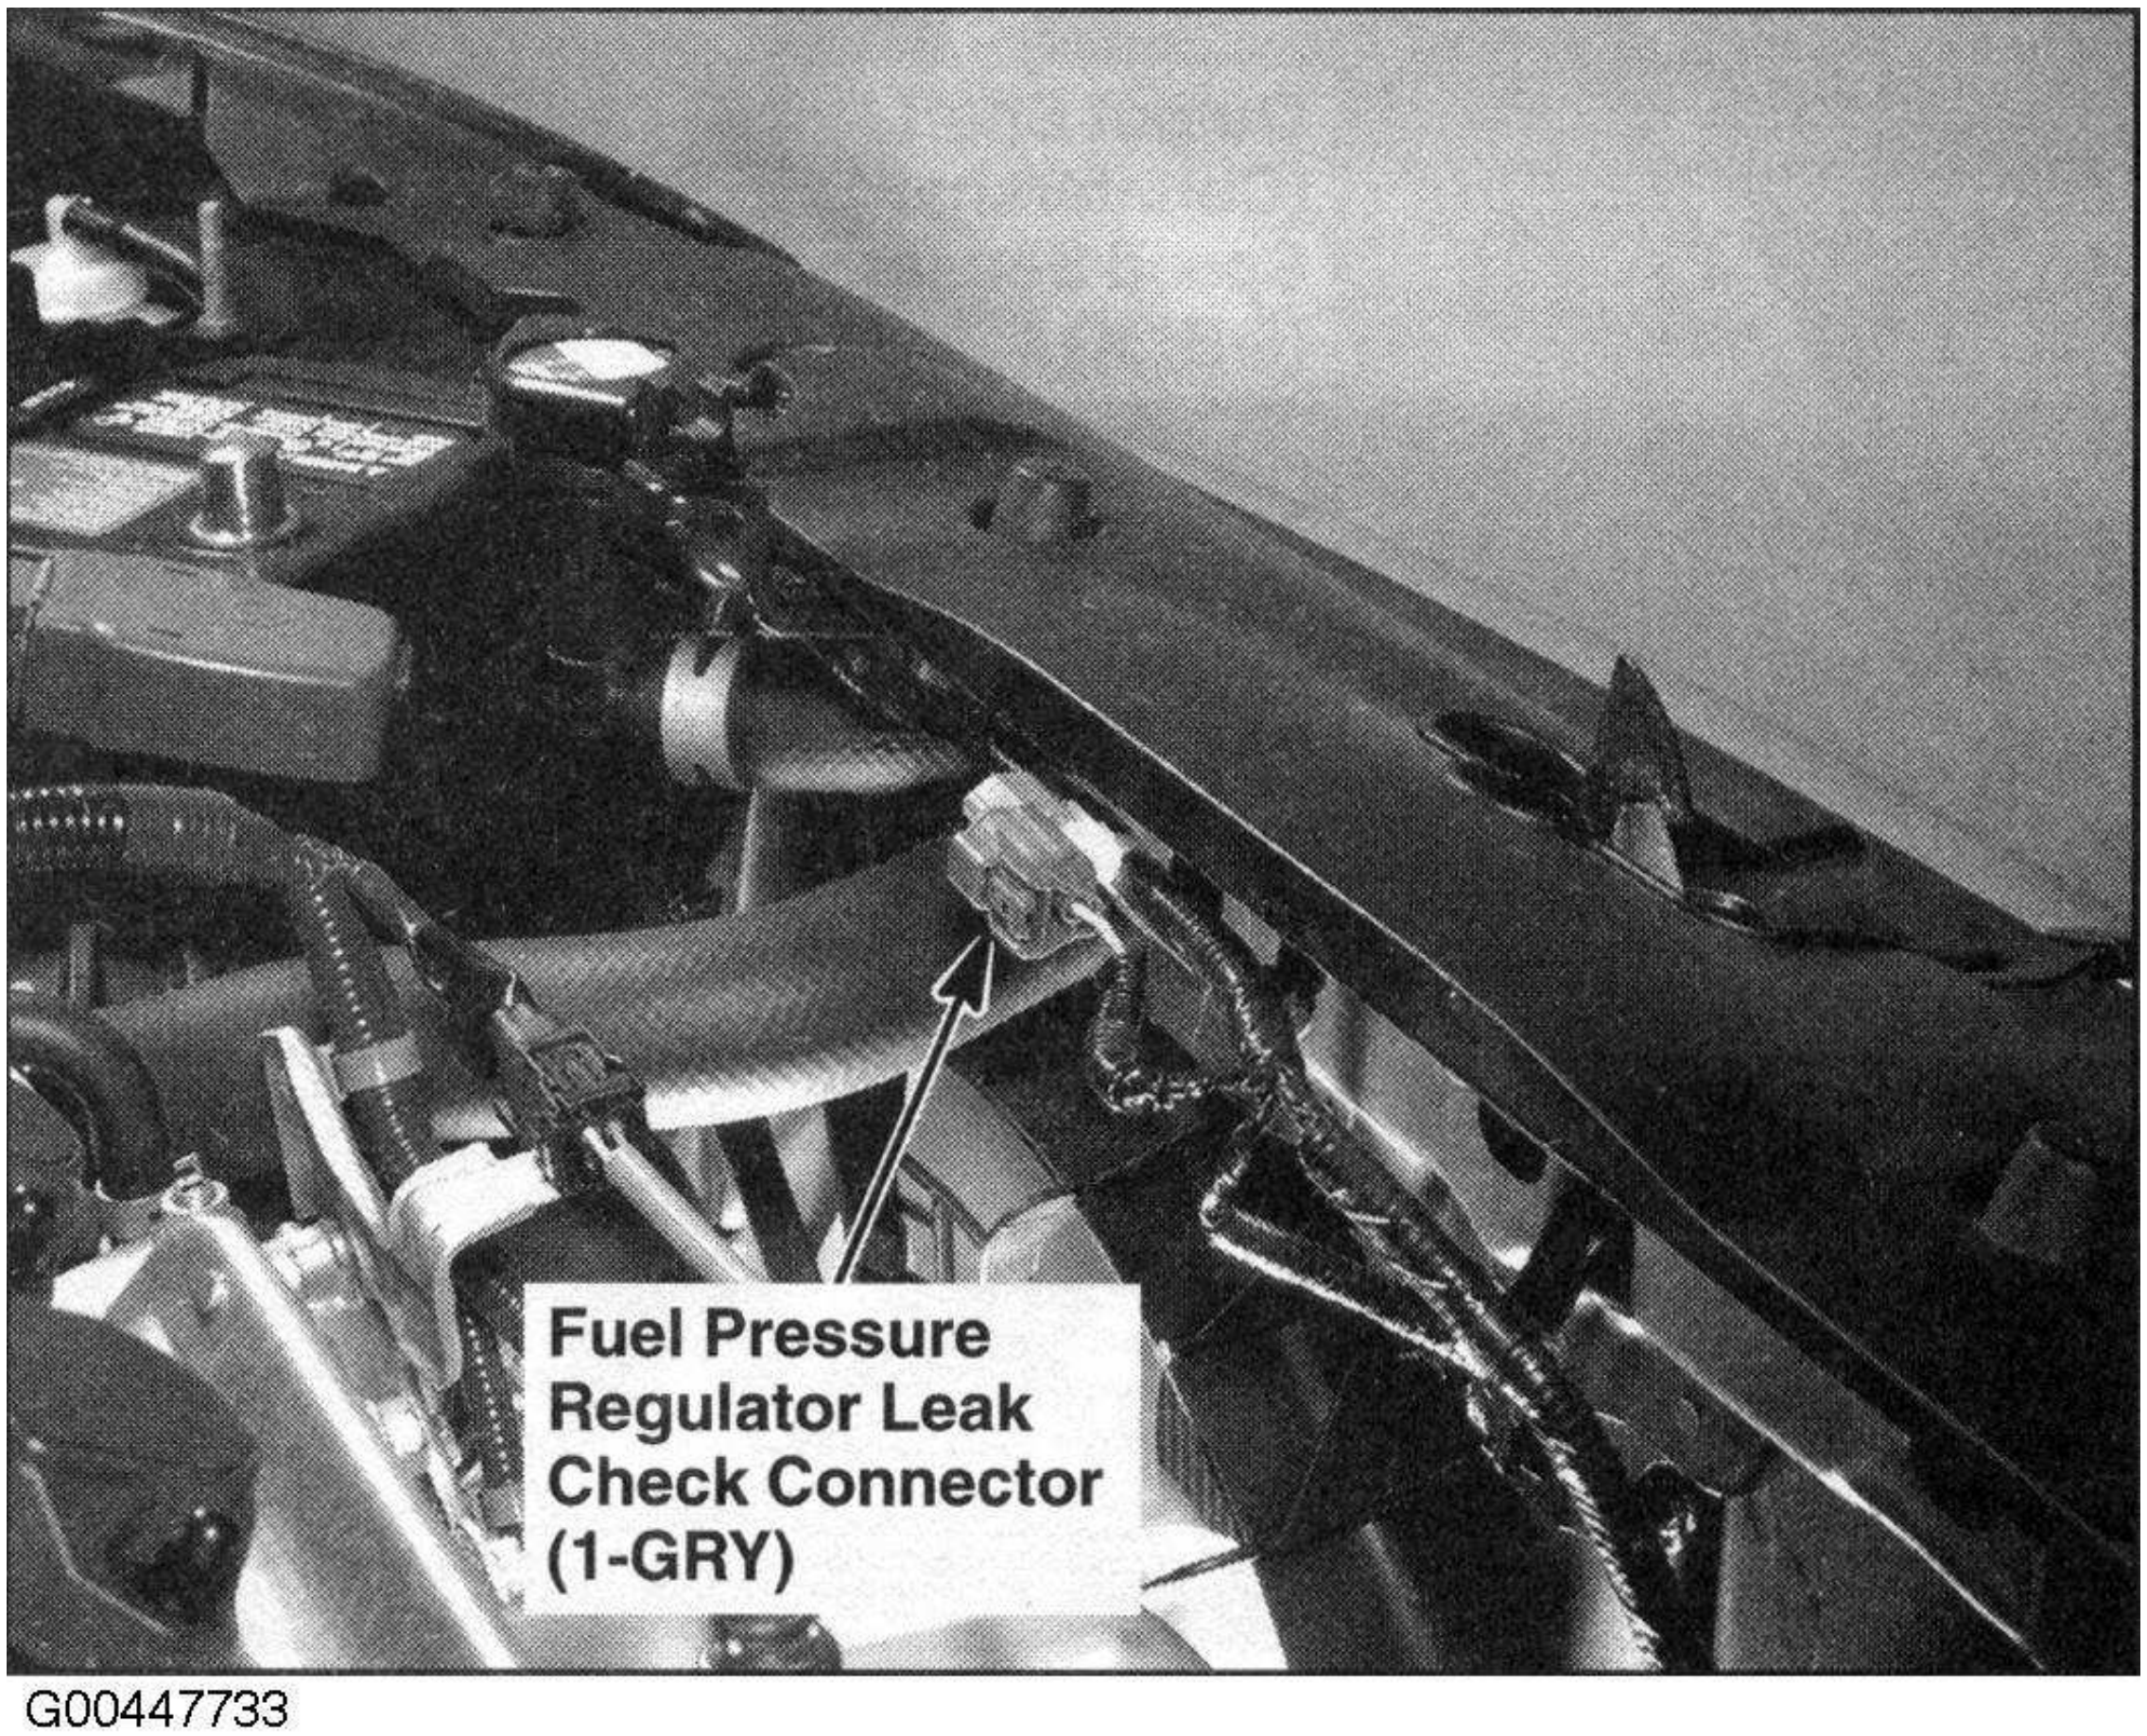
Fuel Pressure Regulator Leak Check Connector (1-GRY)
G00447733

Fig. 153: Front Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

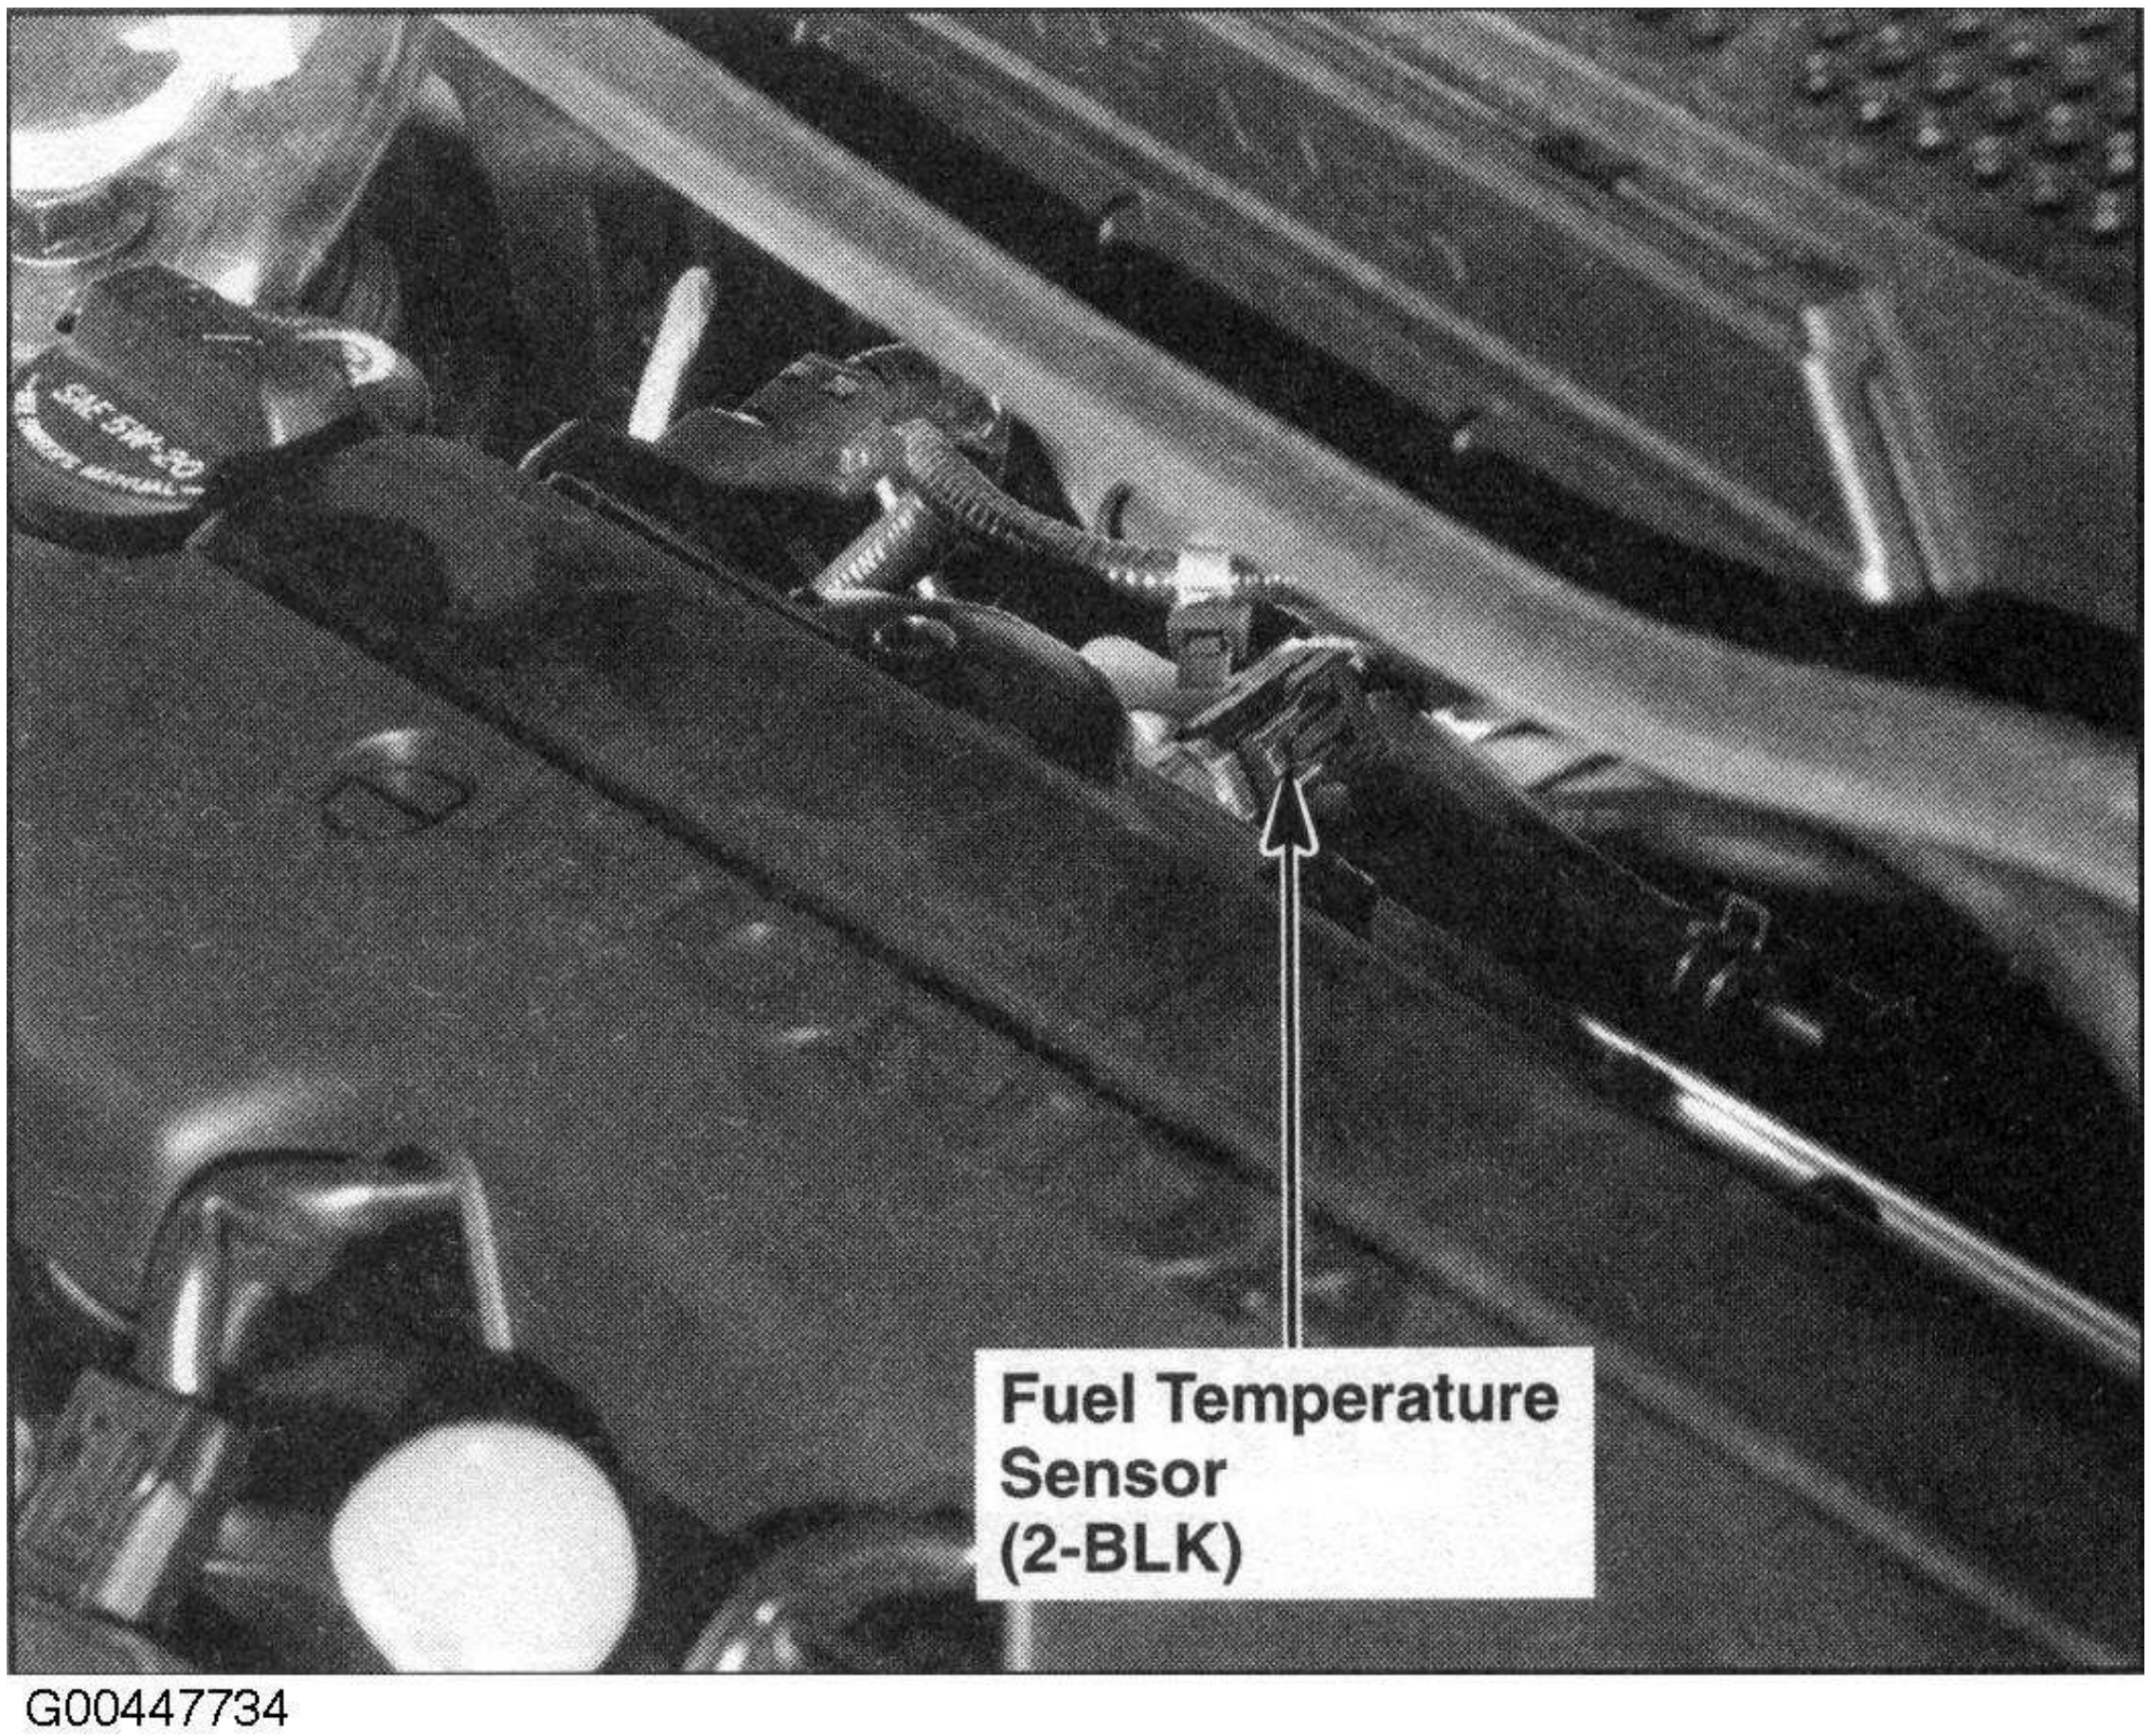
Fuel Temperature Sensor (2-BLK)
G00447734

Fig. 154: Rear Of Engine Compartment
Courtesy of AMERICAN HONDA MOTOR CO., INC.

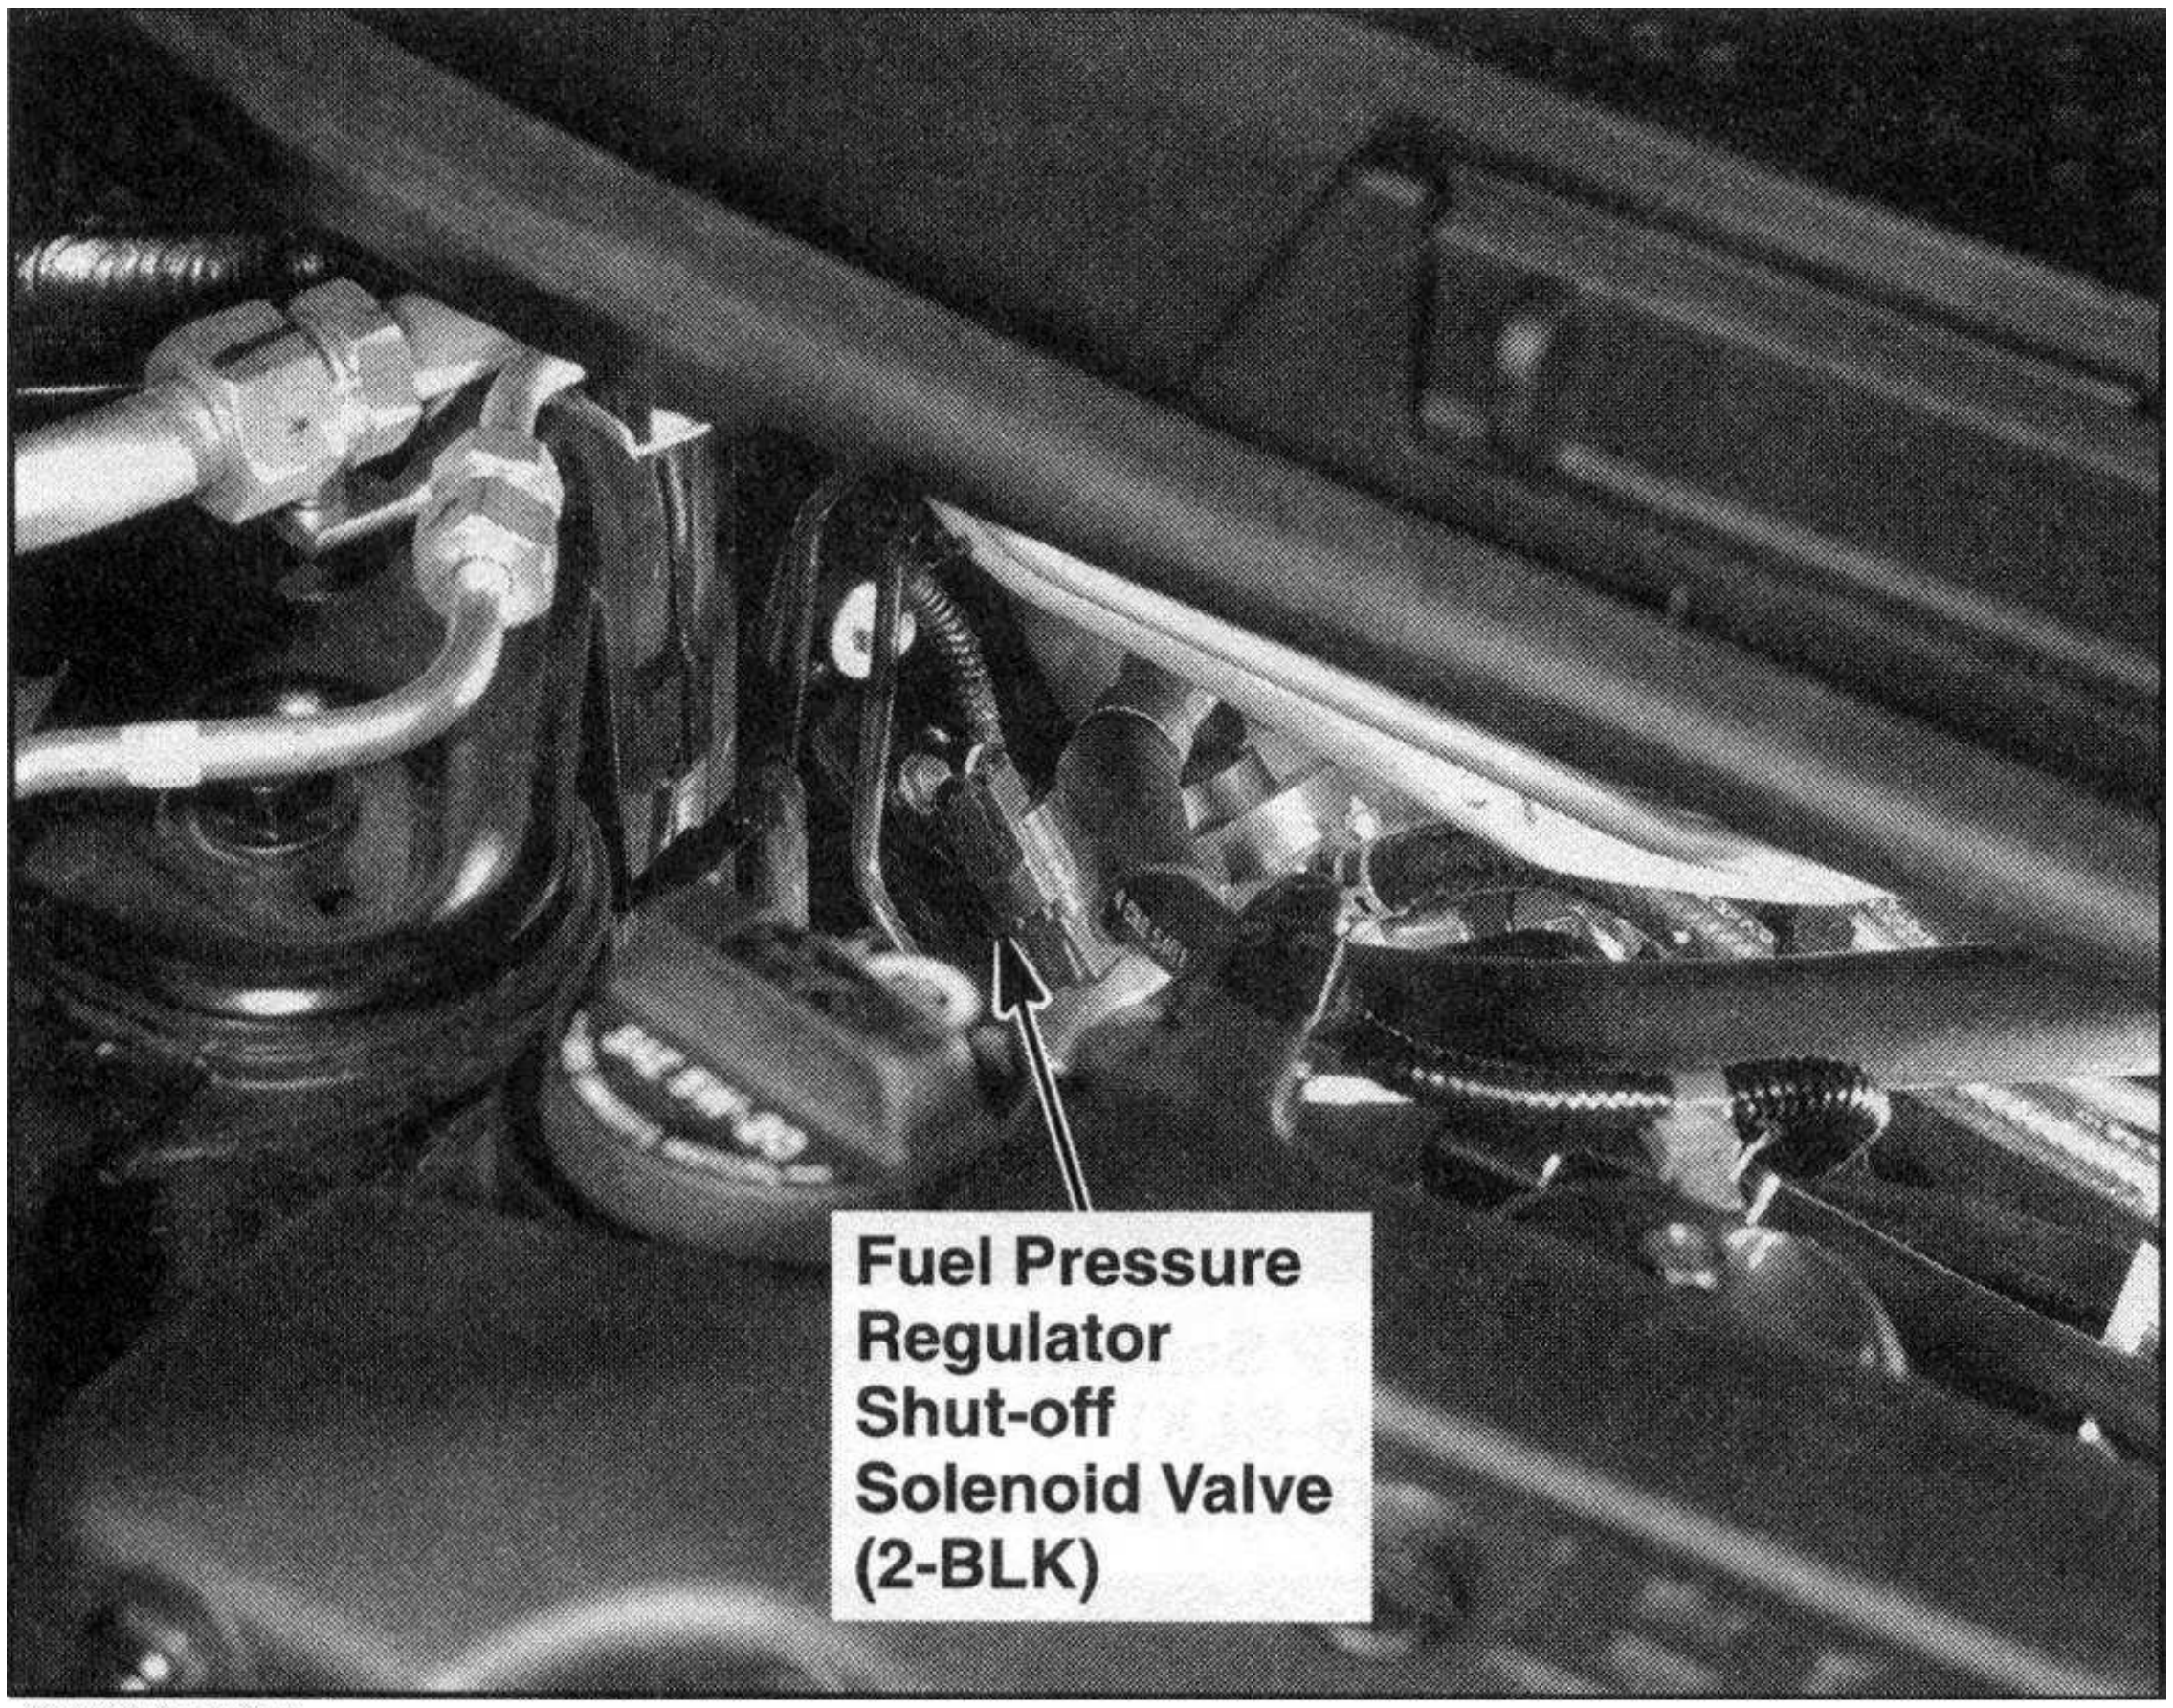
Fuel Pressure Regulator Shut-off Solenoid Valve (2-BLK)
G00447735

Fig. 155: Right Rear Of Engine (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

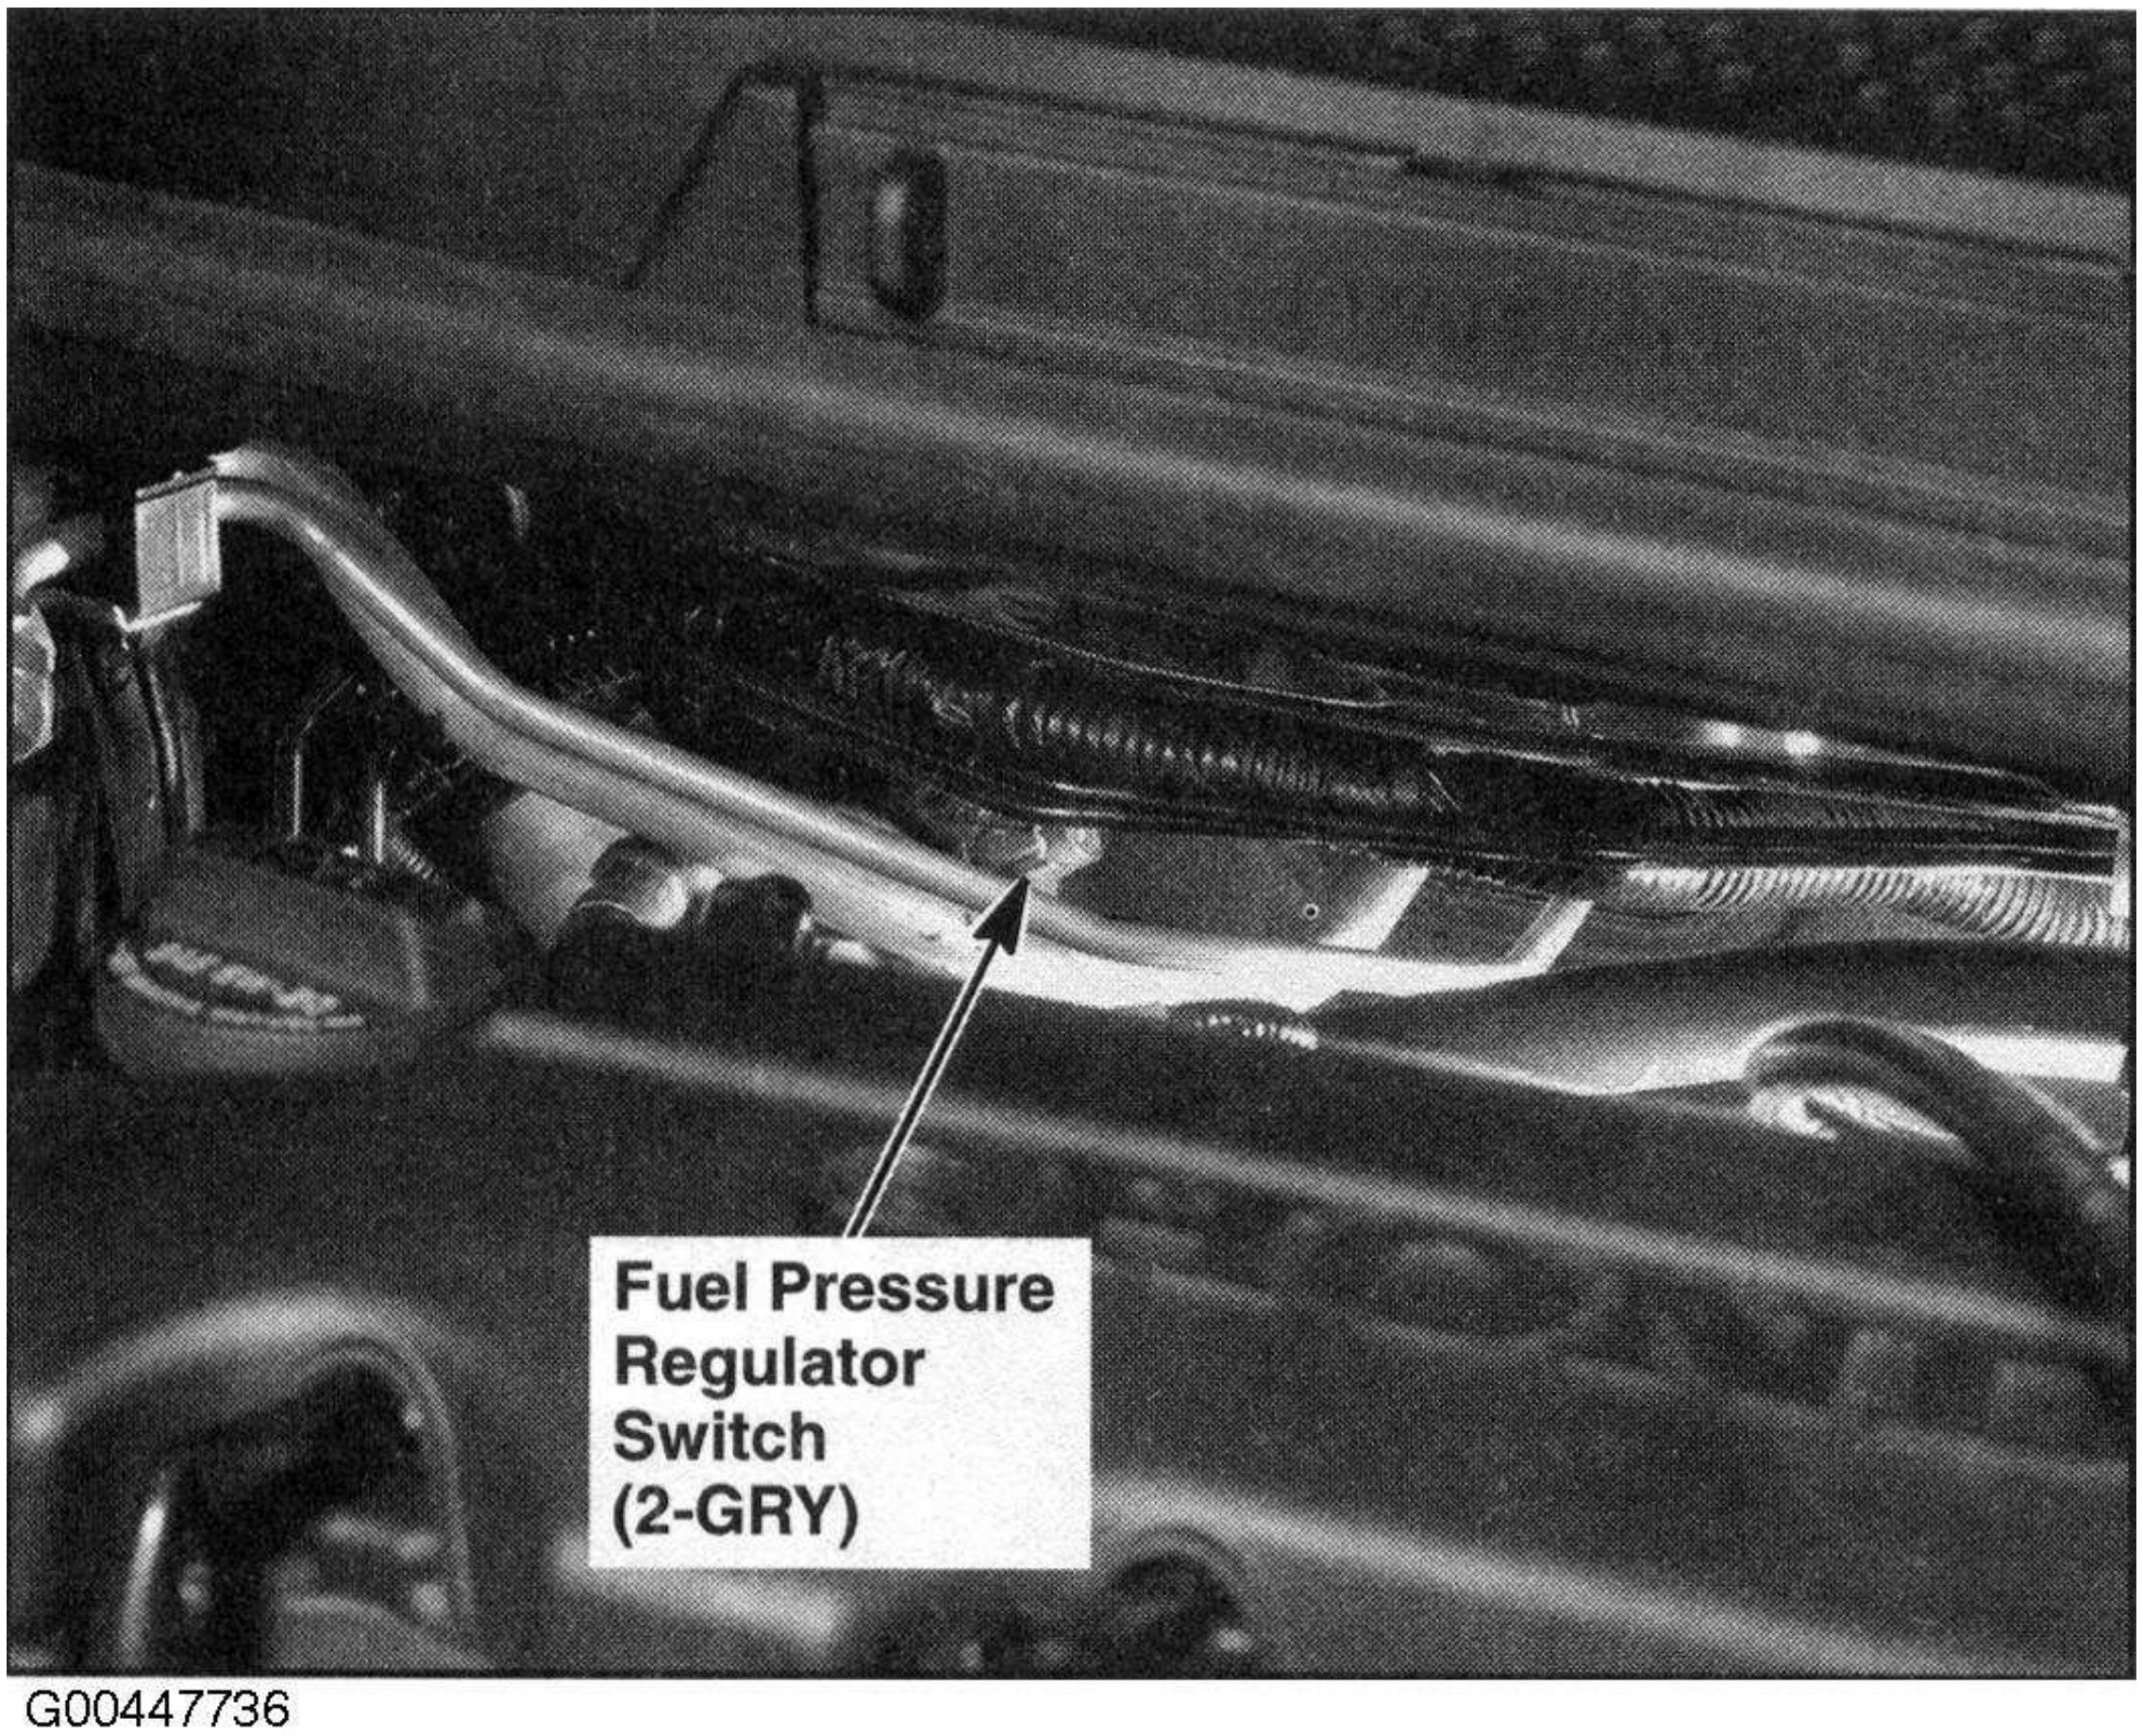
Fuel Pressure
Regulator
Switch
(2-GRY)
G00447736

Fig. 156: Right Rear Of Engine (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

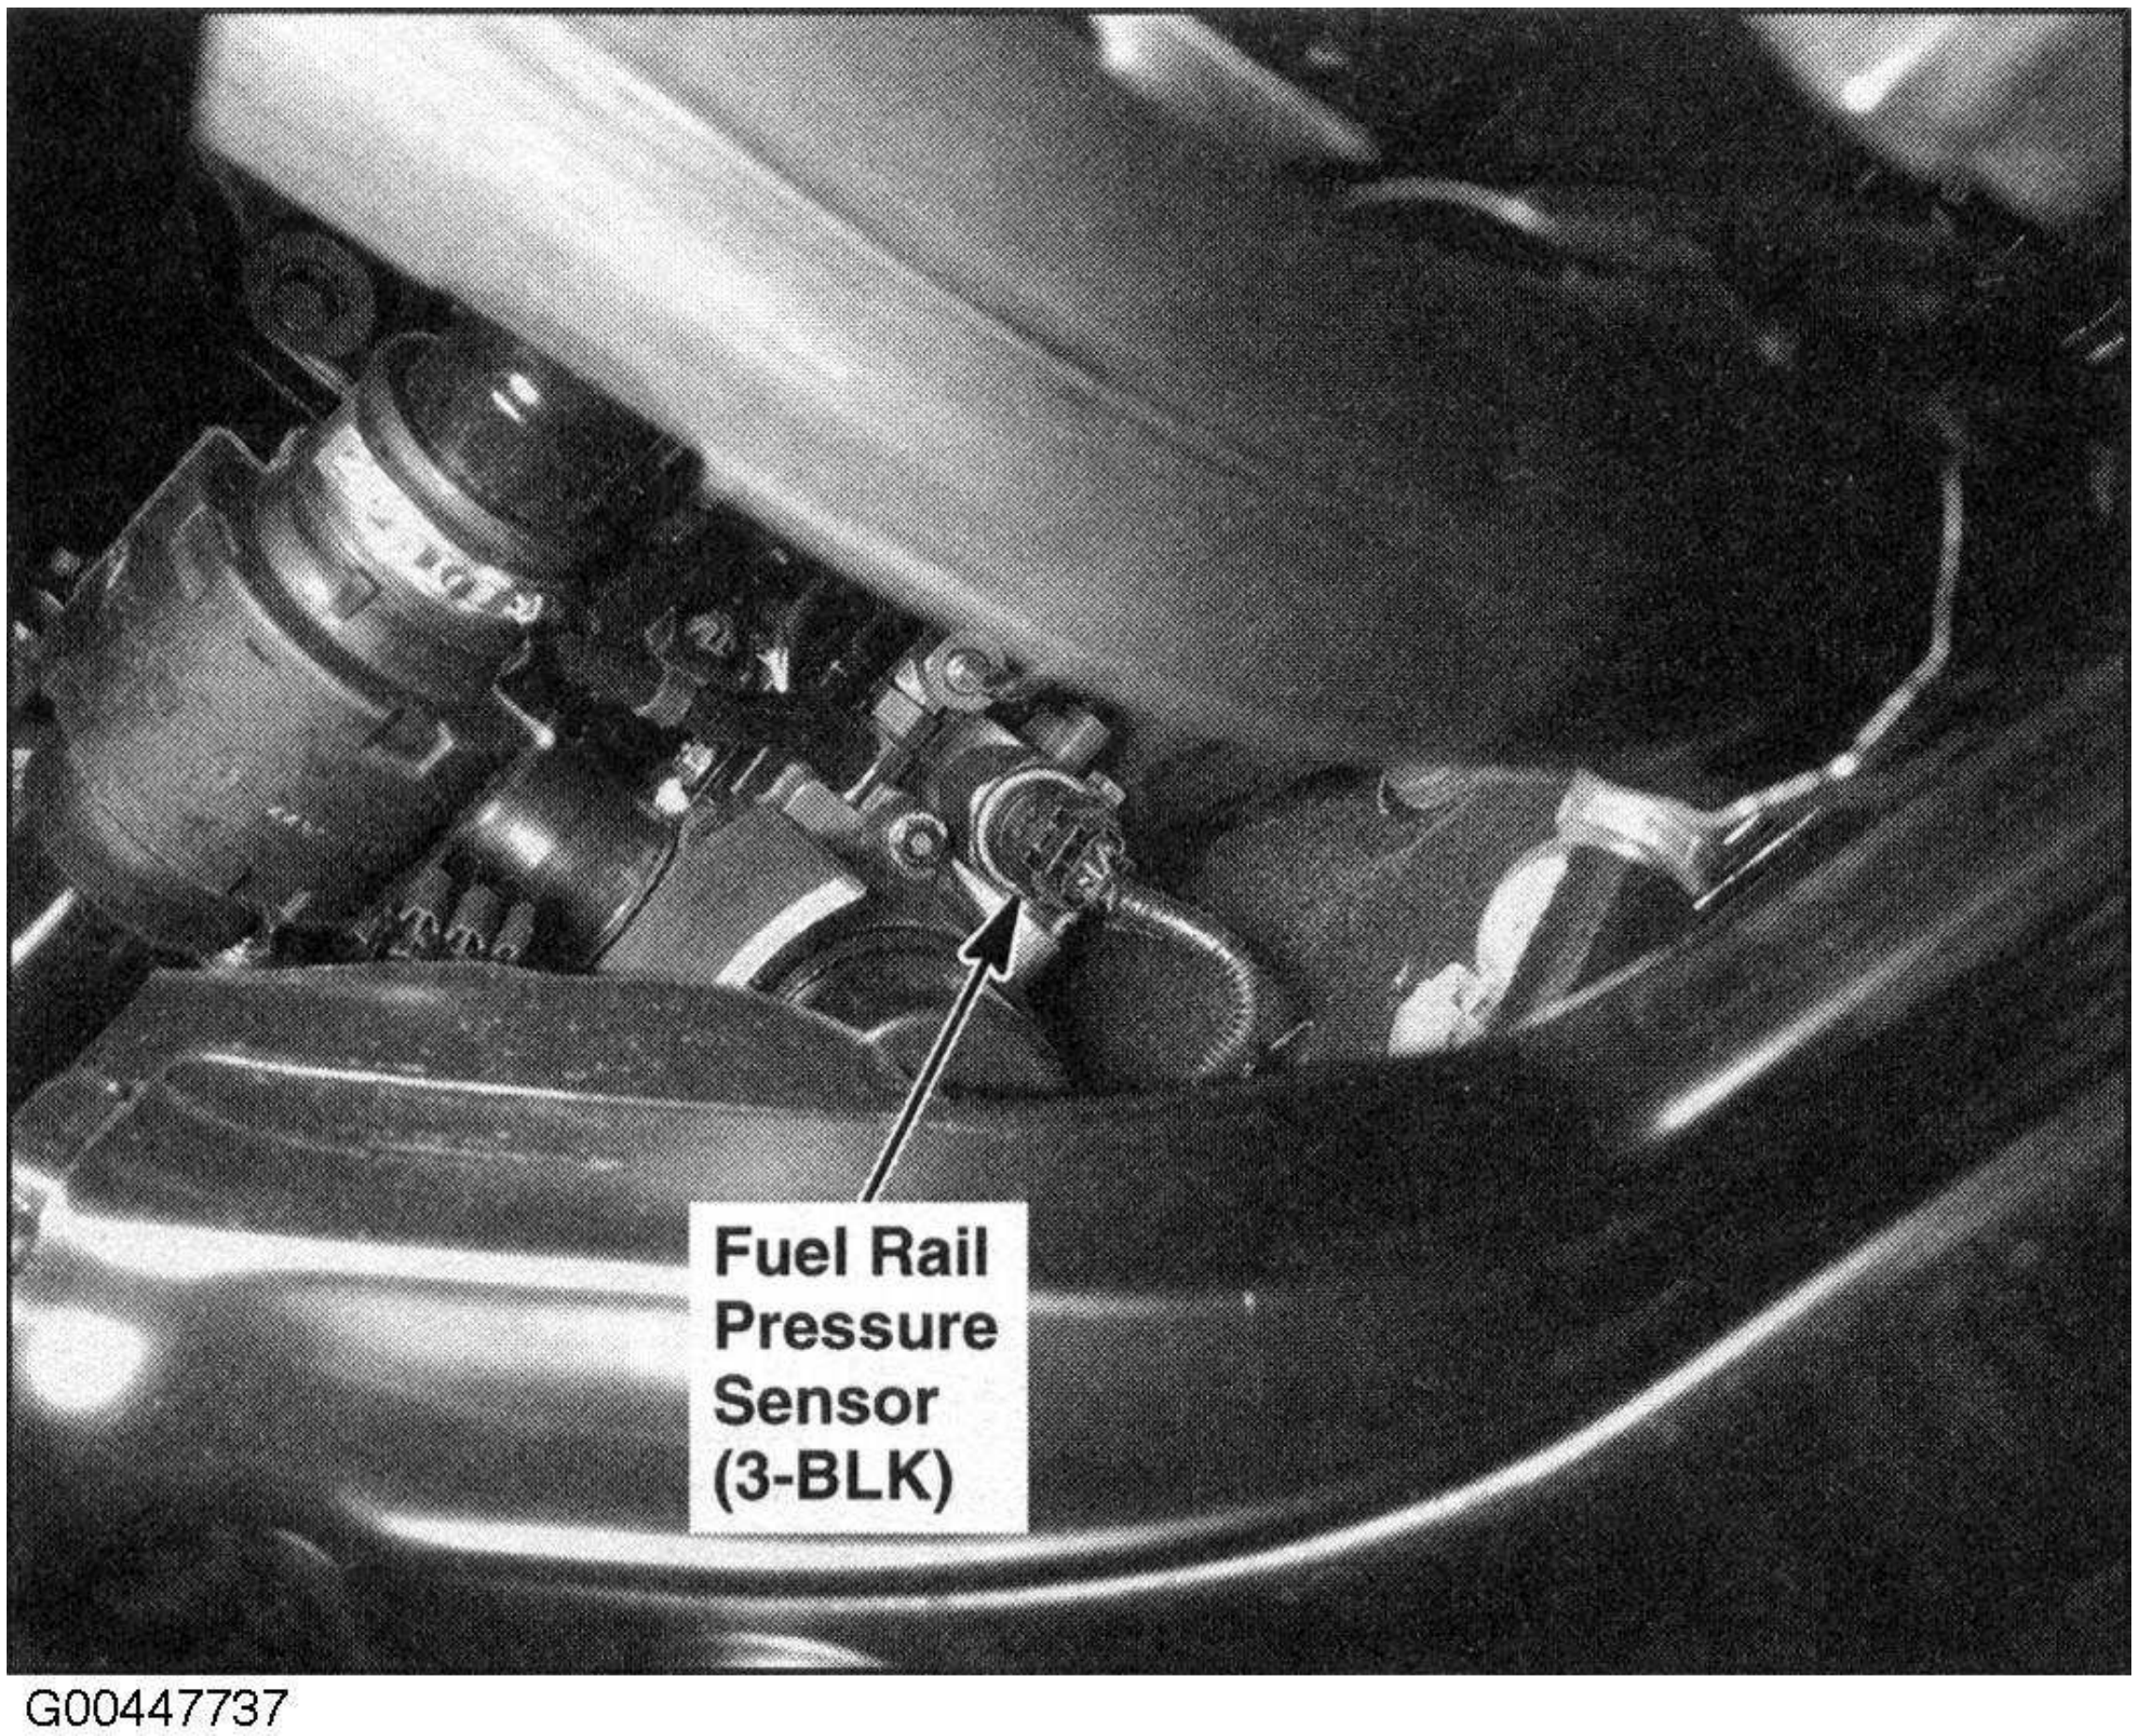
Fuel Rail
Pressure
Sensor
(3-BLK)
G00447737

Fig. 157: Right Rear Of Engine (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

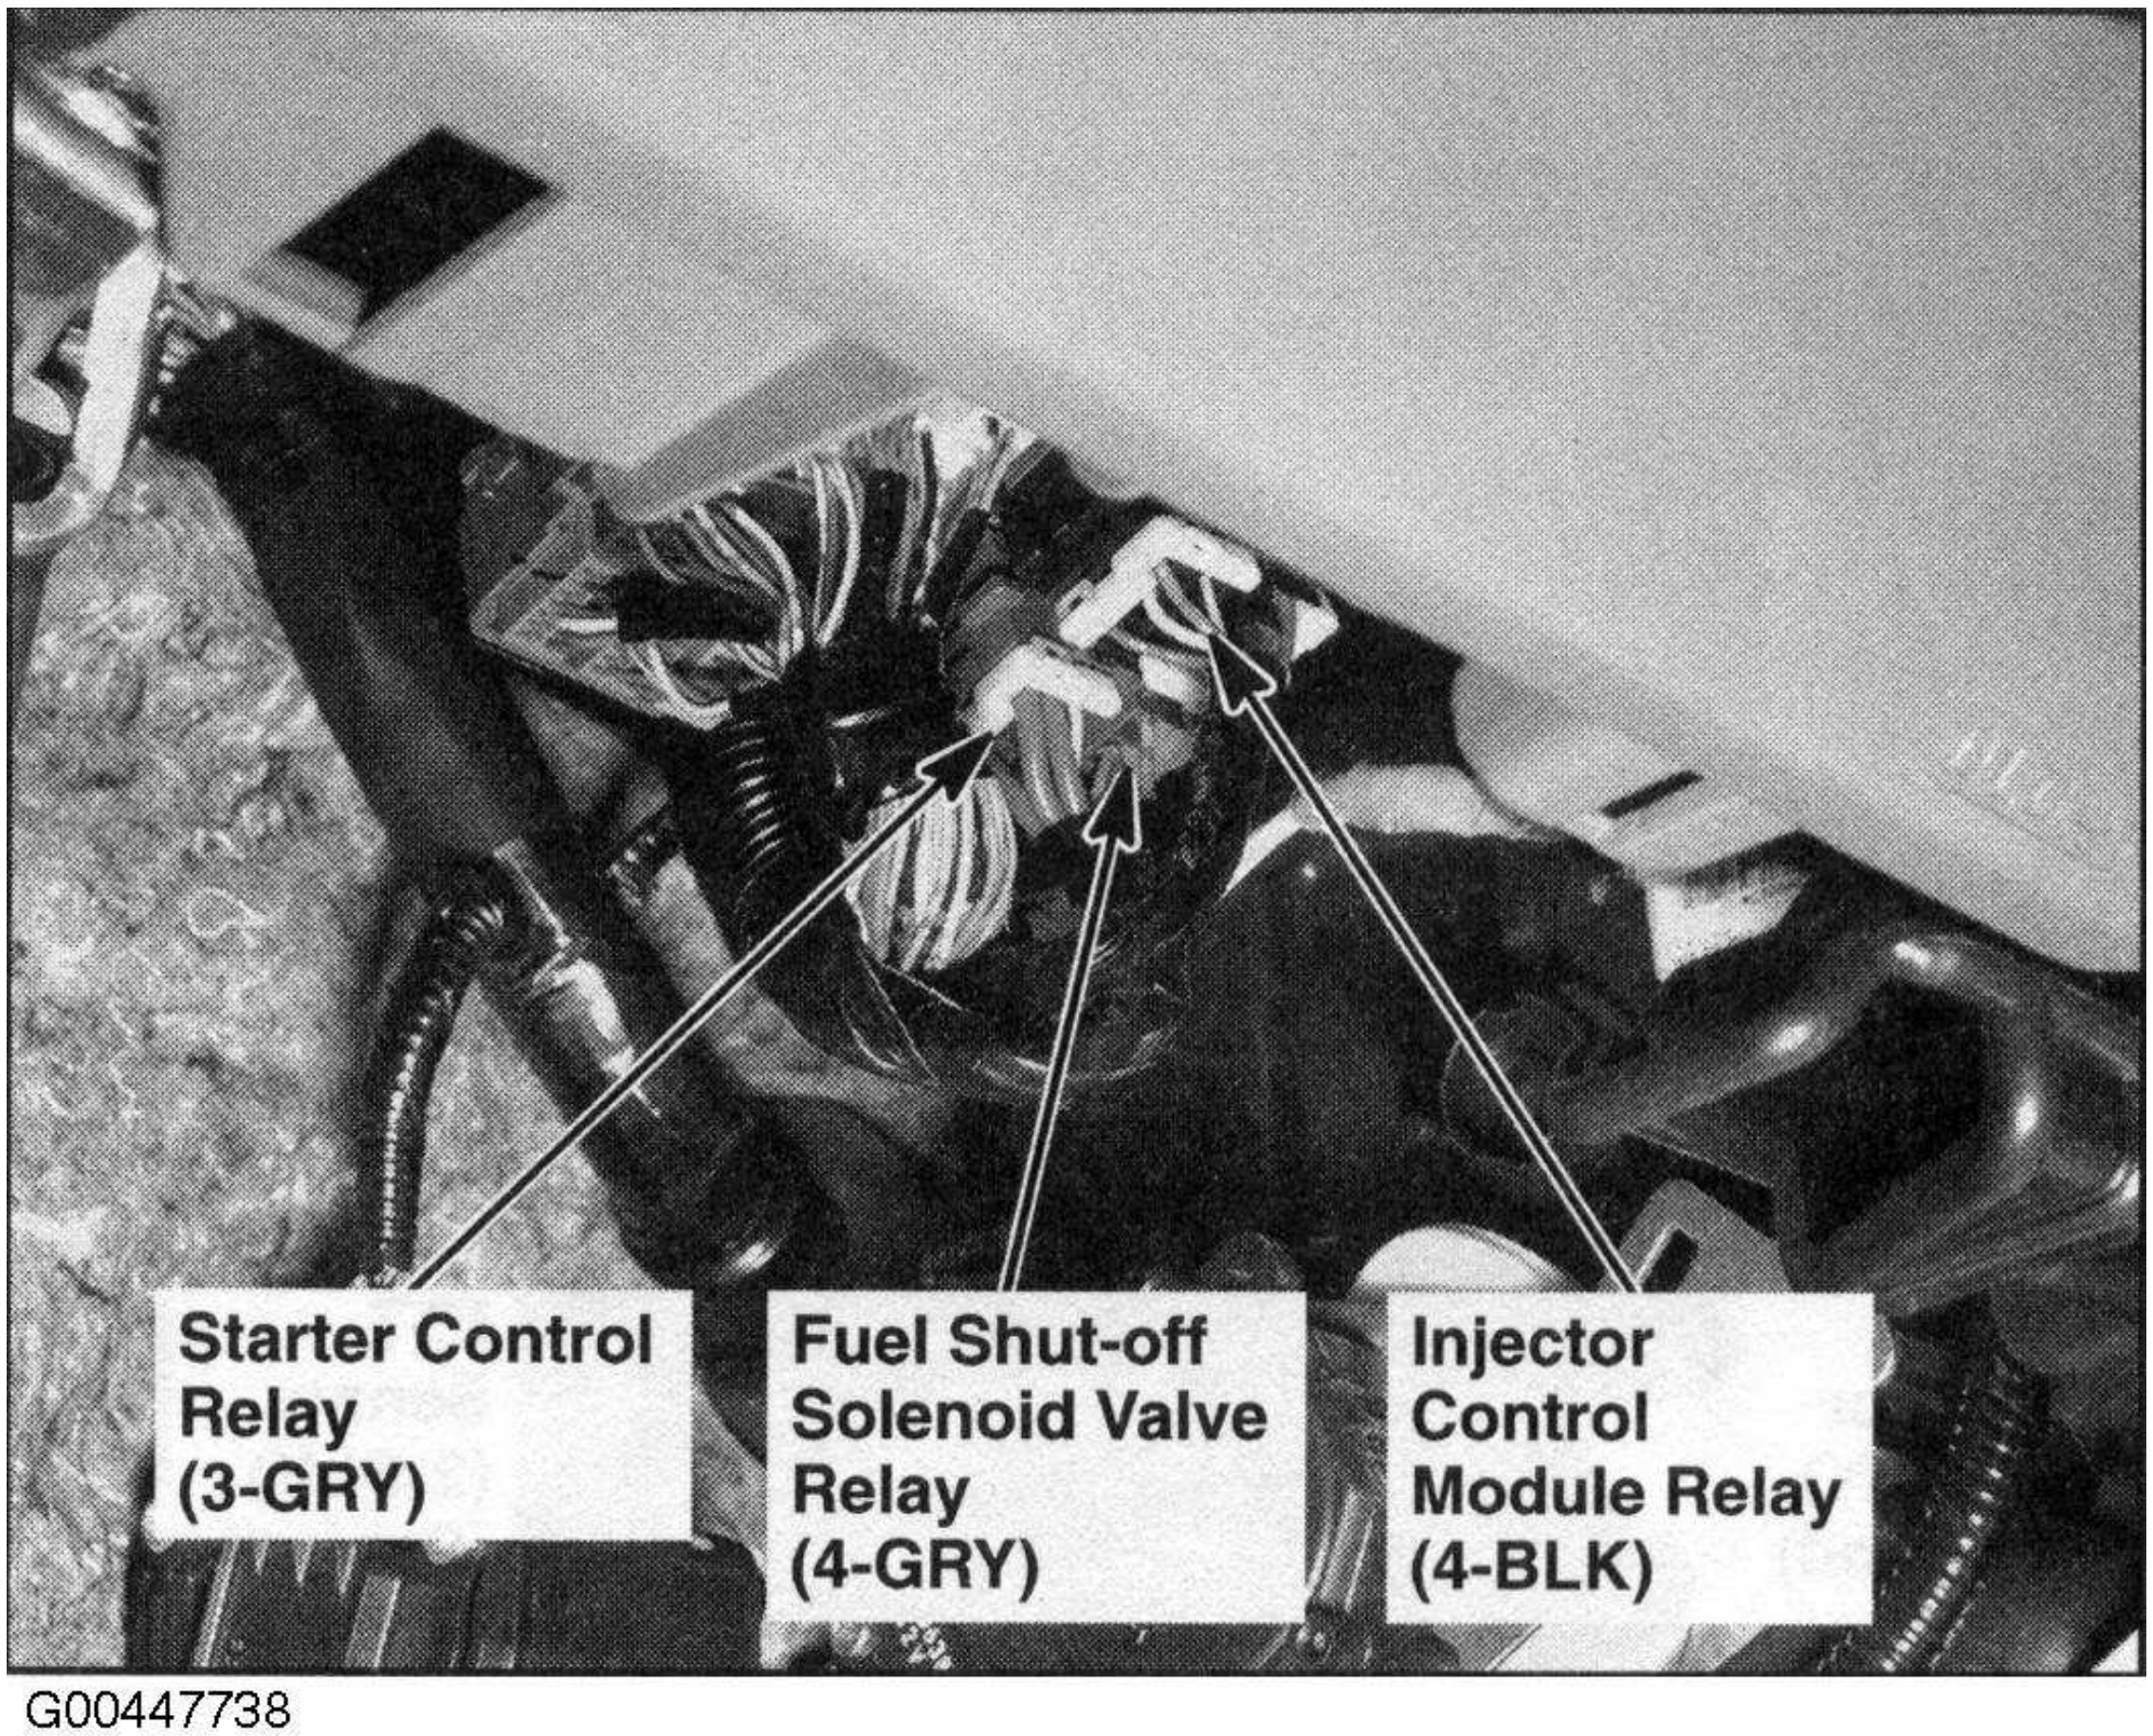
Starter Control Relay (3-GRY)
Fuel Shut-off Solenoid Valve Relay (4-GRY)
Injector Control Module Relay (4-BLK)
G00447738

Fig. 158: Under Left Side Of Dash (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

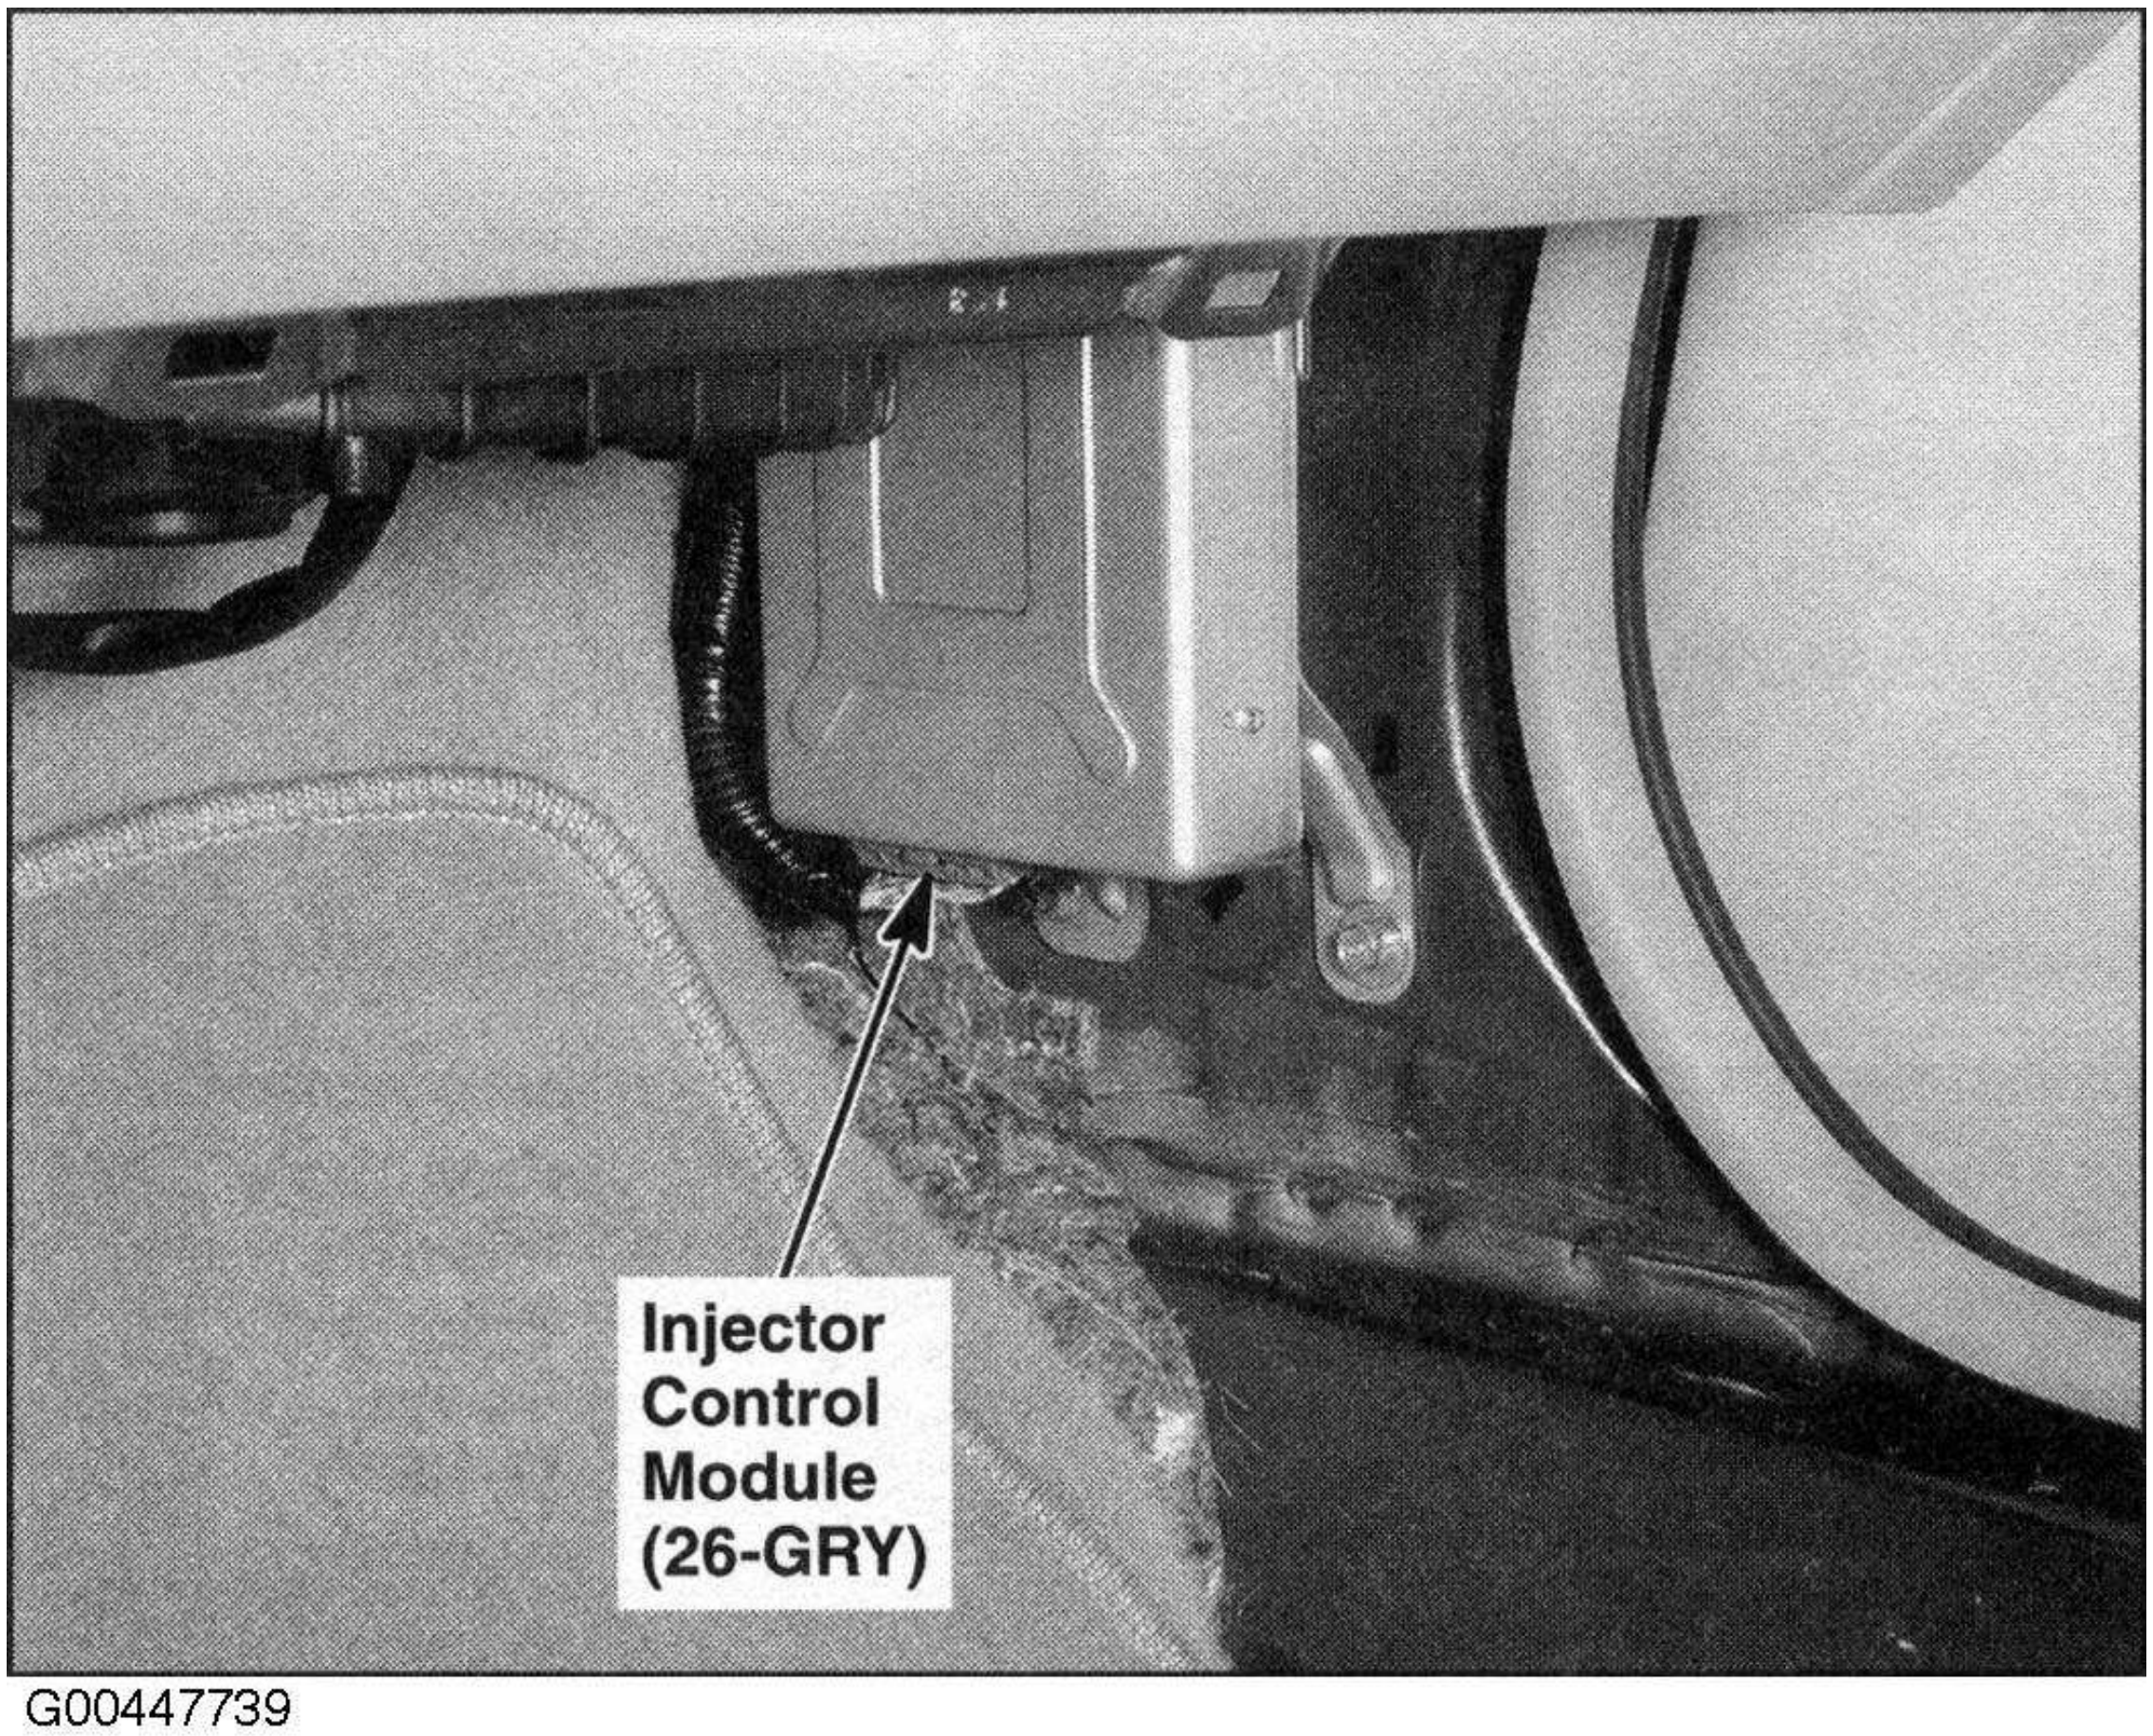

Injector Control Module (26-GRY)
G00447739

Fig. 159: Behind Right Kick Panel (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

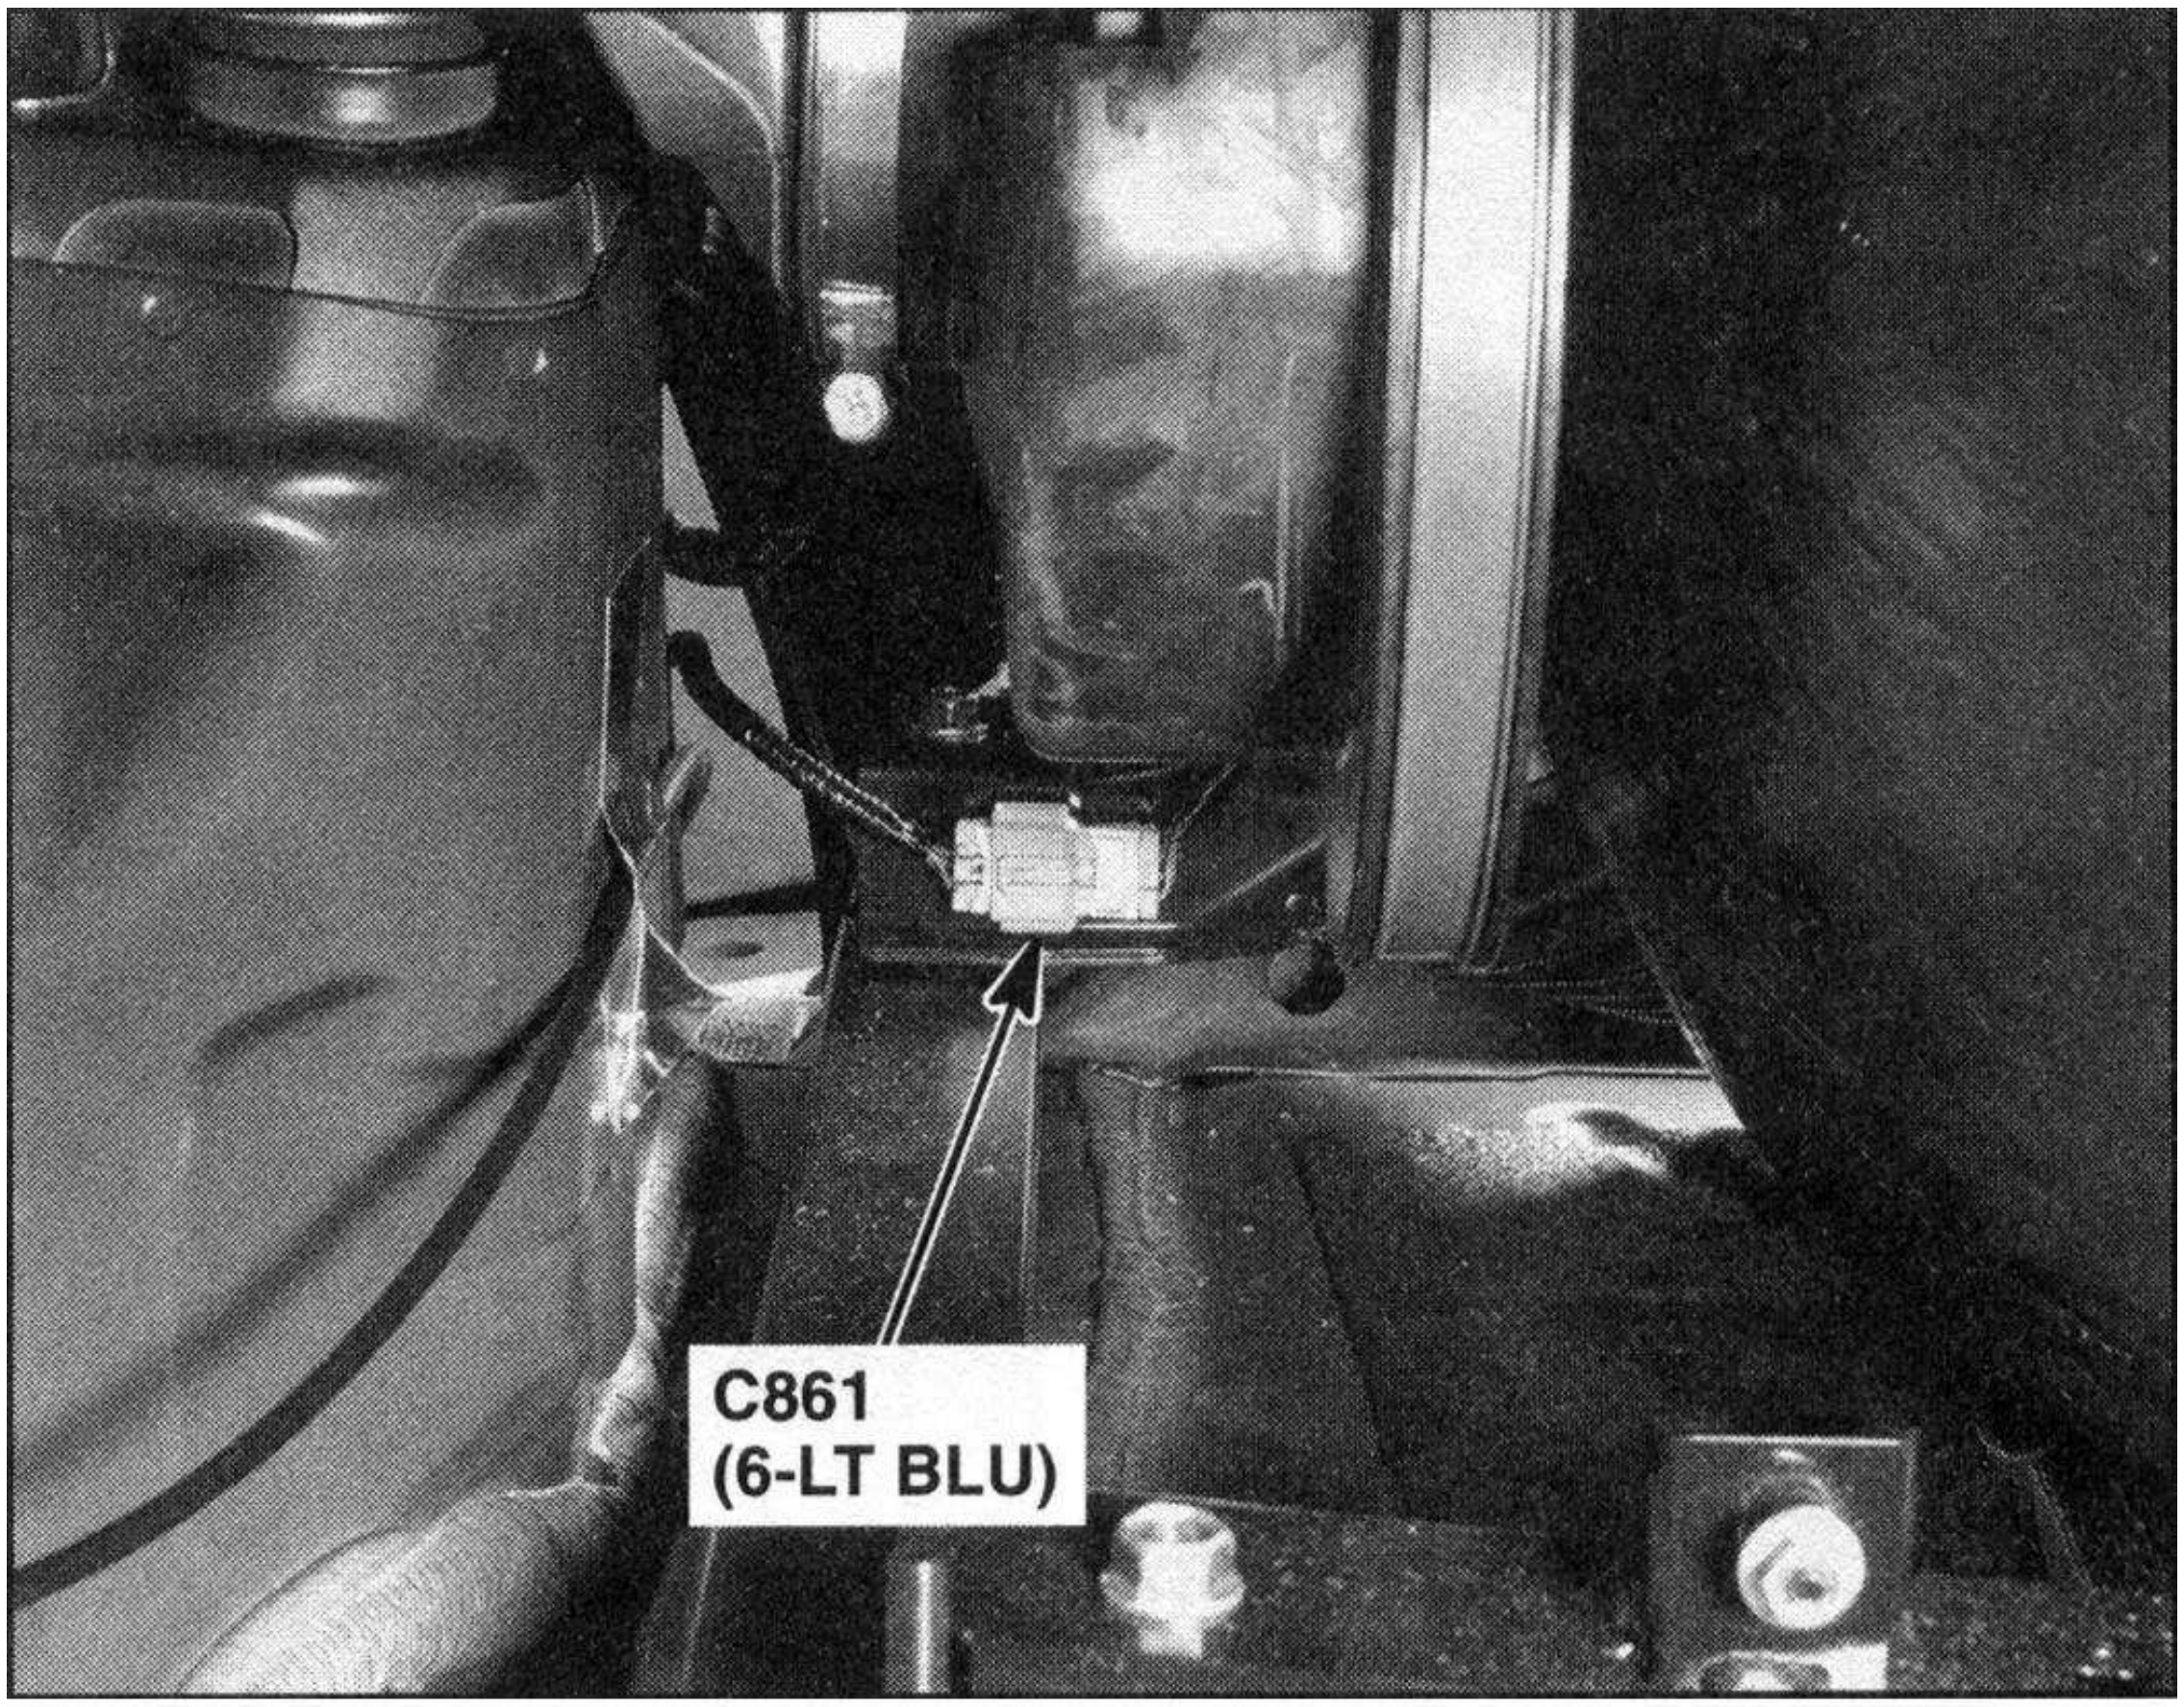

G00447740

Fig. 160: Left Side Of Rear Seat Back (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

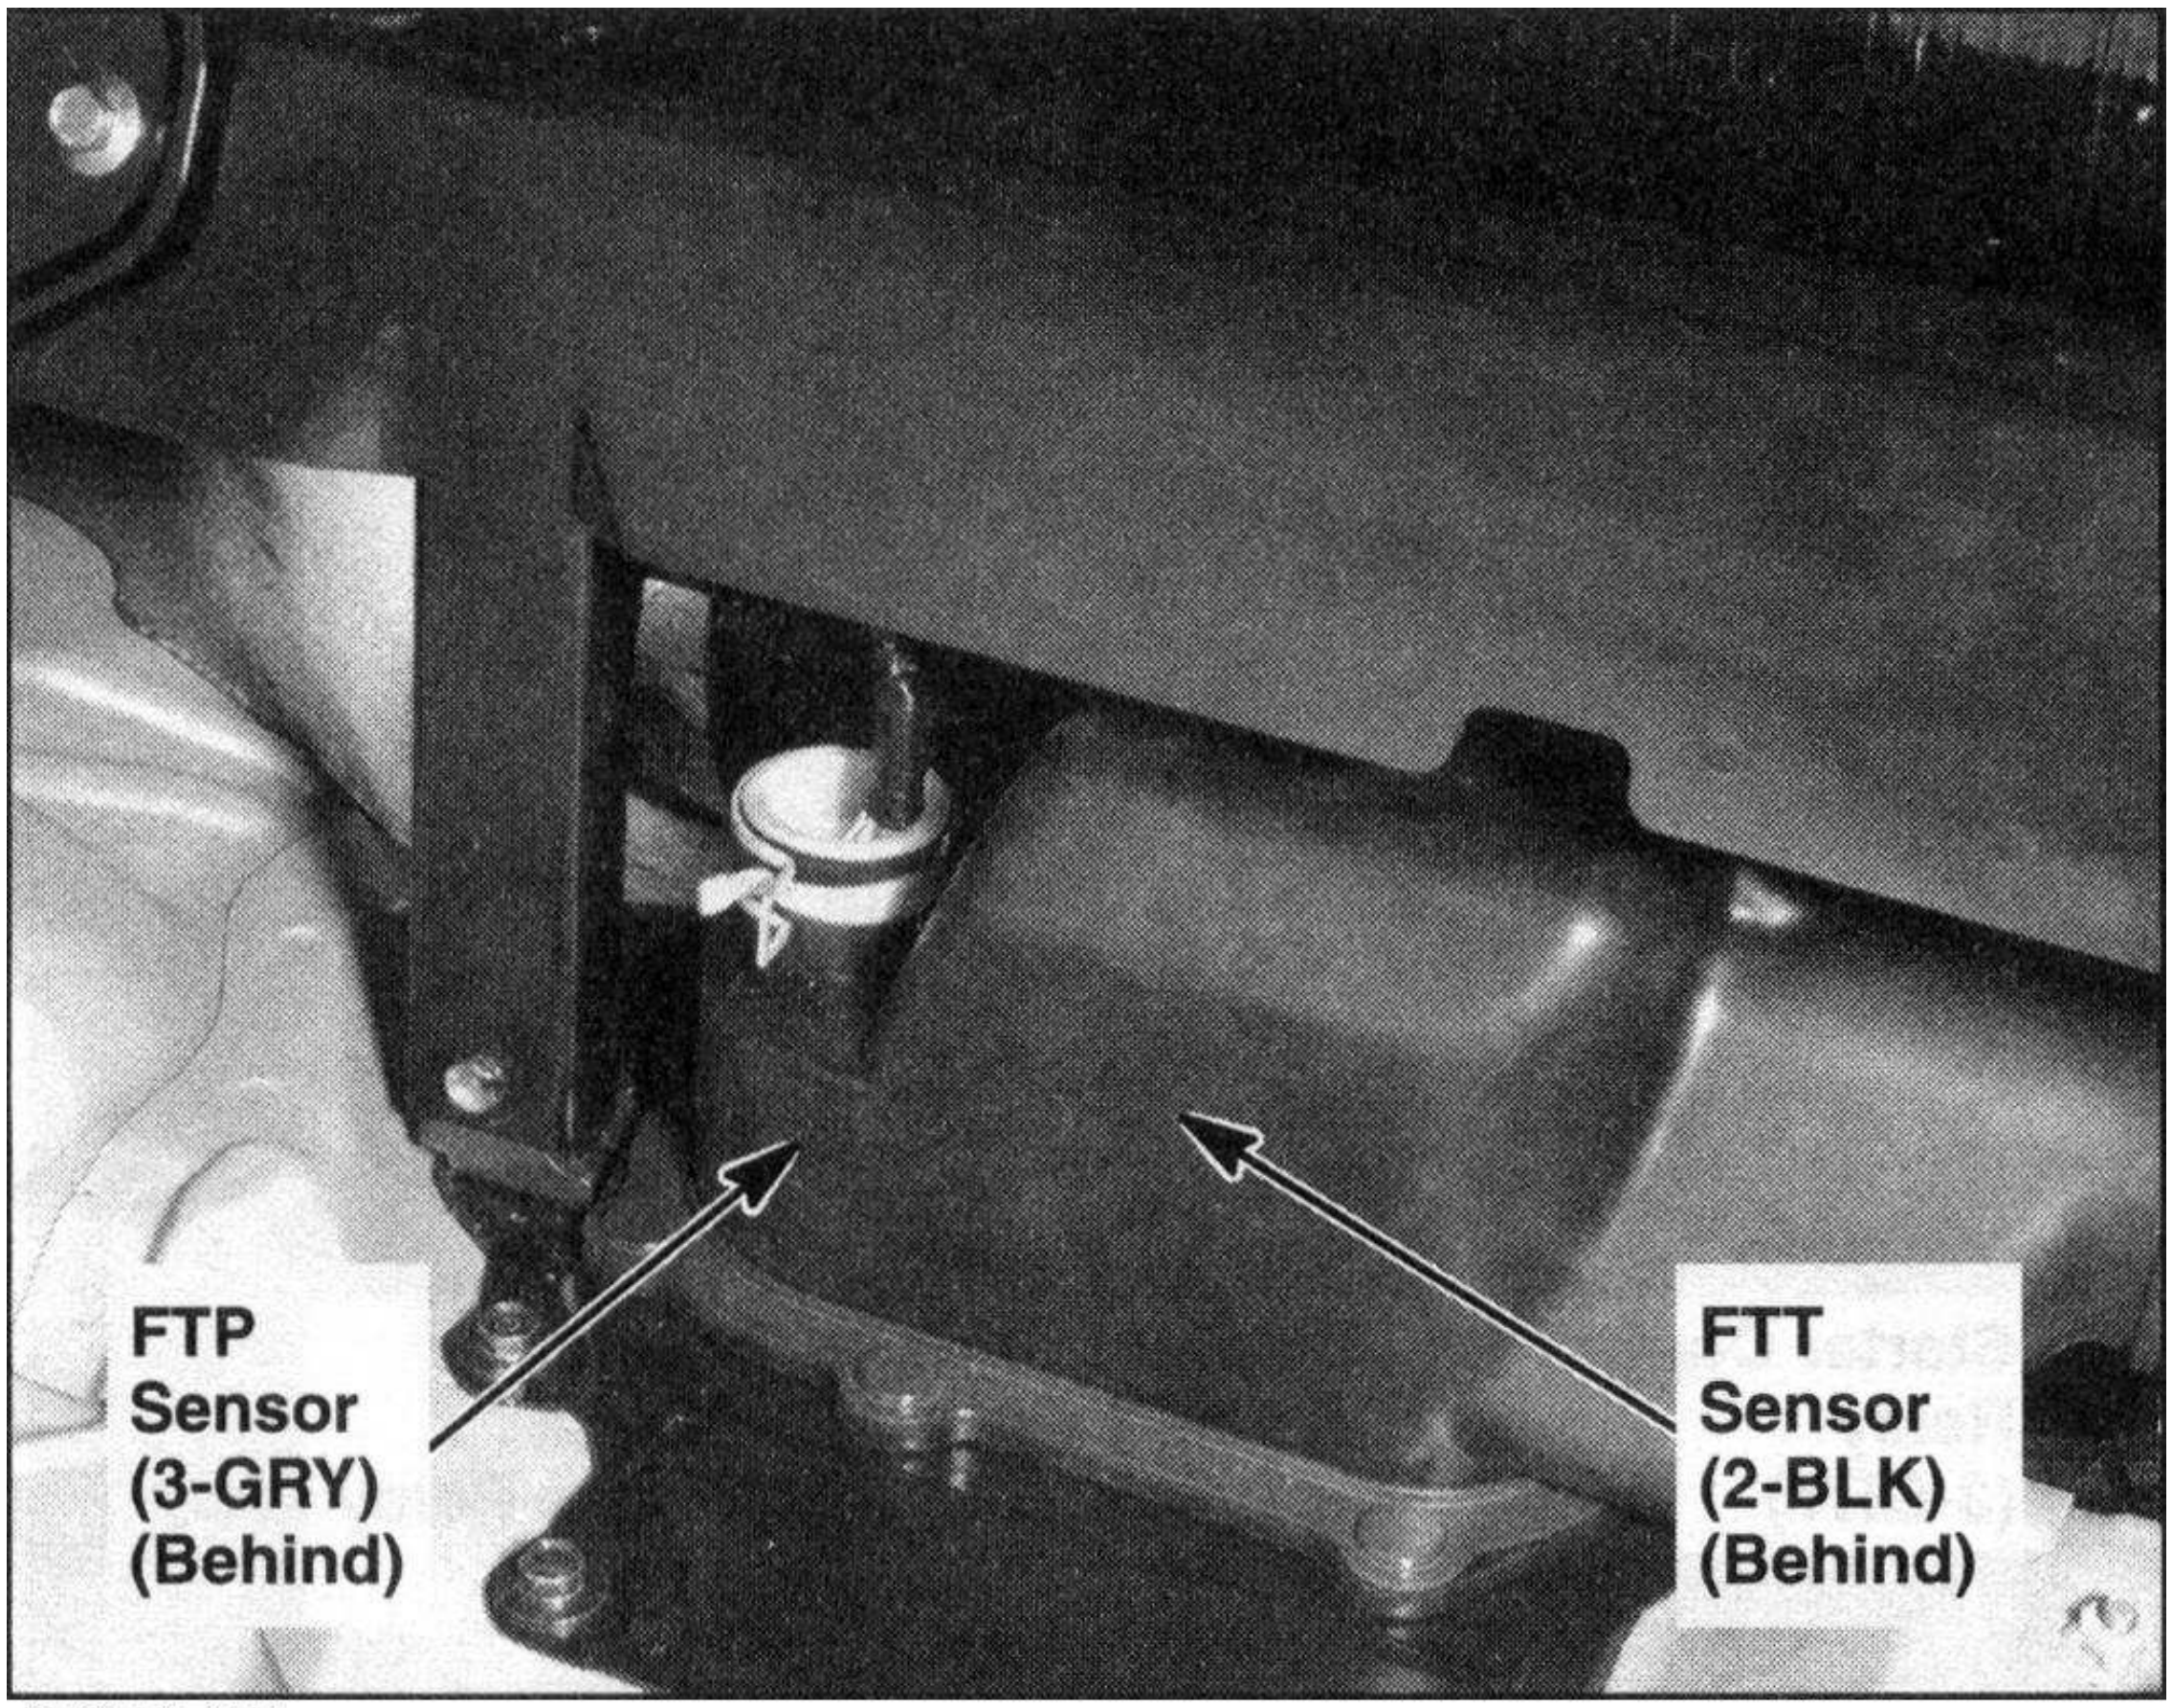
FTP Sensor (3-GRY) (Behind)
FTT Sensor (2-BLK) (Behind)
G00447741

Fig. 161: Behind Rear Seat (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

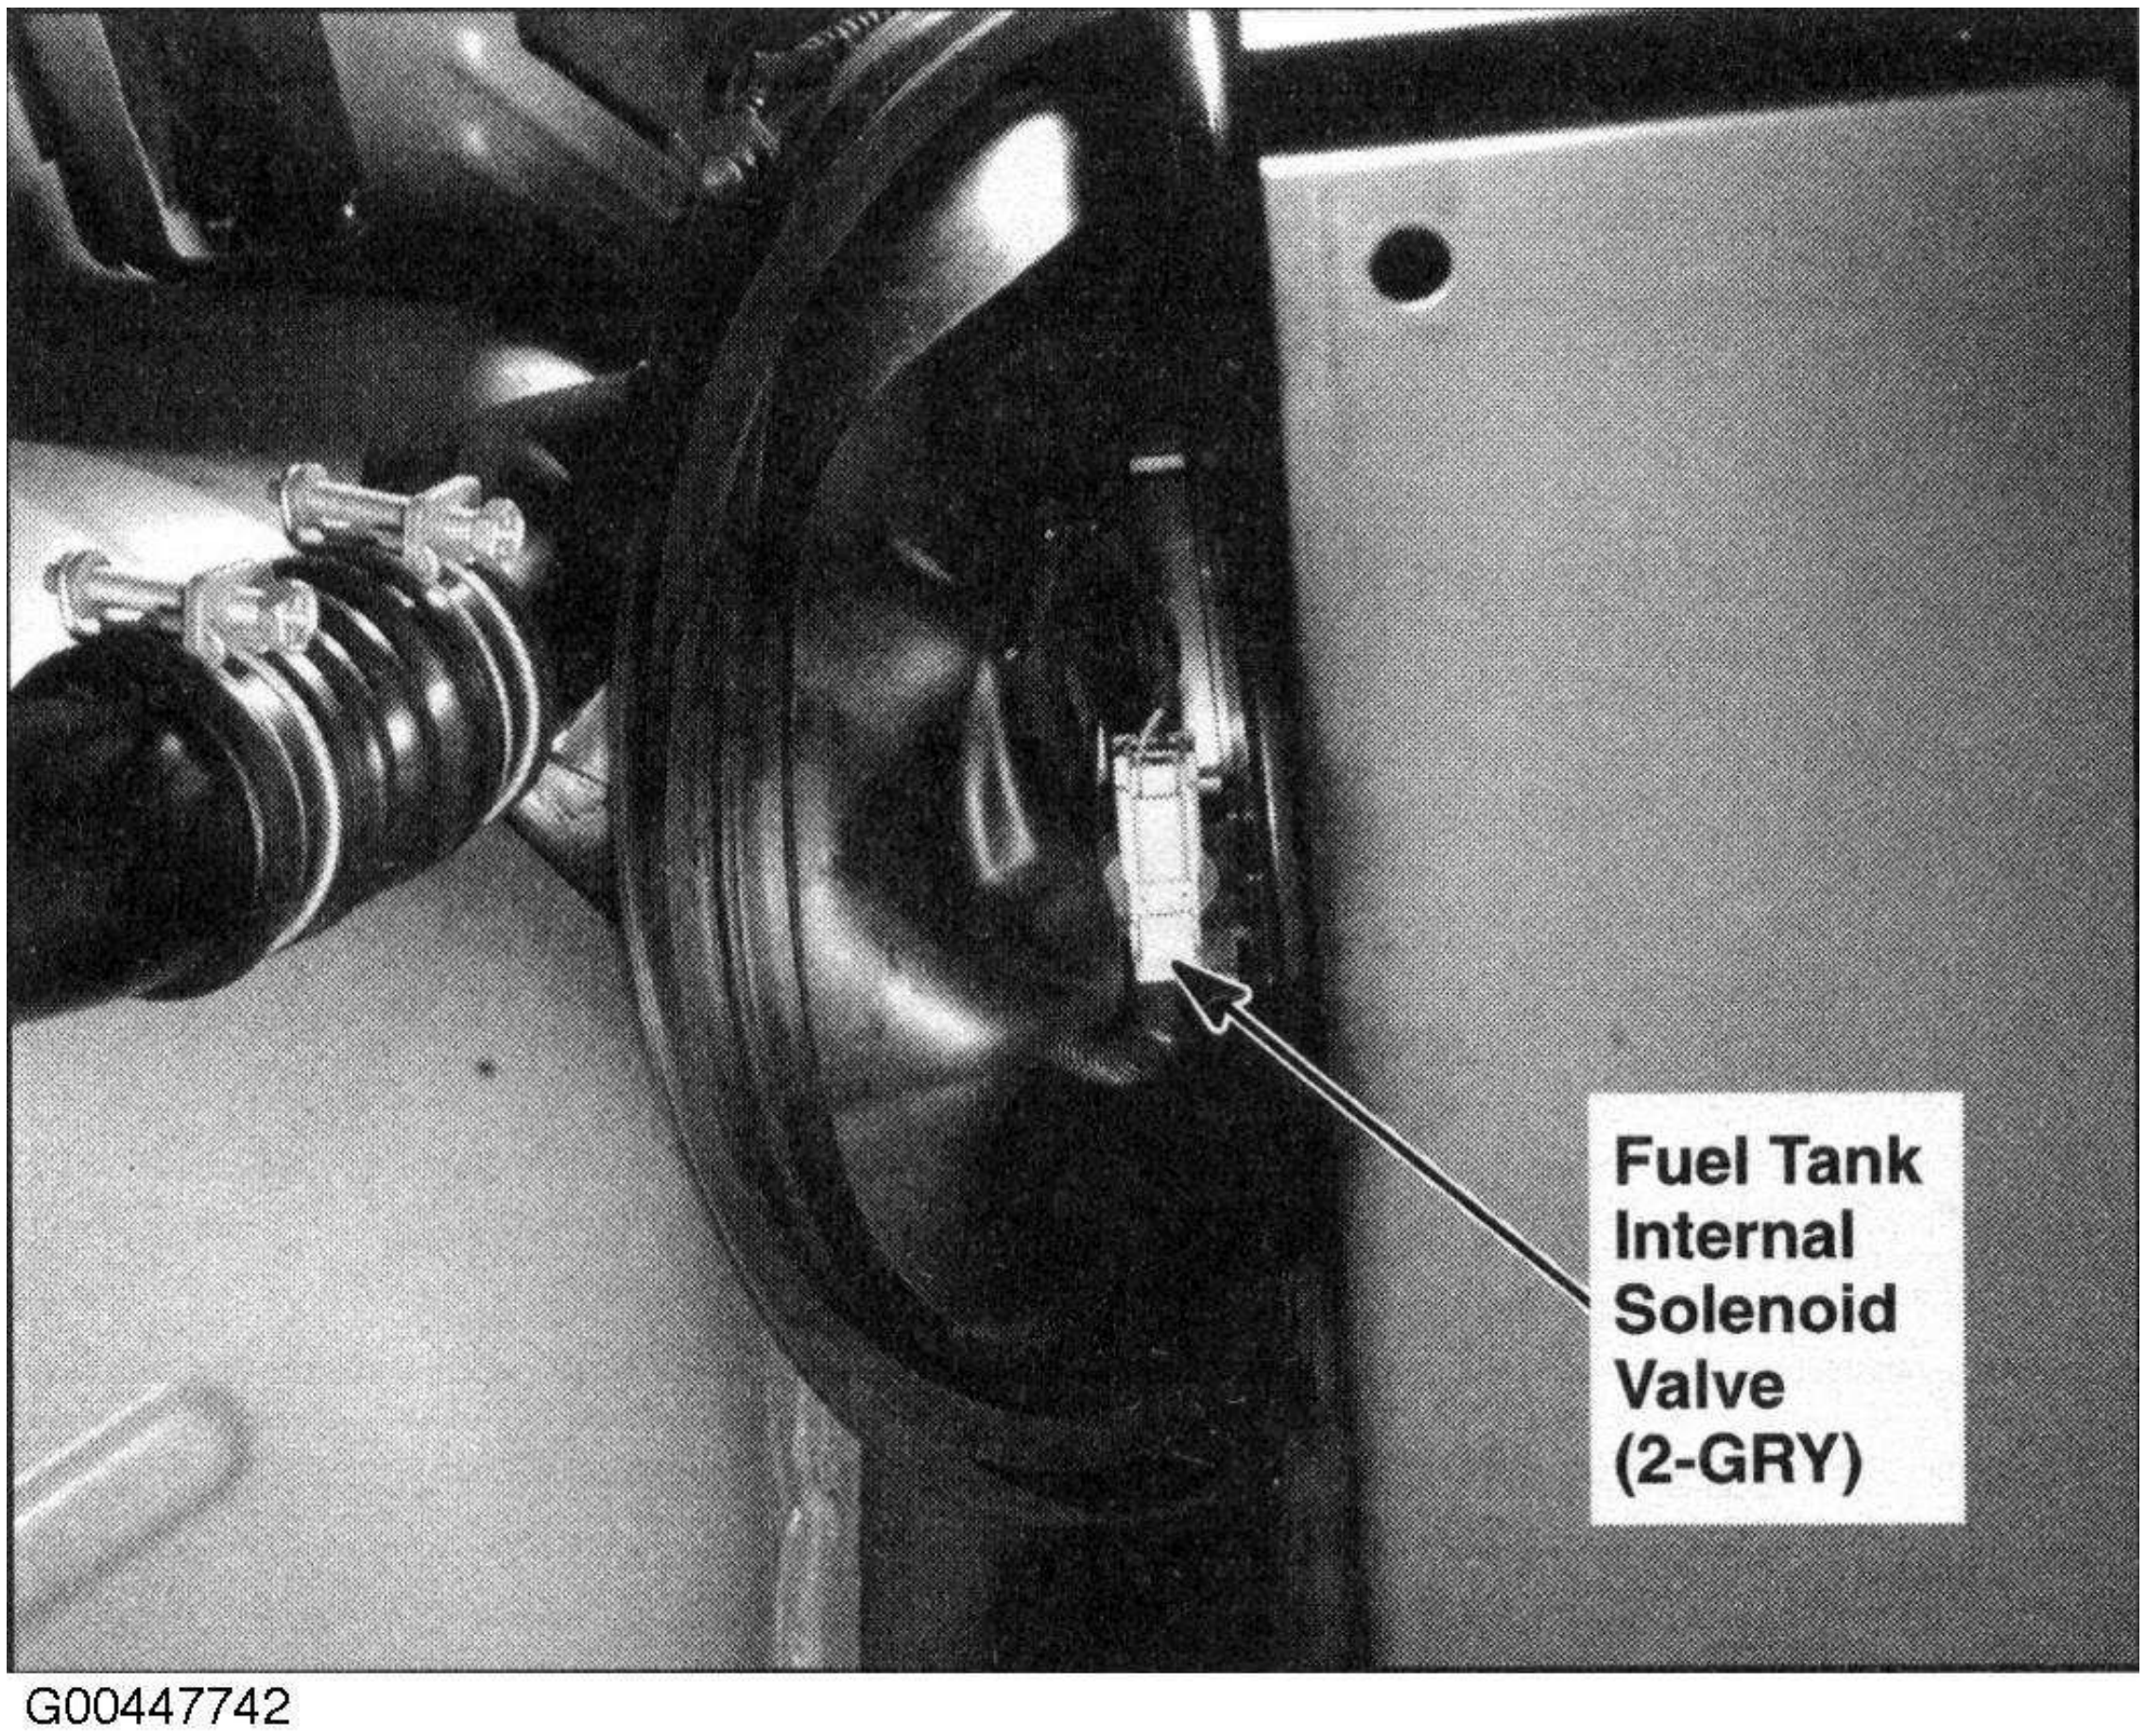
Fuel Tank Internal Solenoid Valve (2-GRY)
G00447742

Fig. 162: Left Side Of Trunk (GX)

Courtesy of AMERICAN HONDA MOTOR CO., INC.

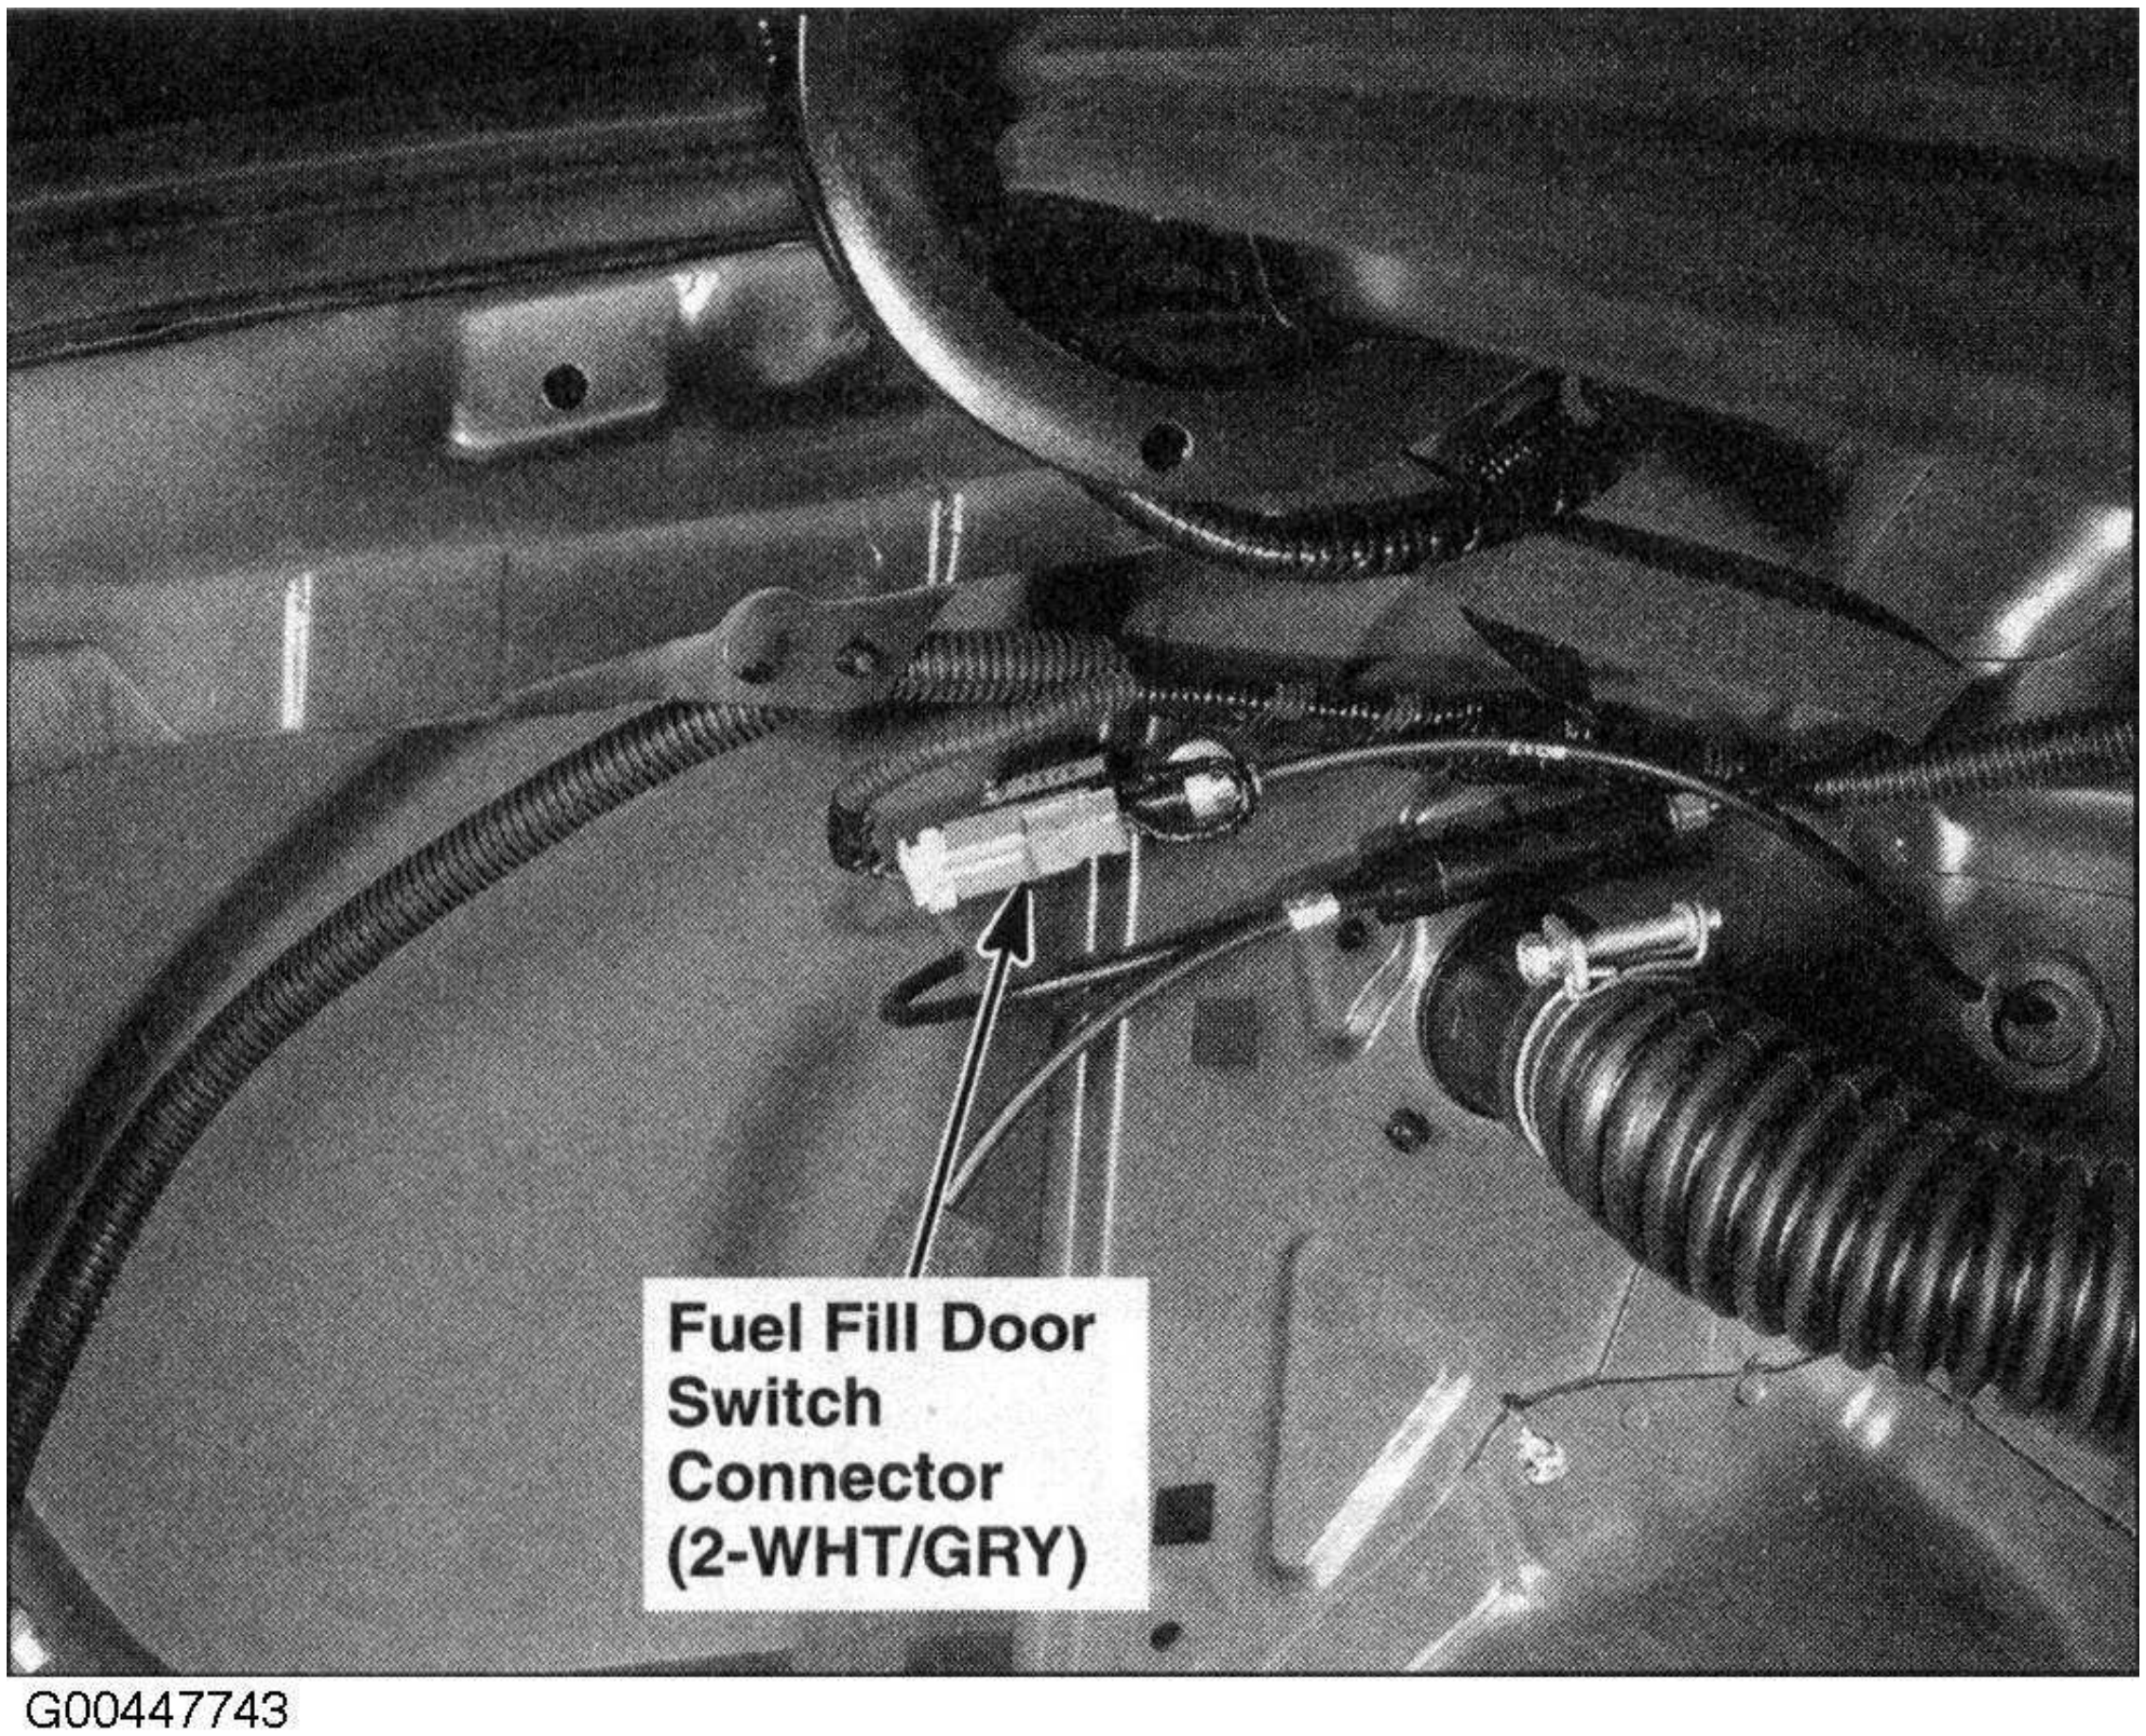
Fuel Fill Door
Switch
Connector
(2-WHT/GRY)
G00447743

Fig. 163: Left Of Rear Shelf (GX)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

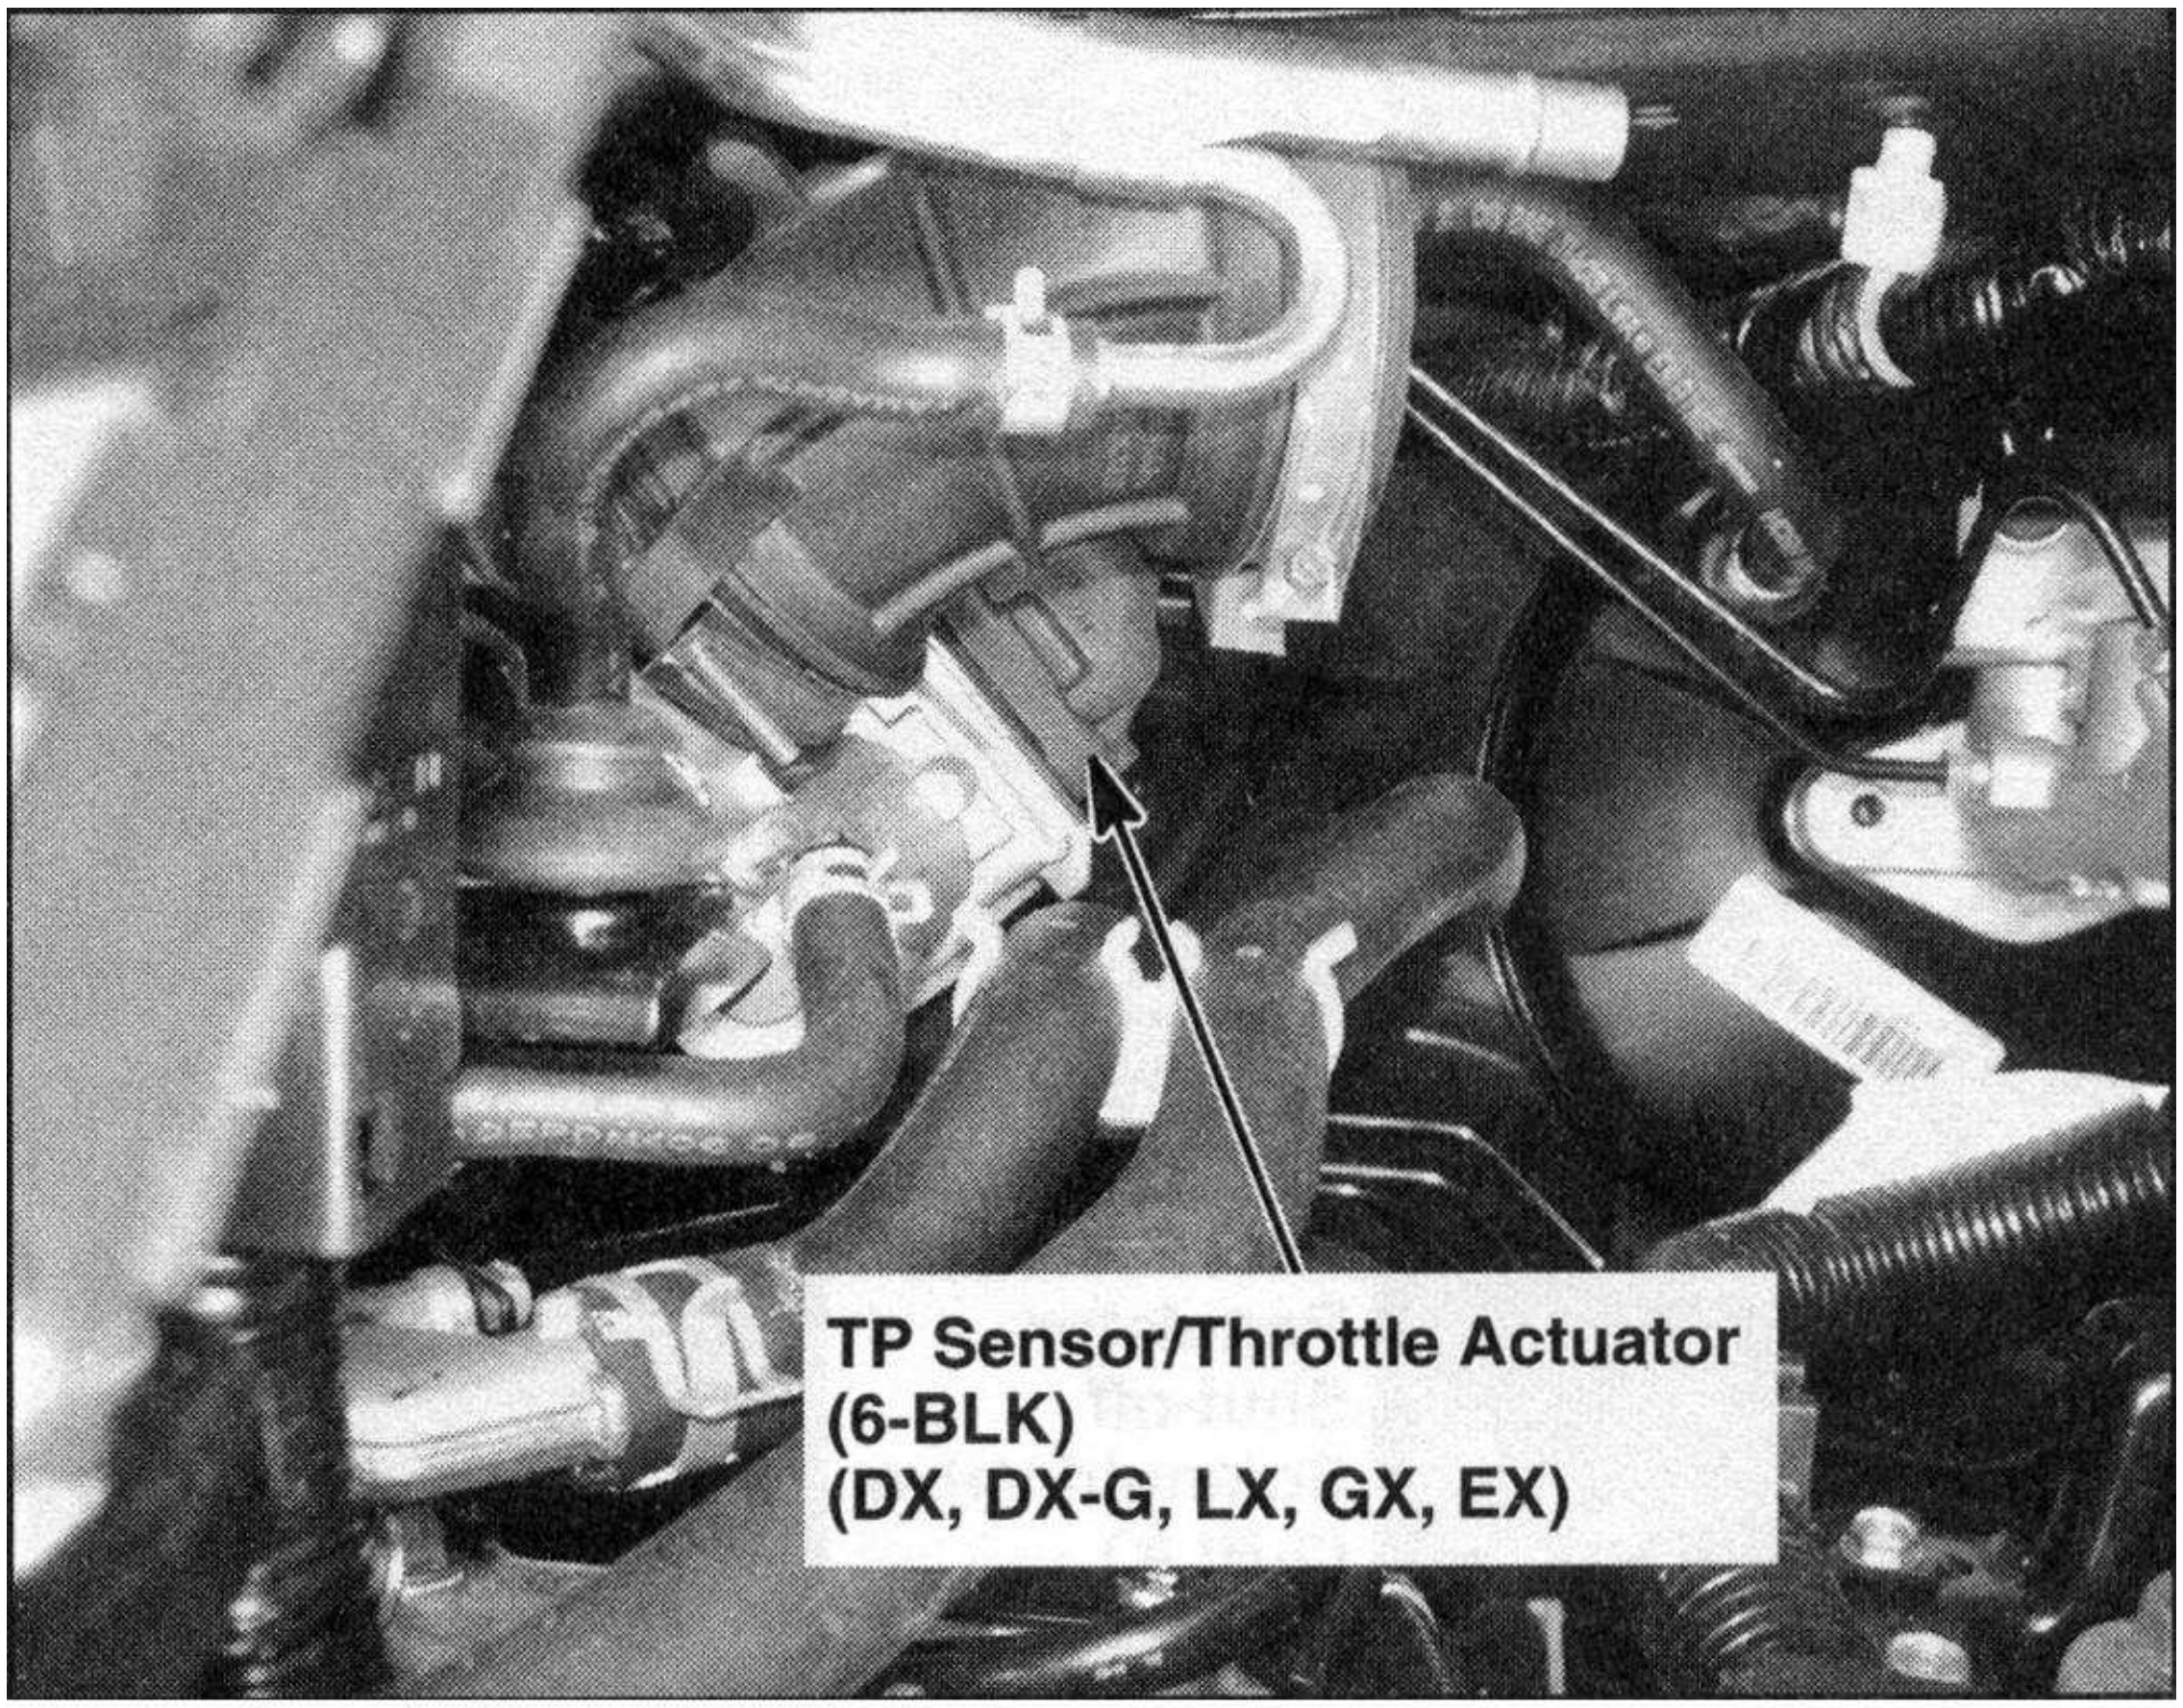
TP Sensor/Throttle Actuator
(6-BLK)
(DX, DX-G, LX, GX, EX)
G00447744

Fig. 164: Left Side Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

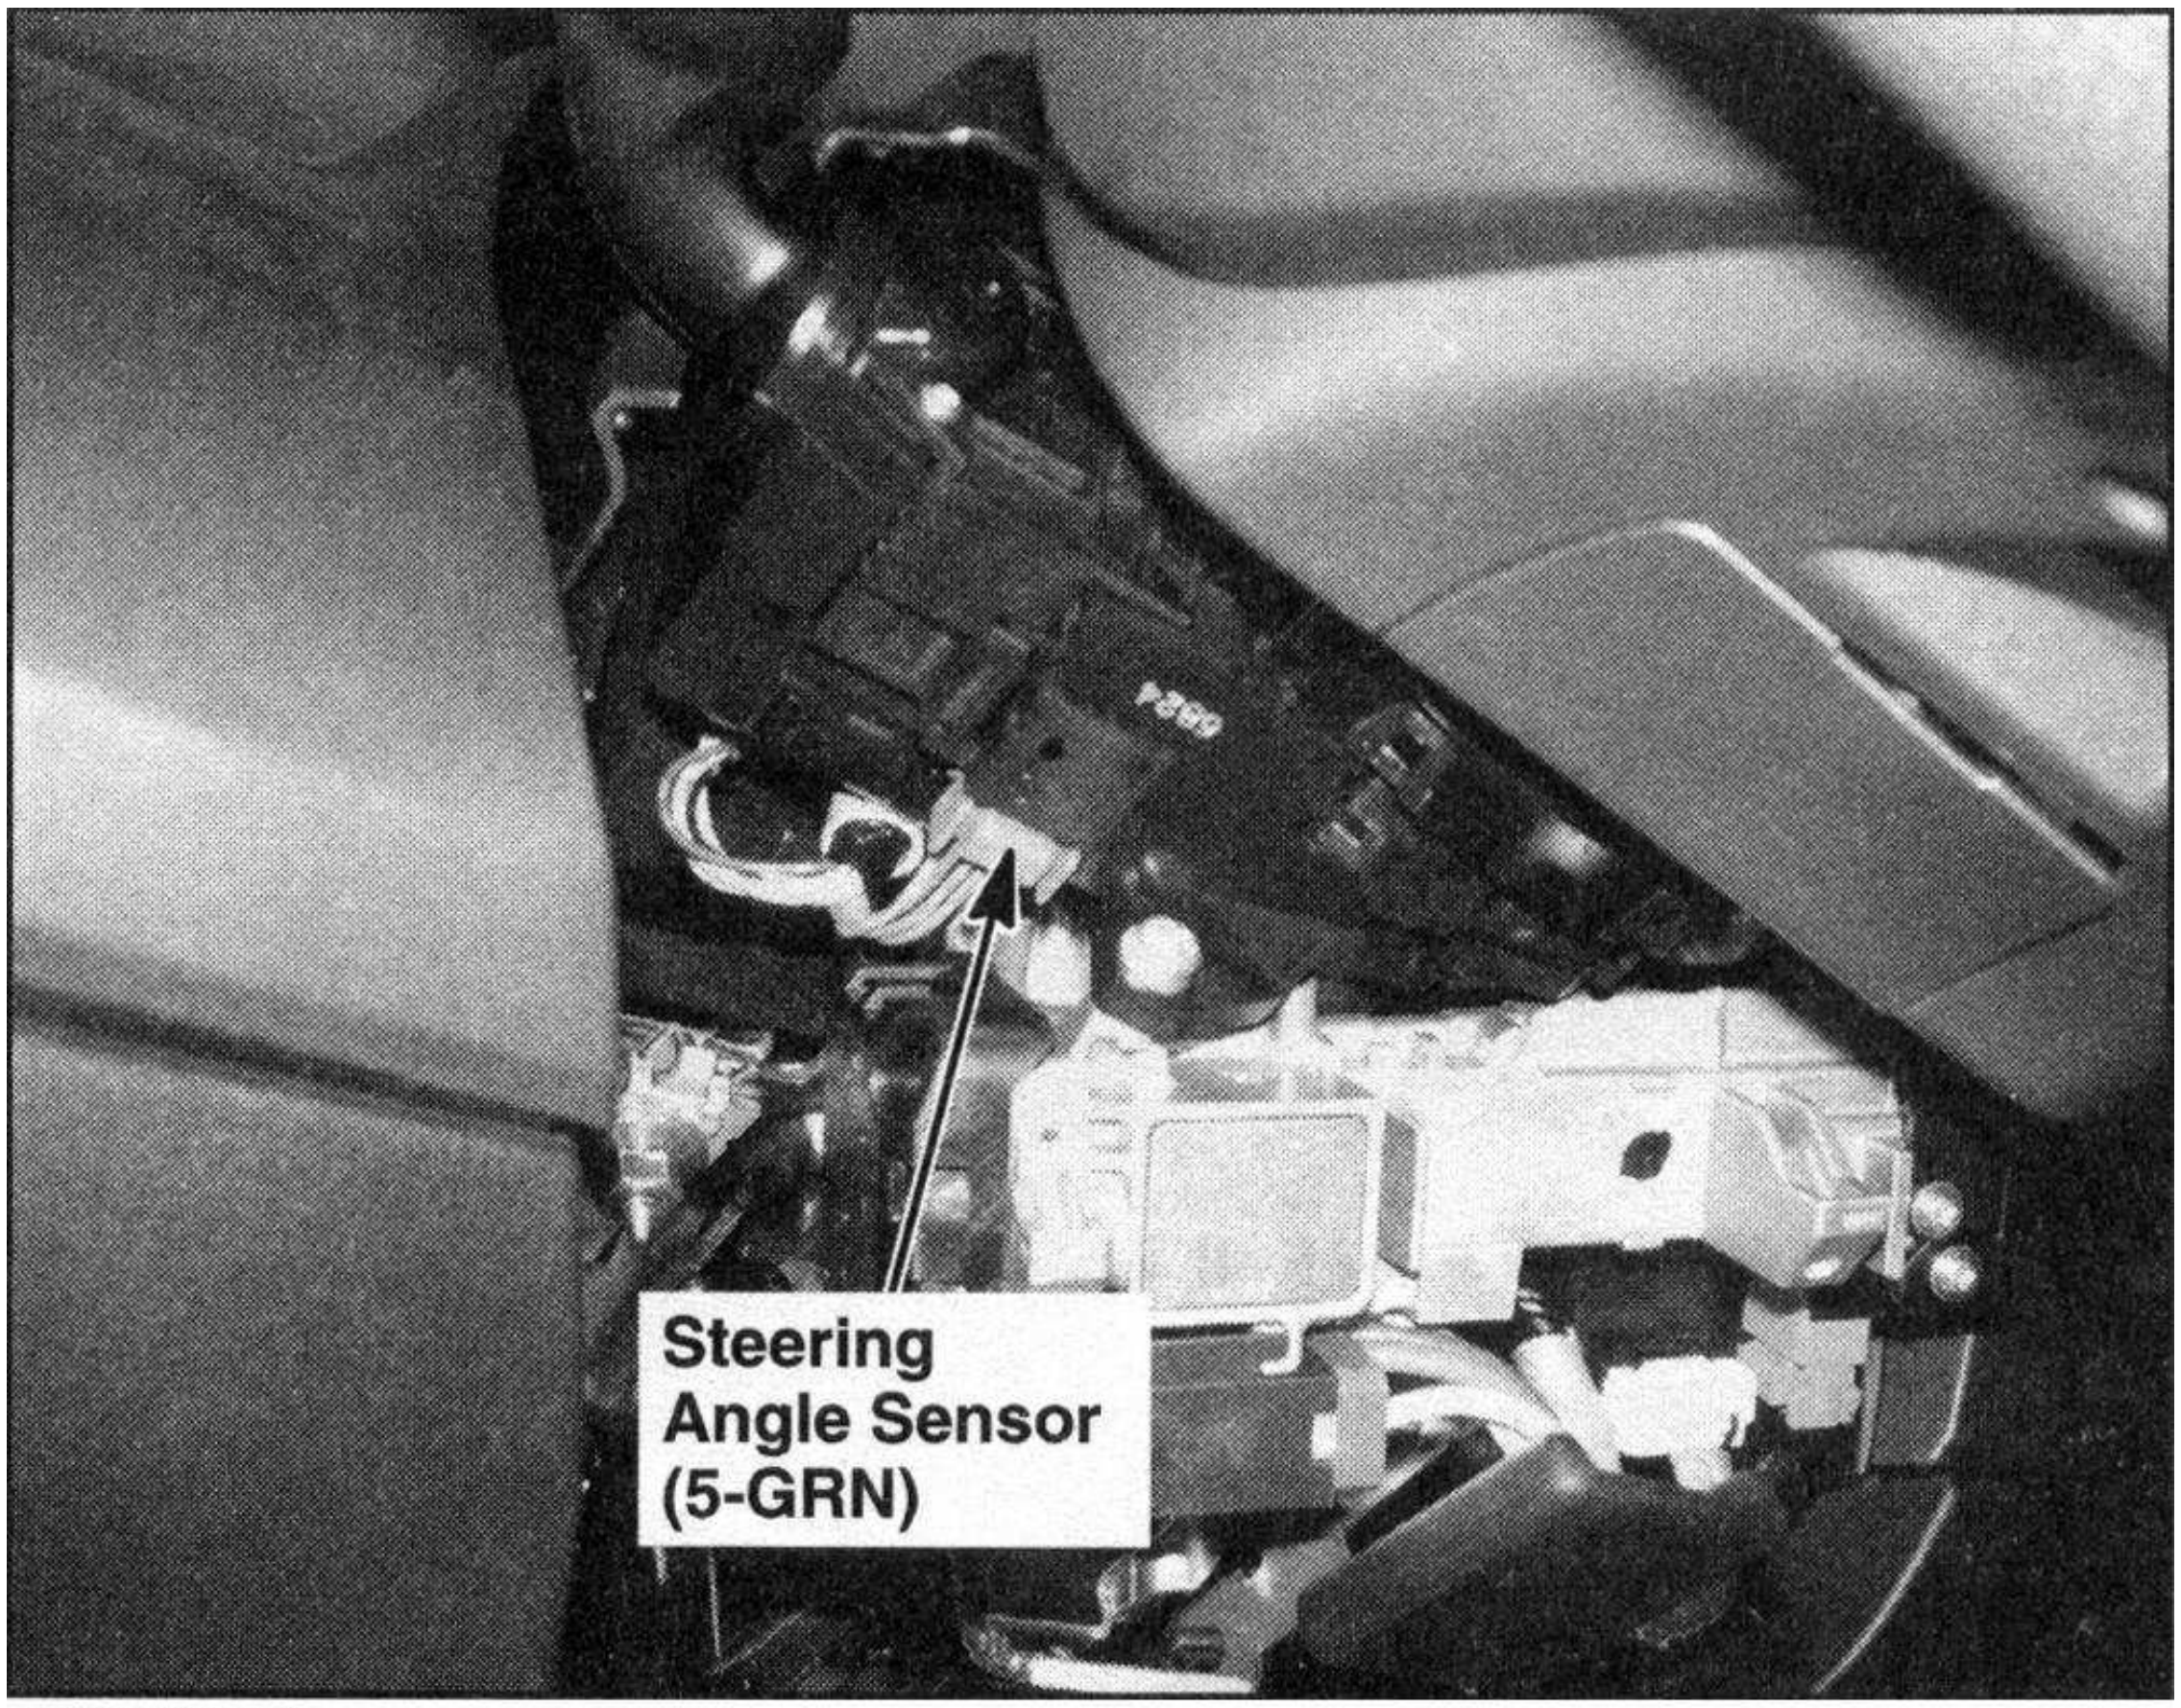
Steering
Angle Sensor
(5-GRN)
G00447746

Fig. 165: Steering Column Cover (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

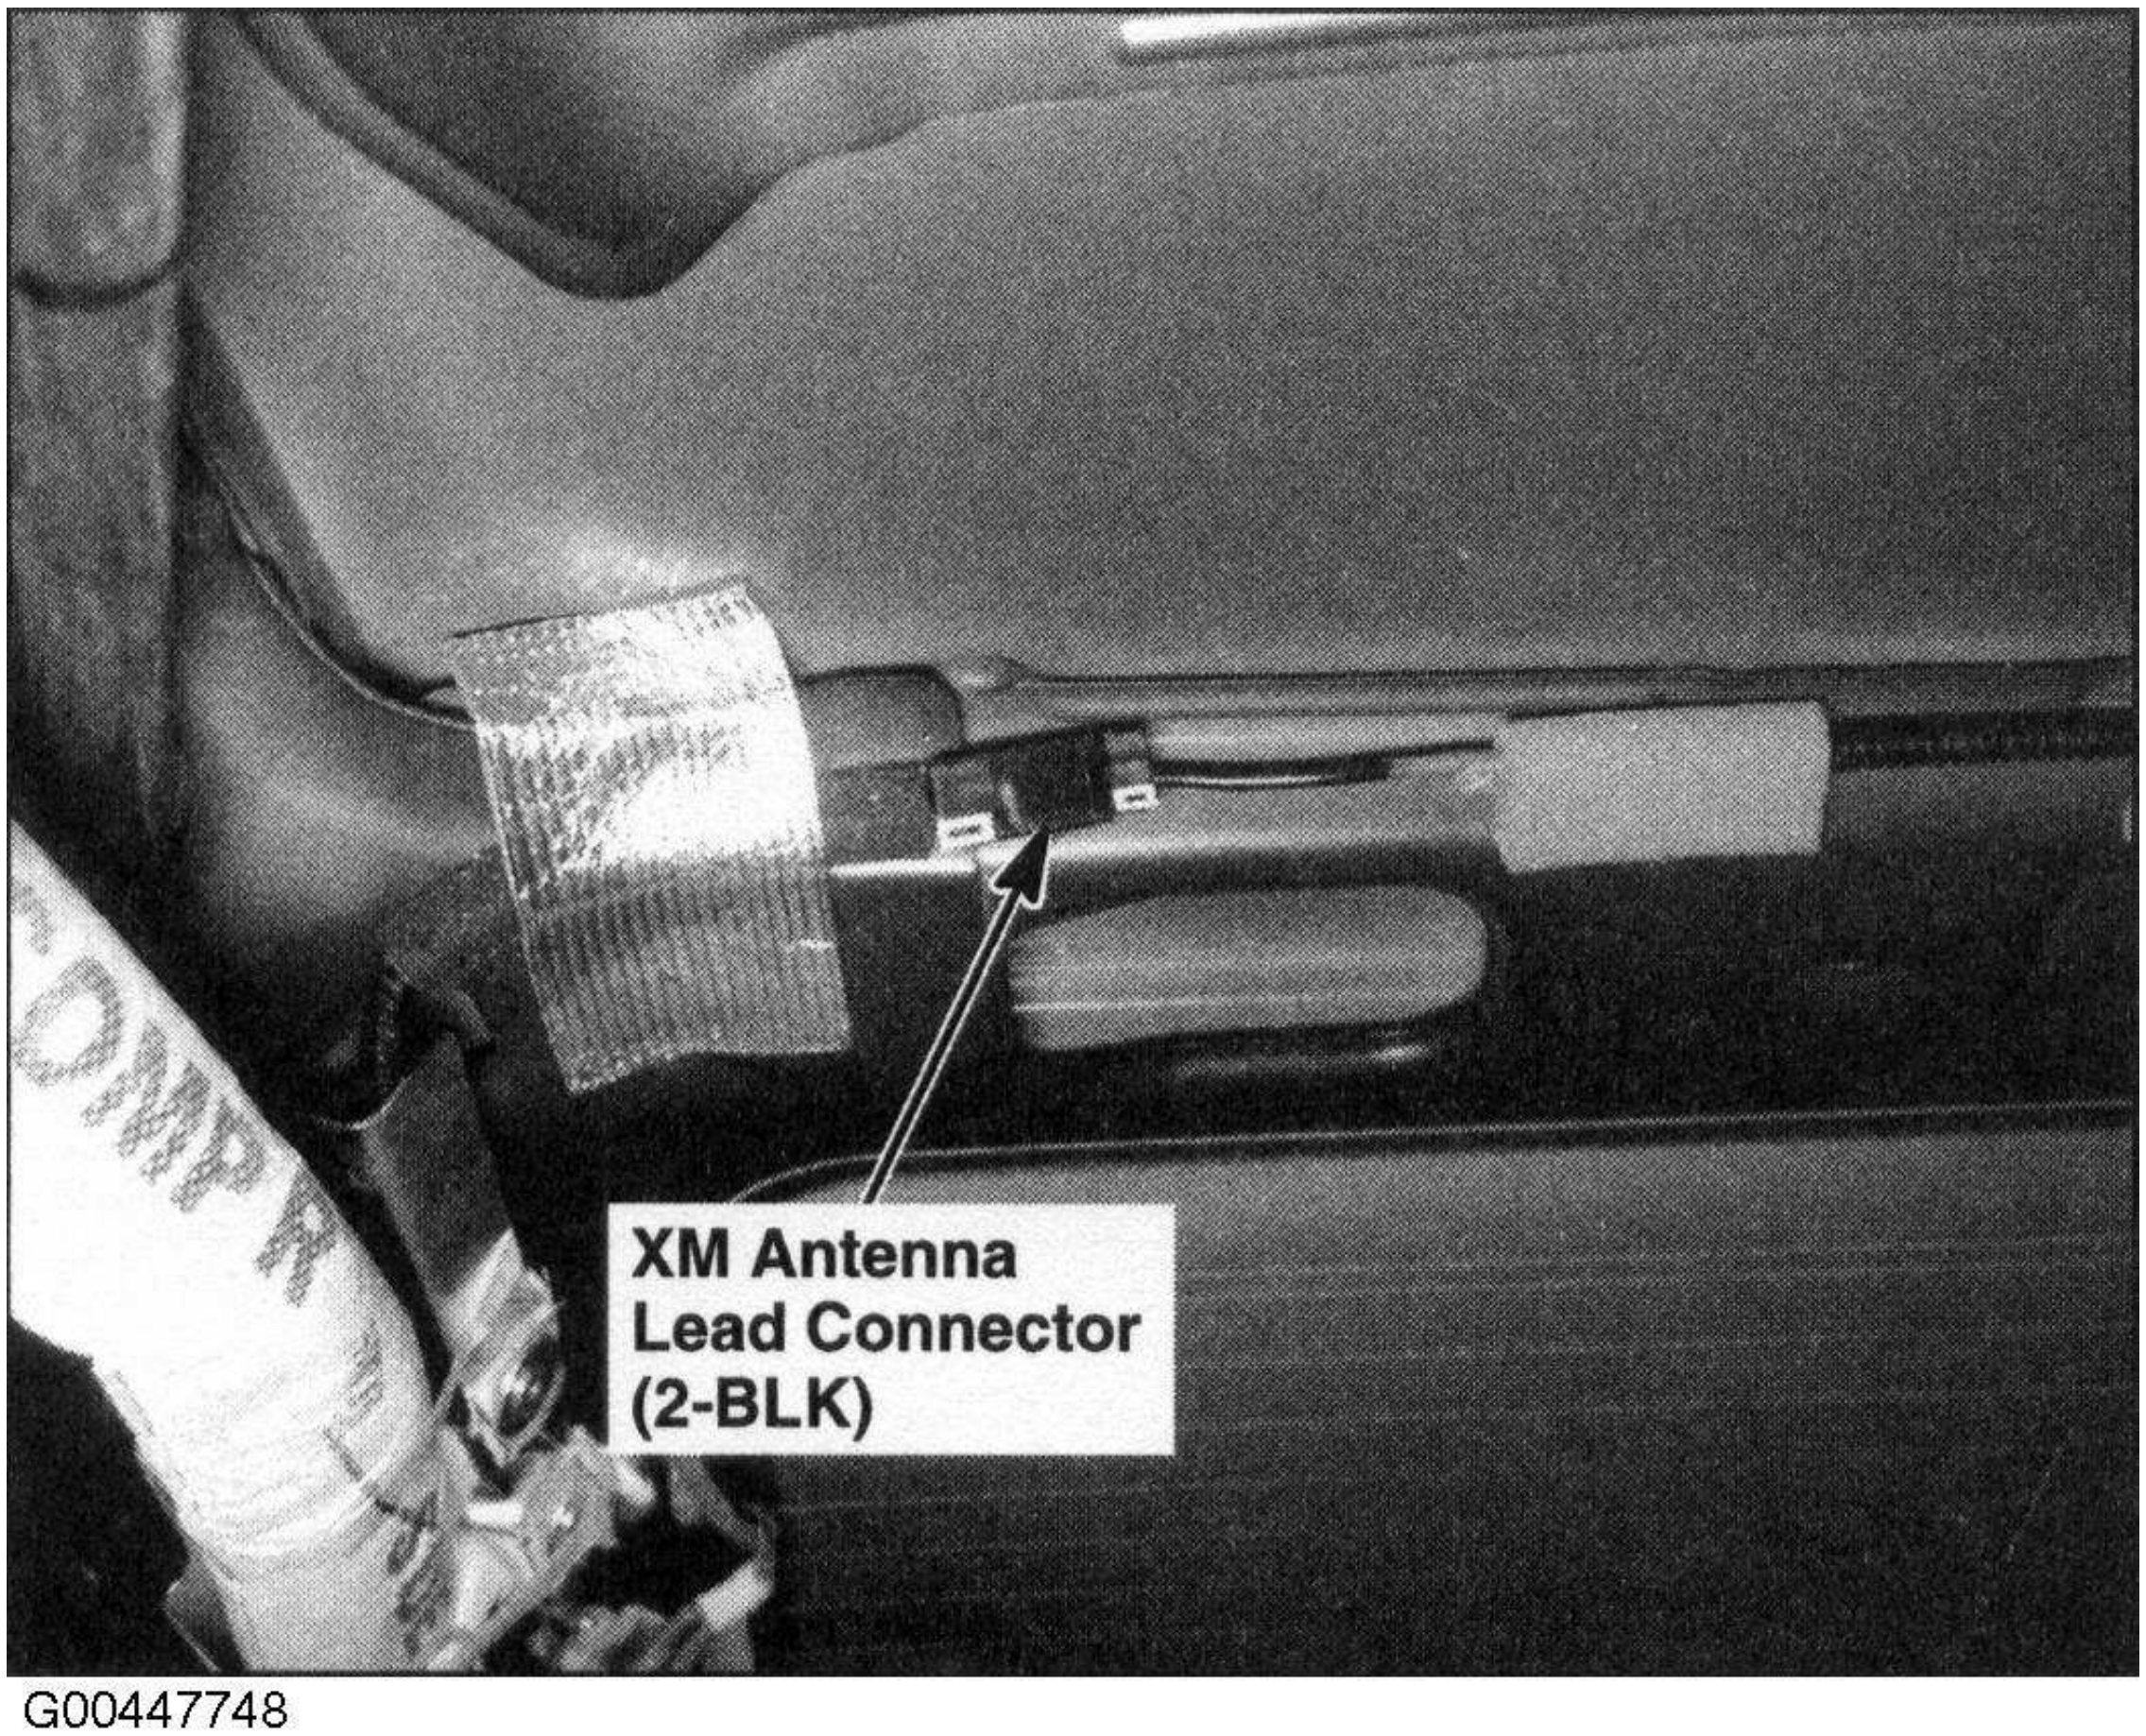
XM Antenna Lead Connector (2-BLK)
G00447748

Fig. 166: Left Rear Of Roof (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

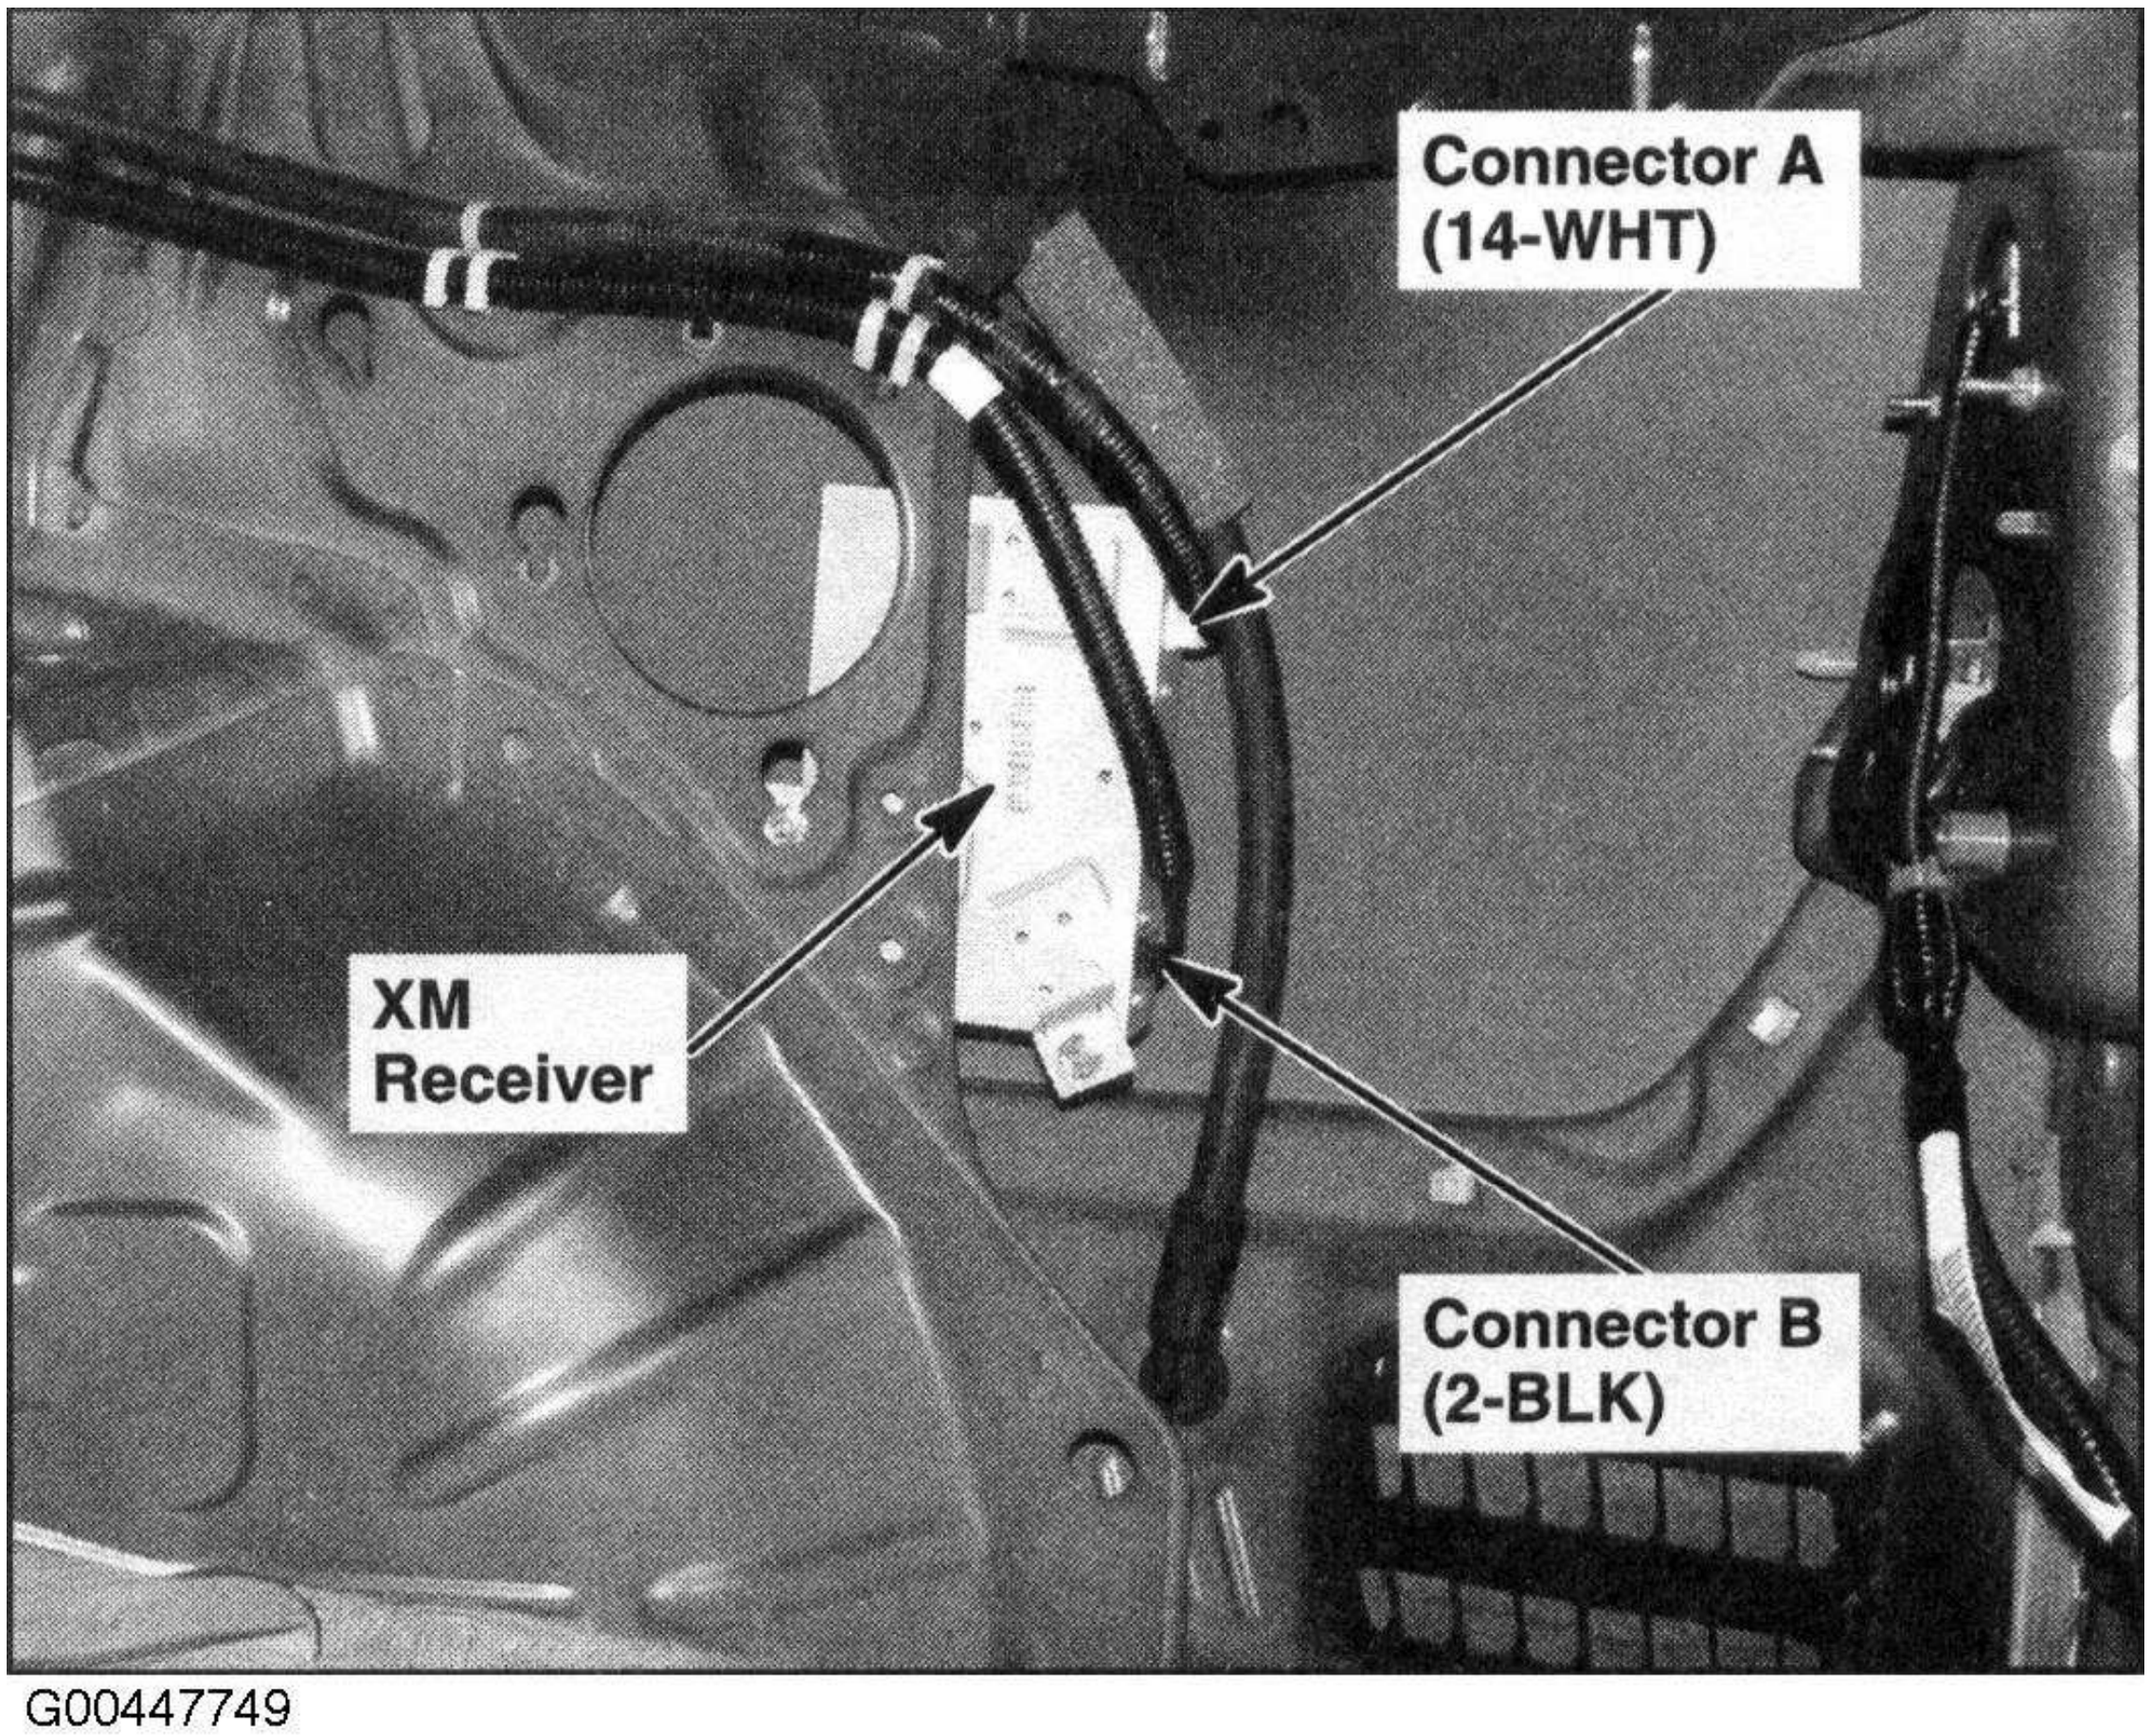
Connector A
(14-WHT)
XM
Receiver
Connector B
(2-BLK)
G00447749

Fig. 167: Right Side Of Trunk (4-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

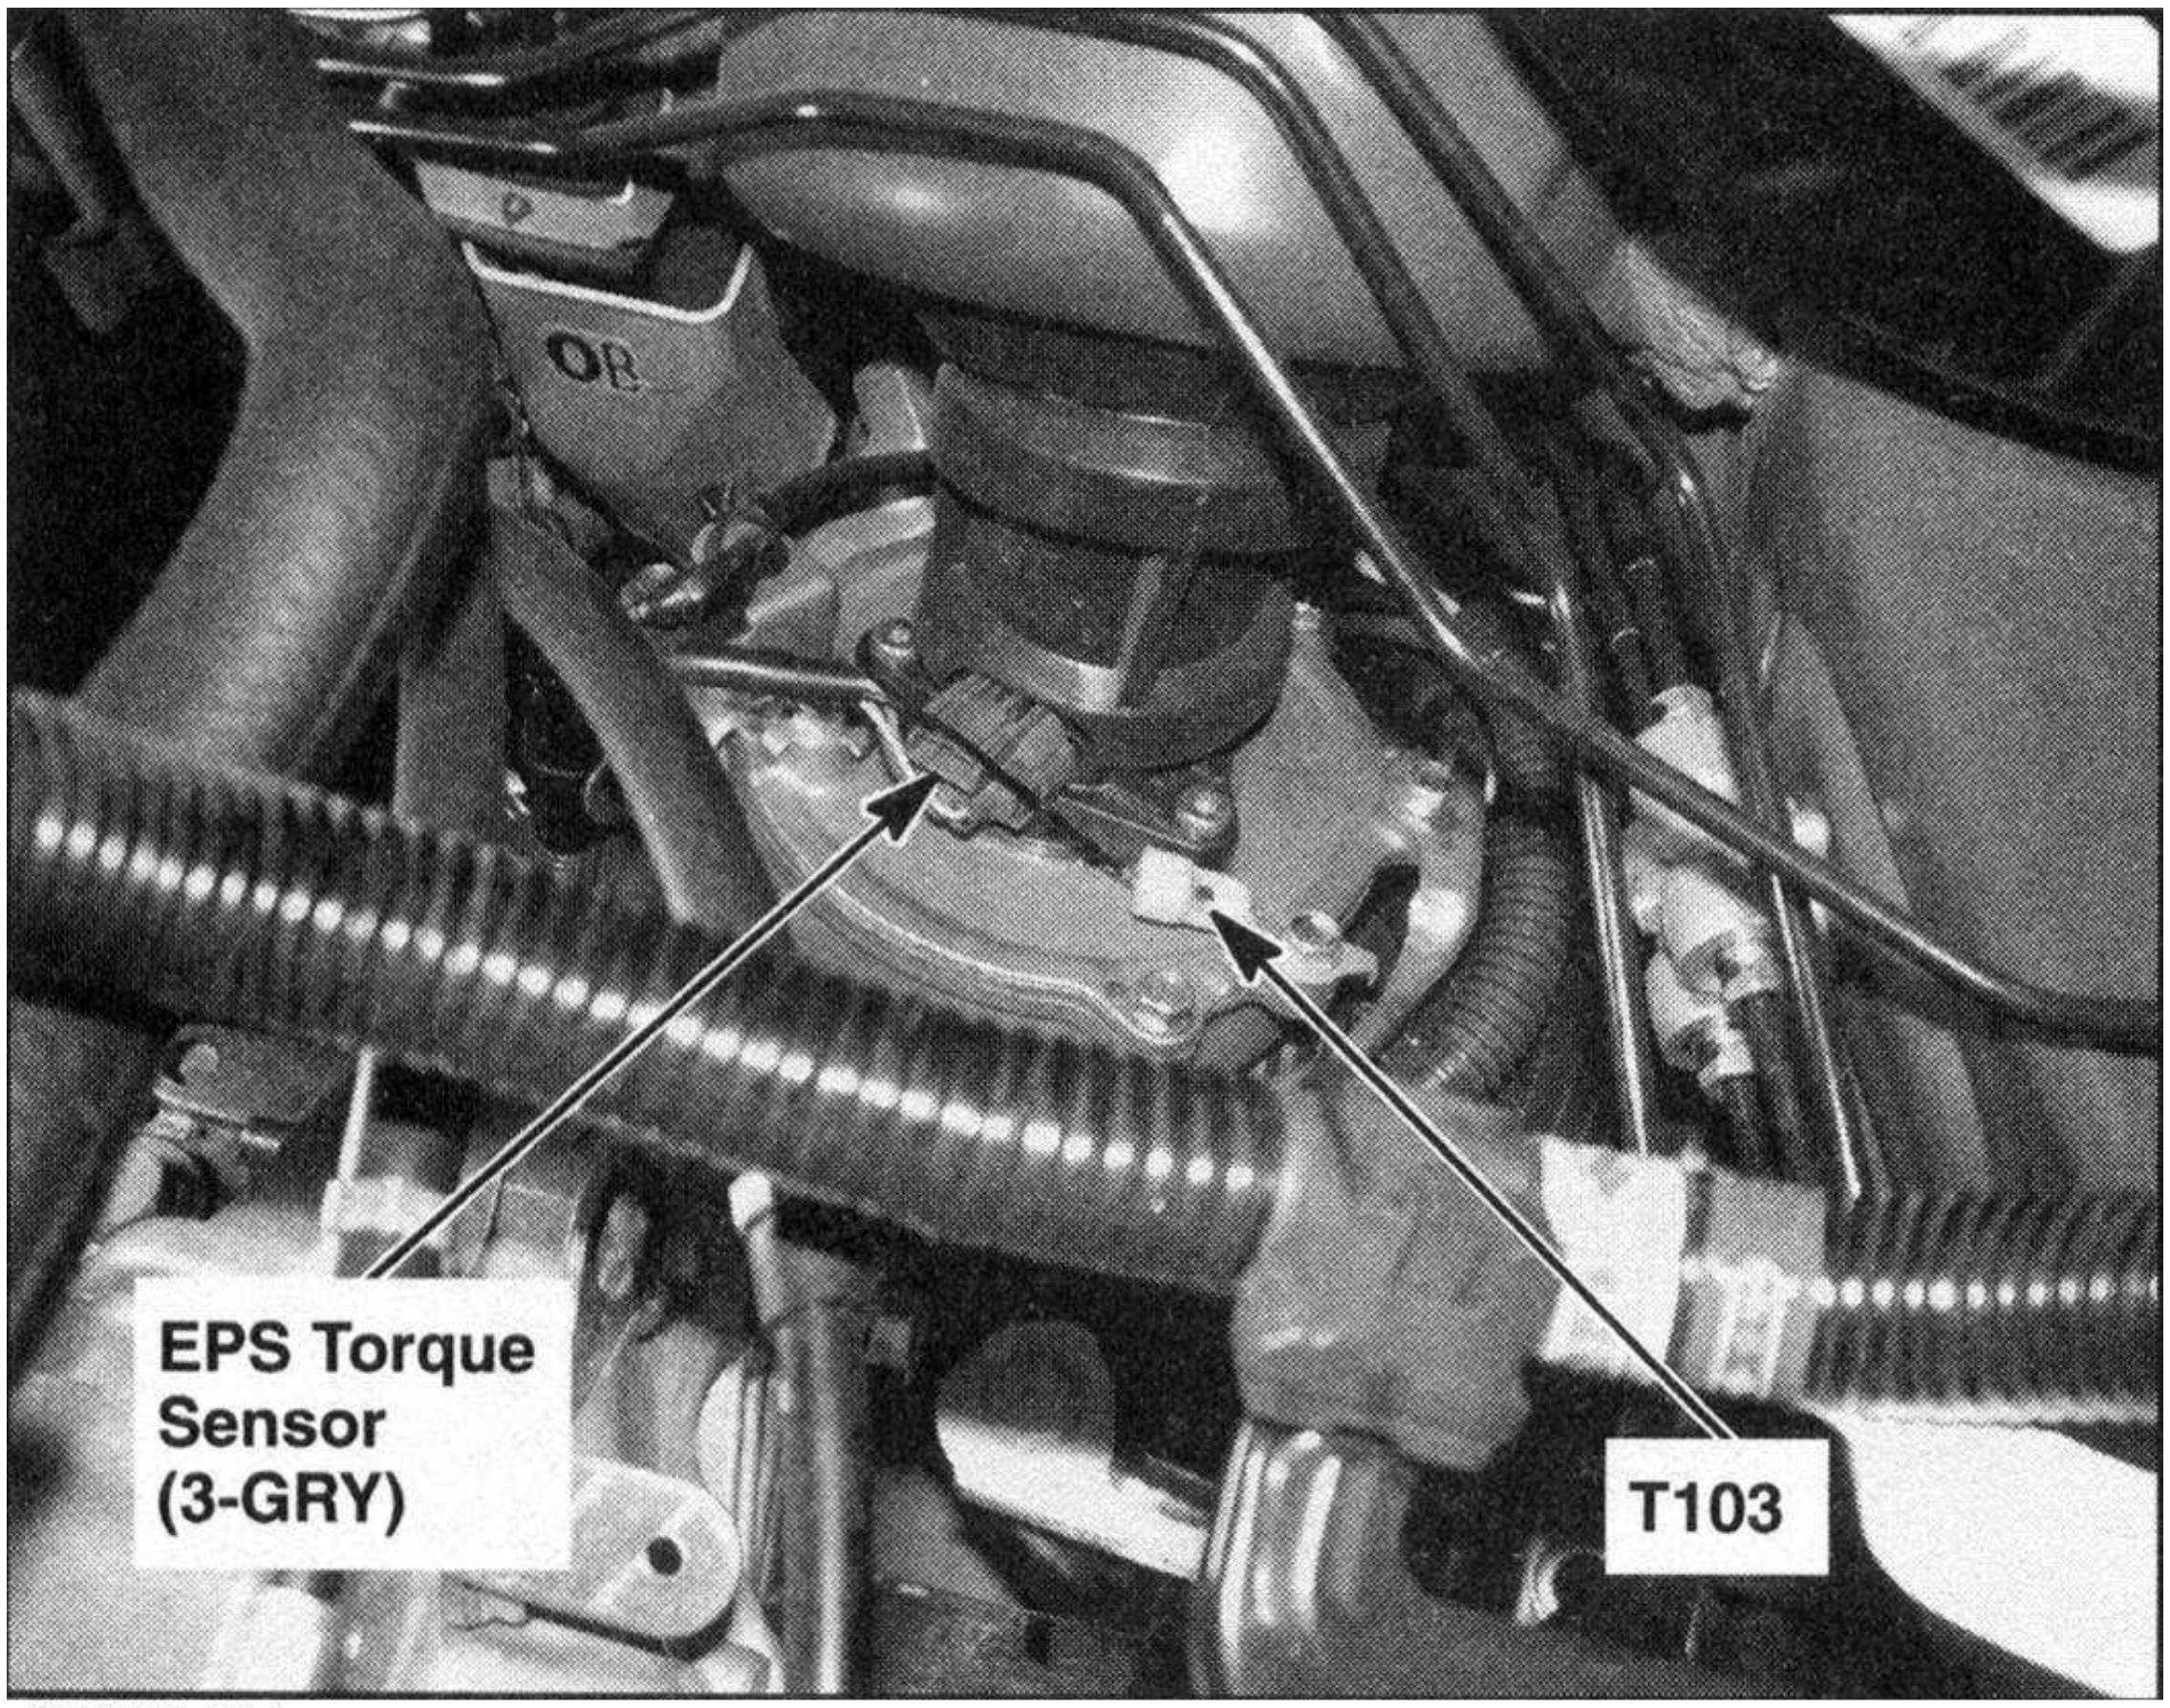
EPS Torque Sensor (3-GRY)
T103
G00447910

Fig. 168: Left Side Of Engine Compartment (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

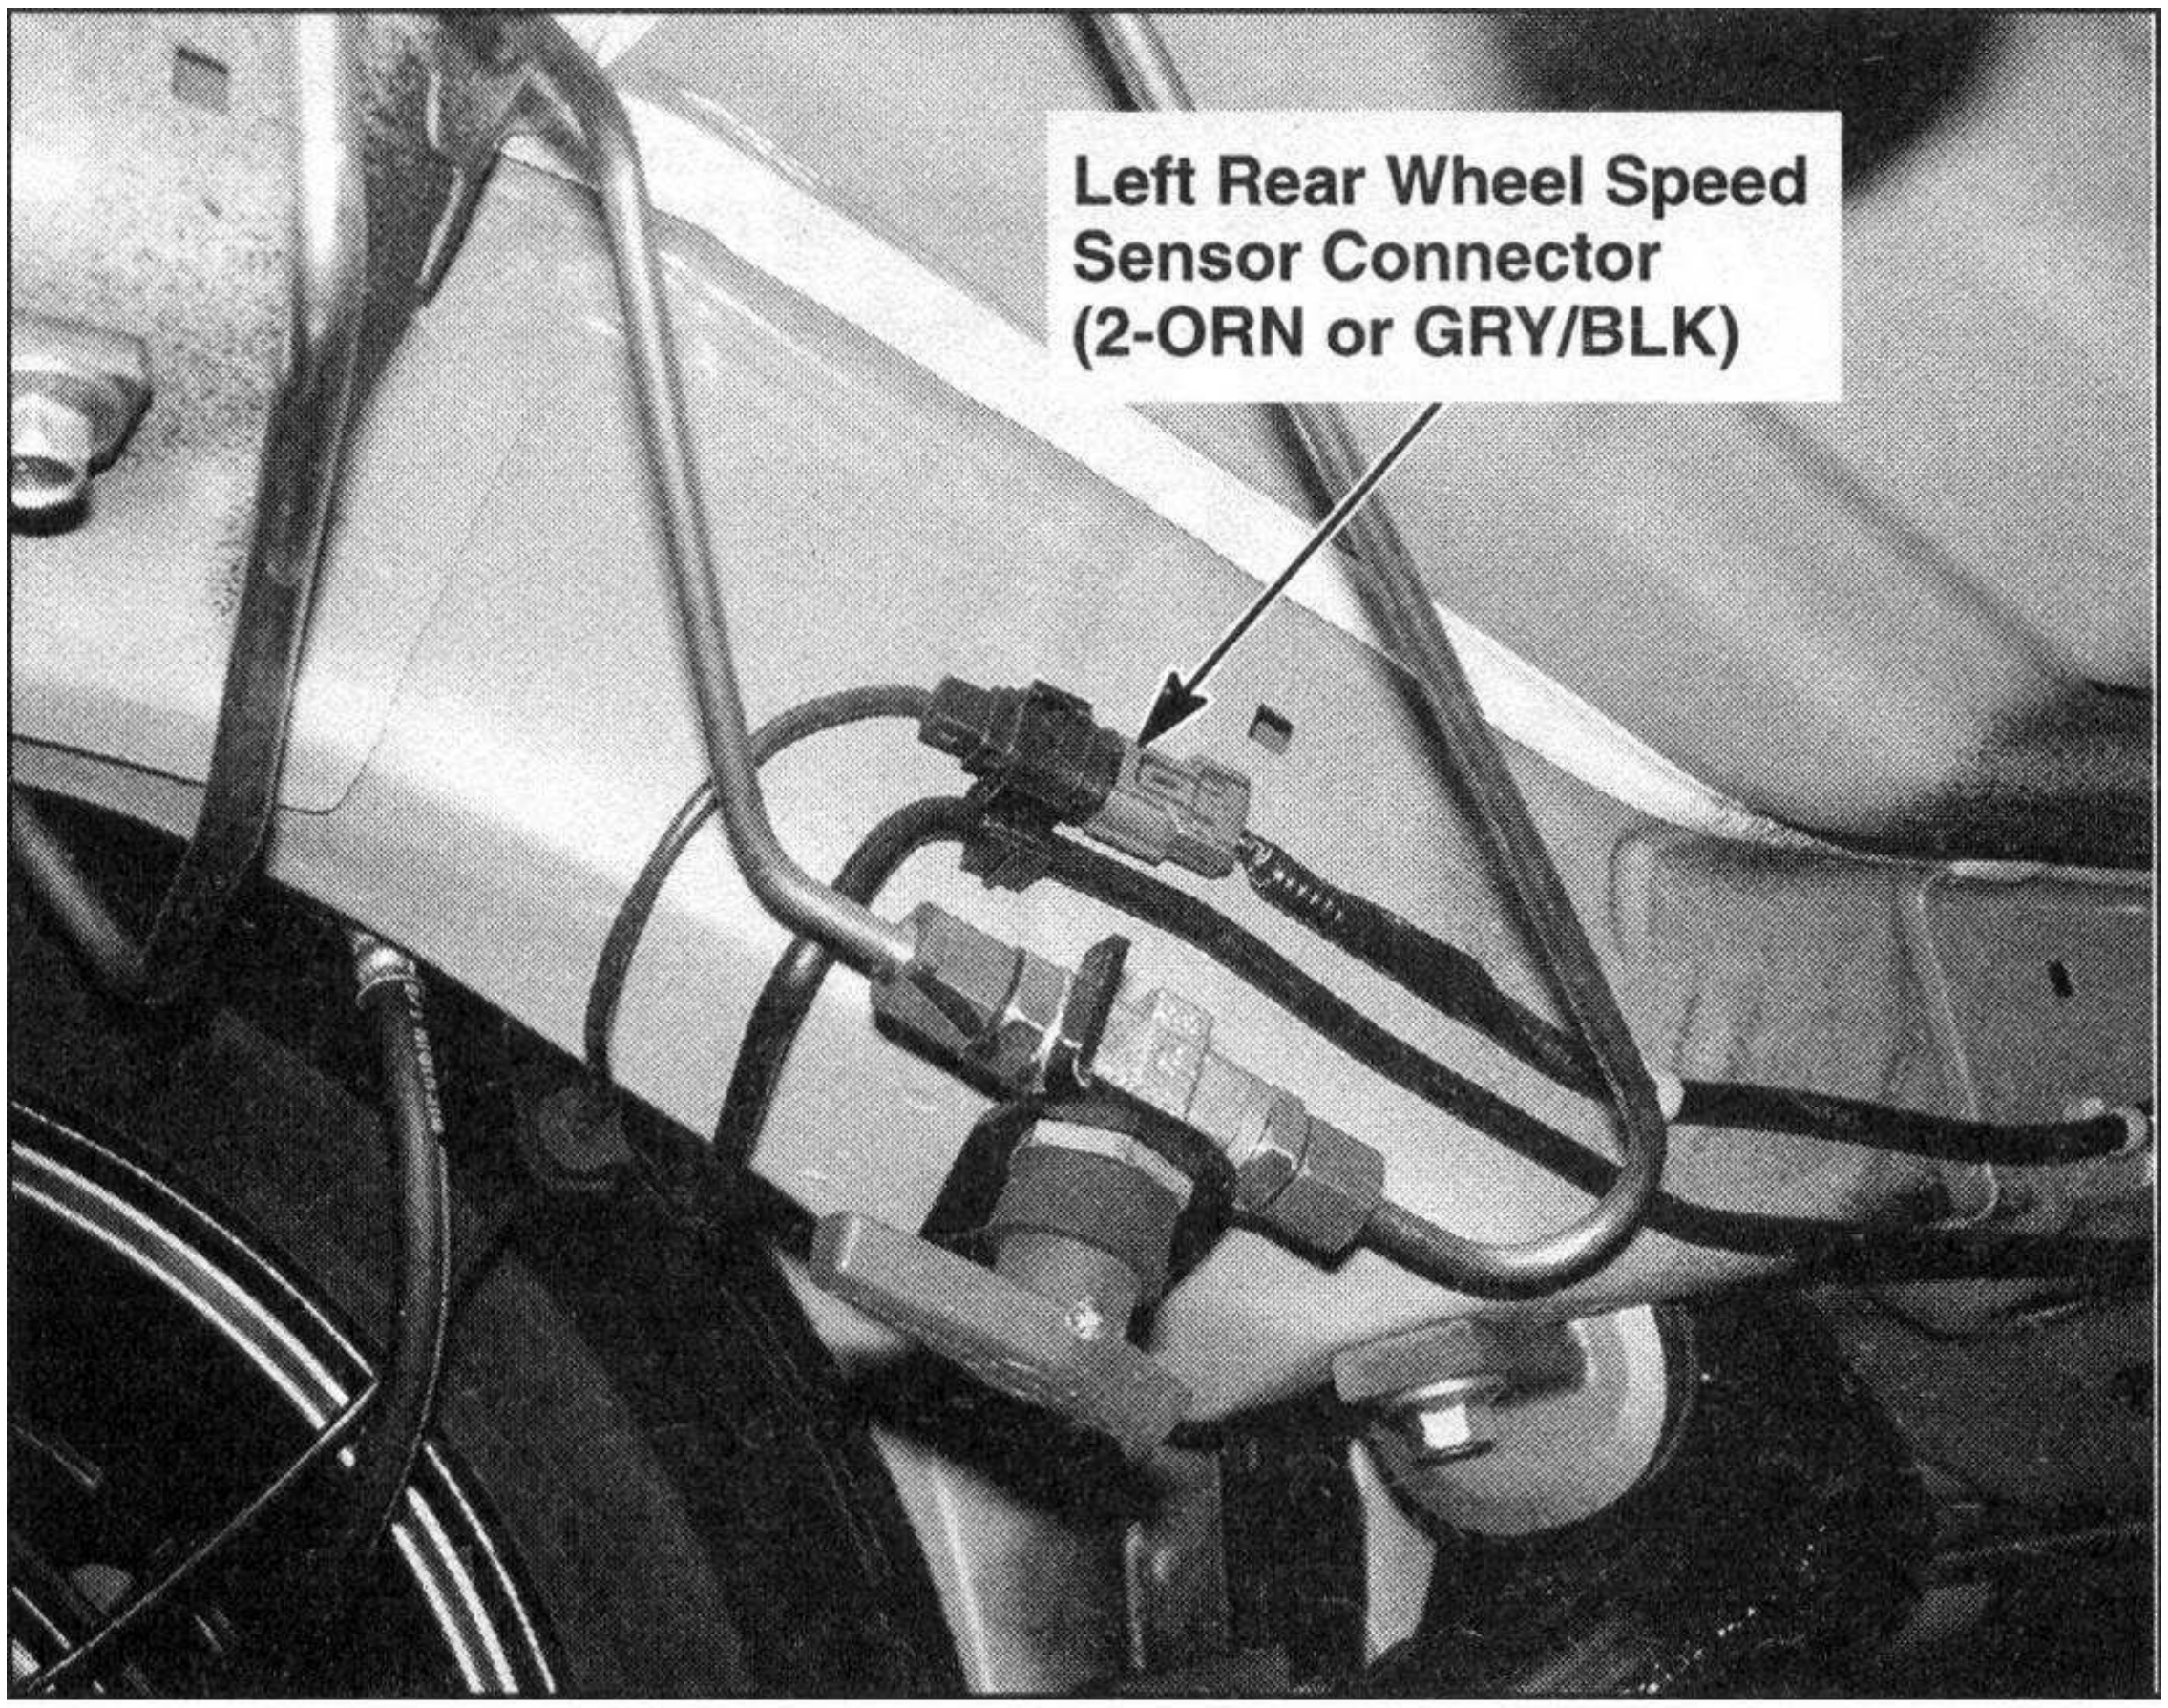
Left Rear Wheel Speed Sensor Connector (2-ORN or GRY/BLK)
G00447911

Fig. 169: Under Left Rear Of Vehicle (Right Similar)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

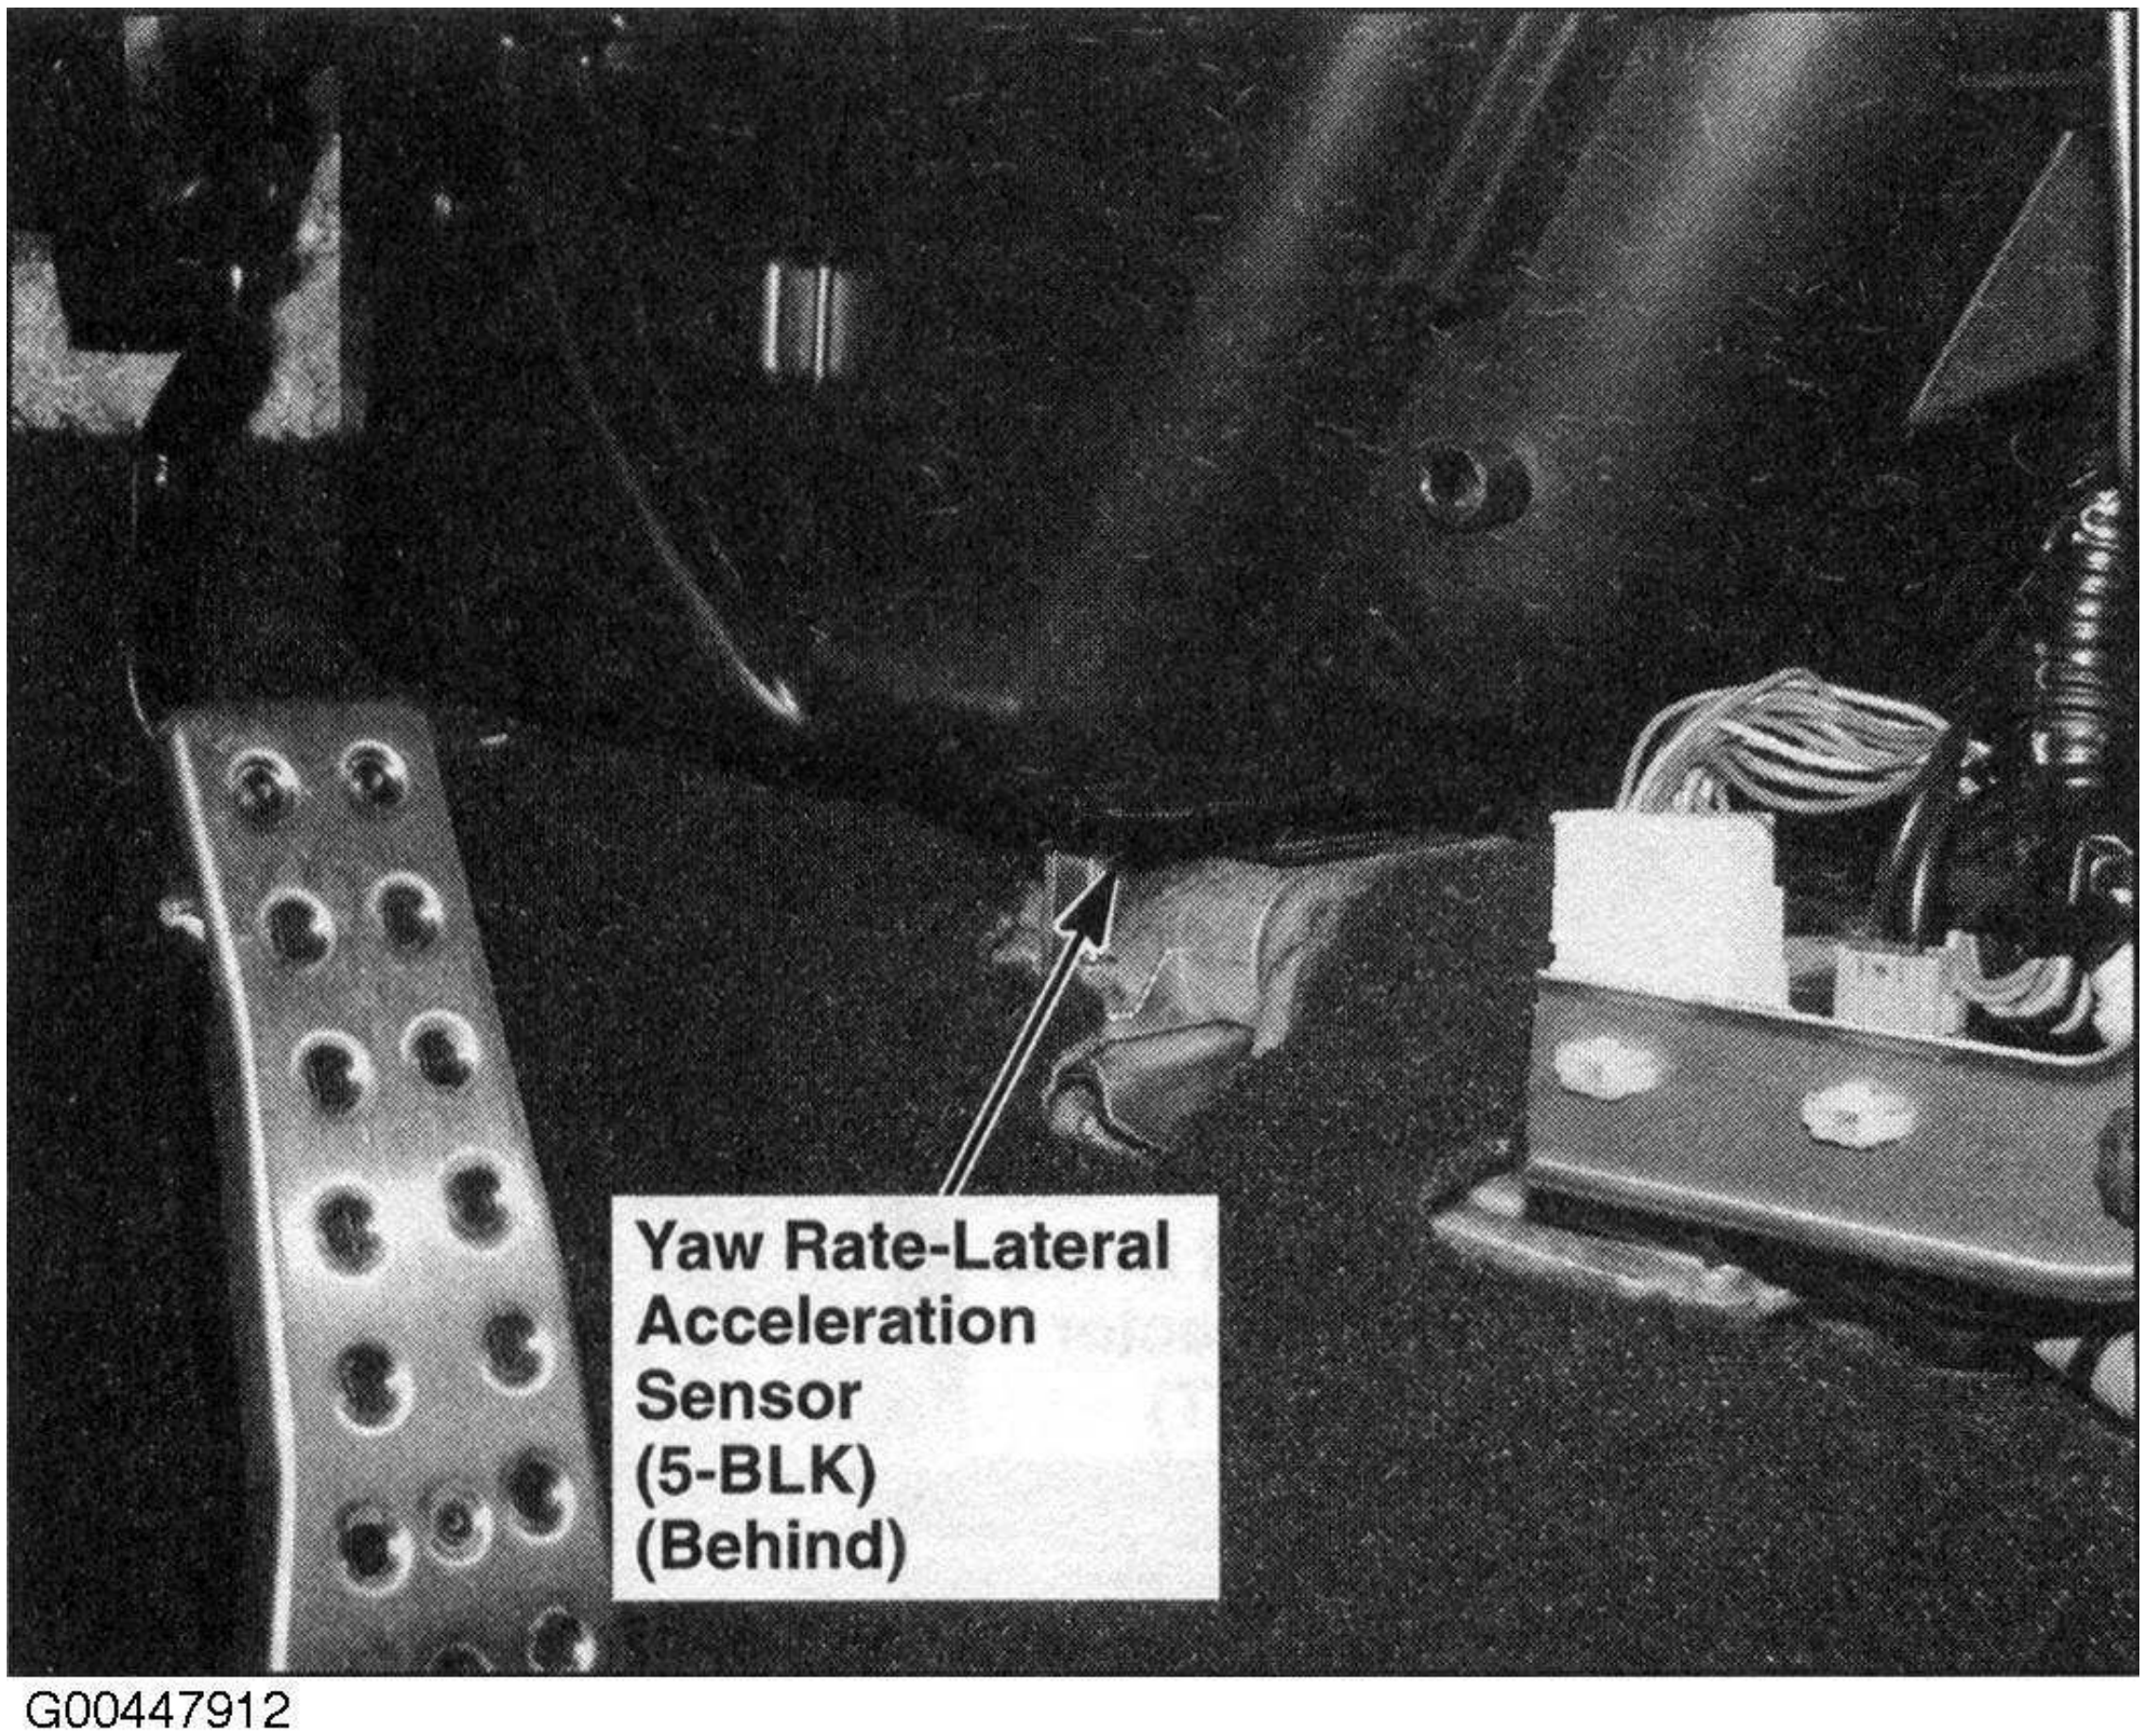
Yaw Rate-Lateral Acceleration Sensor (5-BLK) (Behind)
G00447912

Fig. 170: Under Middle Of Dash (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

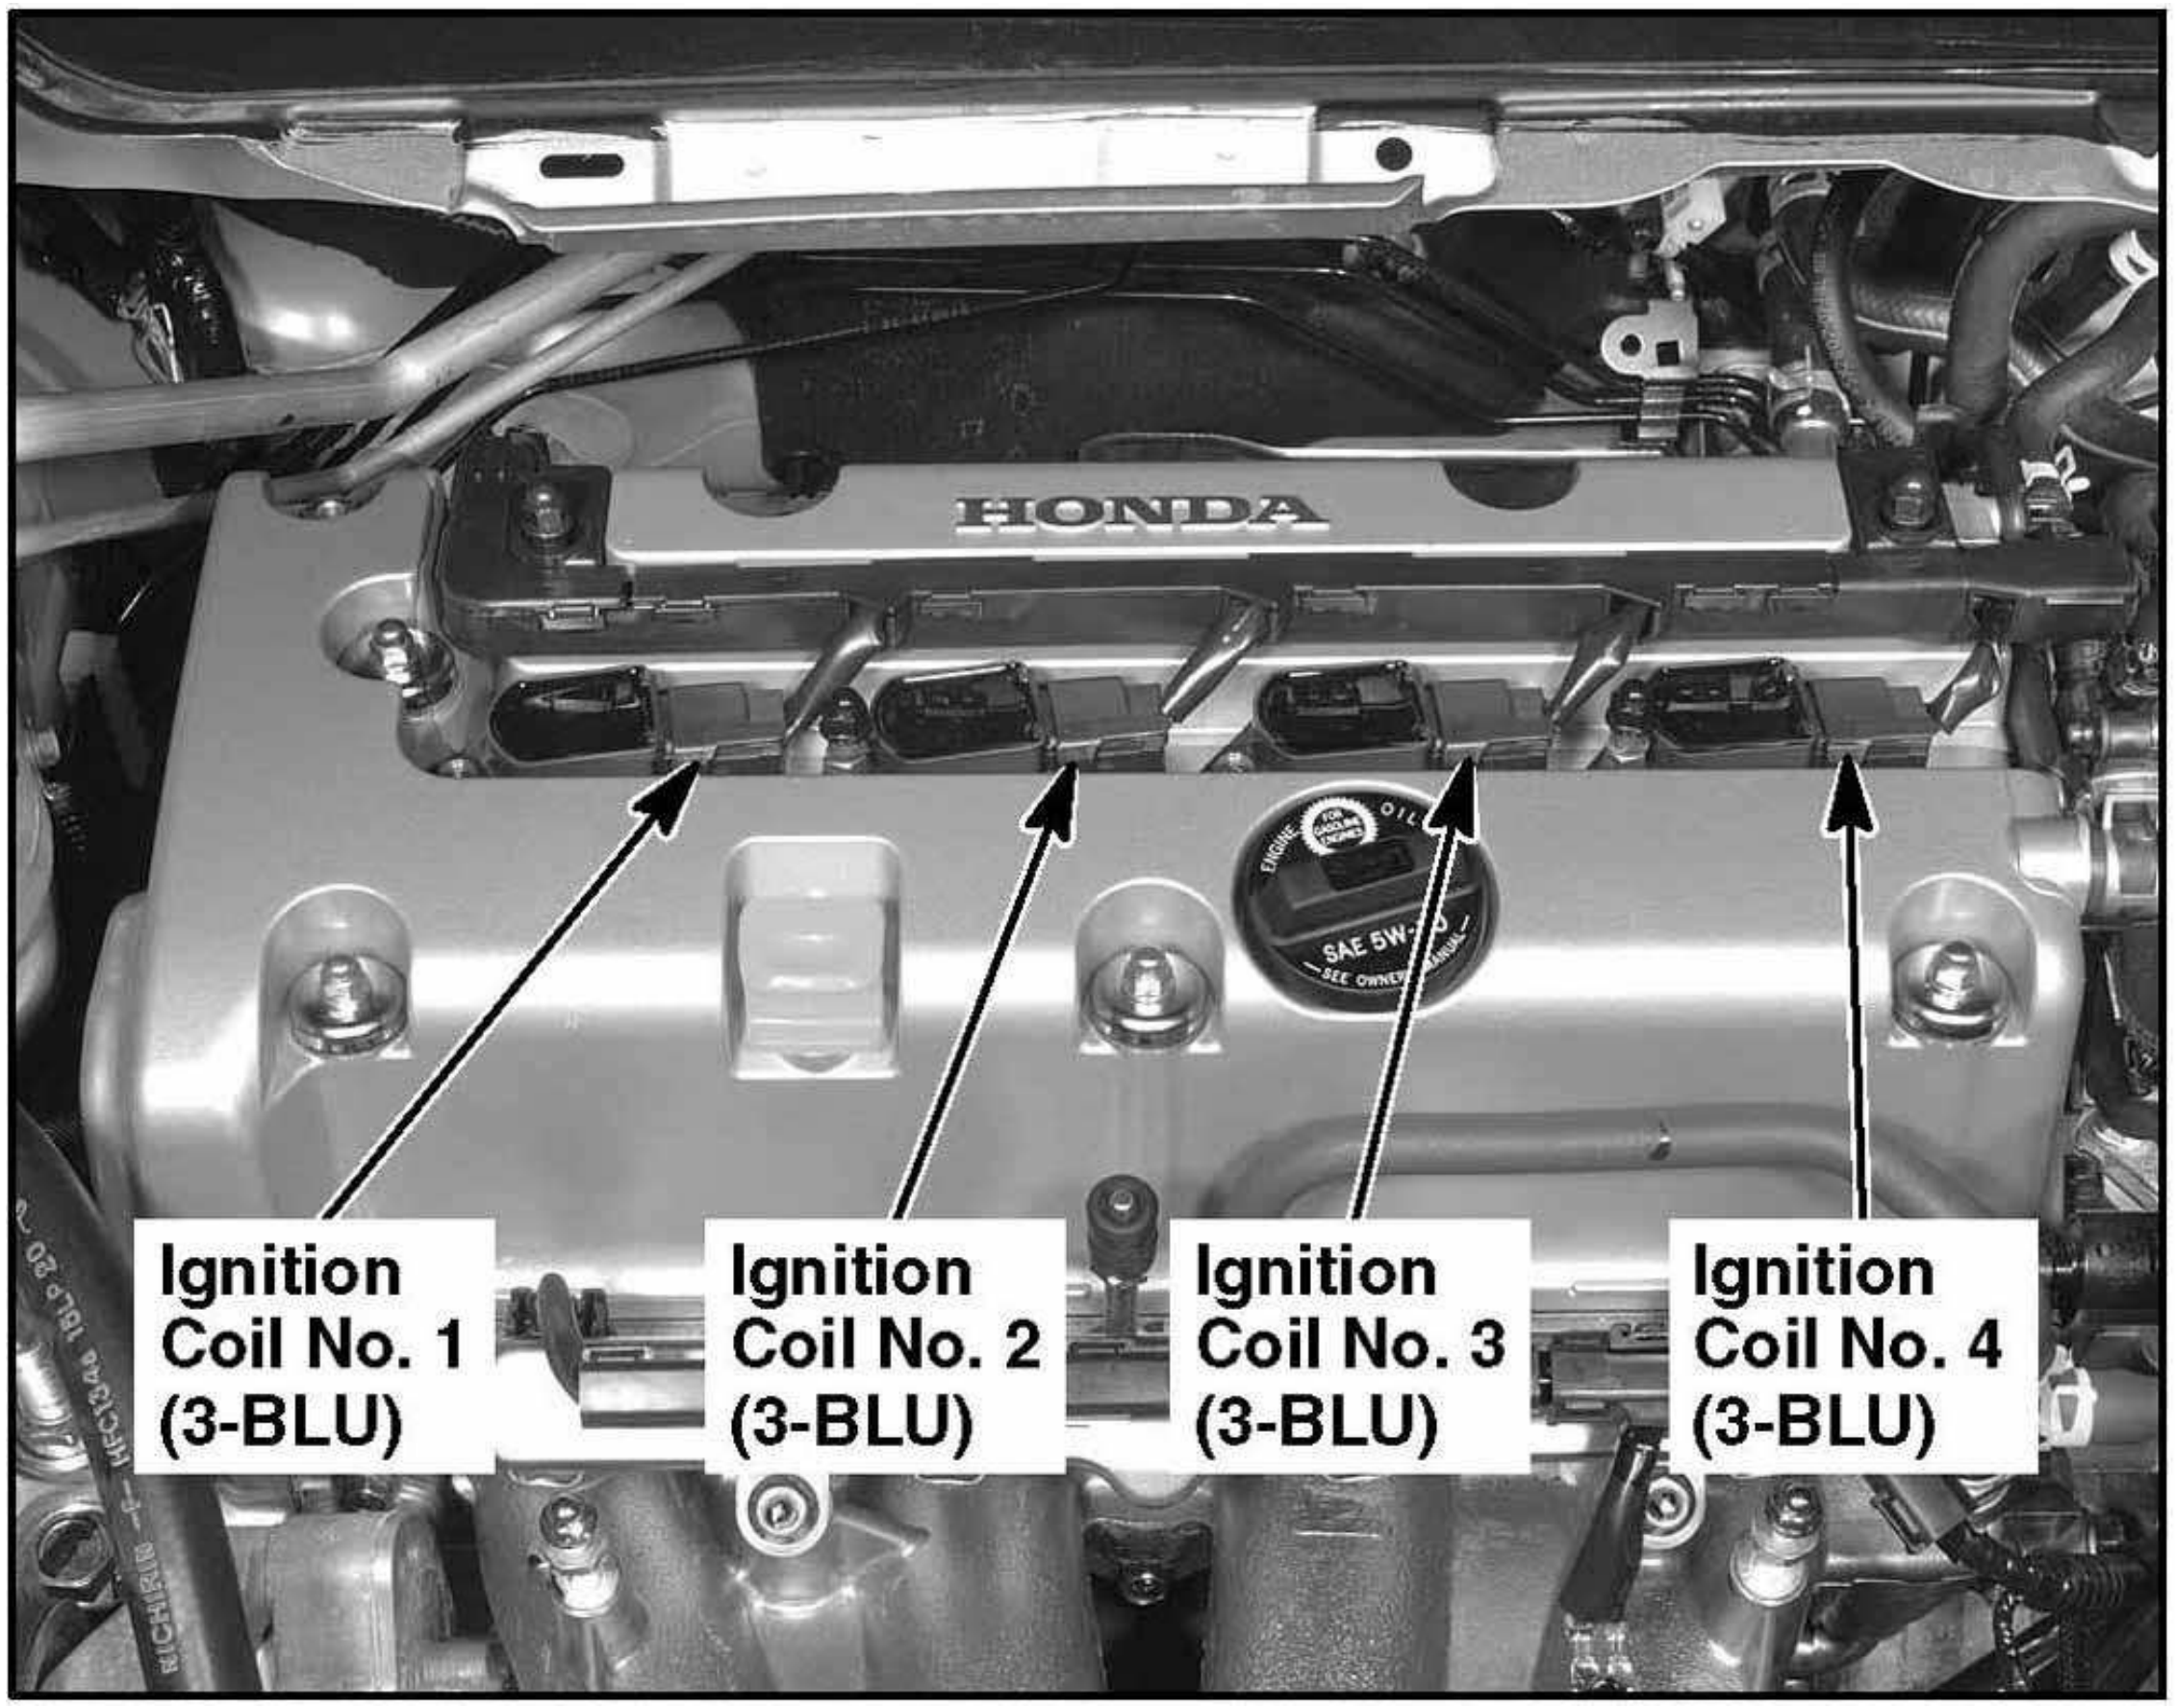
HONDA
Ignition Coil No. 1 (3-BLU)
Ignition Coil No. 2 (3-BLU)
Ignition Coil No. 3 (3-BLU)
Ignition Coil No. 4 (3-BLU)

Fig. 171: Top Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

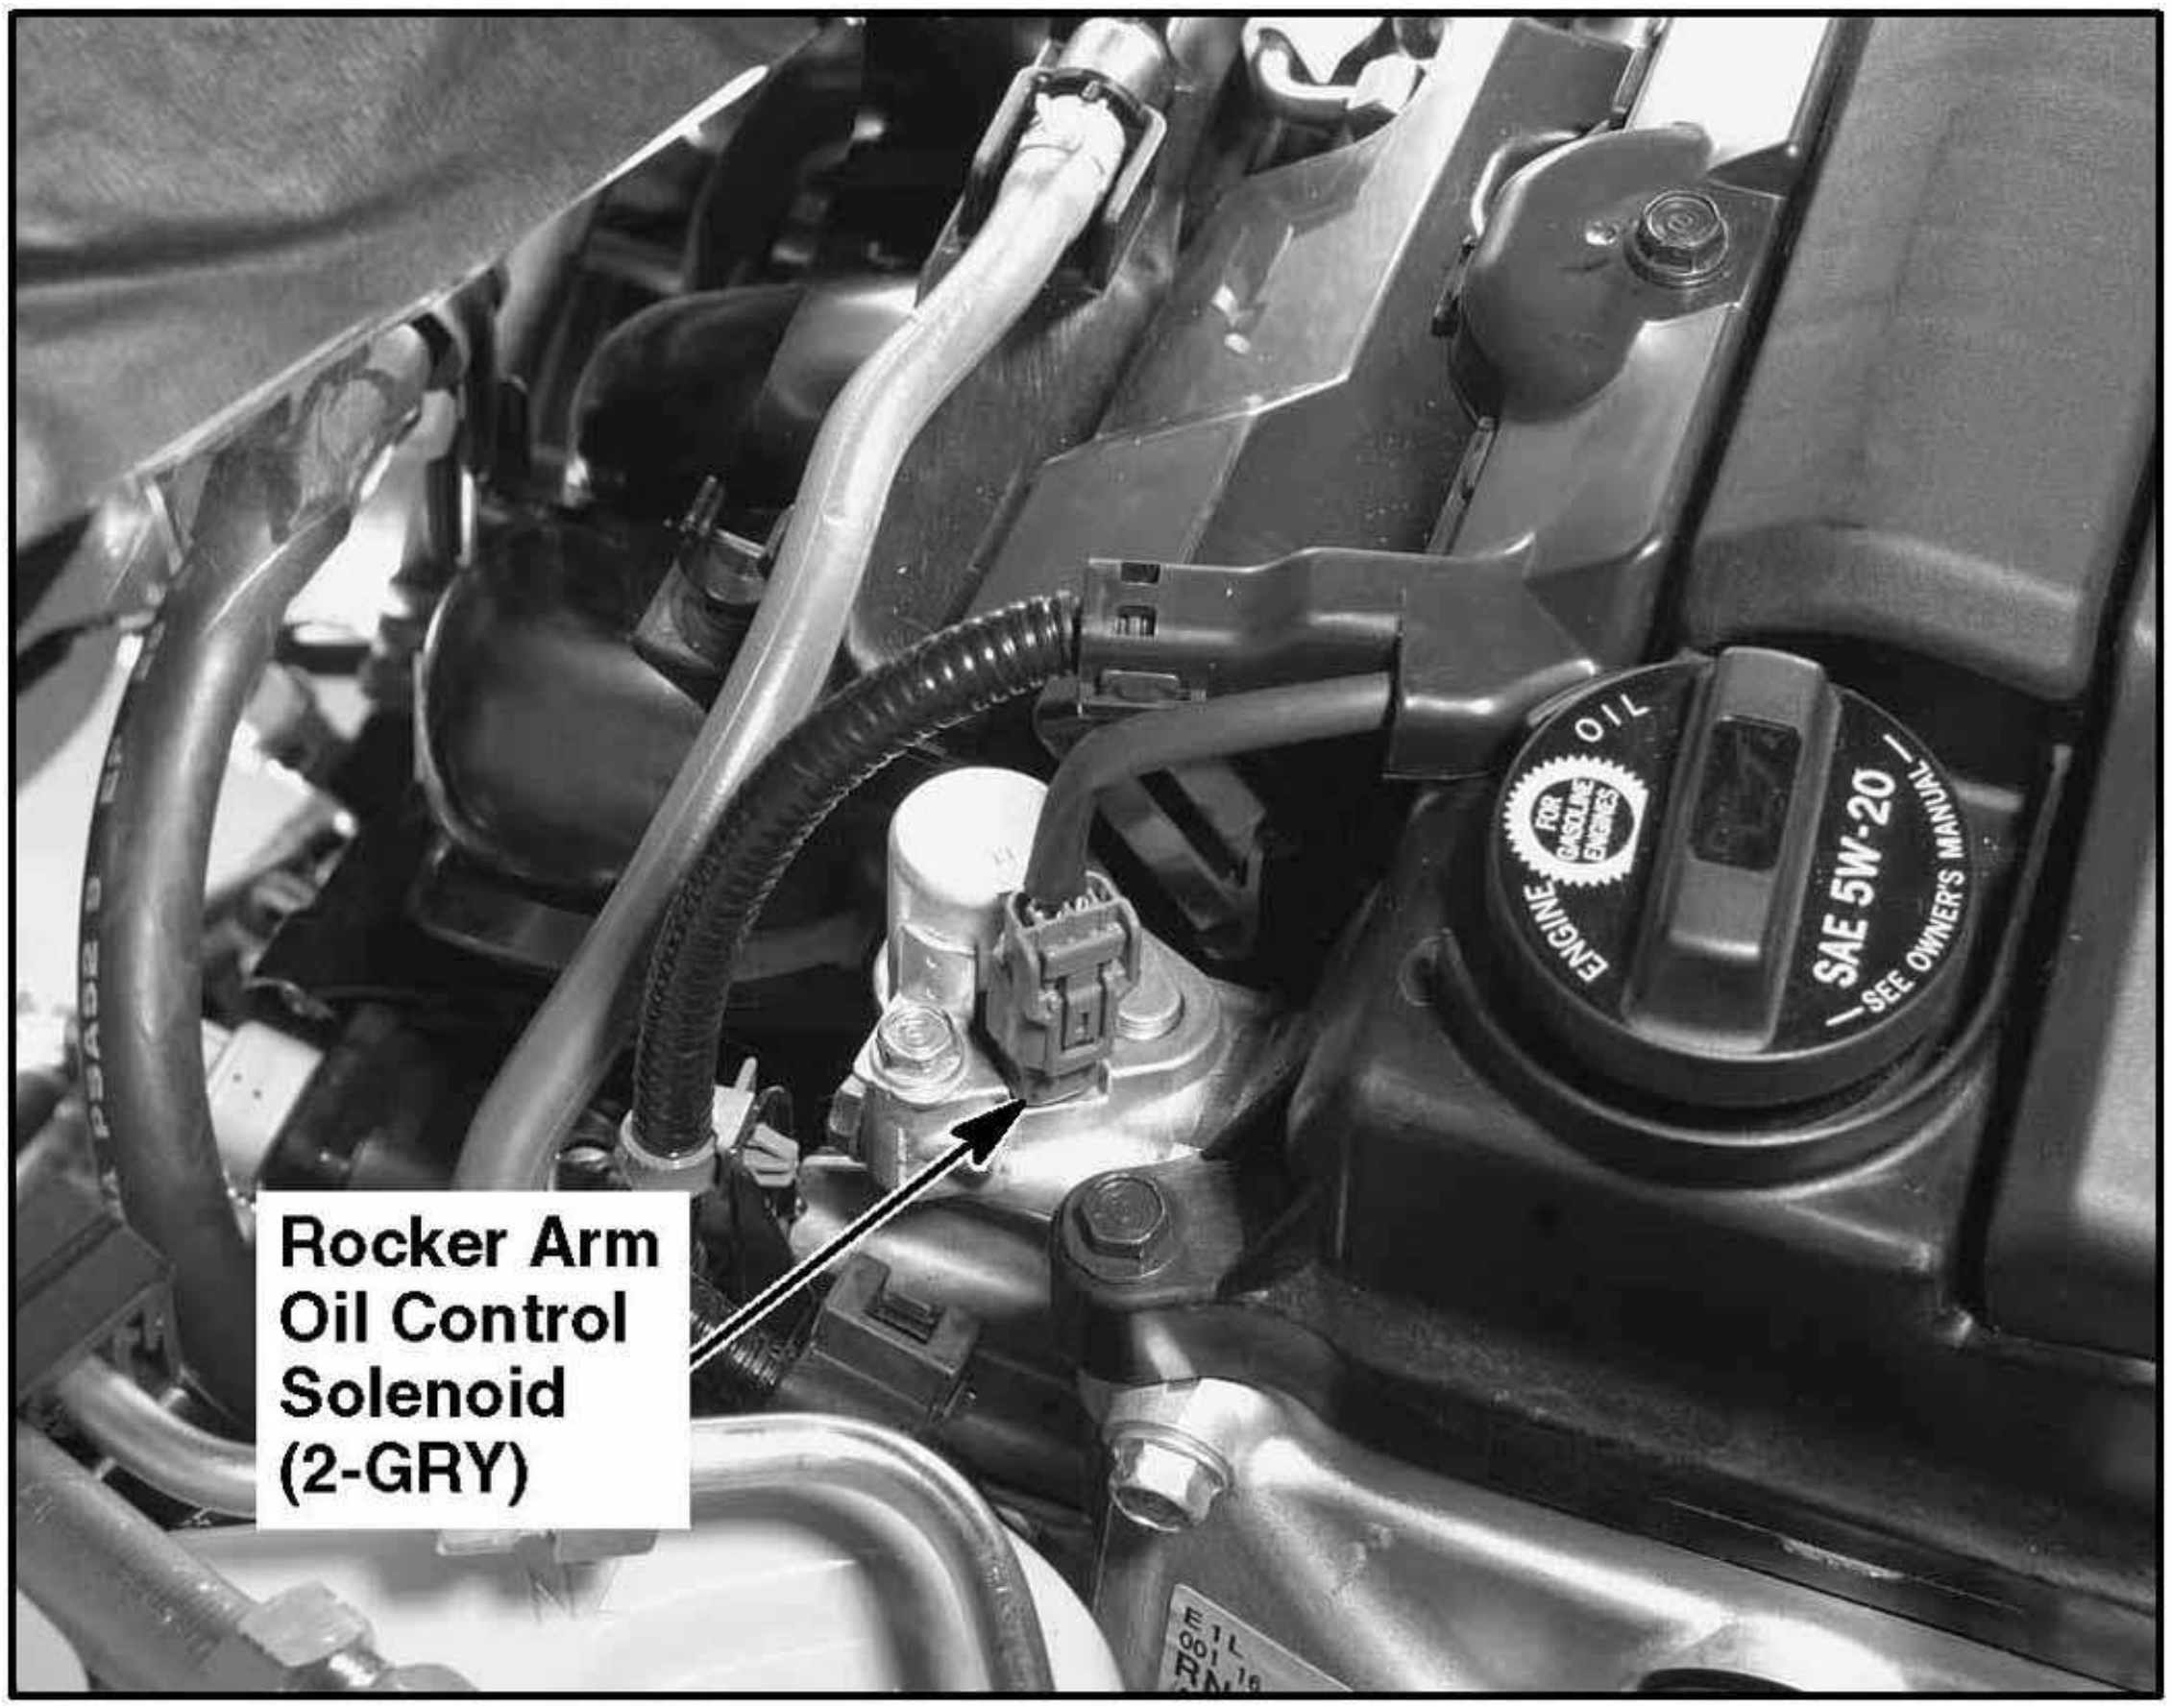
Rocker Arm
Oil Control
Solenoid
(2-GRY)
OIL
FOR GASOLINE ENGINES
ENGINE
SAE 5W-20
SEE OWNER'S MANUAL

Fig. 172: Top Front Of Engine (Except Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

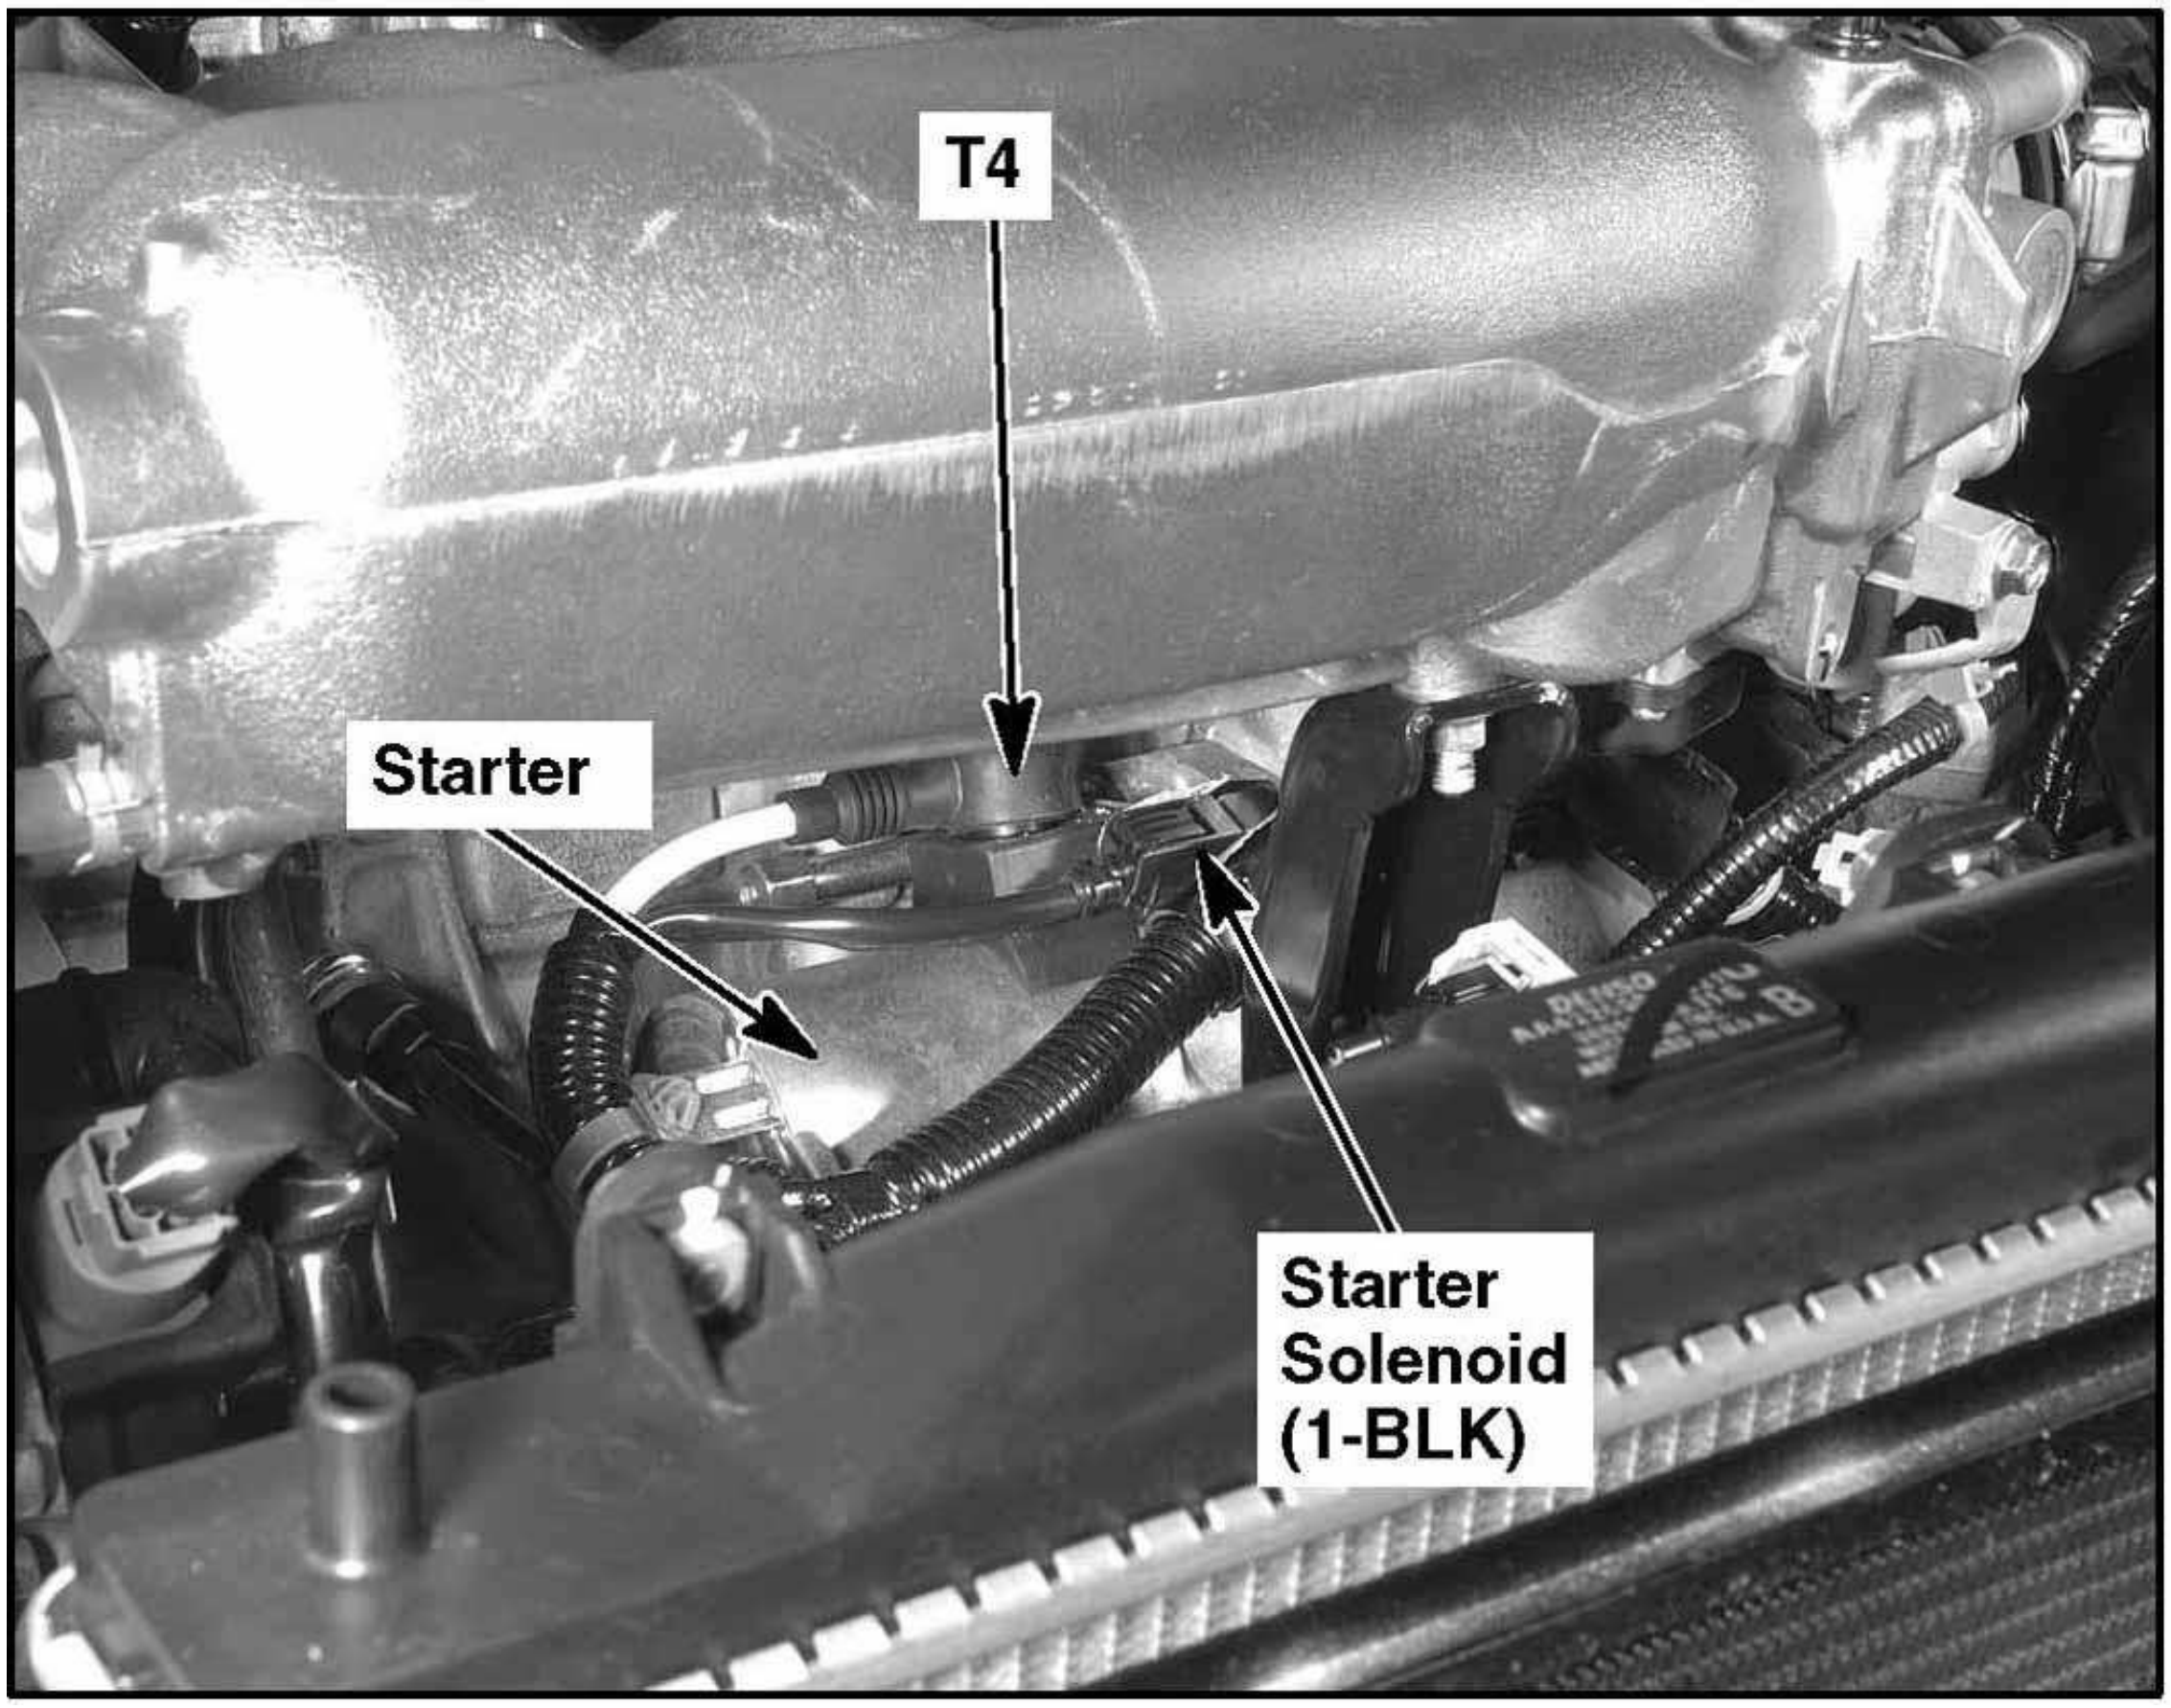
T4
Starter
Starter Solenoid (1-BLK)

Fig. 173: Left Rear Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

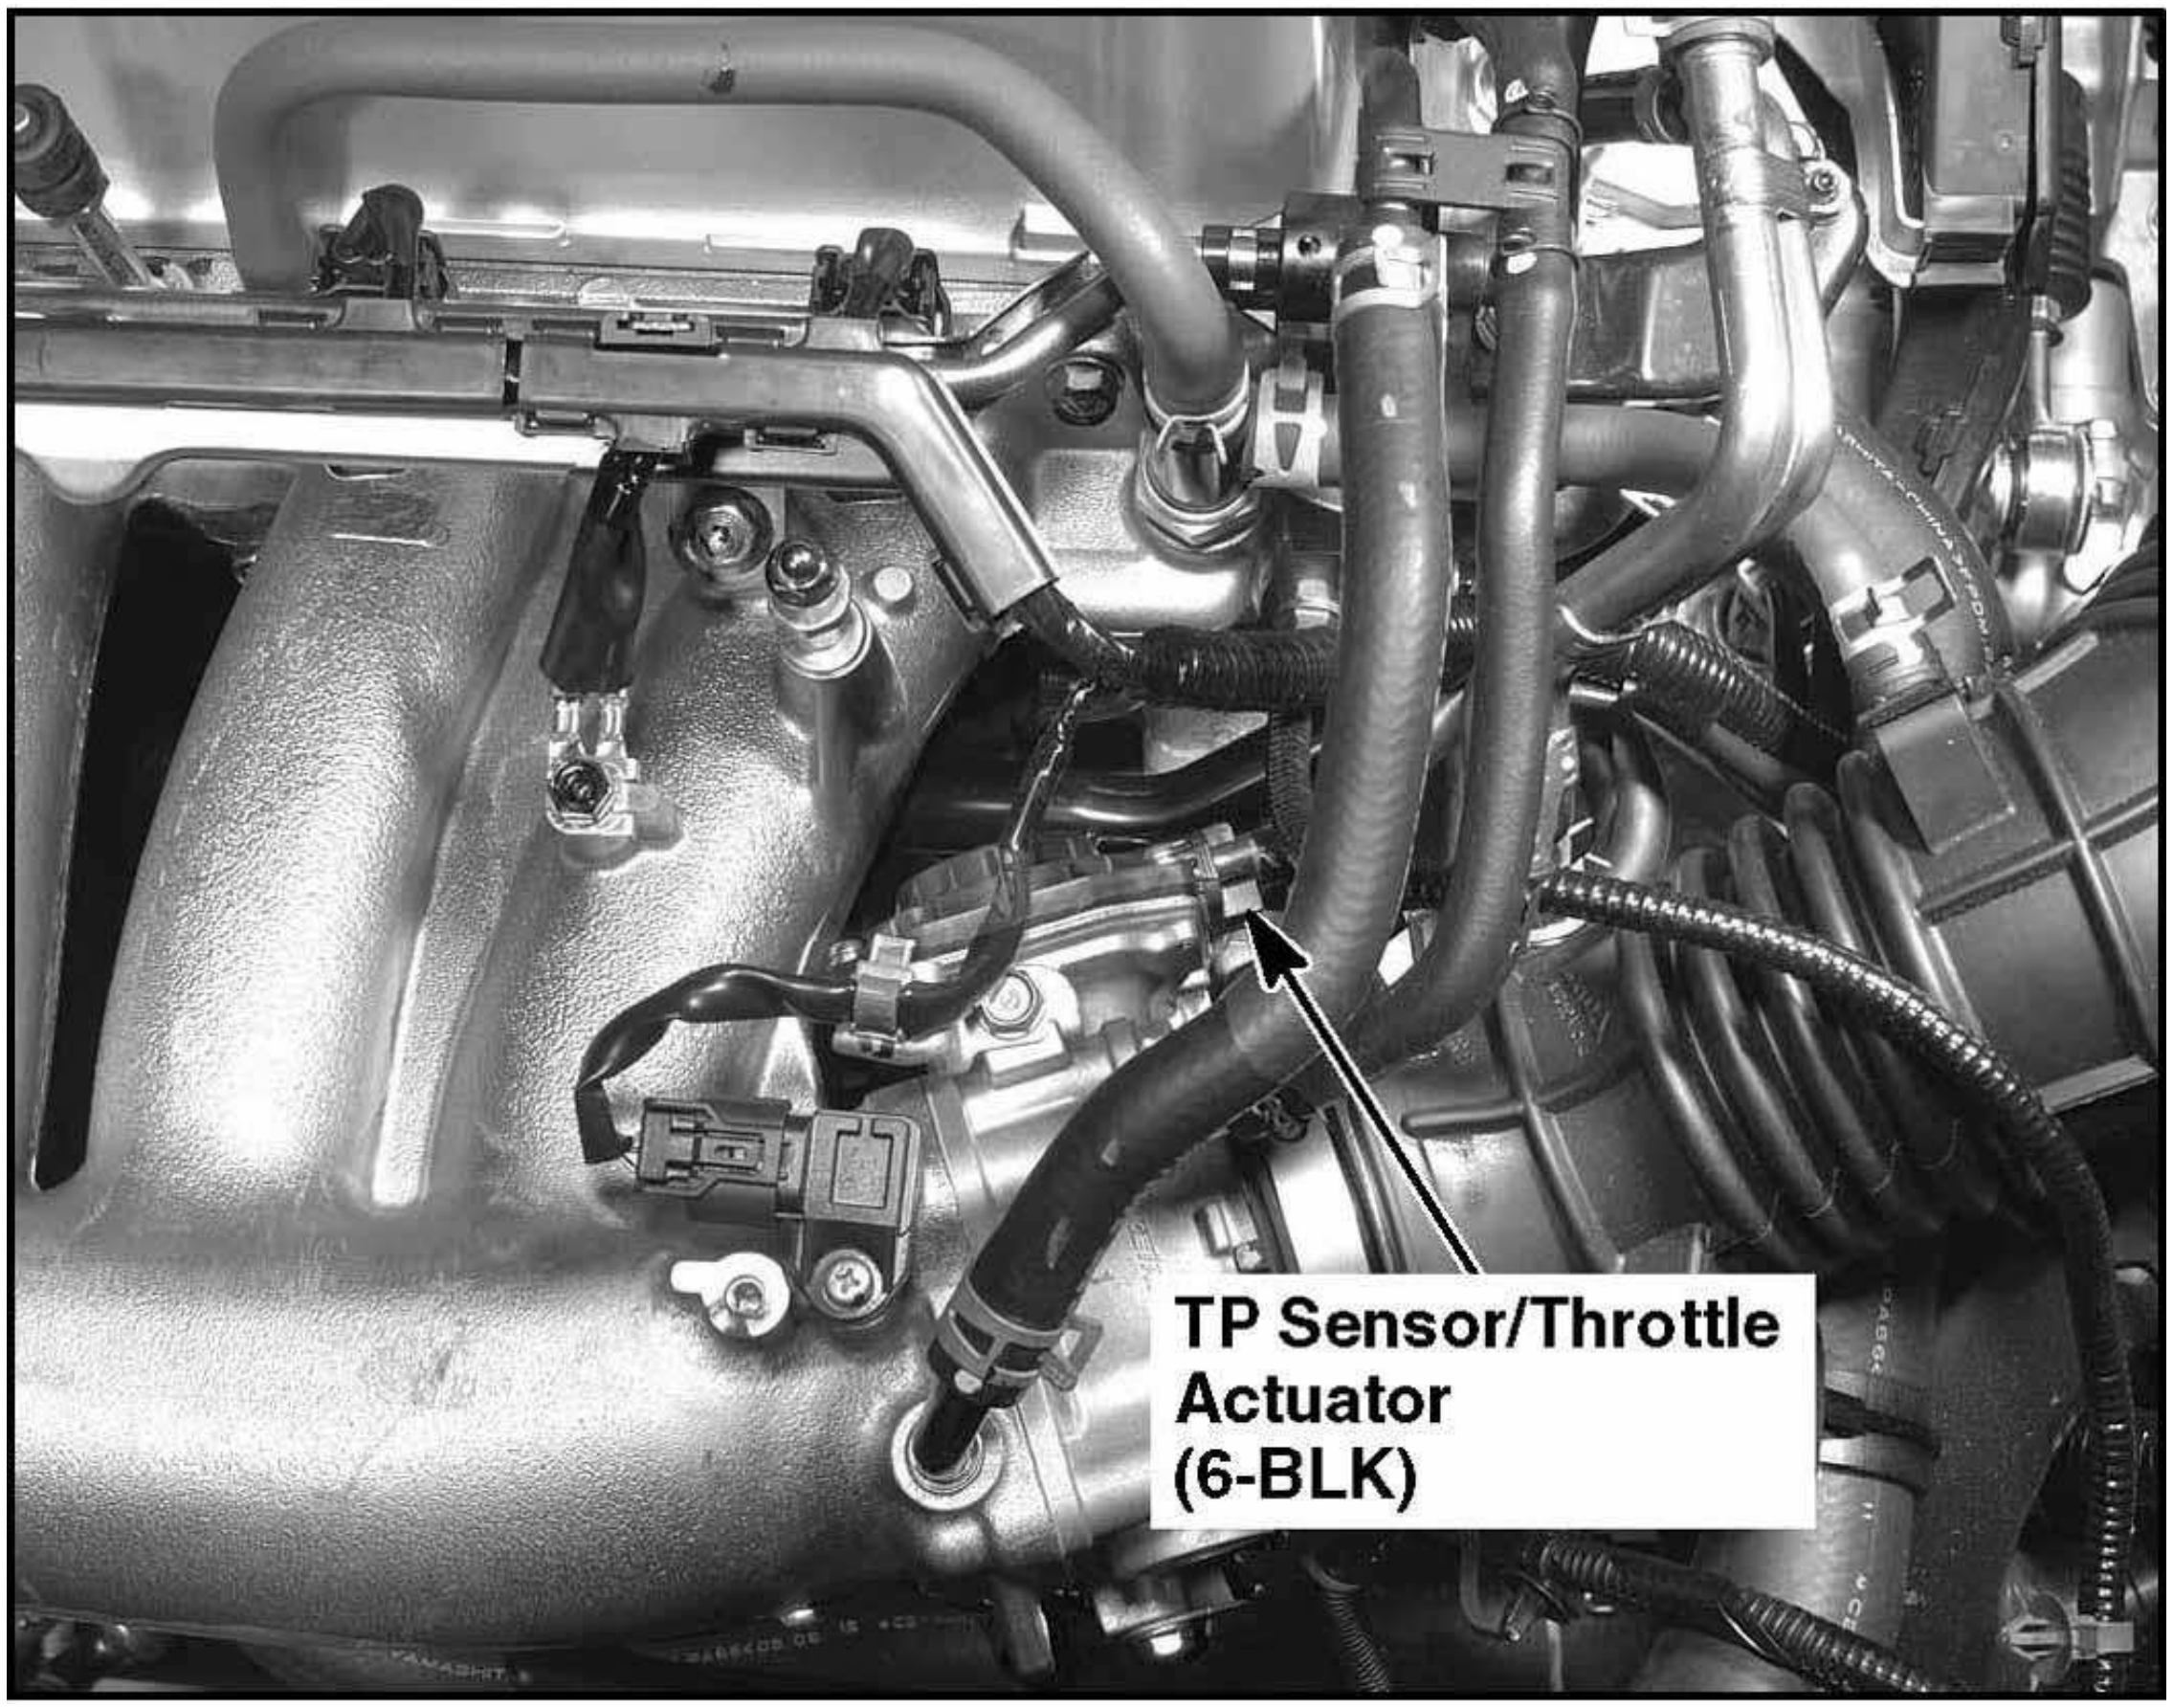
TP Sensor/Throttle Actuator (6-BLK)

Fig. 174: Left Side Of Engine (Si)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

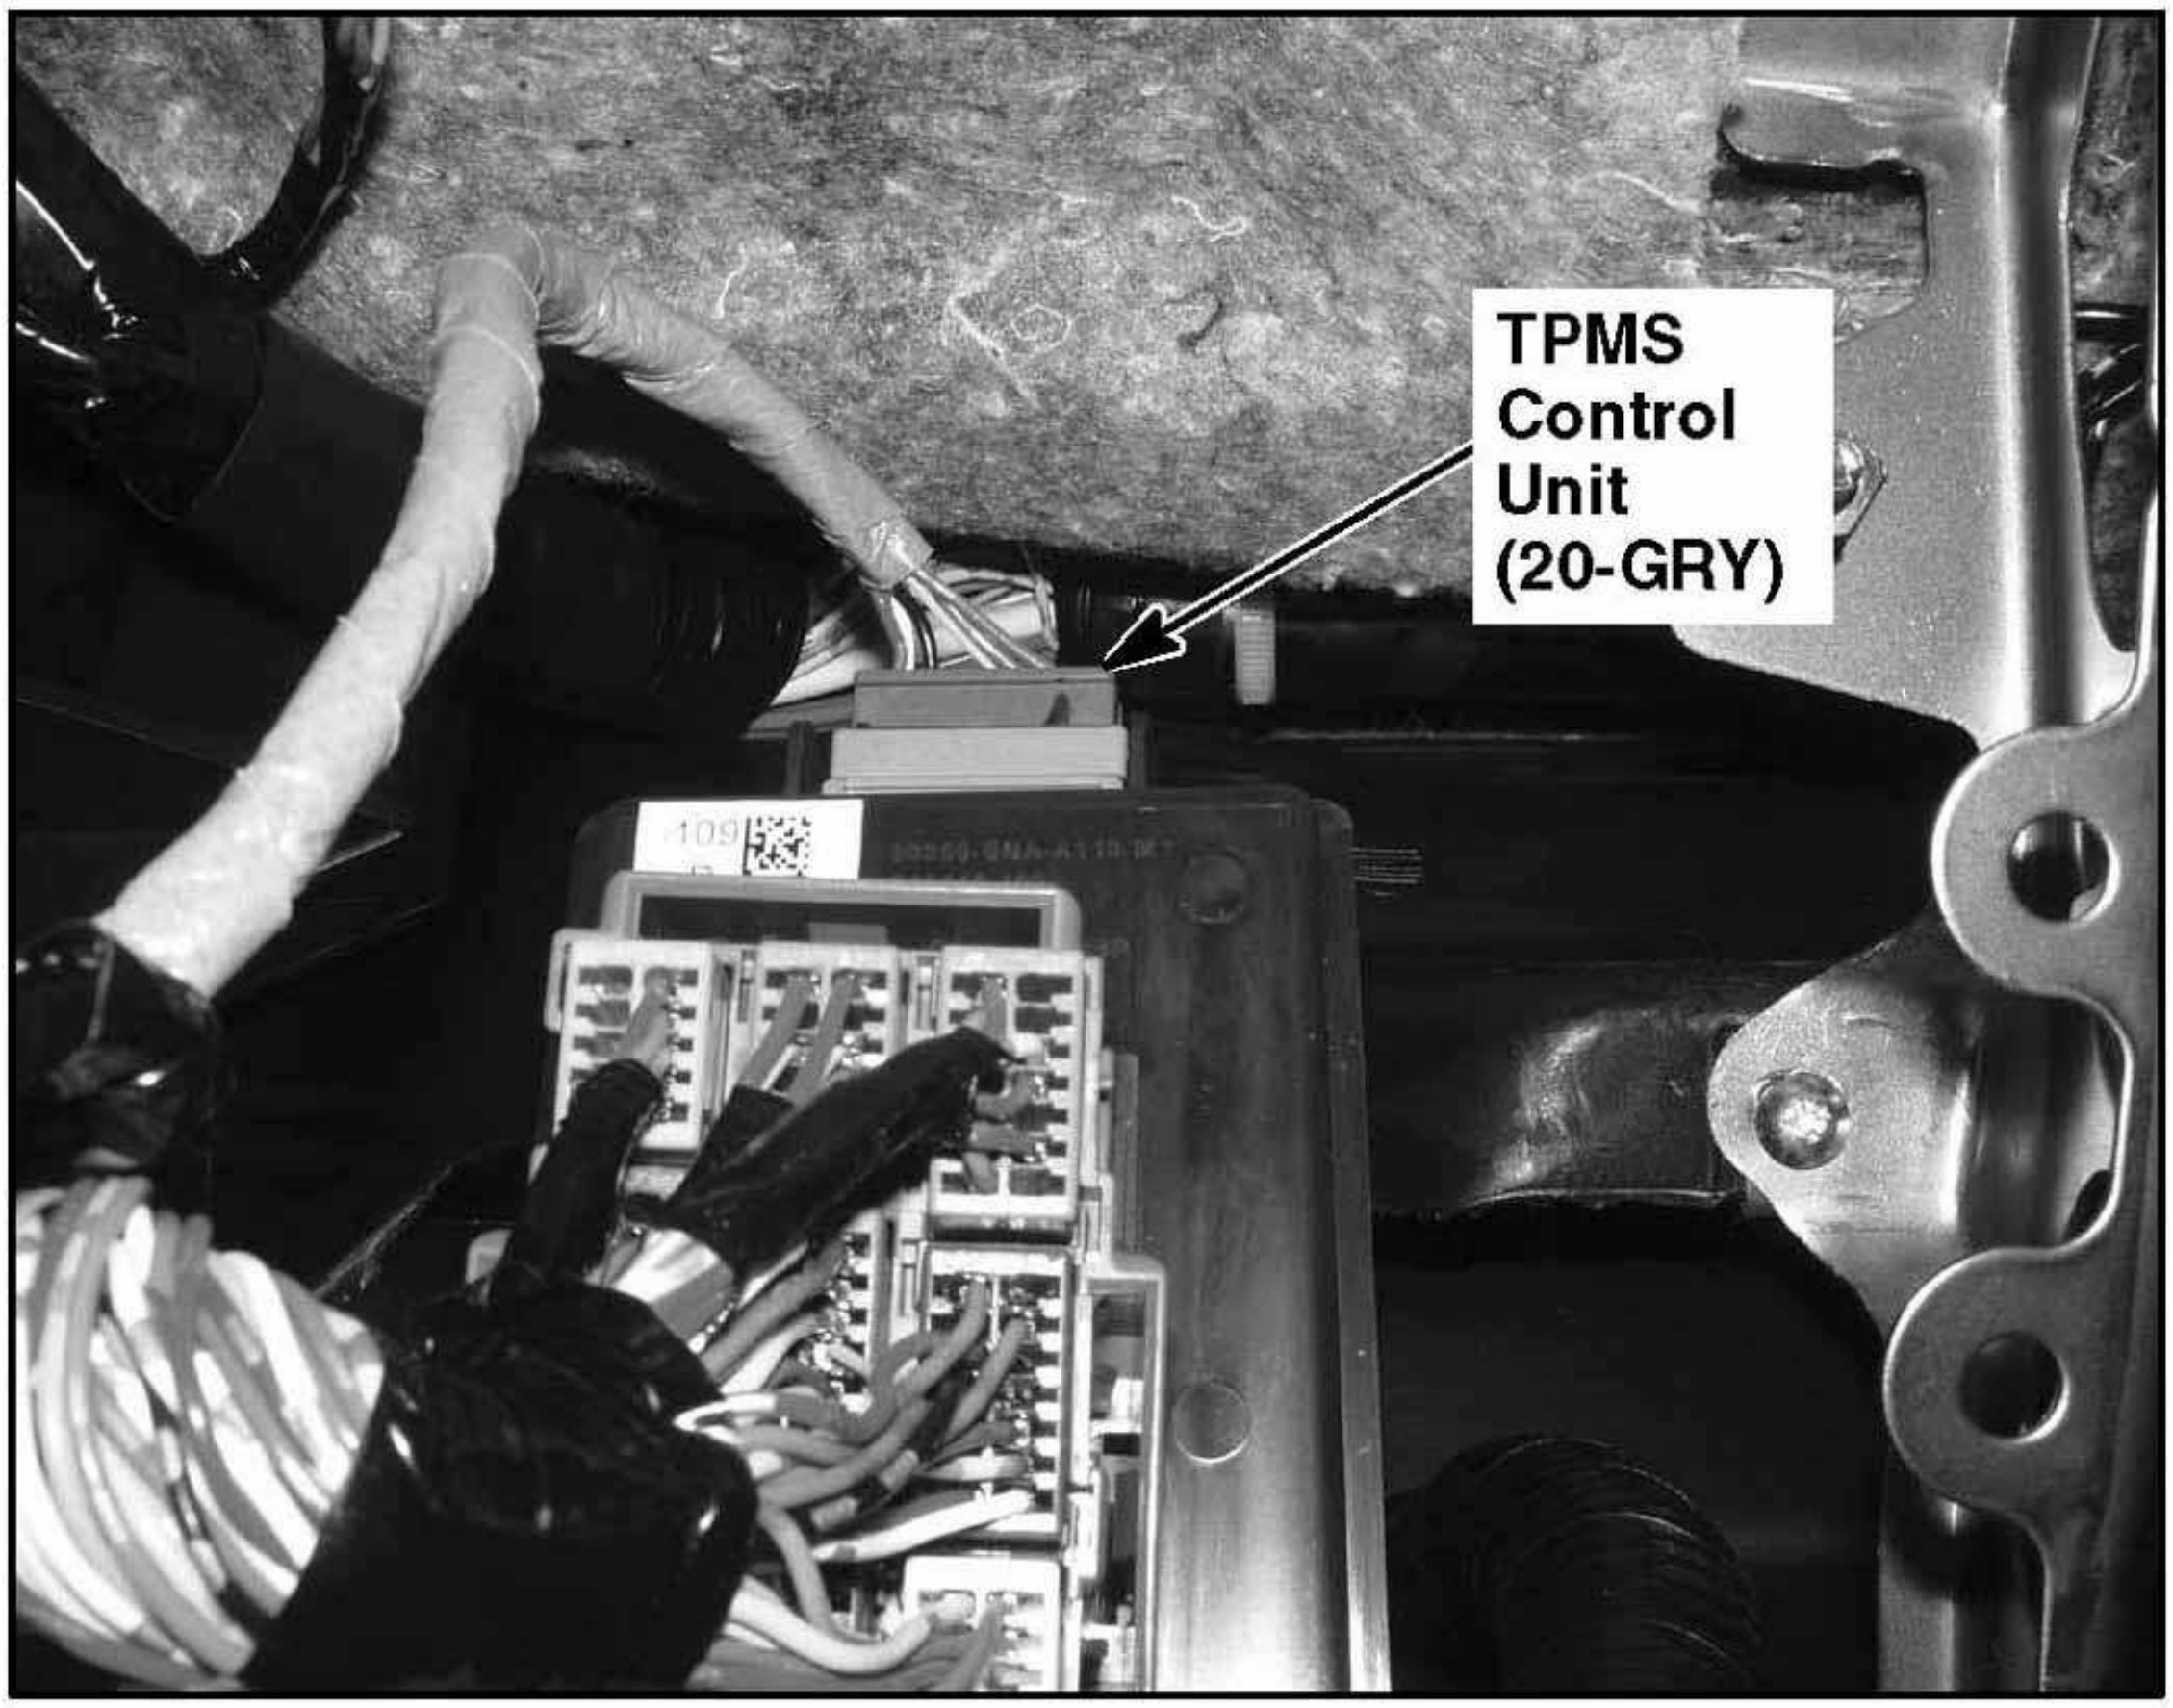
TPMS
Control
Unit
(20-GRY)

Fig. 175: Under Left Side Of Dash
Courtesy of AMERICAN HONDA MOTOR CO., INC.

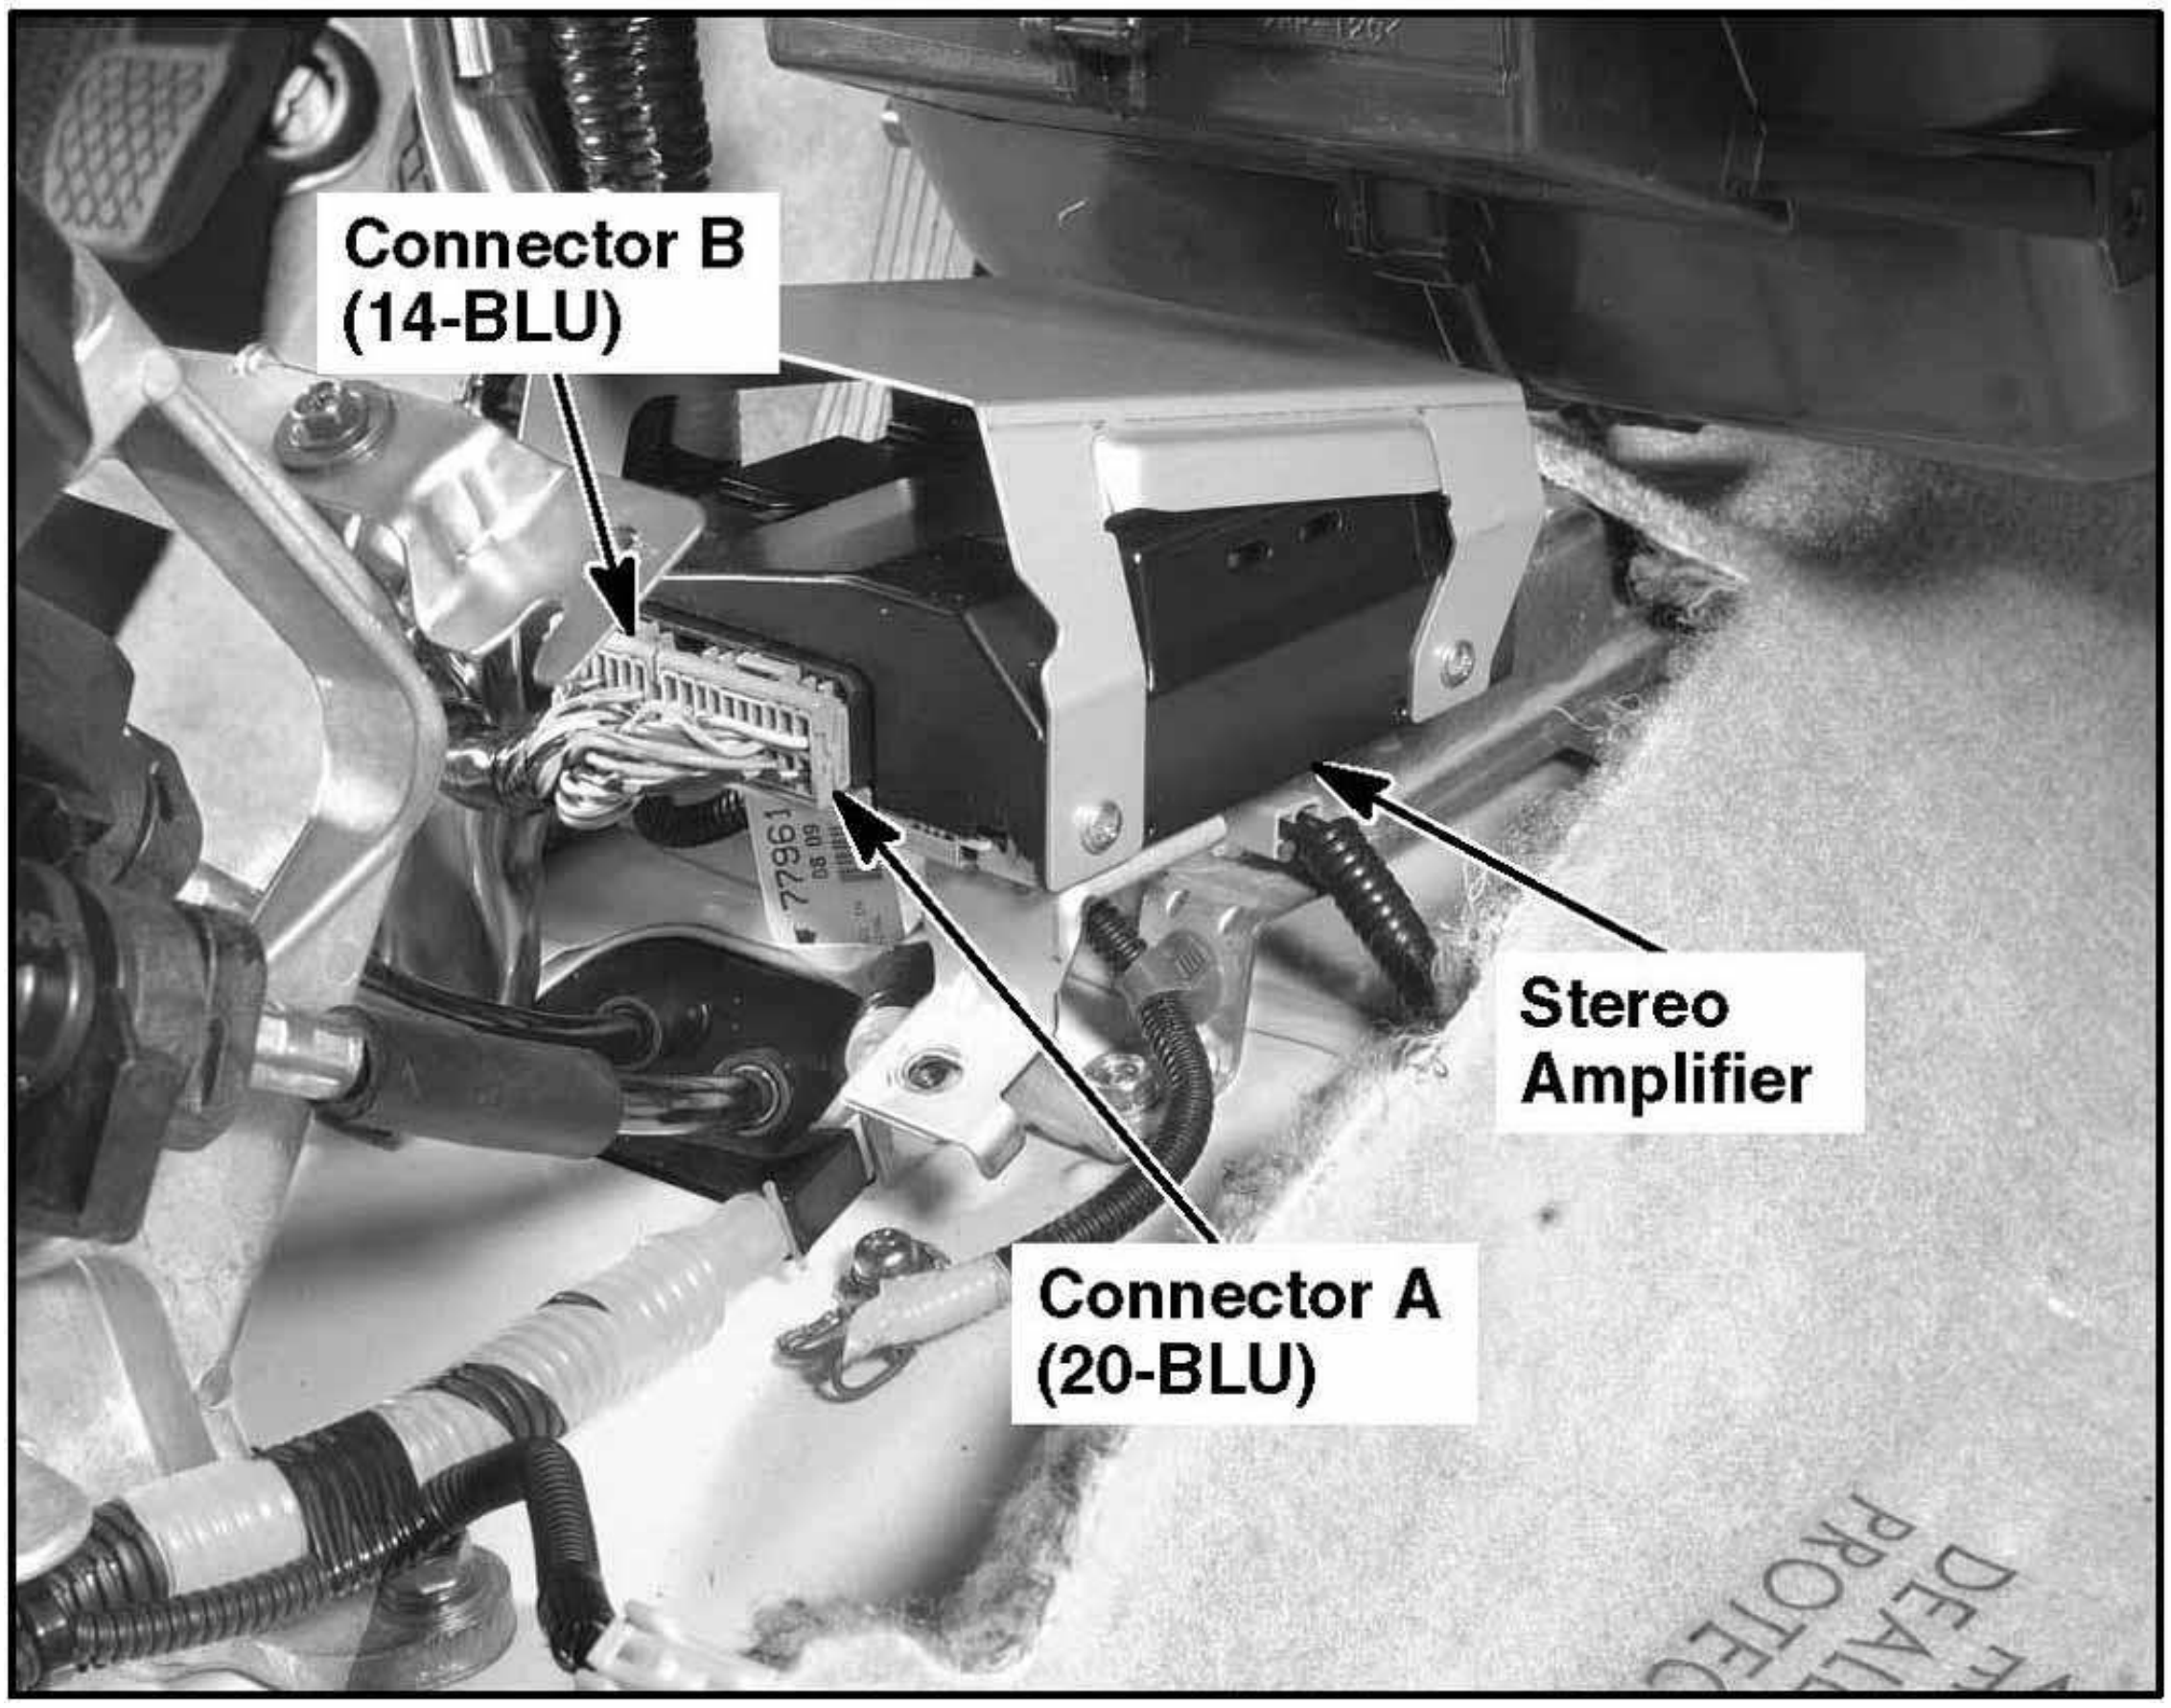
Connector B
(14-BLU)
Stereo
Amplifier
Connector A
(20-BLU)

Fig. 176: Under Middle Of Dash (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

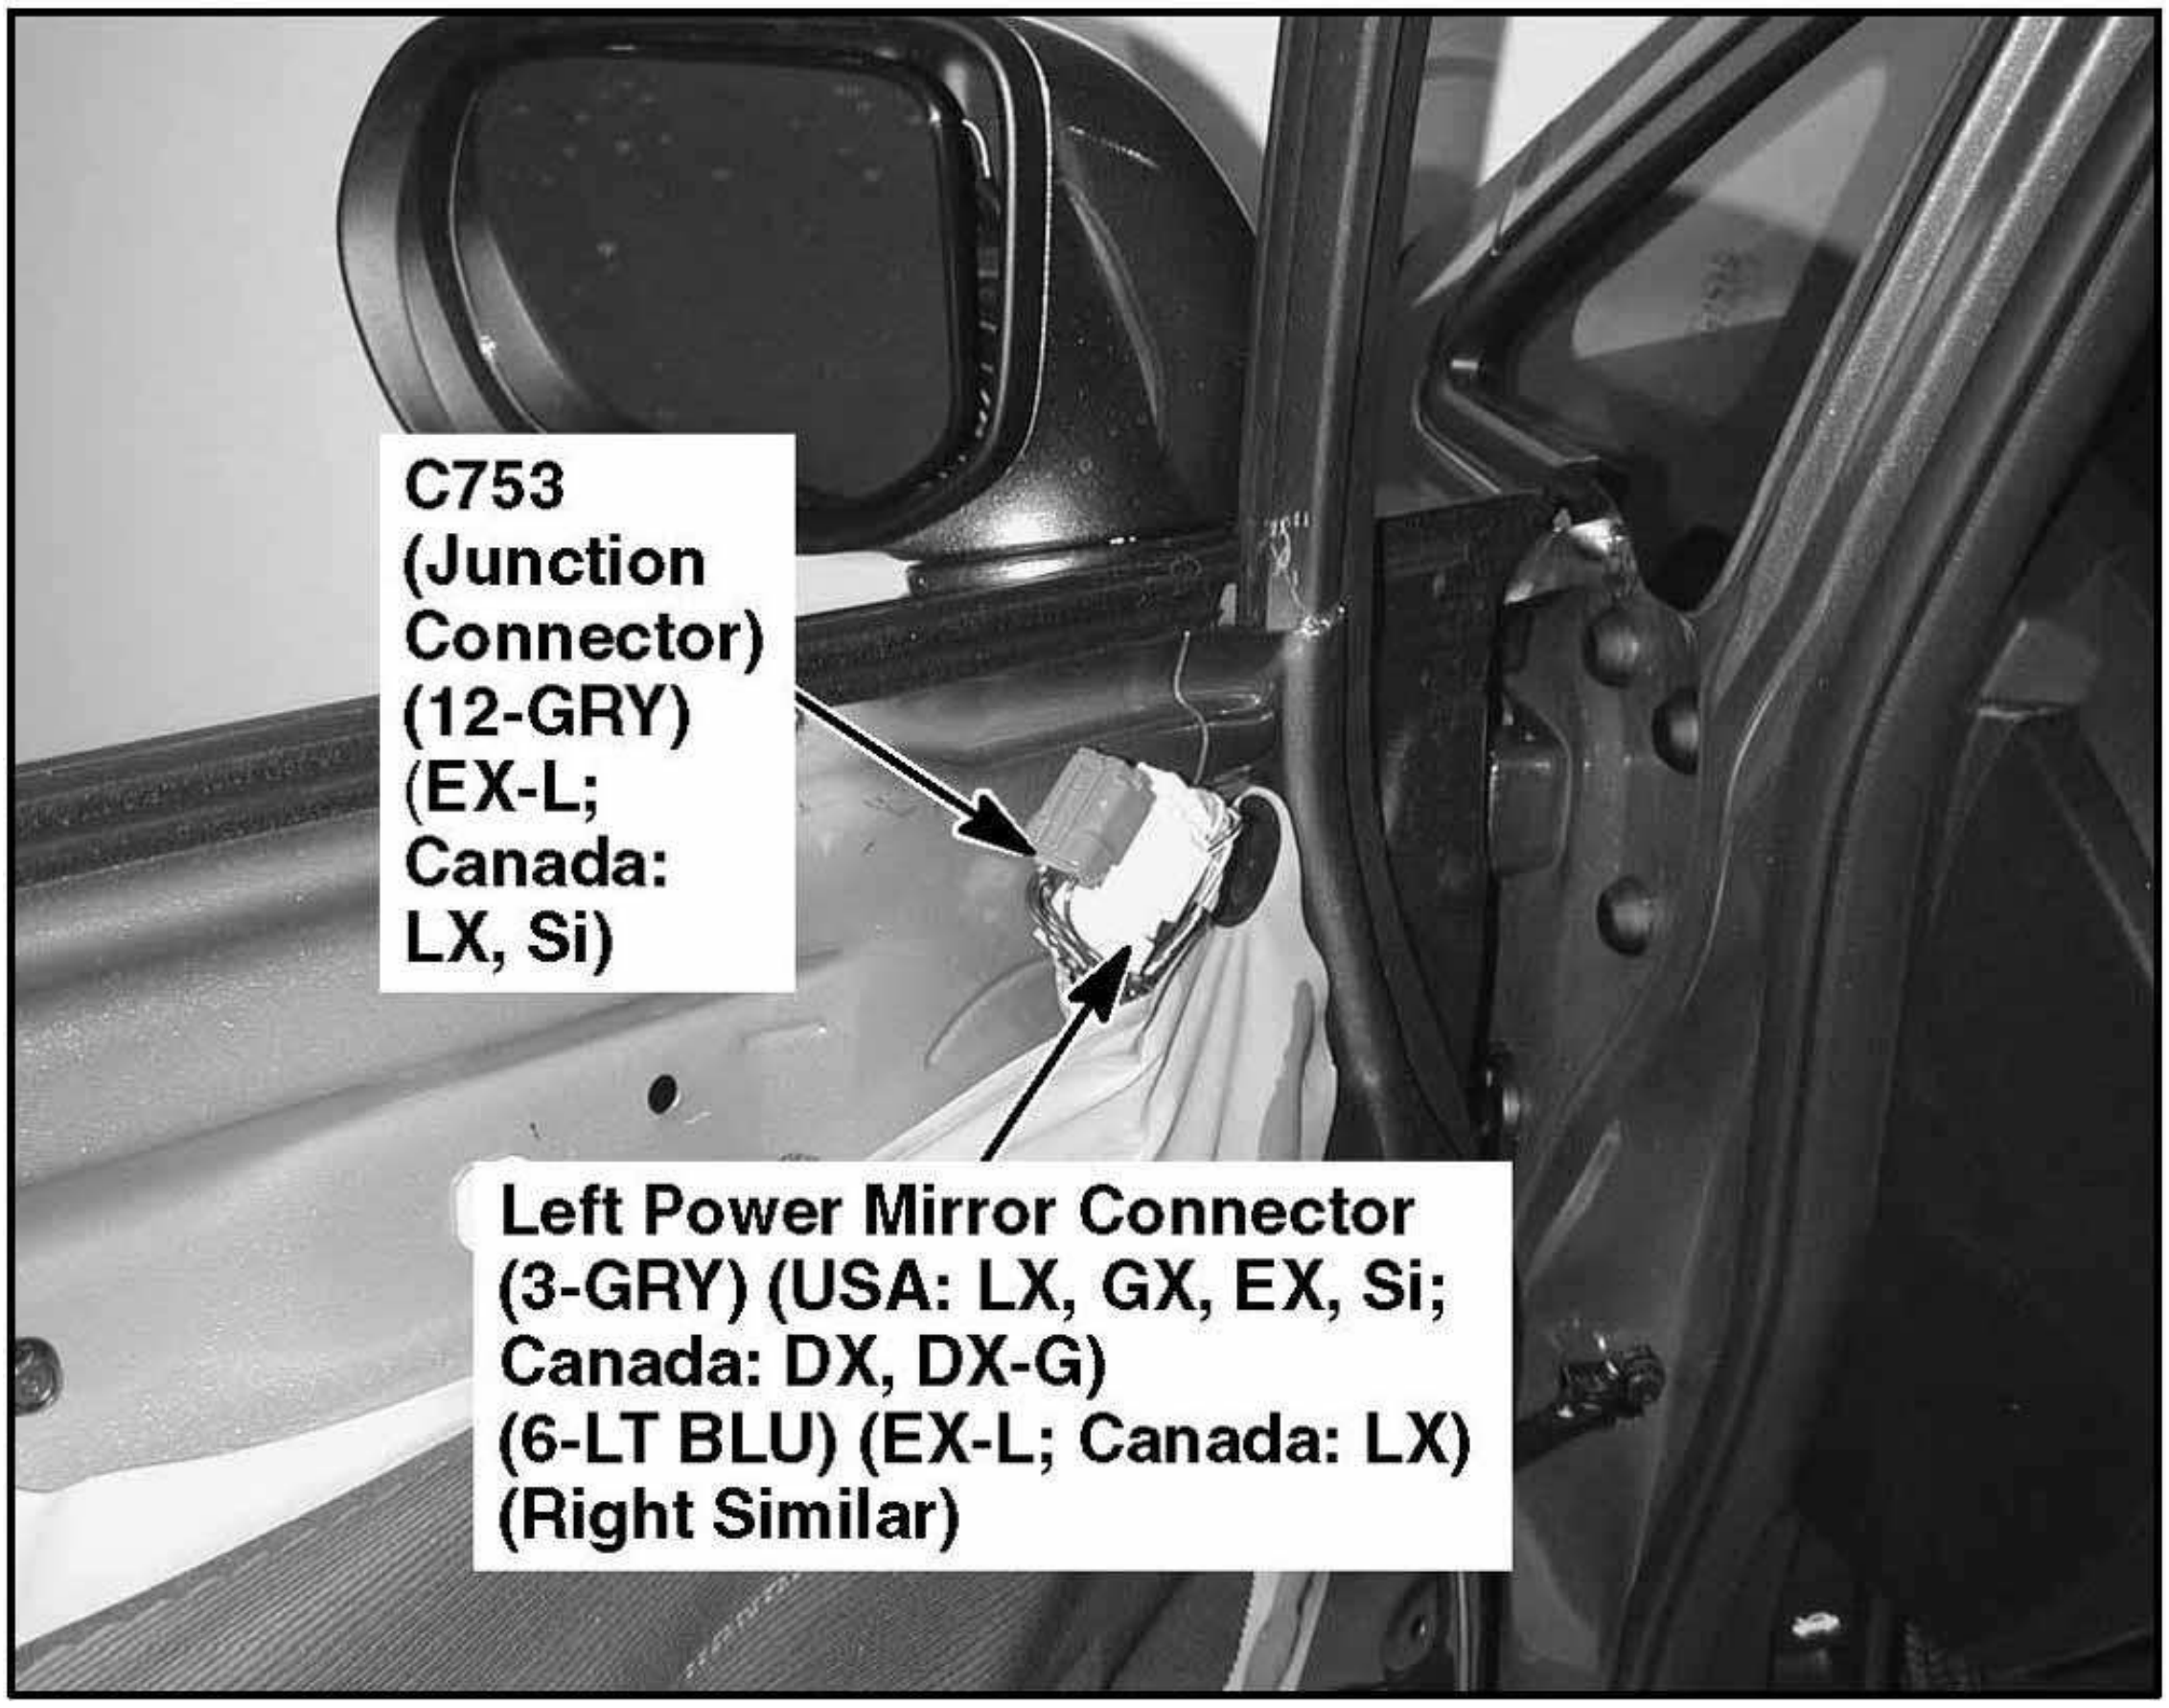
C753
(Junction
Connector)
(12-GRY)
(EX-L;
Canada:
LX, Si)
Left Power Mirror Connector
(3-GRY) (USA: LX, GX, EX, Si;
Canada: DX, DX-G)
(6-LT BLU) (EX-L; Canada: LX)
(Right Similar)

Fig. 177: Driver's Door
Courtesy of AMERICAN HONDA MOTOR CO., INC.

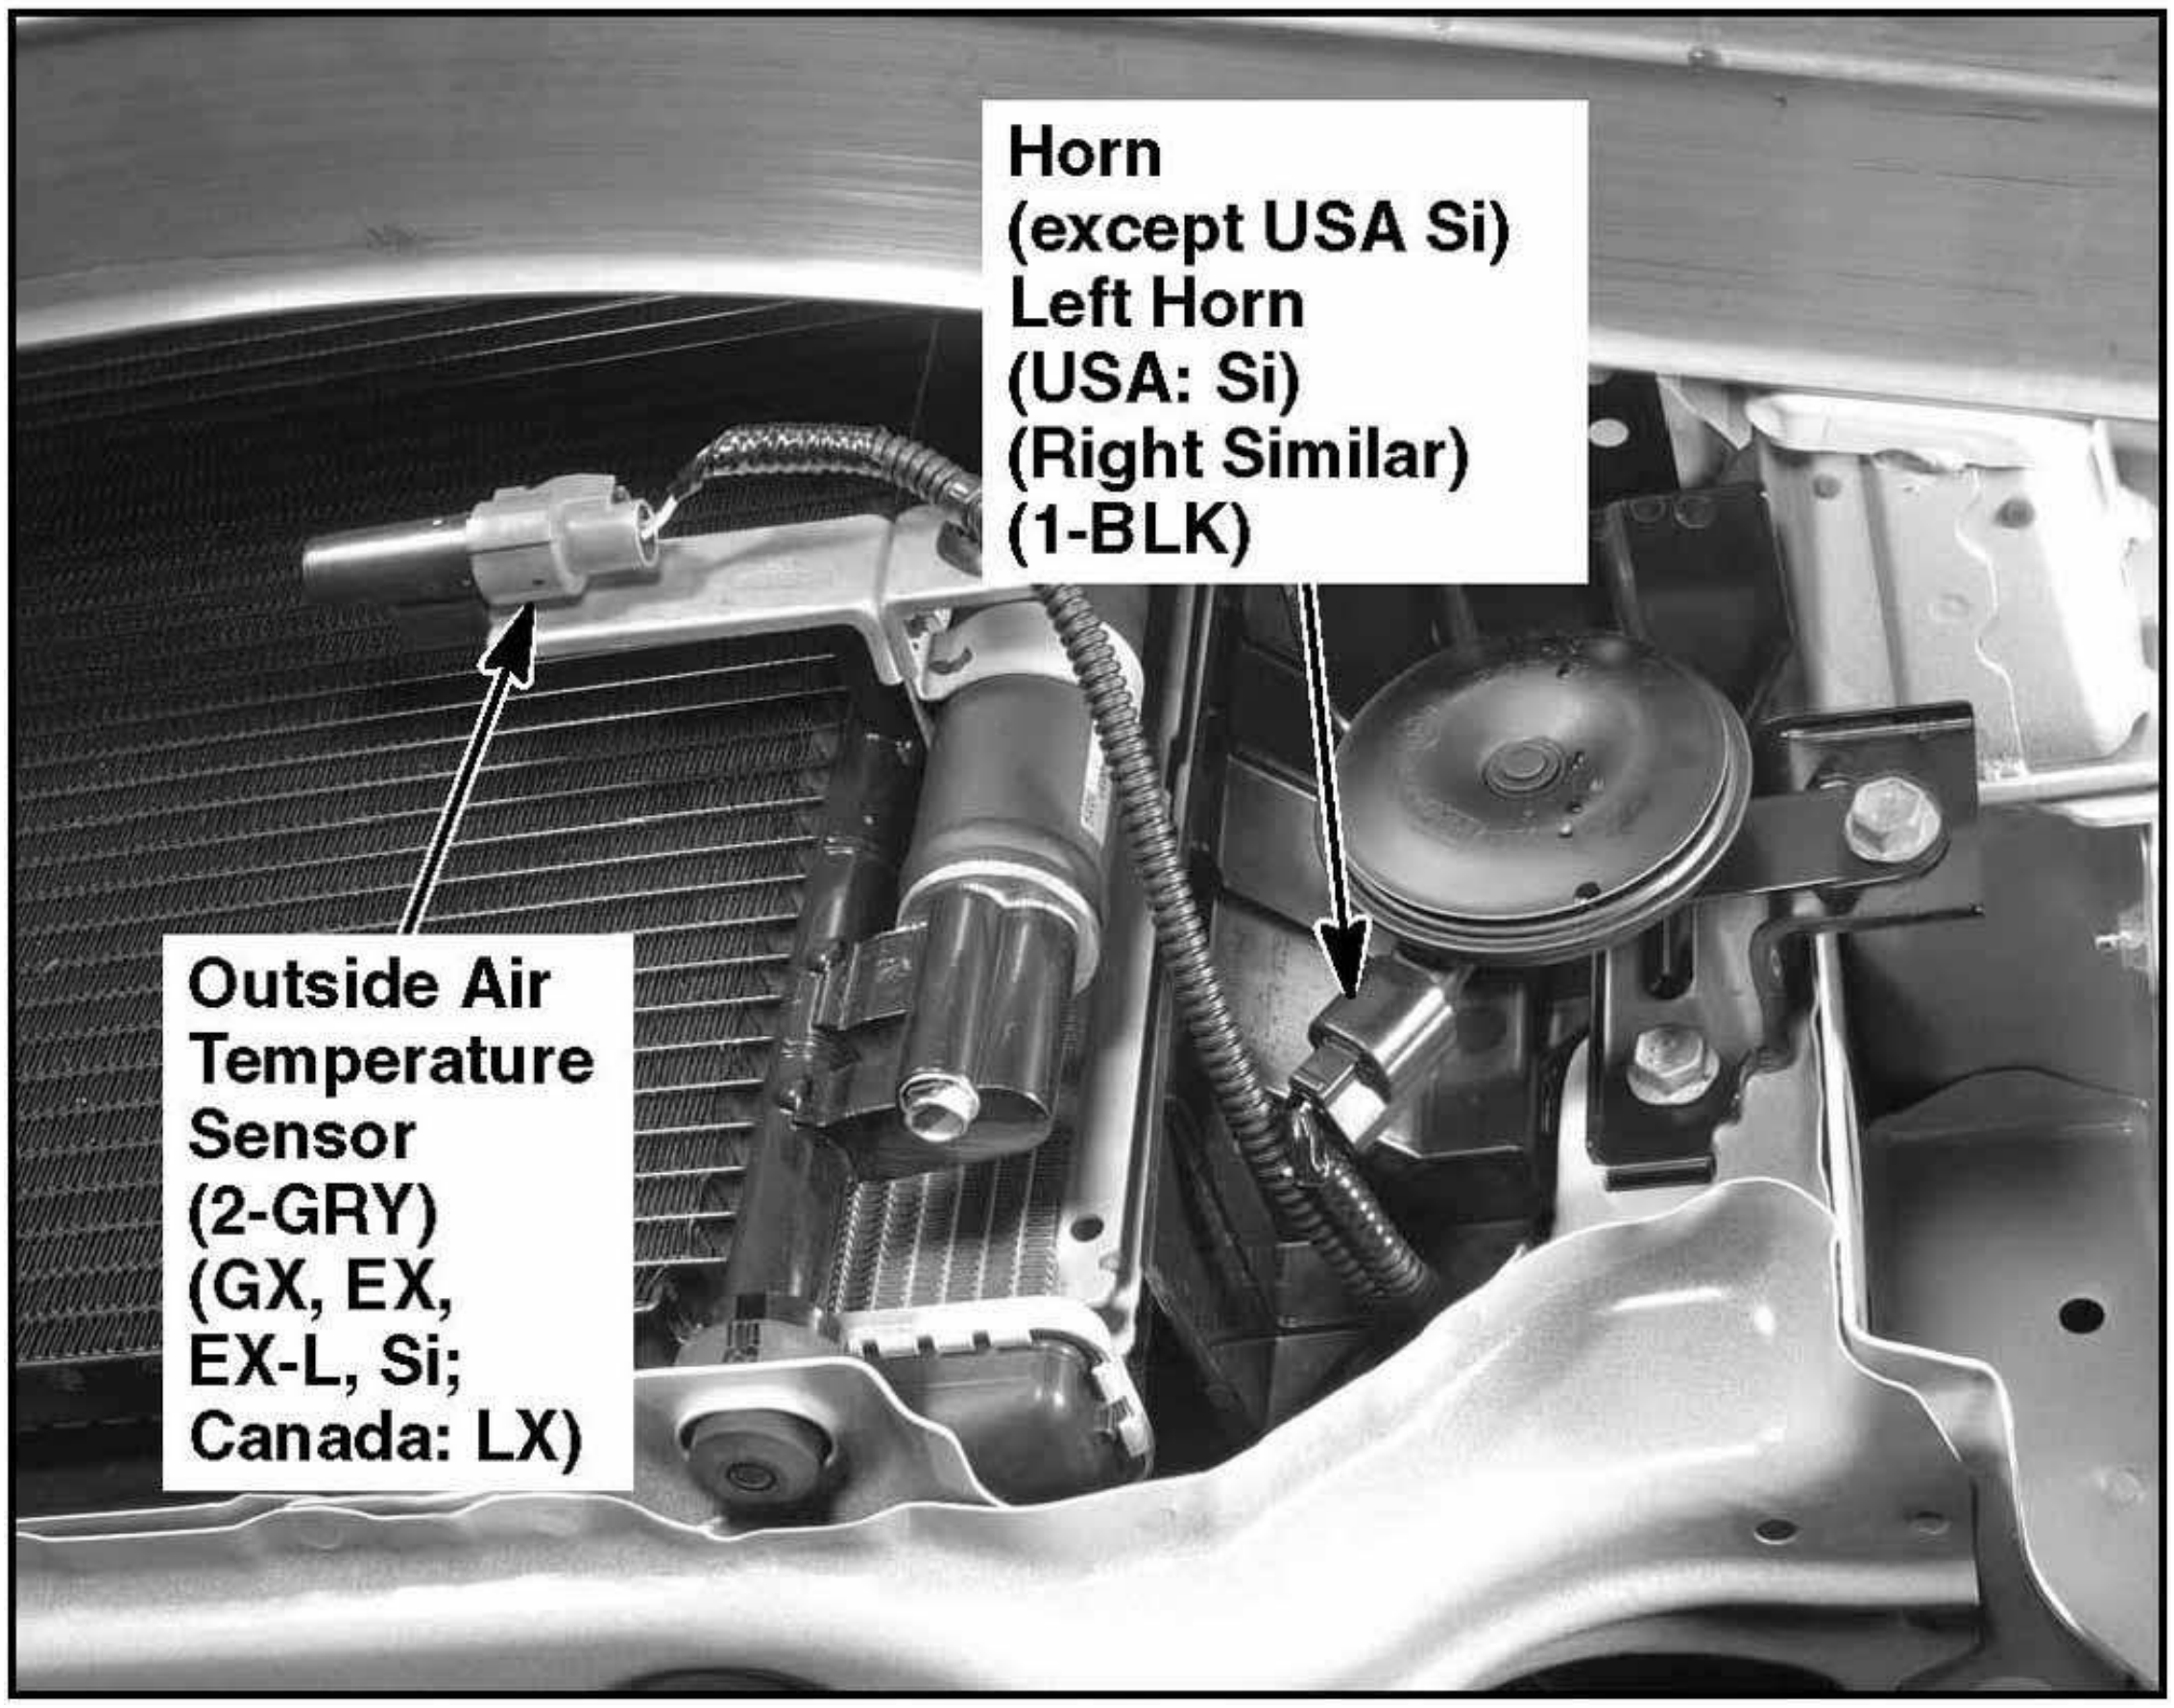
Horn
(except USA Si)
Left Horn
(USA: Si)
(Right Similar)
(1-BLK)
Outside Air
Temperature
Sensor
(2-GRY)
(GX, EX,
EX-L, Si;
Canada: LX)

Fig. 178: Behind Left Side Of Front Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

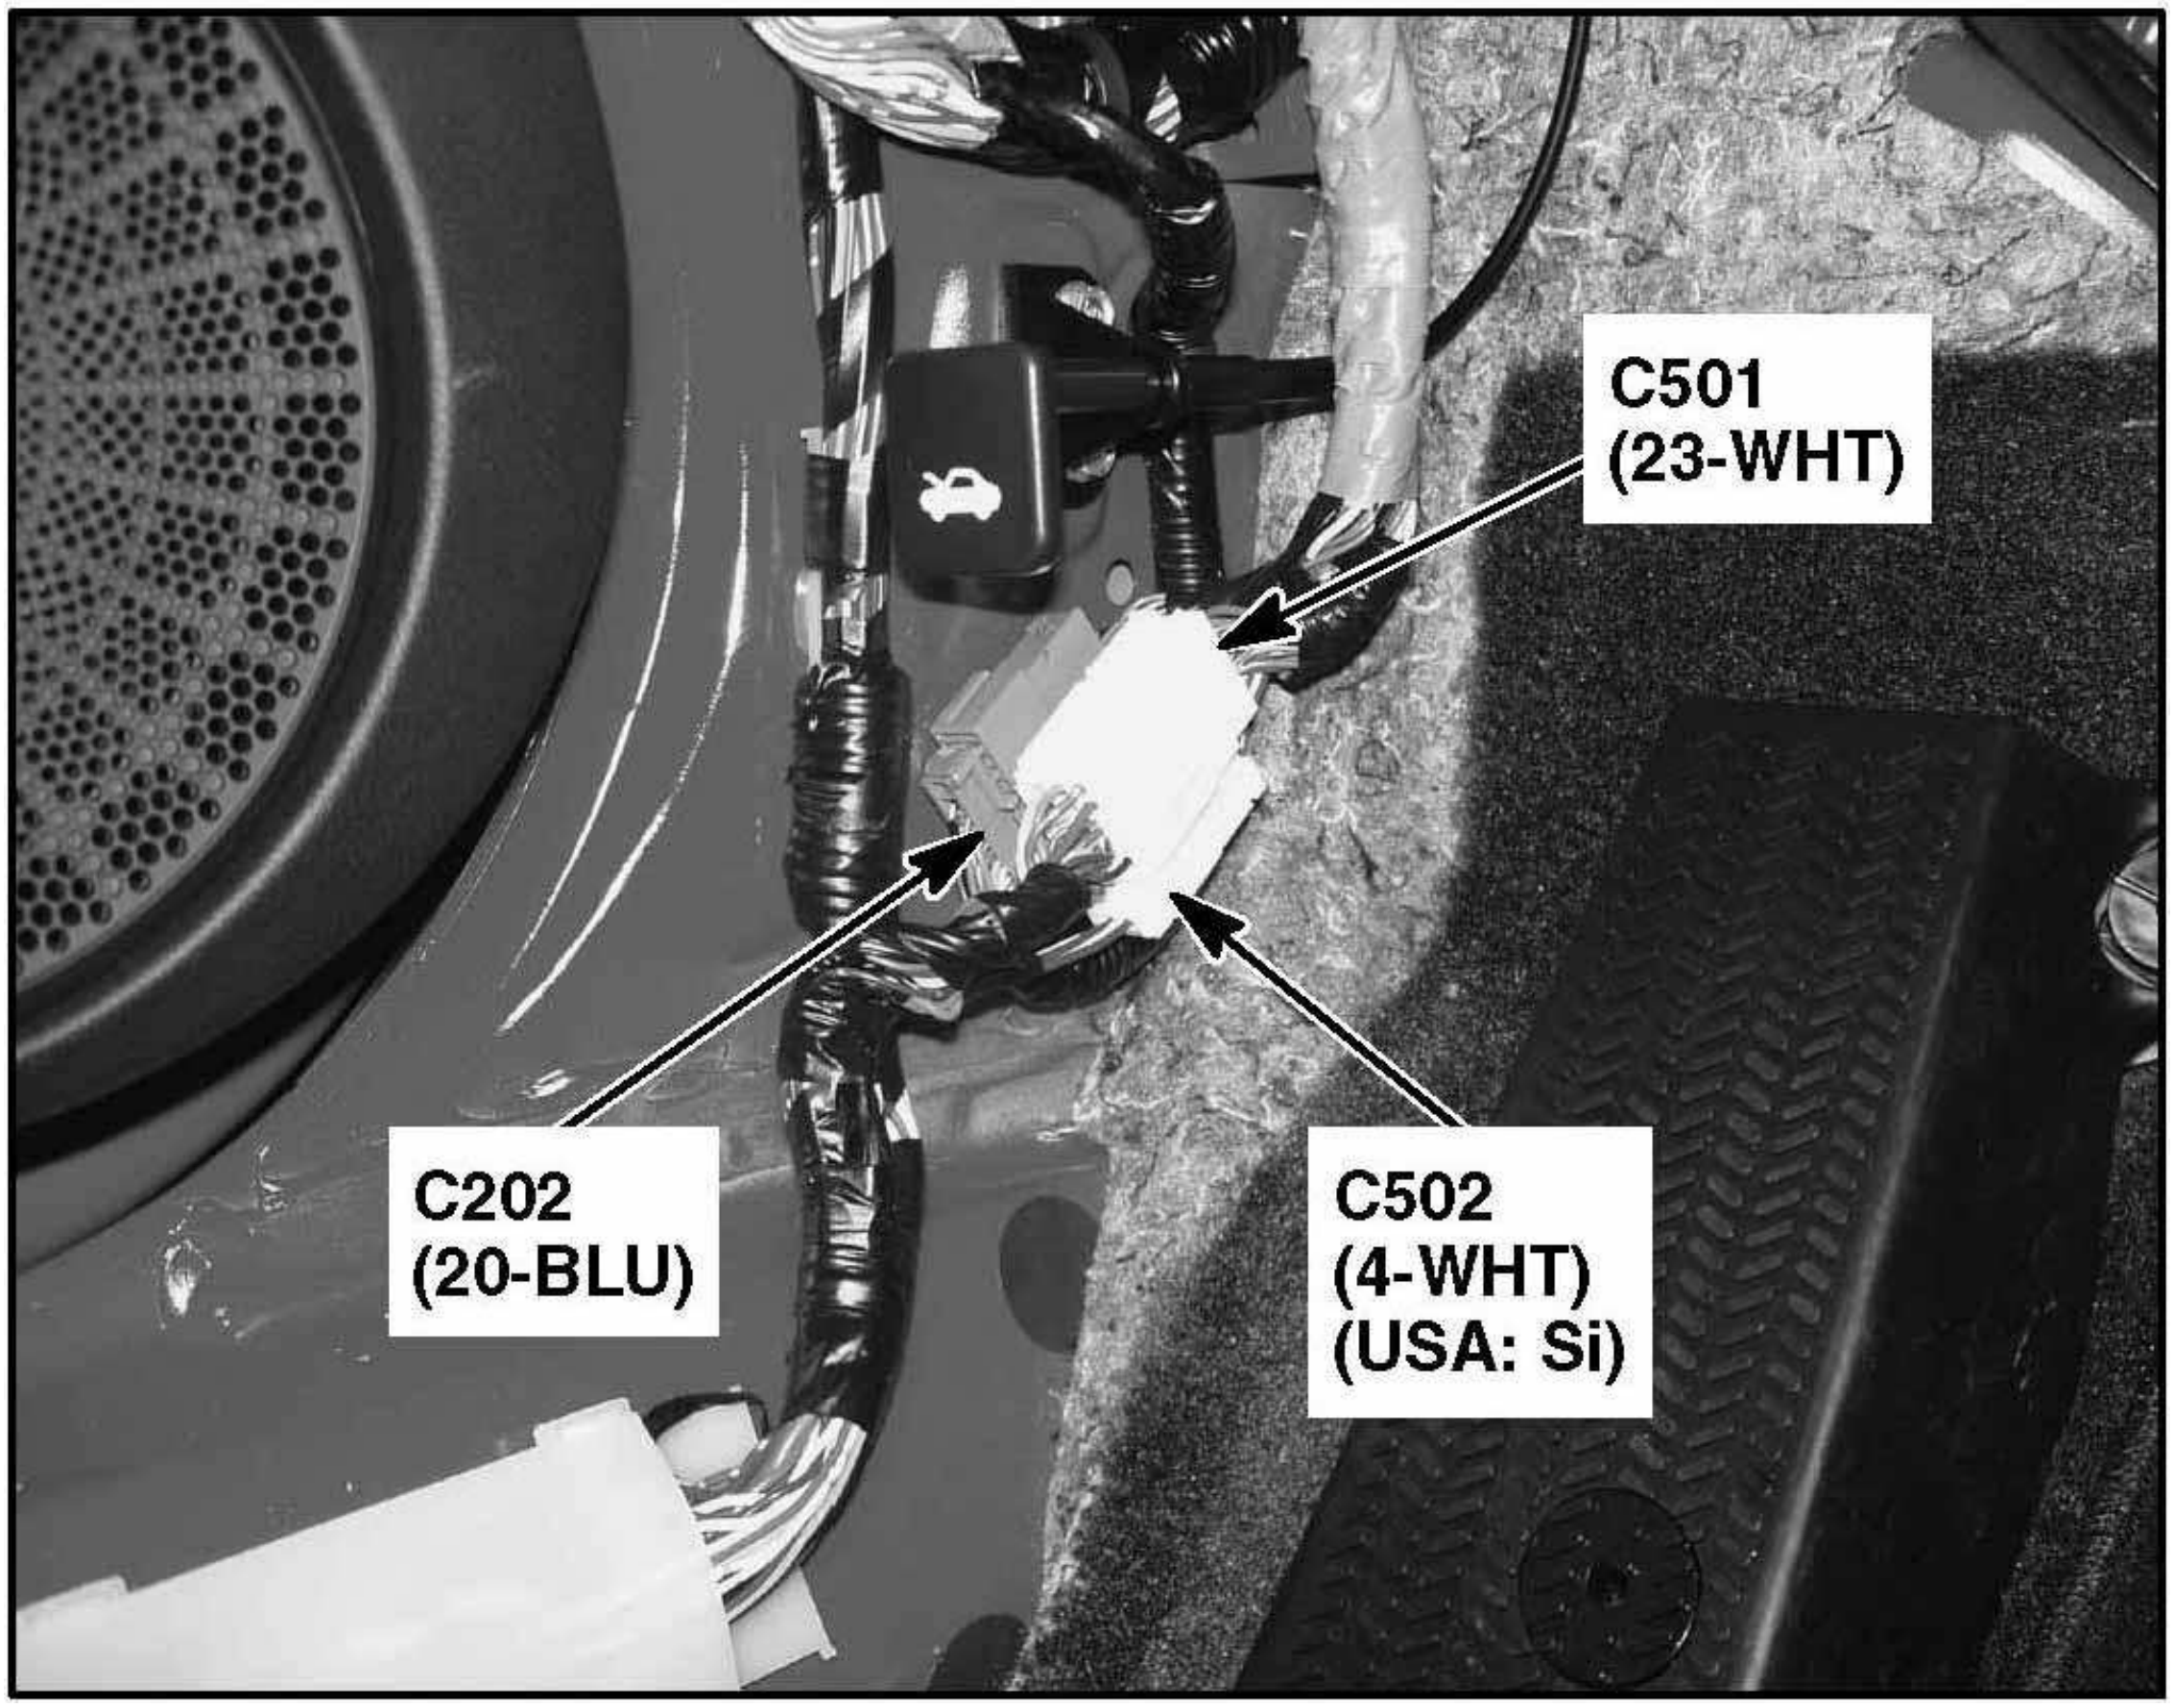
C501
(23-WHT)
C202
(20-BLU)
C502
(4-WHT)
(USA: Si)

Fig. 179: Behind Left Kick Panel (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

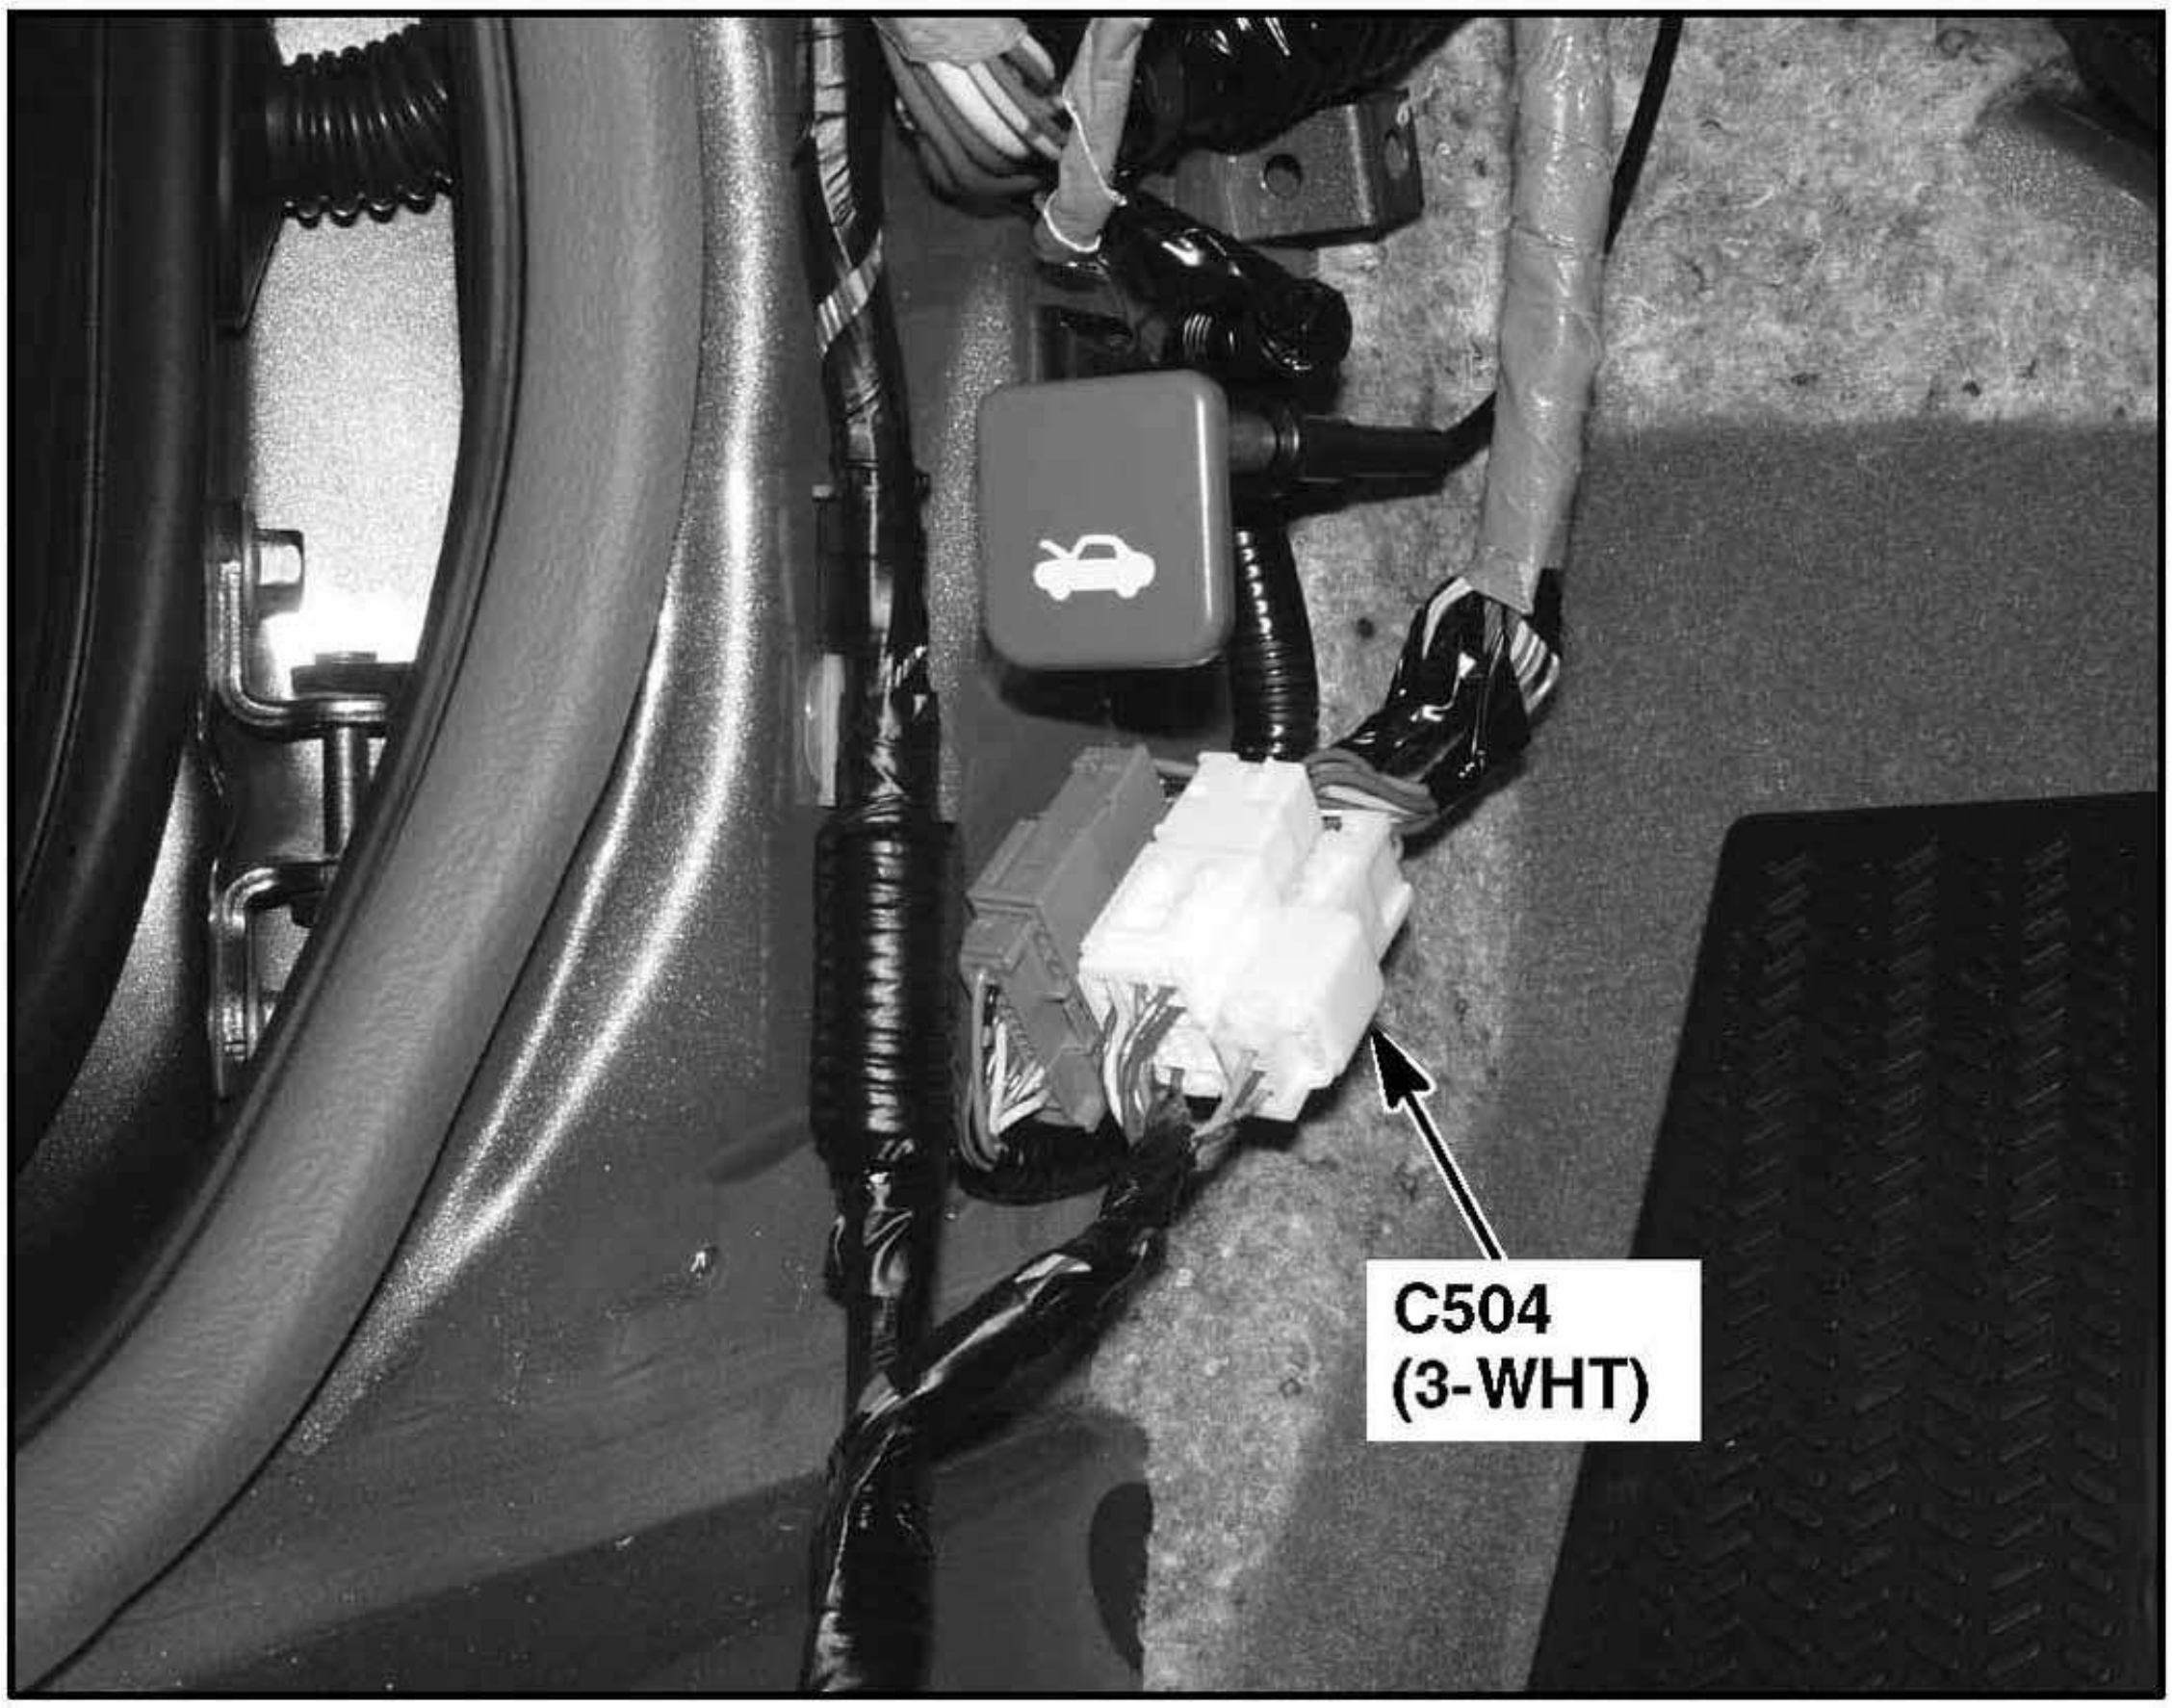

Fig. 180: Behind Left Kick Panel (2-Door)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

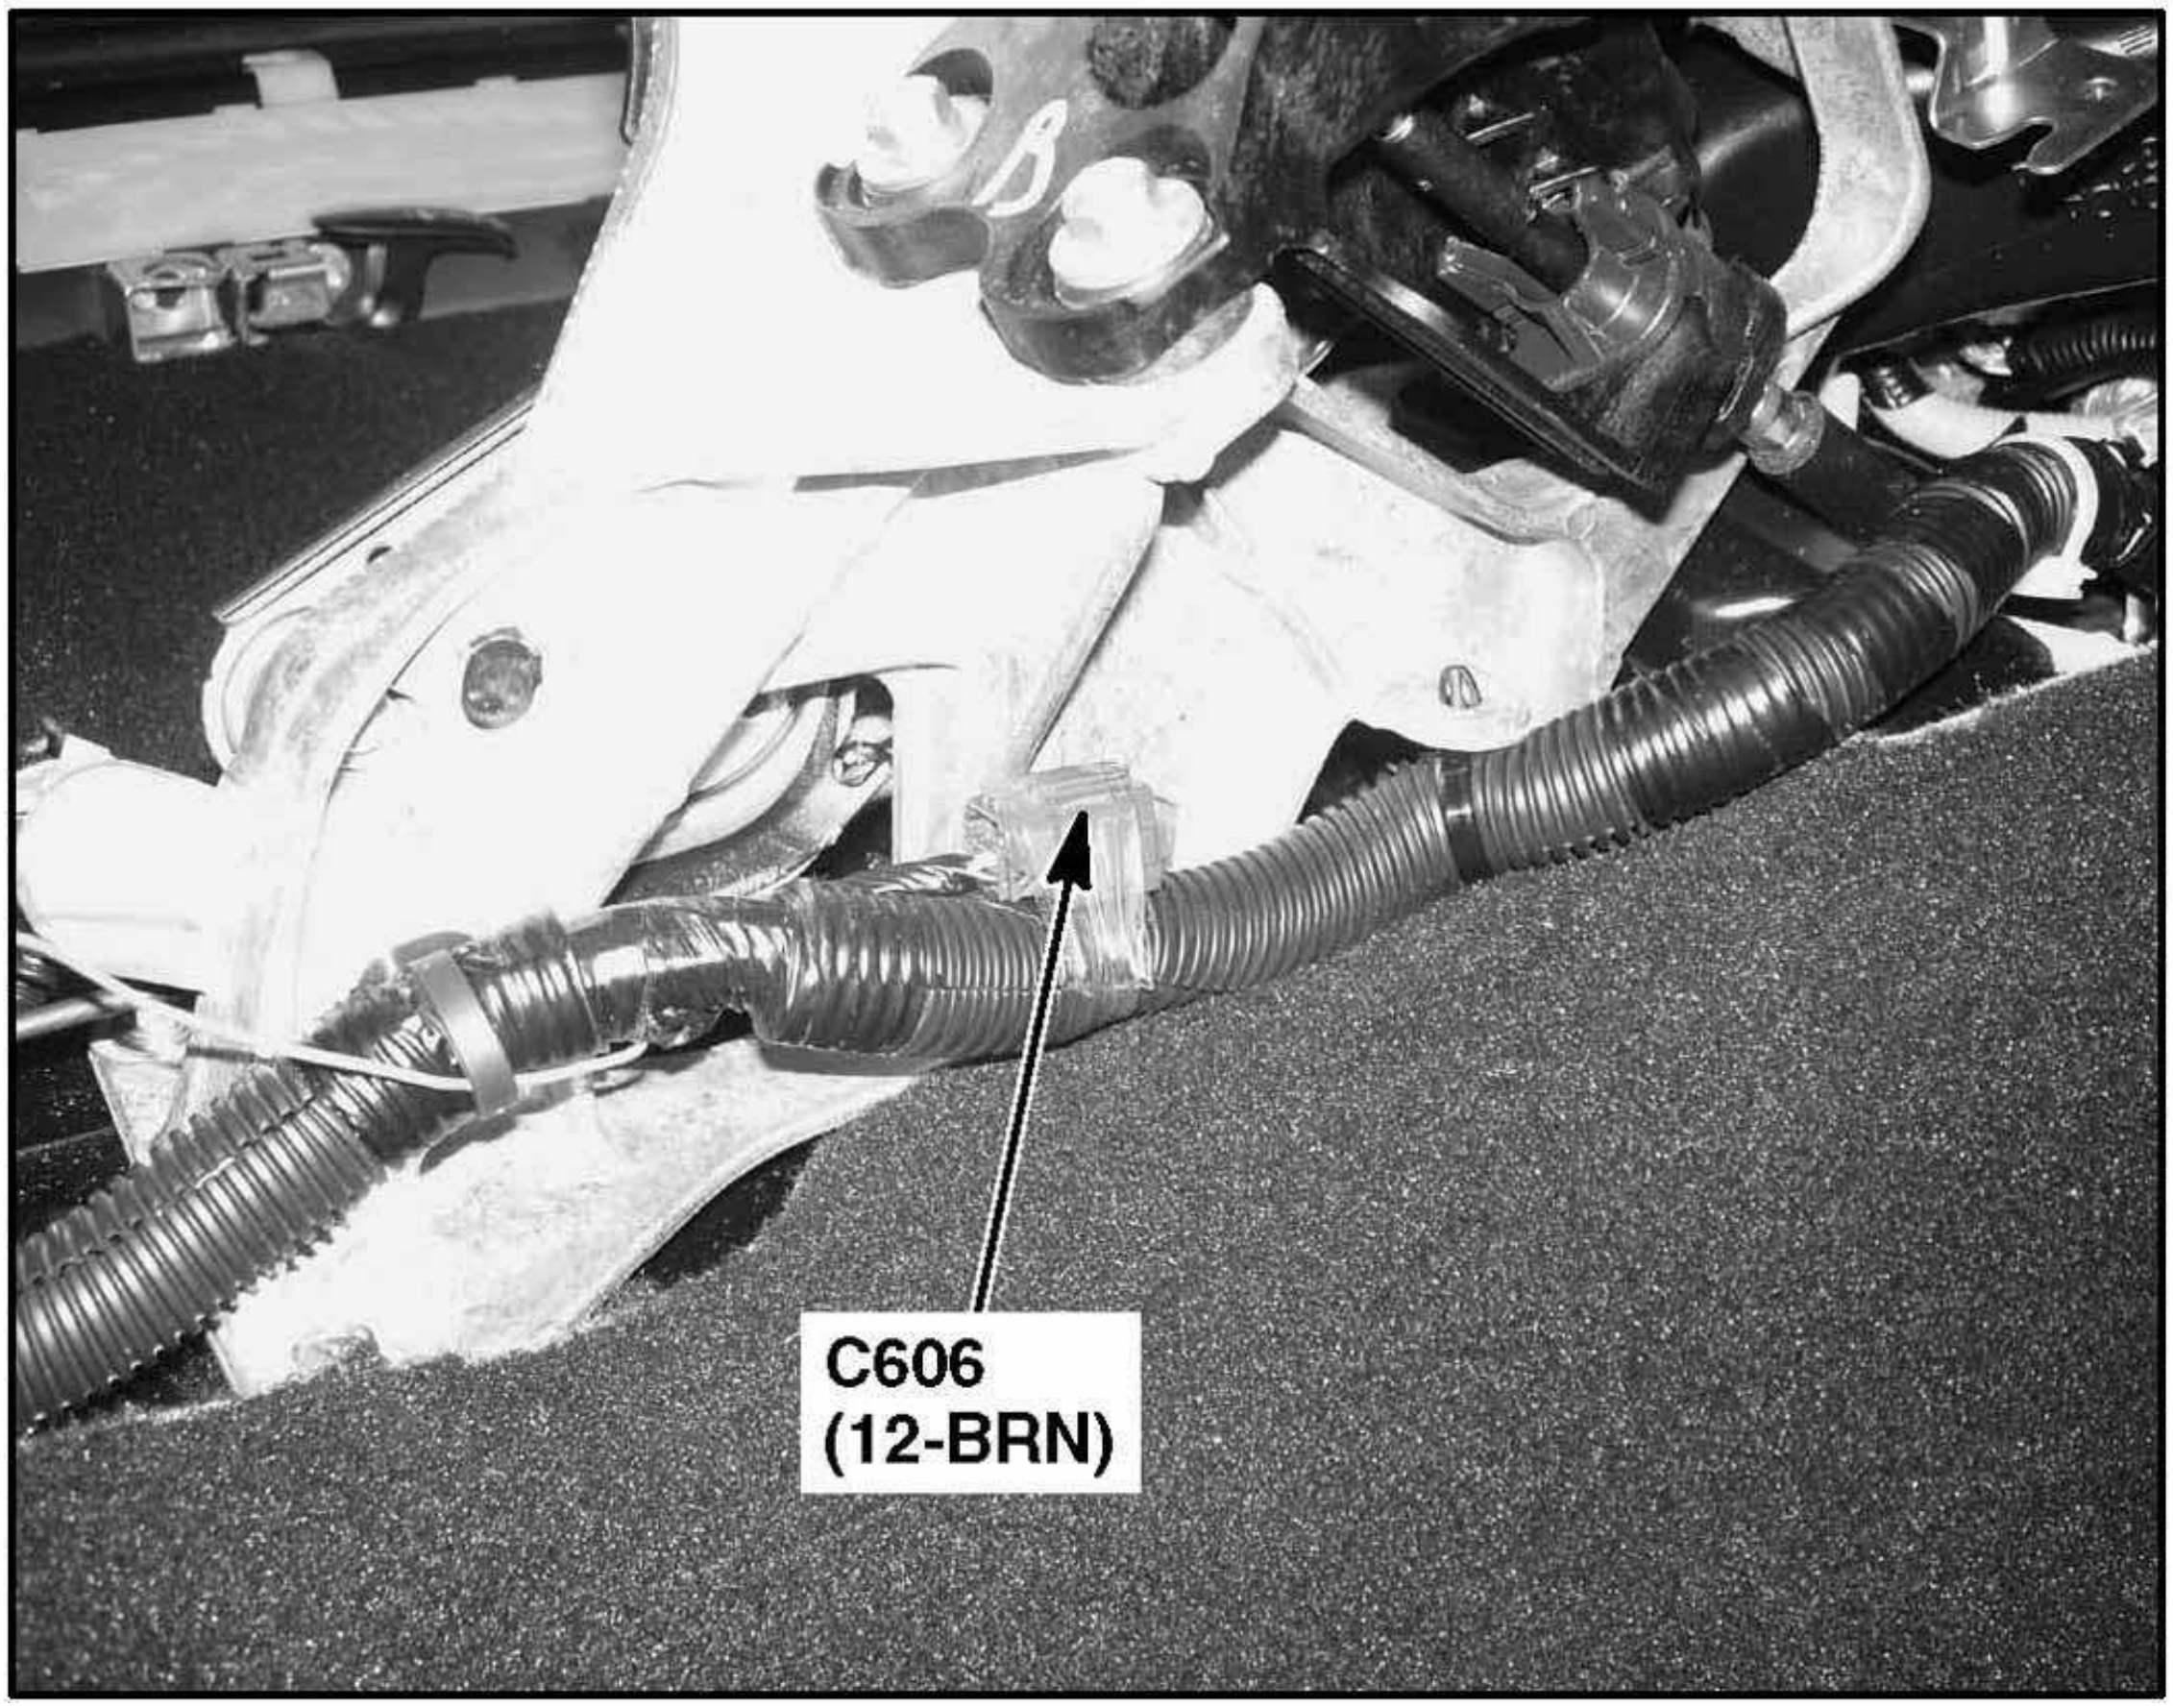

Fig. 181: Under Center Console
Courtesy of AMERICAN HONDA MOTOR CO., INC.

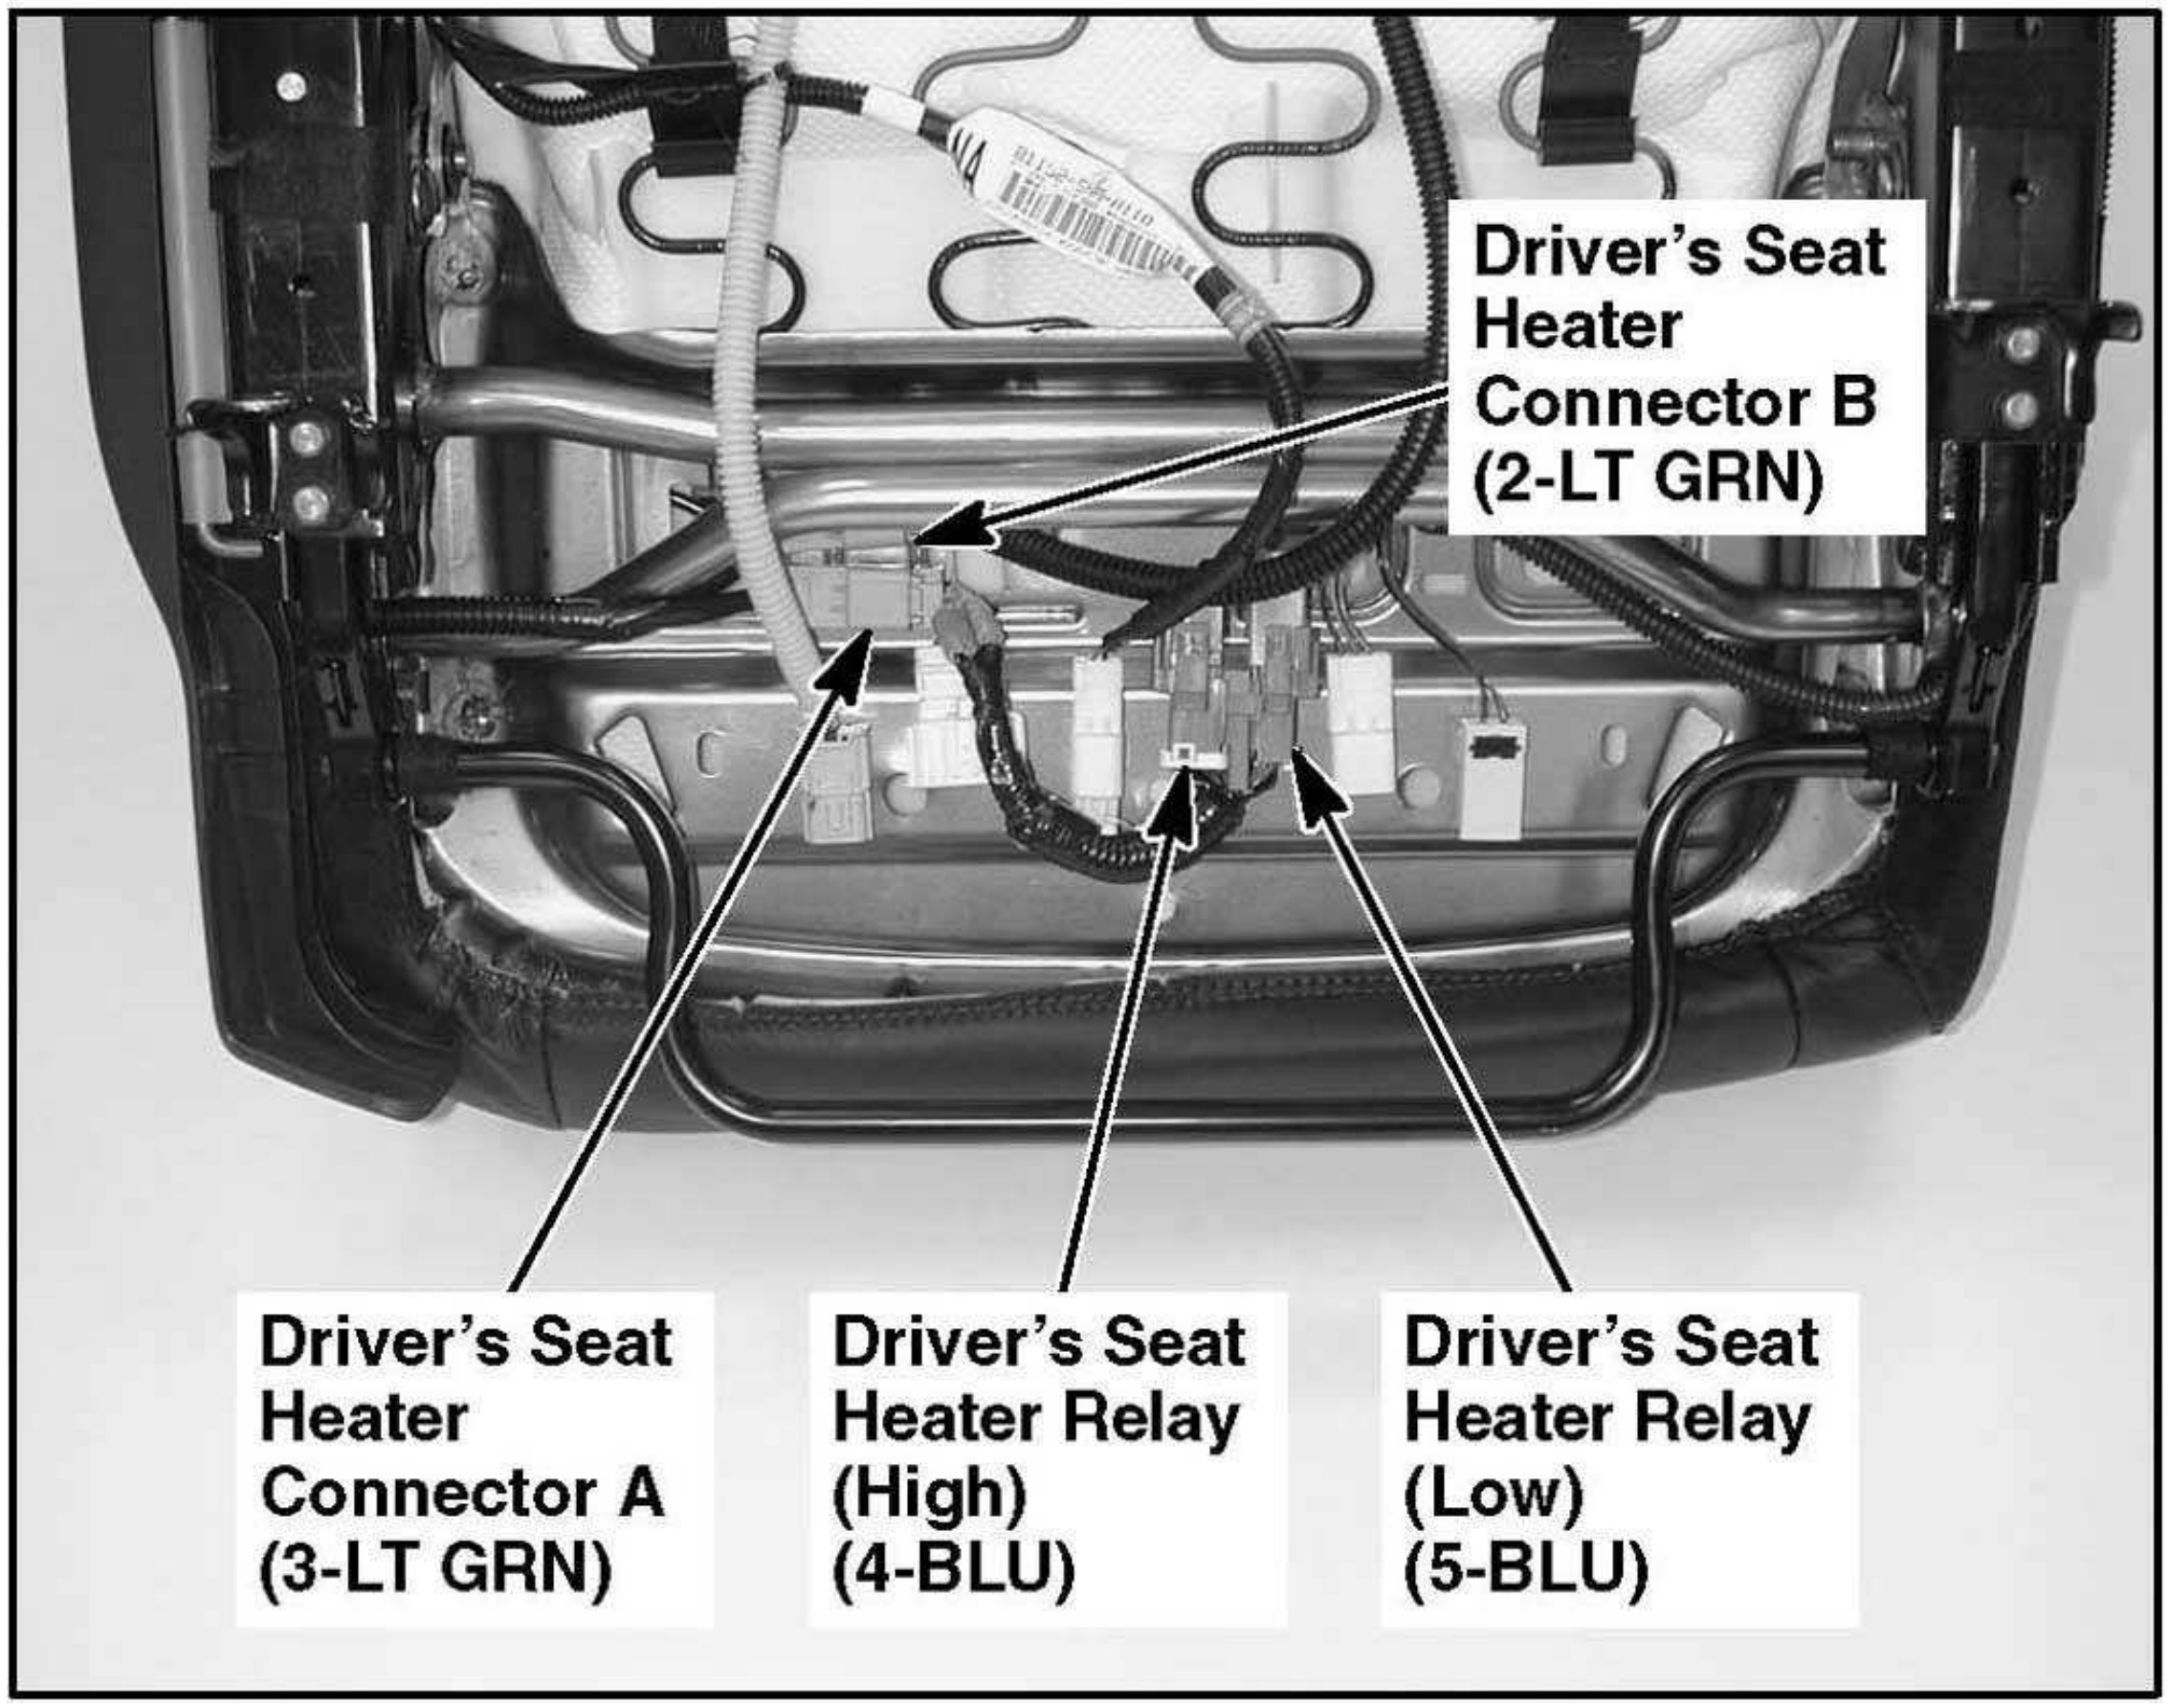
Driver's Seat Heater Connector B (2-LT GRN)
Driver's Seat Heater Connector A (3-LT GRN)
Driver's Seat Heater Relay (High) (4-BLU)
Driver's Seat Heater Relay (Low) (5-BLU)

Fig. 182: Under Driver's Seat (EX-L)
Courtesy of AMERICAN HONDA MOTOR CO., INC.

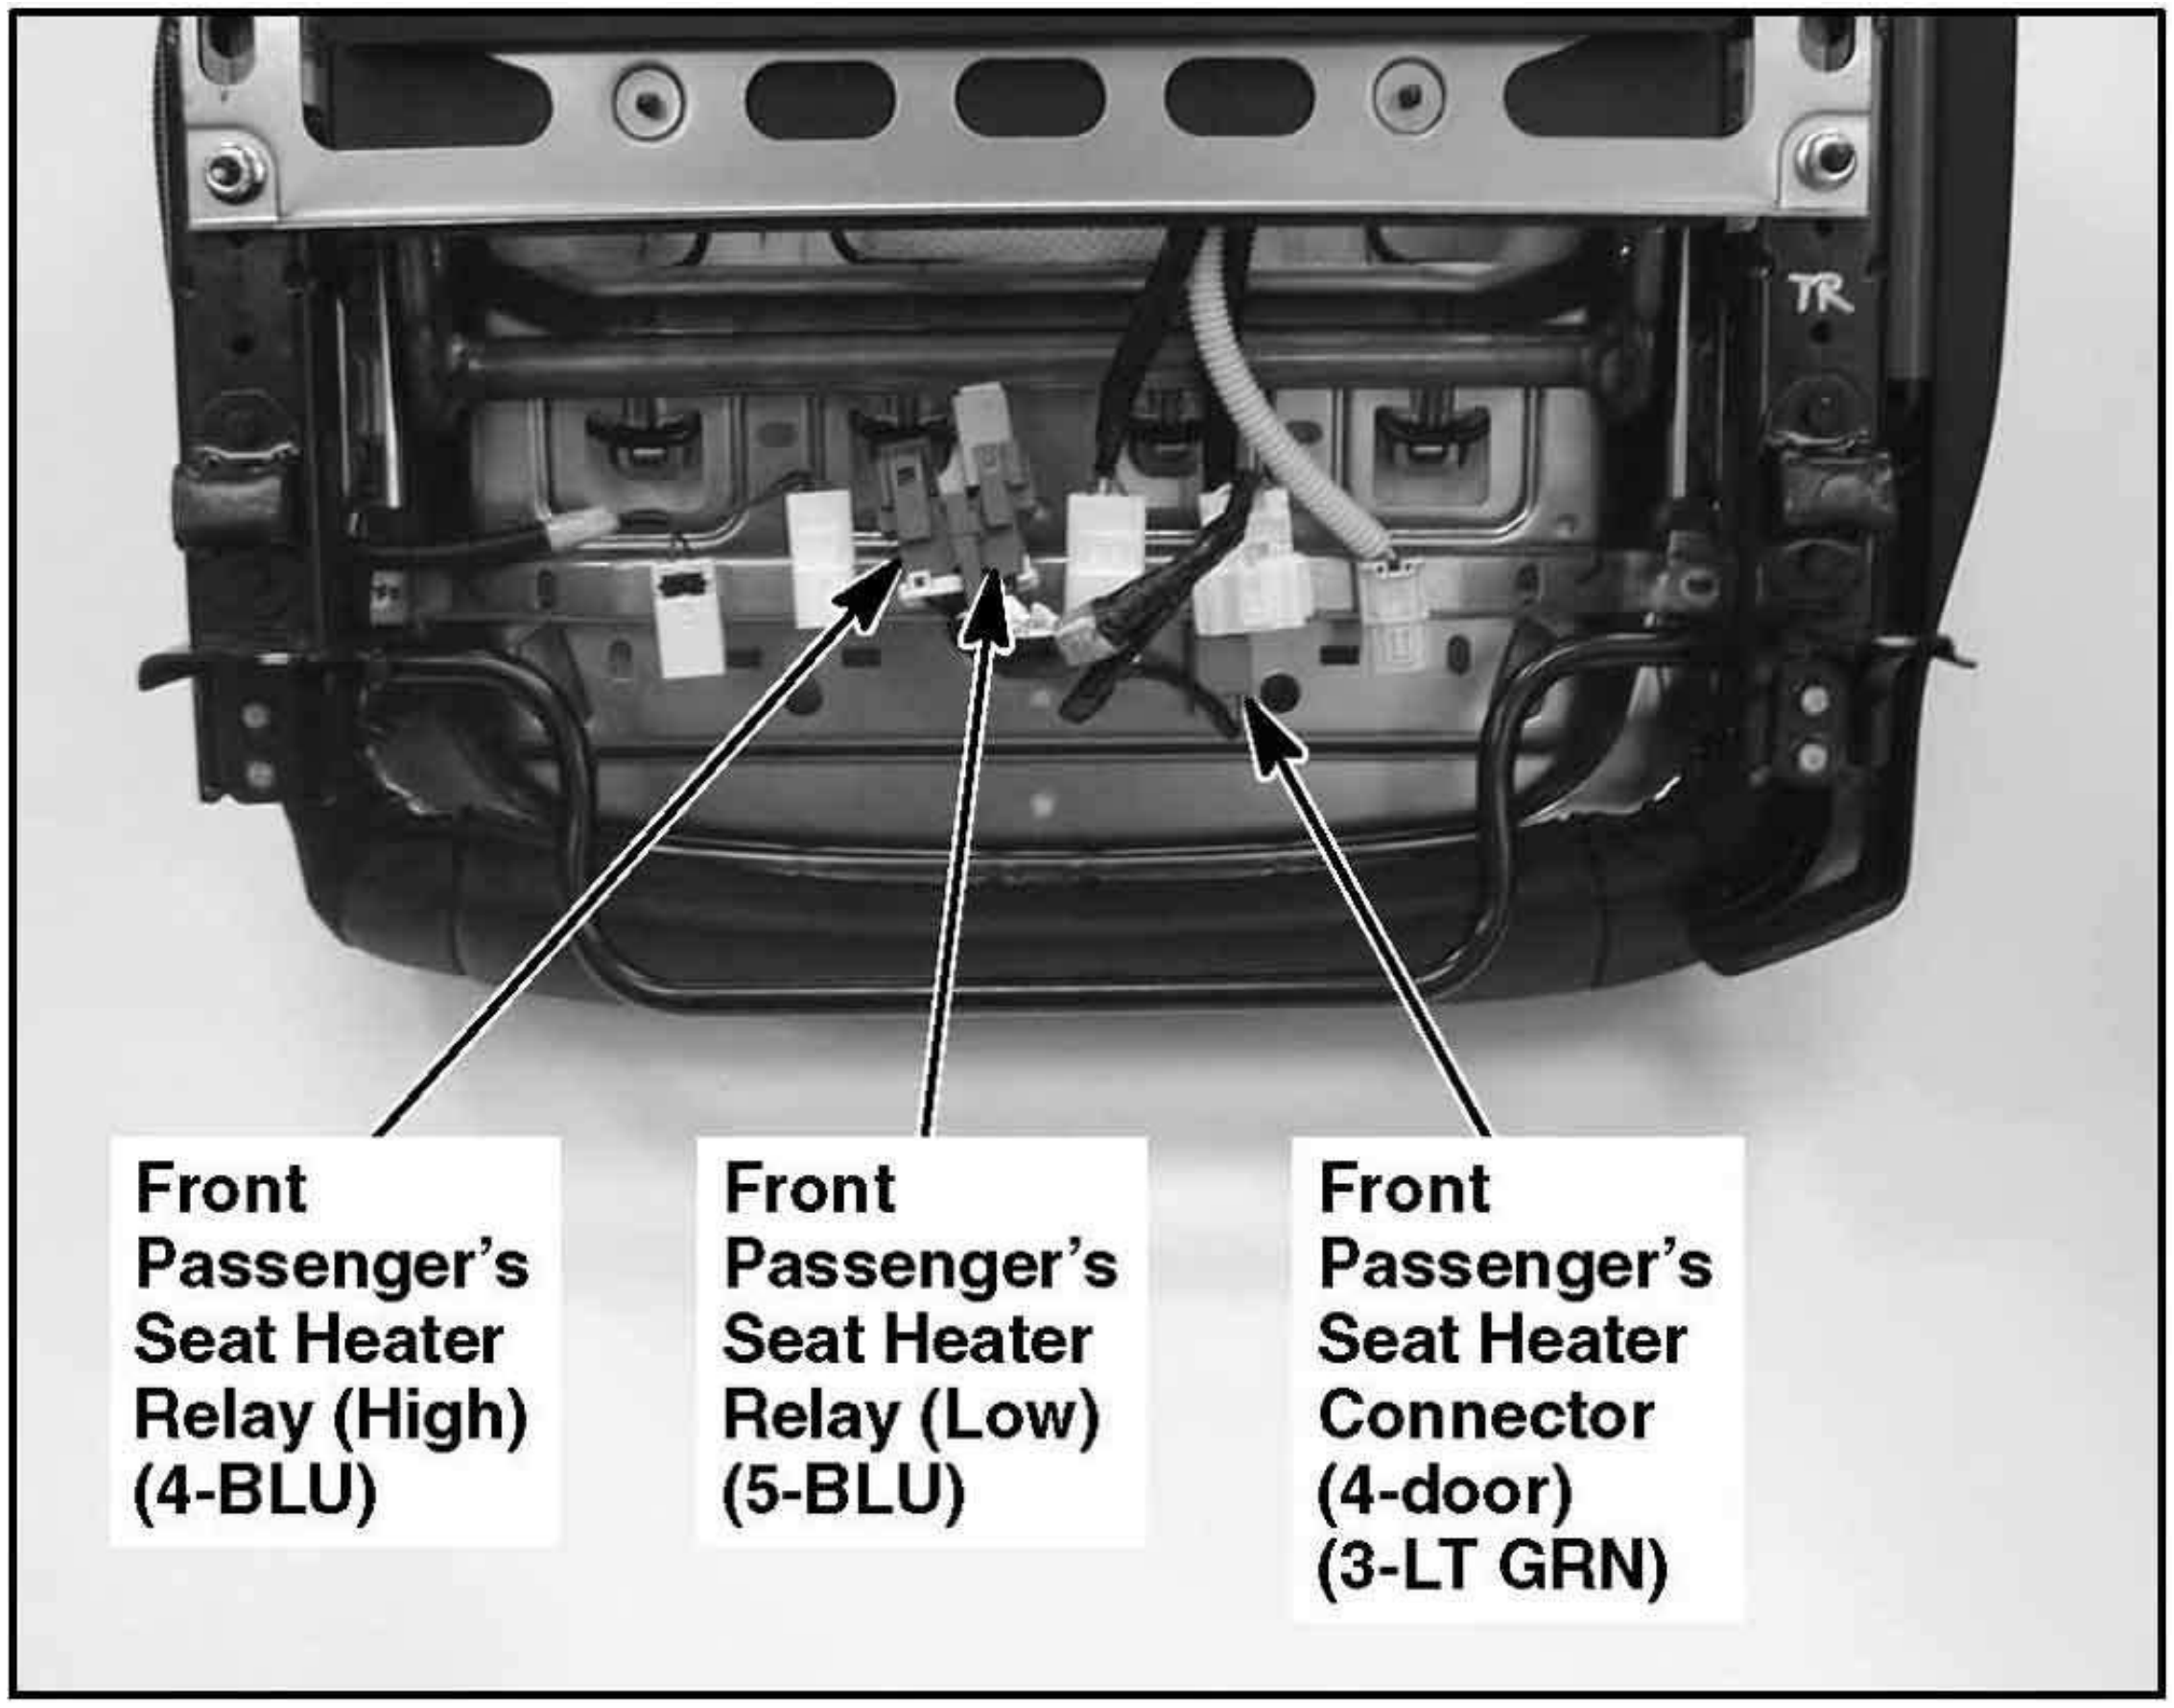
Front Passenger's Seat Heater Relay (High) (4-BLU)
Front Passenger's Seat Heater Relay (Low) (5-BLU)
Front Passenger's Seat Heater Connector (4-door) (3-LT GRN)

Fig. 183: Under Front Passenger's Seat (EX-L)

Courtesy of AMERICAN HONDA MOTOR CO., INC.